

# manual

## **PAIRING BOTH EARBUDS:**

1. Keep the distance between the cell phone and Metro within 3 feet (for pairing only)
2. Press and hold the multifunction button on both earbuds until you hear the prompt "Power On". You will then hear the prompt "Pairing". You will hear 2 chimes to indicate both earbuds are ready to pairing.
3. Active the Bluetooth function of the pairing device and select "Tzumi-Metro TWS" from device list displayed
4. You will hear "Device Connected". Your earbuds are now paired successfully.

## **SINGLE EARBUD PAIRING:**

Press and hold the multi-function button for a few seconds until you hear 2 chimes it means earbuds go to pairing mould, then active the device Bluetooth function to select "Tzumi-Metro TWS" from the list, once you hear "Device Connected" it means the earbud ready to use.

## **CONNECTING TO OTHER BLUETOOTH DEVICES**

NOTE: Your Metro can only be connected to one Bluetooth device at a time.

Noted:

1. Factory default setting is RIGHT Earbud as MASTER Earbud. Once end user want to reset/change MASTER Earbud, hold multi-function button on BOTH earbuds for 6 seconds when the lights begin to flash blue and red meanwhile you hear 2 chimes, quick press the multi-function button 2x on the earbud you want to be the primary one.
2. If your Metro aren't pairing to each other, they will need to be reset according to above guide.

## **EARBUDS CONTROLS:**

### **LISTENING TO MUSIC**

Power ON/OFF- Press and hold multi-function button

Play music- Press multi-function button

Pause/resume music- short press master multi-function button

Next Track- short press the follower earbud

### **MAKING AND RECEIVING CALLS (MASTER EARBUD ONLY):**

Answer/end call- press multi-function button

Reject call- press and hold multi-function button

Redial last call – press twice quickly on the multi-function button

### **To Power Off Earbuds-2 ways:**

1. Press the power button for a few seconds once hear prompt "Power Off" and both earbuds will turn off.
2. Place earbuds in charging case both earbuds will turn off automatic

## **Charging the earbuds: Put both earbuds into charge casing.**

### **Spec:**

Sensitivity-

Frequency:20-20KHz

Bluetooth Version: BT4.2

Standby Time: Up to 60hours

Continuous Play Time- up to 2.5hours

Charging time: 1.5hours(Earbuds)/2hours(case)

Battery:3.7V 50mAh(Earbuds)/ 3.7V 450mAh(Case)

Input:DC5V 50mA(earbuds)/ DC5V 500mA(case)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party

responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may

cause undesired operation.