VICTROLA



MODEL: VTA-200B QUINCY 6-IN-1 MUSIC CENTER Important Safety Instructions Product Overview ... Setup / Basic Operation Listening to a Vinyl Record Listening to a CD ... Listening to the FM Radio Listening to an External Audio Device (AUX Mode). Listening to an External Audio Device (Bluetooth Mode) Listening to a Cassette Tape .. Maintenance / Proper Handling. Specifications Troubleshooting Guide . Prop 65 warning FCC Statement and other warnings .

AVERTISSEMENT:

RISQUE DE CHOC!LECTRIQUE - NE PAS OUVRIR. - This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. WARNING: To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure

WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Important Safety Instructions 1. Read these instructions – All the safety and operating instructions should be read before this produc is operated. Keep these instructions. The safety and operating instructions should be retained for future reference. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to. Follow all instructions – All operating and use instructions should be followed.

5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus

(including amplifiers) that produce heat. **9.** Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs. convenience receptacles, and at the point where they exit from the apparatus. 11. Only use attachments/accessories specified by the manufacturer 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from **13.** Unplug the apparatus during lighting storms or when unused for long periods of time.

normally, or has been dropped

14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been

damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate

RISK OF ELECTRIC SHOCK AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE—NE PAS OUVRIR.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance. **16.** The mains plug is used as disconnect device, the disconnect device shall remain readily operable. 17. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as

vases, shall not be placed on apparatus. **18.** Use the equipment in a moderate climate.

ACCESSORIES INCLUDED RCA LINE OUT CABLE INSTRUCTION MANUAL 45 RPM ADAPTER

Product Overview 12____

PROGRAM INDICATOR Illuminates when the program playback is set. 8. REPEAT INDICATOR Red light stays lit when all tracks repeat. Red light flashes when a single track is repeating. (Note: This indicator only works in CD mode.)
9. LED DISPLAY

3. "FM". " SLIDE SWITCH Slide to select either FM or Bluetooth.

4. 3.5mm AUX IN JACK Connects your external source to the AUX IN jack.

2. "PHONO, CD, AUX, FM/ I "SELECTION KNOB Rotate to select your desired function.

6. ST/BT INDICATOR Blue light flashes when the unit is waiting for pairing. Blue light stays lit when

the external device is connected to the unit. Red light illuminates when station is received in

10. TUNING DIAL POINTER 11. STEREO SPEAKERS 12. STOP Press to stop playback or cancel the program setting.
13. PLAY/PAUSE Press to start playback, press again to pause.

(Note: This button only works in CD, Bluetooth mode.)

14. OPEN/CLOSE ▲ In CD mode, use to open and close the disc tray. 15 DISC TRAY 16. "VOLUME" KNOB Turn to adjust volume. 17/18. NEXT/PREVIOUS TRACK & FF/REWIND (I◄◄ / ▶►I) In CD Mode, press once to skip to the next/previous track. Press and hold to fast forward/rewind. (Note: This button will not work in PHONO, FM, AUX mode)

19. "PROGRAM" Press to set the program playback. (Note: This indicator only works in CD mode.) 20. "REPEAT" Press to select the repeat mode. (Note: This indicator only works in CD mode.) **21. RADIO TUNER KNOB** In FM mode, turn to tune in a station.

1. **POWER** Push to turn the unit ON or OFF.

5. PLAY INDICATOR Illuminates when CD is playing.

Right Side View

Bluetooth feature.

1. Select "FM/ 🕻 " mode.

press "Victrola Quincy".

automatically begin.

only on one side)

external device.

GETTING CONNECTED USING BLUETOOTH

2. Slide the slide switch on " it and the ST/BT indicator will flash blue.

NOTE: Stop, fast forward / rewind are only available on your external device.

3. Turn ON the Bluetooth function on your external device.

6. Press the PLAY/PAUSE button (▶■) to begin playback.


2. Press button halfway to Fast Forward the tape.

overridden until the cassette tape is ejected.

Press button lightly and playback will resume.

3. Press button completely down to end playback and eject tape.

22. 3.5mm EARPHONE JACK

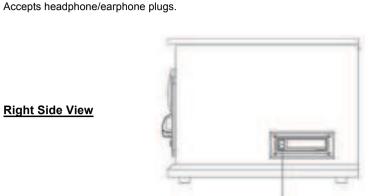

23. CASSETTE FF & EJECT Press halfway to fast forward, press all the way to end and eject

Listening to an External Audio Device (Bluetooth Mode)

NOTE: The effective distance between your external device and this apparatus is 10 meters (33ft).

4. Wait for "Victrola Quincy" to appear on the paired devices list of your external device and

In some instances: a window will ask you a password. Fill in "0000" then press "OK" on your

5. A few seconds later your Bluetooth connection is successful and the blue indicator stays lit.

7. To temporarily pause playback, press the PLAY/PAUSE button (|| || || ||). Press again to resume.

8. To skip to the previous or next tracks, press the corresponding skip button (I or limit or limit) to

Listening to a Cassette Tape

1. Load an audio cassette tape into the unit (located on the left side of the unit). Playback will

Maintenance / Proper Handling

Compact Disc Handling

• Always place the disc on the disc tray with the label side facing upward (compact discs can be played/recorded)

Never use such chemicals as record spray, antistatic sprays or fluid, benzine or thinner to clean discs; they will

• Printable CD-R and CD-RW discs are not recommended, as the label side may become sticky and damage the

upward, holding it carefully by its edges.

To clean a disc, wipe the surface from the center hole outward towards the outer edge with a soft, dry cloth.

Do not expose discs to direct sunlight, high humidity, or high temperature for extended periods of time.


NOTE: When loading in a cassette tape, the SELECTION KNOB function will be temporarily

• To remove a disc from its storage case, press down on the center of the case and lift the disc

Discs should be returned to their cases after use to protect from dust and scratches.

In BT (Bluetooth) mode, this unit can play music from external devices which have a built-ir


Rear View

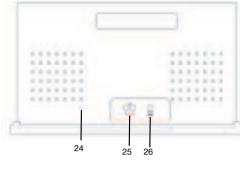

24. FM wire antenna While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception. 25. LINE OUT lacks For amplifier device with RCA auxiliary input sockets, insert the white and red plugs on the RCA cable into the unit. Insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack. 26. Power Adaptor Connect the Power adaptor into a wall outlet. It is strongly recommended that this product

should be operated only from the type of power source indicated on the marking label.

Parts of the Turntable

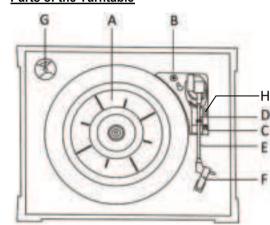

B. Safety Screw (for transport) Before using the unit, turn the screw clockwise using a coin or

Important: When you transport the unit, turn the screw counterclockwise to secure the turntable. C. Speed Selector. D. Tone Arm holder. E. Tone Arm. Before use, completely loosen the fixed rope on the tone arm and lift the tone

F. STYLUS. G. 45 RPM adaptor. H. Cue Lever.

Setup / Basic Operation

Remove white protective needle cover by gently pulling towards front of unit. Remove any packaging materials from the unit. . Connect the power adaptor to a wall outlet. The power adaptor is located in the cabinet box

-lt is strongly recommended that this product should be operated only from the type of power source indicated on the marking label. -To prevent interference, avoid bundling audio signal cables together with the AC power cord. Basic Operation

Push the POWER button to turn the unit on. Select the source by turning the selection knob (PHONO/AUX/CD/FM/BT) 3. Rotate the VOLUME knob to adjust to the desired sound level. Listening through RCA LINE OUT For amplifier device listening, first reduce the volume level to minimum. Insert the white and red plugs on the RCA cable into the unit, then insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack. Listening through Earphones/Headphones (not included)

For private listening, first reduce the volume level to minimum. Insert your headphones' plug into the 3.5mm jack, then adjust the volume up by turning the VOLUME knob. Note: The speakers will automatically be deactivated while headphones are plugged in.

CONDENSATION WARNING: When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it to stabilize at the temperature of its surroundings.

Listening to a Vinyl Record

3.5mm JACK

1. Before use, completely loosen the TRANSPORTATION SCREW by turning it clockwise with a coin or screwdriver. Detach the stylus guard (white plastic cover).

2. Turn the unit ON by pressing the POWER button. 3. Set the FUNCTION KNOB to the PHONO position. 4. Gently open the dust cover. Be careful not to pinch your finger. 5. Put the record on the turntable. Select the speed. When playing a 45 RPM record,

use the included 45 adaptor. 6. Gently push the CLAMPER to the right to release the TONE ARM. 7. Raise the CUE LEVER to lift the TONE ARM off the tone arm support. 8. Move the TONE ARM gently to the edge of the record (or the starting point of a track). The turntable will begin to turn.

9. Gently lower the TONE ARM by slowly releasing the CUE LEVER. You can lower

the TONE ARM manually if the CUE LEVER has not been raised. 10. Turn the VOLUME KNOB to adjust the volume. 11. When playback has finished, slightly lift the tone arm using the CUE LEVER and return it to the TONE ARM holder. The rotation stops.

- Closing the top cover will help prevent dust from settling on the turntable. - Always relock the tone arm clip before transporting the unit. - Do not place anything on top of the turntable cover, especially while playing a record.

Listening to a CD

 Select "CD" function. (Note: When no disc is set, "no" will appear on the display.) Press the OPEN/CLOSE ((Note: This button only works in CD mode.) Place a disc on the tray with the printed label face up.

Press the OPEN/CLOSE button (\triangle) to close the trav. 5 Press the PLAY/PAUSE button (▶■) to begin playback (Note: The CD playback will start automatically.) To temporarily pause playback, press the PLAY/PAUSE button (•II). Press again to resume. To skip tracks forward or backward, press the corresponding skip button (| and or | backward). Pressing I once will restart the current track. Pressing I twice in succession will return to the beginning of the previous track.

8. To fast forward / rewind within a track, press and hold down the corresponding skip button until

9. To stop playback, press the STOP ■ button Never place more than one disc on the tray. The disc must be placed in the center of the disc tray. An incorrectly loaded disc can permanently damage the tray door mechanism

Do not push the CD tray – always use the OPEN/CLOSE button. It takes a moment for the unit to load a disc, during which all buttons will be temporarily Repeat Playback

Each time the REPEAT button is pressed, the repeat mode will cycle through the following options: REPEAT 1(Repeat one track) The repeat indicator will flash and the current track will be played repeatedly. If you press the (or button to select another track, the track you select will be played repeatedly. REPEAT ALL (Repeat the entire CD)

Troubleshooting Guide

Solution

the unit.

correctly.

power supply.

Adjust the volume

Connect the unit to the AC

Select the correct input

appliance, and relocate

Disconnect the power cord

and external audio device.

Re-plug the power cord

Insert the cassette tape

after one minute.

Flip the cassette.

desired station.

Properly tune-in the

reception improves.

Insert the CD with the

printed side right-side up

Press the PLAY/PAUSE

Carefully clean the CD.

Select AUX, PHONO, CD,

Wait until the unit finishes

• Turn the unit off, then on

Unplug the front AUX in

Replace CD with an

undamaged one.

or TAPE mode.

processing.

· Carefully clean and dry the

Turn-off the interfering TV

Re-orient the antenna until

- Repeat playback works with CD discs only.

1. Select "CD" mode, then load a CD.

the desired position is reached

Programmed Playback Up to 20 tracks can be programmed to play in the desired order. - Programmed playback works with CD discs only.

The repeat indicator will stay lit and the entire CD will be played repeatedly.

2. While the CD is stopped, press the PROGRAM button. 3. "PROGRAM" indicator lights up and "01" blinks on the display.

4. Press (or) to select a track number. 5. Press the PROGRAM button again to set the next program track, "02" appears and blinks... Repeat steps 4 thru 5 to program the additional tracks. 6. When the selection of track numbers has been finished, press the PLAY button (|| || || ||) to start program playback.

7. To cancel the program mode, press the STOP () till the program indicator won't light. To check the programmed order

(Note: when all 20 program tracks are set, you press PROGRAM button and "FI" will appear on the

To add a track to the end of the programmed order: In the stop mode, press the PROGRAM button. Select a track number by pressing (or), then press the PROGRAM button. The current track will be added to the end of the program.

Listening to the FM Radio

Select "FM/ \$" mode.

Slide the slide switch to "FM". Tune to the desired station using the Radio Tuner Knob. **Note:** In FM Mode, the "ST/BT" indicator lights up red when tuning in the stereo reception station.

Adjusting for Best Reception M broadcast: Extend and reposition the FM antenna.

Listening to an External Audio Device (AUX Mode) In AUX (auxiliary) mode, this unit can play audio from an external audio source (MP3 Player

Portable CD Player, etc.) Playing via 3.5mm AUX-IN Jack on the Front of Unit:

1. Turn the unit ON by pressing the POWER button Set the FUNCTION KNOB to the AUX position.

3. Connect the 3.5mm aux-in cable (included) into the 3.5mm AUX-IN Jack to play an external audio source, such as CD player, tablet, MP3 player, etc.

> • Use a soft oil-based felt-tipped pen to write information on the label side. Never use a ball-point or hard-tipped as they will damage the unit.

pen, as doing so may damage the recorded side.

• Do not use irregularly-shaped CDs (octagonal, heart shaped, business card size, etc), Read all precautions supplied with any CD-R or CD-RW disc

FCC & IC RADIATION EXPOSURE STATEMENT:

irreparably damage the disc's plastic surface.

 Never handle a disc with dirty fingers Never insert a disc that has a crack on the surface.

• Do not bend the stylus.

• Keep out of reach of children.

 Handling Vinyl Records
 Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.

To clean a record, use a soft anti-static cloth to gently wipe the record surface.

· Keep records in their protective sleeves when not in use Always store records upright on their edges
Avoid placing records in direct sunlight, close to a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold or moistur


General Care
When removing the power plug from the wall outlet, always pull directly on the plug. Never pull the cord.

To keep the laser pickup clean, do not touch it, and do not forget to close the disc tray.

· Do not attempt to clean the unit with chemical solvents as this might damage the finish For cleaning, only use a clean, dry cloth. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period

How to Replace the Turntable Stylus (Replacement Needle # ITNP-S1)
The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The highest speed of 78 RPM records would wear out the stylus more quickly.

. Set a screwdriver at the tip of the stylus and push downward (A). 2. Remove the stylus by pulling it simultaneously downward and forward. . Hold the front tip of the stylus and insert its rear edge (B) first. 2. Push the stylus upwards (C) until the tip locks into place

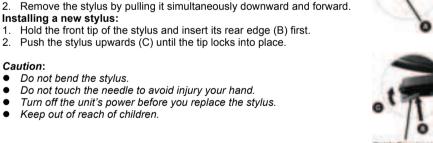

GENERAL 12V D.C., 2A Power Requirements Power Consumption Dimensions (W x H x D) -- 460 x 255 x 340mm / 18 x 10 x 13.4in (approx.) Weight -7 kg. / 16 lbs (approx.) **AMPLIFIER** 5 W + 5 W 60 to 20,000 Hz Frequency Response SPEAKER SYSTEM **Output Powe** Max. 6W

Specifications

FM Radio 88 to 108 MHz CD PLAYER 60 to 20, 000 Hz +/-4 dB Frequency Response Signal-to-Noise Ratio _55 dB (IEC-A) CASSETTE PLAYER _4 Track, 2 channel stereo Track System Wow and Flutter 0.4% (WRMS) 125 to 6300 Hz +/-6 dB Frequency Response

RECORD PLAYER DC servo motor 33-1/3 rpm, 45 rpm and 78 rpm S/N Ratio More than 50 dB Ceramic Stereo Cartridge Cartridge Type___ ITNP-S1 BLUETOOTH

Bluetooth Frequency range. 2.402GHz-2.480GHz 10 meters (33 ft.) Operating Distance POWER ADAPTOR DGHPPOWER Model No HP24L-1202000-AI

100-240V~50/60Hz, 0.8A ...12V,2A, 24W DONG GUAN HP-POWER TECHNOLOGY.,LIMITED

Bluetooth V5.0

Possible Cause Unit will not power on. Unit is unplugged. No sound output from speakers. The input selector does not match the playback source. The unit is too close to a TV set | • Turn off the TV or other Noise/Distortion in sound output. or another interfering device. Unit fails to respond. It might result from external factors such as ESD (Electro-static discharge). The tape does not play. The cassette tape is not inserted properly. The tape has reached the end. Cannot listen to any The station is not tuned-in station, or signal A TV set is being used nearby appears weak and is interfering with the radio The sound is distorted. The antenna is not oriented CD stops immediately The CD is inserted upside after starting, or unit • The CD is dusty or dirty or there pauses or stops during is condensation on the CD. The CD player is paused. No sound. The CD is scratched, damaged or playback stops or or warped. skips. The disc is very dirty. · CD tray will not open. · AM/FM mode is selected. Buttons are not The unit is processing functioning correctly. information ("--- Busy" is displayed) The unit needs to be restarted again. • The turntable stylus is worn out • Replace the stylus. Decline in turntable audio performance

No sound output with

external audio device

plugged into rear AUX

Both AUX in jacks (front and

rear) are plugged.

The unit is not switched to Ensure the unit is switched No sound Bluetooth mode to BT mode. Your device's and/or the unit's Move your Bluetooth volume is not turn up. device closer to unit Your device is too far from the Turn up the volume on unit or there're some obstacle vour portable device between your device and the and/or the unit. Turn OFF your Bluetootl device and unit. Then power them both back ON Sound has a lot of static • Your device is too far away ring your device closer to the turntable Confirm that your device is Your device doesn't have Bluetooth compatible. Bluetooth connectivity. Bluetooth device

The Bluetooth pairing is not Re-pair the unit and device Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Made in China.

CALIFORNIA PROP 65 WARNING

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more nformation go to www.P65Warnings.ca.gov.

FCC Statement

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interferrence by one or more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and the receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

DÉCLARATION D'IC SUR L'EXPOSITION AUX RADIATIONS: Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

IC WARNING

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible

15

HVIN: VTA-200BINT

d'en compromettre le fonctionnement.

Warranty Information

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

United States Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that

victrola.com/contact.

this product.

this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product. To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it

was purchased is impossible, you may contact our customer service for warranty assistance at

Except as limited below, if the product proves defective in either material or workmanship within

one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model. Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com. Limitations: This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling, unauthorized repair, modification, or wear from ordinary use or environmental deterioration.

• This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product. • This limited warranty is null and void for products not used in accordance with Victrola's instructions.

• This limited warranty terminates if the original retail purchaser sells or otherwise transfers

• This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Victrola authorized installer or dealer. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, jurisdiction to jurisdiction or country to country. All express and implied warranties for the product, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, are limited in time to the term of this warranty, Some states, jurisdictions or countries do not allow the exclusion of certain implied warranties or conditions, or limitations on how long an implied warranty or condition lasts, so this limitation may not apply to you, Victrola's responsibility for malfunctions and defects in hardware is limited to replacement or repair as set forth in this warranty statement. Victrola does not accept liability for special, punitive, consequential or incidental damages or losses, whether direct or indirect, including without limitation, any liability for third party claims against you for damages or losses or for products not being available for use. The maximum liability for which Victrola may be responsible will be no more than the amount you paid for the product that is the subject of the claim. Some states, jurisdictions or countries do not allow the exclusion or limitation of special, indirect. incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty Information (Continued)

Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact. If this product proves defective in either material or workmanship, Victrola will replace the product at no charge. If the product model is no longer available and cannot be repaired

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

effectively or replaced with an identical model, Victrola at its sole option may replace the unit with a current model of equal or greater value. Outside the U.S. Canada, and US Territories 200B230126E