

148.00 mm

Indicator Light/Button "FEED" Instruction

Indicator Light Instruction

Indicator status	Status description	Simple troubleshooting
Blue light shine	Normal standby	/
Blue light flashing	RAM Test Errors	Contact the nearest maintenance point
Pink light shine	Printer head overheating	Wait for the printer to continue working automatically after cooling
Red light shine	The above cover is not covered	Check whether the cover is completely covered
Red light flashing	No paper detected	Check whether the paper has been released
Yellow light is always bright	Low input voltage	Replace the power adapter
Yellow light flashing	Paper jam/The black mark cannot be found	Remove the jammed paper/Switch to Black Label Mode
Blue light slow flashing	Printer working	/

Button'FEED'Instruction

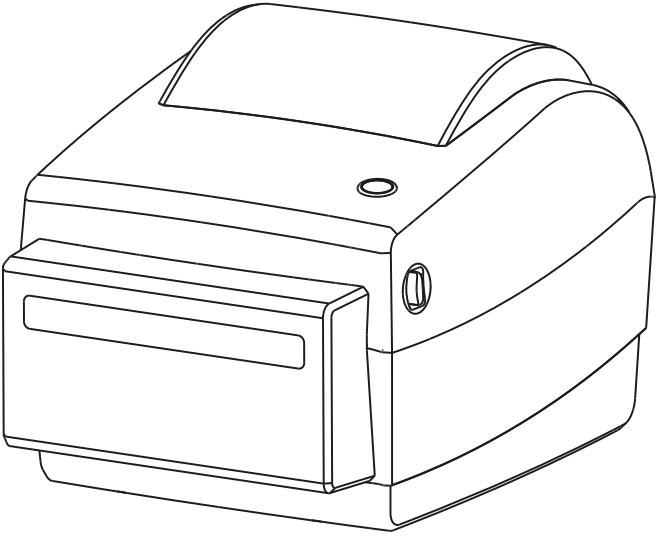
Scene mode	Key operation	Corresponding function
Shut down	Long press + boot	Self-checking print
Standby	Press 3 seconds	Enter the paper size learning model
Open the cover	Press 10 seconds	Factory Reset
Standby	press	Paper skip

148.00 mm


RONGTA

Quick Installation Manual

RP410C



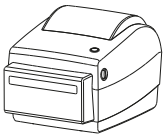
V1.0

 
210.00 mm

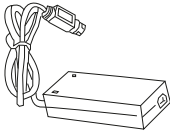
148 mm

Opening-box List

 
Standard Accessories


Printer


Power cord


Adapter


USB Line

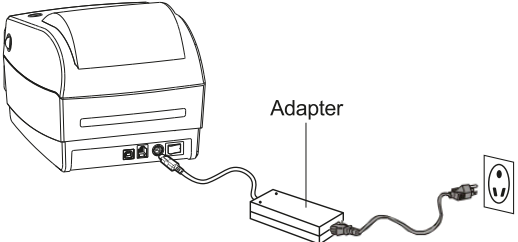

CD


Quick installation guide

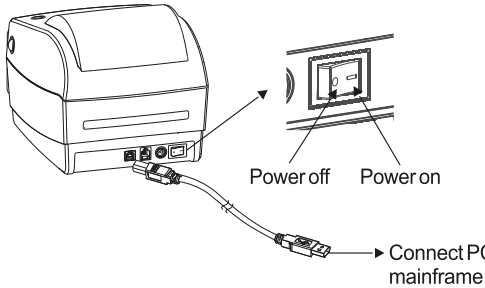

warranty card
Certificate of compliance

148 mm

Cable Connection


Adapter

Power Connection
1. Confirm the printer is Power-off(O);
2. Connect the adapter to the printer;
3. Connect the adapter to one end of the Power cord;
4. Connect the other end of Power cord to the socket.

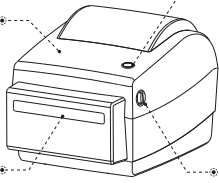

Power off Power on
Connect PC mainframe

USB Connection
1. Connect USB to the printer;
2. Connect USB to the PC mainframe;
3. Turn on the printer power to be Power-on(I).

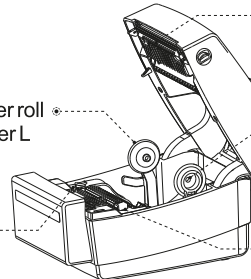
210 mm

Appearance and Components

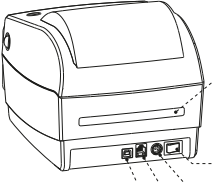
Front View


Upper cover
Paper outlet
Paper out button
Uncap button pole

Inner View


Printer Head Mechanism
Paper roll holder L
Paper roll holder R
Paper Guide L
Paper Guide R

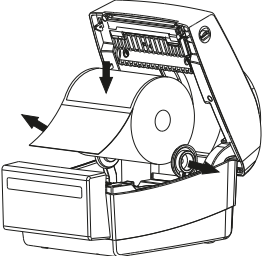
Rear View


Paper feed
Power Button
Power interface
Cash box
USB interface

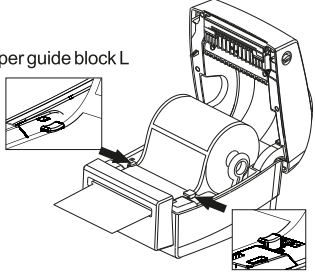
Consumables Installation

Inside-scroll Installation

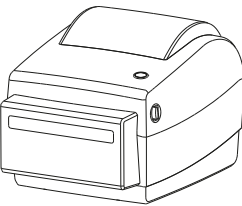
1. Open fixing seat, put in paper roll with printed face above.



2. Make paper front through paper guide, pull paper exceed cutter, adjust paper guide to fix the paper according to the paper width.


Paper guide block L
Paper guide block R

3. Close printer cover, press down to hear "ka" to lock.



FCC WARNING:

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.