



# Digital 6000

SK 6212

**Quick Guide** | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kisa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

Update the firmware of the EM 6000 to v2.2 (or higher) in order for the SK 6212 to work properly. The latest firmware is available here: [www.sennheiser.com/digital-6000](http://www.sennheiser.com/digital-6000)


## Battery




BA 62\*

\* to be ordered separately


Charge before usage !

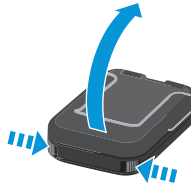

## Setup

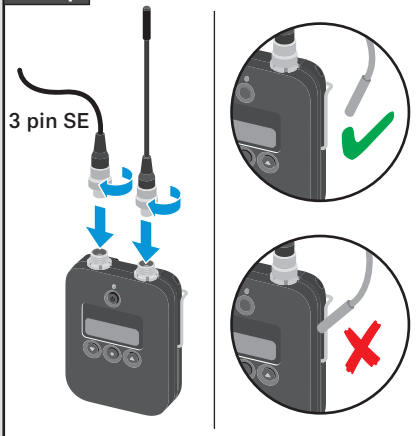

## On/Off

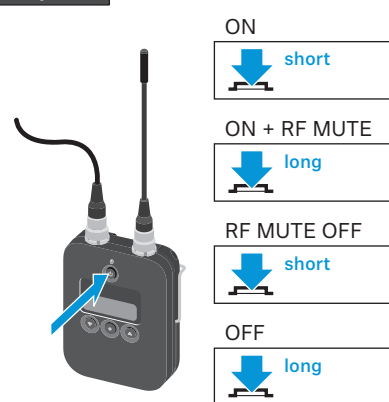


Sennheiser electronic GmbH & Co. KG


**SENNHEISER**

Am Labor 1, 30900 Wedemark, Germany, [www.sennheiser.com](http://www.sennheiser.com)  
Printed in Germany, Publ. 10/18 581342/A01

## Operating elements

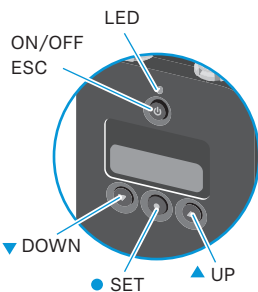

## Home screens

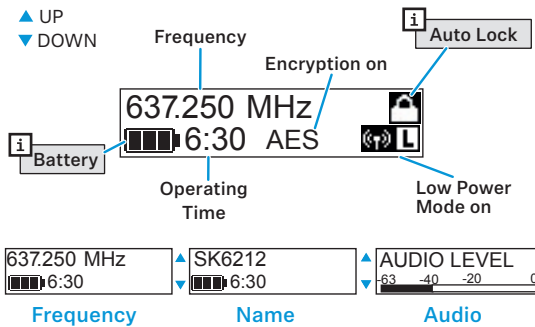

## Menu

- Frequency
- Name
- Gain
- Low Cut
- Display
- Lock
- Test Tone
- Power LED
- RF Power
- Reset
- Device Info

## LED Status



ON,  
Battery > 30 min  
no AF Peak, no RF mute



ON,  
Battery ≤ 30 min  
no AF Peak, no RF mute



 
ON,  
Battery > 30 min  
AF Peak or RF mute active



ON,  
Battery ≤ 30 min  
AF Peak or RF mute active

## Auto Lock

ON




ON

LOCKED

TEMP UNLOCK

 SET



SET

Flashing

Menus

## Digital 6000 System Instruction Manual

Sennheiser Documentation App



ANDROID APP ON Google play

Available on the App Store

or online at  
[www.sennheiser.com/download](http://www.sennheiser.com/download)  
Digital 6000\_