


FB-A303 User Manual

Retro Radio Speaker
User Manual
Type-C Charging Cable
USB adaptor

Location of Controls

1. ON/OFF
2. Type-c Charging Port
3. Charging Indicator
4. USB Port
5. AUX Jack
6. MODE
7. Previous Track
8. Play/Pause
9. Next Track
10. AM/FM Antenna
11. BT /USB Indicator
12. Volume
13. AM / FM Indicator

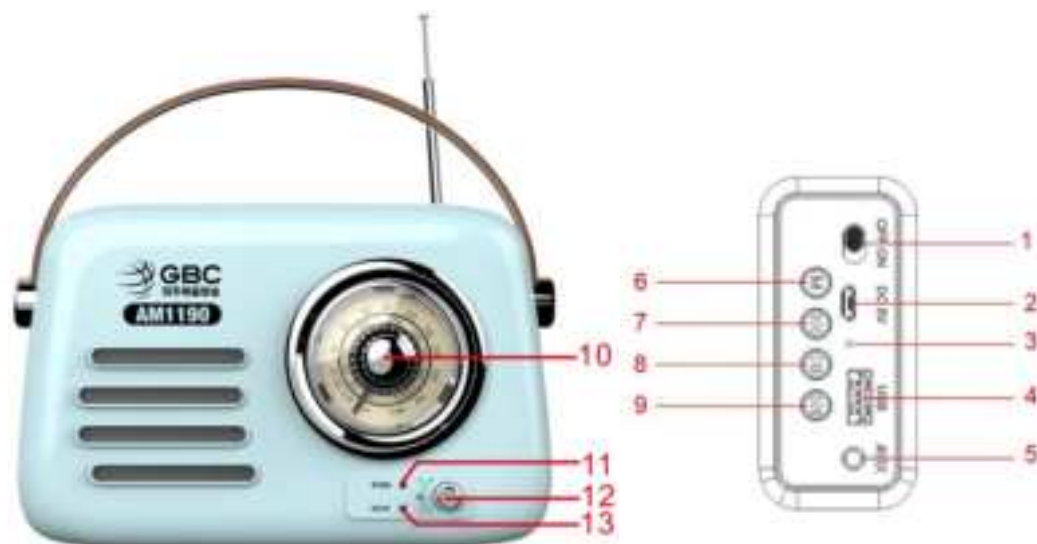

Before first use:

Insert the small connector of the Type-C Charging Cable into the Charging port(2) on the back of the speaker. Insert the large connector into the USB port on a computer, USB charging device, or 5V USB adapter(include) and plug into a wall outlet.

The LED indicator (3) will turn RED while charging and go off when fully charged. On low power, a tone will be heard, indicating that the speaker needs to be charged.

Basic Functions

AM+FM Function

- 1) ON/OFF Control: Press the power button (1) to turn on, a sound will be heard to indicate the speaker is on, press the power button (1) to turn off.
- 2) the AM/FM indicator(13) will constant blue light when turn on the speaker, indicating that the AM function is turned on.
- 3) Press the mode key(6) and the AM/FM indicator(13) will constant red light, indicating that the FM function is turned on.

Bluetooth Operation

- 1) the BT indicator(11) will flash blue light fastly When switches to Bluetooth mode, will flash blue light slowly when BT connected.
- 2) Turn on the Bluetooth function on your external Bluetooth device, search on it for the Bluetooth device with the name "FB-A303" and indicate with it a pairing and connection.

Using with a Wired Device

To used the speaker as a wired device, plug one connector of the 3.5mm audio cable into the 3.5mm auxiliary audio input jack (5) on the speaker. Plug the other connector into the headphone jack of your media-playing device. While connected, playback is controlled via the wired device.

Using USB playing

Insert USB device to USB port (4) to play music stored on the drive, the product will automatically play songs in USB, you can used button (7) to switch to previous song, use the button (8) to control play and pause the music, used the button (9) to switch to next song.

MODE

Use this key(6) to toggle between modes: BT, AUX, USB, FM, AM the BT/USB indicator(11) will flash blue light fastly when enter into Bluetooth mode and will flash blue light slowly after BT connected, will flash red light slowly when play in USB mode; the AM/FM indicator (13) will constant blue light when play in AM mode, press MODE(6) again, the AM/FM indicator (13) will constant red light when play in FM mode. Two-colour light will flash slowly When using AUX mode.

Previous Track

Press the key(7) to move back through the playlist.

Play/Pause

Press the key to play/pause(8) the music.

Next Track

Press the key(9) to move forward through the playlist.

Using FM

You can use the knob (10) to tune the FM and AM stations

For Volume adjustment

Turn the VOLUME knob (12) to control the volume .

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.