


Remote Control Unit

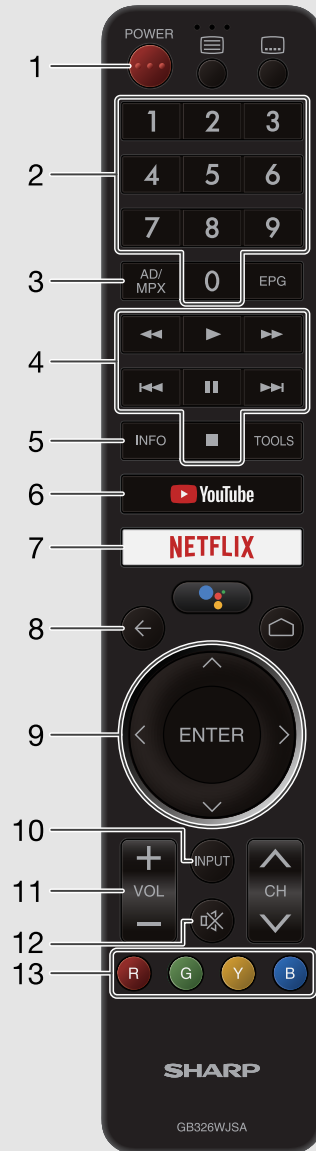

- 1 (**POWER**): Switch the TV power on or enter standby.
- 2 **0-9**: Set the channel.
- 3 **AD/MPX**: Select the sound multiplex mode and audio description.
- 4 **External equipment operational buttons**: Operate the external equipment.
- 5 **INFO**
DTV: Display the programme information.
- 6 **YouTube**: Display the YouTube screen.
- 7 **NETFLIX**: Display the NETFLIX screen.
If you press the NETFLIX button when the TV is turned off, the TV turns on and the NETFLIX screen is displayed.
- 8 (**Back**): Return to the previous screen.
- 9 **ENTER**: Select a desired item on the screen.
- 10 **INPUT**: Select an input source.
- 11 **VOL +/-**: Set the volume.
- 12 (**Mute**): Mute the sound.
 - Mute will be cancelled after 30 minutes.
 - Mute can be cancelled by pressing **VOL +/-** or .
- 13 (**R**, **G**, **Y**, **B**): The coloured buttons are correspondingly used to select the coloured items on the screen.


Remote Control Unit (Continue)



14 Buttons for useful operations

 (Teletext)

Select the teletext mode.

 (Subtitle)

Switch subtitle languages on/off.


15 EPG

DTV: Display the EPG screen.

16 TOOLS: Display the Tools screen.

17  (Google Assistant): Start a Voice Search.

Speak the word that you want to search for into the microphone at the bottom of the remote control. When you are using the microphone, do not cover this part with your hand.

18  (HOME): Display the HOME screen.

19 CH ^ / v: Select the channel.

- The remote control unit used throughout this manual are based on the 2T-C32/42/50BG1X models.

Remote Control Unit (Taiwan only)



- 1 (電源) (POWER): Switch the TV power on or enter standby.
- 2 **0-9**: Set the channel.
- 3 字幕 (Subtitle): Switch subtitle languages on / off.
- 4 **External equipment operational buttons**: Operate the external equipment.
- 5 資訊 (INFO)
DTV: Display the programme information.
- 6 **YouTube**: Display the YouTube screen.
- 7 **NETFLIX**: Display the NETFLIX screen.
If you press the NETFLIX button when the TV is turned off, the TV turns on and the NETFLIX screen is displayed.
- 8 (**Back**): Return to the previous screen.
- 9 **確定 (ENTER)**: Select a desired item on the screen.
- 10 輸入 (INPUT): Select an input source.
- 11 音量+/- (VOL+/-): Set the volume.
- 12 靜音 (MUTE): Mute the sound.
 - Mute will be cancelled after 30 minutes.
 - Mute can be cancelled by pressing 音量+/- (VOL+/-) or 靜音 (MUTE).
- 13 (**R**), (**G**), (**Y**), (**B**): The coloured buttons are correspondingly used to select the coloured items on the screen.

Remote Control Unit (Taiwan only) (Continue)



14 聲音切換 (AUDIO): Selects the audio mode during multichannel audio broadcasts.

15 定時關機 (SLEEP): Set the sleep timer.

16 節目表 (EPG)

DTV: Display the EPG screen.

17 工具 (TOOLS): Display the Tools screen.

18 (Voice): Start a Voice Search.

Speak the word that you want to search for into the microphone at the bottom of the remote control. When you are using the microphone, do not cover this part with your hand.

19 (HOME): Display the HOME screen.

20 頻道 ^ / v (CH ^ / v): Select the channel.

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction

Federal Communication Commission (FCC) Radiation Exposure Statement

Power is so low that no RF exposure calculation is needed.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.