BT-256



无线充音箱使用说明



无线充使用:插入充电器自动开启无线充

- (少で) 长接开机/短接灯光切换
- M/s 蓝牙/FM/USB/TF/AUX模式
- (四-) 长按减小音量, 短按下一曲
- (対)播放/暂停
- (+) 长按加大音量,短按上一曲

技术参数

无线充功率: 5W/7.5W/10W/15W

蓝牙版本: 5.2

蓝牙名称: BT256 蓝牙频率: 2.4GHZ-2.48GHZ

传输距离: 10米

频响范围: 50HZ-20KHZ

整机信噪比:大于75db 内置锂电池电压:3.7V

无线充电额定电压: 5V == 2A / 9V == 2A

产品尺寸: 235*80*238mm

产品重量: 770 g

按键功能操作说明

- 一、开机:长按开机键两秒开机,开机默认暖灯
- 二: 蓝牙功能使用:

1. 本音响支持具有A2DP功能的蓝牙设备使用,长按M键进入蓝牙模式,蓝牙指示灯的蓝灯闪亮,并伴有语音提示,此时音响处于等待配对连接状态,只有在这个状态下,才能与蓝牙音响进行配对并连接。

2. 手机连扫

第一步:在手机设置中打开手机蓝牙设置开关,点击搜索设备第二步:当可用设备显示BT256字符说明手机找到蓝牙音响,点击BT256进入配对模式,手机与音响配对成功后,会有语音提示并显示已连接。

三、TWS对联功能(此功能仅适于蓝牙模式)

当你拥有两台BT256蓝牙音响,通过长按其中一台M键配对,蓝牙互相连接时,两部音响会自动变为左右声道产生立体环绕声效果,实现真正的无线立体声。

灯光使用

- 1) BT256蓝牙音箱配备多种灯光效果
- 2)设备开机默认暖灯效果,轻按灯光键调节灯光

FM 收音机使用:

M键短按切换到FM功能,把音频线连接到产品AUX接口充当收音天线,另一端不需要连接任何设备,通过暂停键短按进入电台自动搜索并自动保存,索的电台通过"+/-"进行已保存的电台选择。

TF卡/U盘功能使用:

将TF卡/U盘插入卡槽位,会出现相应的语音提示,产品将自动读取卡内音频文件并播放,用户可以使用音箱"+/-"按键控制音乐大小声音。

全说明:

- 1. 不要将产品暴露在水或潮湿区域,如浴室。
- 2. 请不要用力撞击或跌落产品,以免手动损坏。
- 3. 长时间不使用时,请关闭电源。

保修和售后服务:

如果您在使用过程中有任何问题,请随时与我们联系,我们对每一 位客户负责。

BT-256



Instructions for use of wireless charging speaker



Use of wireless charging: insert the charger to automatically start wireless charging

- لانا) Long press to start/short press to switch lights
- (M/3) Bluetooth / FM/USB/TF/AUX mode
- Long press to decrease the volume, short press once
- Play/Pause
- Long press to increase the volume, short press the previous song

Technical Parameter

Wireless charging power: 5W/7.5W/10W/15W

Bluetooth version: 5.2 Bluetooth name: BT-256

Bluetooth frequency: 2.4GHZ-2.48GHZ

Transmission distance: 10m

Frequency response range: 50HZ-20KHZ

Signal to noise ratio of the whole machine: >75db

Built-in lithium battery voltage: 3.7V

Wireless charging rated voltage: 5V = 2A / 9V = 2A Product size: 235 * 80 * 238mm

Product weight: 770g

Key function operation instructions

- . Power on: press and hold the power on button for two seconds to start the machine, and the default warm light is on
- □ 、Bluetooth function use:
- 1. This audio system supports the use of Bluetooth devices with A2DP function. First, turn it on, and press and hold the M key to enterWhen the Bluetooth mode is entered, the blue light of the Bluetooth indicator light flashes, accompanied by voice prompt, and the audioIt is in the state of waiting for pairing connection. Only in this state can it be connected with Bluetooth audioPair and connect \circ

2. Mobile phone connection

Step 1: Open the Bluetooth setting switch in the mobile phone settings, and click Search Device

Step 2: When the BT256 character is displayed on the available device, it means that the mobile phone has found the Bluetooth audio, click BT256 enters the pairing mode. After the phone and audio are successfully paired, a voice prompt will be displayedShow connected

Ξ 、 TWS antithesis function (this function is only applicable to Bluetooth mode)

When you have two BT256 Bluetooth stereos, long pressone of them to pair, and Bluetooth is connected to each other, the two stereos will automatically change into left and right channels to produce stereo surround sound effect, realizing true wireless stereo.

Light Use

1) BT256 Bluetooth speaker is equipped with a variety of lighting effects 2) The default light warming effect is when the device is turned on.

press the light key to adjust the light

FM Radio Use

Short press the M key to switch to the FM function, and connect the AUX cable to the product AUX interface to act as a radio receiver. The other end of the line does not need to be connected with any equipment. Press the pause key to enter the automatic radio search Search and save automatically, and the radio station searched will select the saved radio station through "+/-".

TF Card/U Disk Function Use:

Insert the TF card/U disk into the card slot, the corresponding voice prompt will appear, and the product will automatically readThe audio file in the card is played, and the user can use the speaker "+/-" button to control the size of the music sound.

Safety Instructions:

- 1.Do not expose the product into the water or humid areas, such asbathrooms.
- 2.Please do not hit or drop the product hardly to avoid manual damage.
- 3. When not in use for a long time, please turn off the power.

Warranty and After Sales Service: If you have any questions during use please feel free to

If you have any questions during use, please feel free to contact us, we are responsible for every customer.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.