

iHome
 Bluetooth®

XT-54

TRUE WIRELESS EARBUDS

1

Package Contents:

- XT-54 True Wireless Earbuds
- Charging Travel Case
- 8 Ear Cushions in 3 sizes
(2 Small, 2 Large, 4 Medium)
- USB-A to USB-C Charging Cable
- Instruction Manual

Specifications:

Bluetooth® Version: 5.4
Working distance: 33 ft
Charge Connector: USB-C
Speaker Size: Ø13 mm
Frequency Response: 20Hz–20KHz
Sensitivity: 92db±2db
Charging Voltage: 5V/1A
Case Battery: 230 mAh
Case Charge time: Up to 1.5 hrs
Earbuds Battery: 2 x 25 mAh
Earbuds Charge time: Less than 1 hr.
ANC Sensitivity: -26db±1db

2 3

Operation Guide

Getting Started

Before using this device, fully charge it. Charging instructions can be found on page 6.

Basic Functions

Right Earbud:

- Double tap the control surface to play or pause the audio.
- Tap and hold one second to skip to the next audio track.
- Single tap to raise the volume.

Left Earbud:

- Double tap the control surface to play or pause the audio.
- Tap and hold one second to skip to the previous audio track.
- Single tap to lower the volume.

Phone calls:

When there is a call, the unit will pause playback. Phone call functions work the same on either earbud.

To answer a call, tap the control surface of either earbud. To end a call, double tap the control surface. To reject an incoming call, tap and hold the control surface.

ENC

ENC is activated automatically when you are on a call or giving instructions to your AI voice assistant.

Pairing

- Go to Bluetooth® Settings on your mobile device.
- Turn Bluetooth® ON, on your device.
- On your Bluetooth® device, select “iHome XT-54 ” from the list of available devices.

Using Siri or Google Assistant

On the left earbud, tap the control surface three times, in quick succession, to activate your AI assistant. The AI assistant on your device must be activated prior to this operation.

ANC Functions

- ANC is disabled by default.
- Tap the control surface of the right earbud 3x to enable Transparency mode. This mode allows you hear to your environment without turning off the music or removing the earbuds.
- Tap the control surface of the right earbud 3x more to activate ANC mode, this filters out background noise allowing you to enjoy your music clearly.
- Tap the control surface of the right earbud 3x more to disable ANC function.

| 5 | 6 | 7 | 8 | 9 |
|--|---|--|--|---|
| <h2>Troubleshooting</h2> <p>Earbuds do not sync with each other:</p> <ol style="list-style-type: none"> Place the earbuds in the case, then take out the earbuds, ensuring both earbuds are turned on. On each earbud, press and hold the control surface for 5 seconds. The earbud will turn off after the LED flashes purple 3 times. Replace the earbuds in the charging case. Repeat the Getting Started process. <p>Earbuds do not pair to device:</p> <ol style="list-style-type: none"> Turn the Earbuds OFF by pressing the control surface on each earbud until the LED blinks red, and then turns off. Replace the earbuds in the case. Turn your device's Bluetooth® OFF and then back ON. Then repeat the pairing process. | <h2>Charging</h2> <ol style="list-style-type: none"> Replace the earbuds in the case. Connect the USB-C charging cable to the charging port on the bottom of the charge case. Plug the cable into a standard USB 5V/1A or higher power output. <p>When you plug the case into a charger, the LED display shows the current charge, blinking. This means it is being charged.</p> <p>The lights on the buds in the case glow steady red, indicating they are charging.</p> <p>The lights on the buds will go out when fully charged or the case is unplugged from the power source.</p> <p>The LED display will show 100 and stop blinking when the case is fully charged.</p> <ol style="list-style-type: none"> When fully charged, promptly unplug the charge case from the power source. <p>If you want to charge the earbuds from the charge case internal battery, simply replace them in the case. They will begin charging from the built-in case battery.</p> | <h2>Warnings</h2> <ul style="list-style-type: none"> Do not use this unit for anything other than its intended use. Do not puncture, throw, drop, bend, or modify this product. Do not throw this product into fire or water. Do not short-circuit the battery with any metal or metallic objects. Do not expose this product to corrosive liquids such as salt water. Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit. Do not allow children to play with this product as it is not a toy, and may present a choking hazard. Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle. Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss. Use the earbuds with this charging case only. To avoid damage to the charging case, please only use a USB 5V/1A or higher charger. In order to ensure the battery life, charge normally at least once a month. | <h2>FCC</h2> <p>FCC ID: 2AHN6-AUBE248</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> | <h2>Warranty</h2> <p>Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.</p> <p>WWW.BYTECHINTL.COM</p> <p>Bytech NY Inc 2585 West 13street Brooklyn NY 11223 (718) 449-3700</p> <p>©2024 BYTECH NY INC.</p> <p>*All trademarks and copyrights are the property of the respective companies.</p> |

