Sunapee Bluetooth® Outdoor Speaker 100240-001B

(BC)

Instruction Manual

Power button
 Previous track

Overview

Play, pause, accept/ reject incoming call

Next track
 Volume down

Volume up

time to time

LED indicator for Bluetooth connection
 Microphone

(4)(5)

@ B

9. 3.5 mm AUX input socket

Charging indicator
 Charging socket

12. Lid

Bluetooth Operation

- Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device.
- Turn the speaker on, the indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode. The indicator light will go off if no Bluetooth devices are detected within 5 minutes.
- 3."GEMLINE SPKR" will appear on the Bluetooth device list, select "GEMLINE SPKR" to establish pairing. If instructed to enter a PIN code, please enter '0000'.
- 4. When you want to play audio from another Bluetooth device, disconnect the speaker from the original device and follow steps 1-3 to re-pair the speaker with a new Bluetooth enabled device.

Button Control

- Power On/Off: Short press the Power On/Off button.
- Play/Pause: short press play/pause buttons
- Volume Up/ Volume Down: Short press Volume Up/Down button
- Next Track / Previous Track: Short press Track Up/Next button

Hands-free phone use

- Answer incoming call: Short press Hands Free Calling button.
- End call: Short press Hands Free Calling button
- Reject incoming call: Hold Power On/Off button for two seconds.

Aux playback operation

- 1. Turn on the Speaker.
- Connect the speaker to a smartphone, audio device, or laptop with the 3.5mm AUX cable(included)
- The next/previous song, volume, and play/pause buttons can only be adjusted on the device that is connected through the 3.5mm AUX cable.

Charging the Speaker

- When the battery is low, please charge via the included USB cable. The charging time is approximately 2.5 hours and provides up to 6 hours of continuous operation. Standby time is approximately 72 hours.
- The LED indicator light will be red during charging and will turn blue once it is fully charged.

Warning

- 1. Do not disassemble, repair, or modify the speaker.
- Do not place product in or near fire to avoid danger, as it uses a lithium battery
- Avoid storage at extreme temperatures, this can shorten the battery life and may affect the speaker.
- Keep the speaker dry and do not store the speaker in damp areas to avoid damage to the speaker.
- 5. Avoid dropping the speaker as it may damage the speaker.

Kind Reminder

- To prolong the speaker's life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time.
- When an error occurs with the speaker, please turn off the speaker and restart it to troubleshoot.
- When the speaker's power is low, the Bluetooth range may be affected. Please charge the speaker to avoid disruptions during use.

Front Cover page 02 page 03 page 04 page 05

Specification

IC ID: 21530-100240

FCC ID: 2AGR4-100240

Model: Sunapee Bluetooth® Outdoor Speaker Bluetooth specifications: Bluetooth® V4.0 Wireless working range: 10M (without obstacles) Built-in battery: Lithium Battery 2200mAh USB Recharge voltage: DC 5V Output power: 3.2W*2

Frequency Response: 100Hz-20kHz
Sensitivity: ≥70dB

Product dimensions: 190*90*46mm

Packing

- Bluetooth® Speaker
- USB Charging Cable
 User Manual
- Gift Box

PROBLEM	TROUBLESHOOTING METHOD
Unable to pair the speaker with a mobile device	Inspect whether the speaker are searching for a Bluetooth enabled device to connect to. If not, restart the speaker. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. The power of the battery is insufficient, please recharge the speaker.
The music stops from	1. Inspect the distance between the speaker

and the Bluetooth enabled device, it may

exceed the Bluetooth transmission range.

2. Inspect if there is an obstacle between the

speaker and the Bluetooth enabled device.

3. The power of the battery is insufficient,

lease recharge the speaker.

PROBLEM	TROUBLESHOOTING METHOD
The sound is low or distorted	Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed. The power of the battery is insufficient, please recharge the speaker.
The Bluetooth indicator light remains OFF	The power of the battery is insufficient, please recharge the speaker. Restart the speaker.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective owners.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Back Cover page 06 page 07 page 08 page 09