

USE MANUAL

Instructions must be retained since it contains important information.

Design by our hearts, bring your baby joy and happiness

Wireless Karaoke TOY



NO.102/NO.102B

Applies to #102 #102B

Musical development, Cultivate interactive communication ability, EQ cultivation, Auditory development

2 colors available



Explanation of charging function



Charging port



Charging line

Low power will make the sound of the product small, need to connect the charging cable to the charging hole to charge. Note it cannot play normally during charging, it can be played normally only after the charging cable is removed from the power supply.



3.7V 1200mAh

3.7V 1200mAh lithium battery is used, red light shines through the small round hole when charging, and the light goes out when full (charging time is about 150 minutes)

The toy shall only be used with a power supply for toys; the USB power supply is not a toy.

- Replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types);
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- And a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

This toy contains battery that is non-replaceable.

USB charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

This toy is only to be connected to equipment bearing either of the following symbols:



Wireless mode

ON/OFF



Start the Wireless mode automatically after power on. At this time, you can turn on the Wireless device if you want to connect the phone. When insert the U disk into the USB or insert the memory card into the TF socket, press the (M) key to the Wireless mode.

After successful connection, Wireless can be played through the stereo. Press the (M) key to stop playing, and then press again to continue playing.

During karaoke, you can press the (M) key to eliminate the original singing sound, leaving only the accompanying music, leaving only the backup. Press the key again to resume the original singing.

USB drive mode

USB



After turning on, insert the U disk into the USB socket to the USB drive mode you can play the songs in the USB drive.

Long press (M) to play the previous song, and long press (M) to play the next song. When playing, press the (M) key to stop playing, and press it again to continue playing.

During karaoke, you can press the (M) key to eliminate the original singing sound, leaving only the backup. Press the key again to resume the original singing.

Memory card mode

TF



After turning on, insert the memory card into the TF socket to the memory card mode, you can play the songs in the memory card.

Long press (M) to play the previous song, and long press (M) to play the next song. When playing, press the (M) key to stop playing, and press it again to continue playing.

During karaoke, you can press the (M) key to eliminate the original singing sound, leaving only the backup. Press the key again to resume the original singing.

When Wireless is turned on and the memory card and USB flash disk are inserted, press the (M) key to switch modes.

Kindly note that the switch effect of the original and accompaniment depends on the type of songs and the sound effect settings of phone player.

正面

背面

FCC Compliance Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Keys Function



Mode conversion button

Used to convert Wireless mode, USB flash disk mode and memory card mode.



Original singing and backup switch button

It is used to switch the original singing/ backup, giving children a real experience of KTV.



Volume - / Previous

Short press to decrease the volume, long press to play the previous song.



Volume + / Next

Short press to increase the volume, long press to play the next song.



Pause / Play button

When playing a song, press to pause playing, and then press to continue playing.




Magic sound changing button

After starting up, press this button to enter the magic sound changing mode.




2 MIC holes can be connected to 2 microphones, interactive duet more happily.

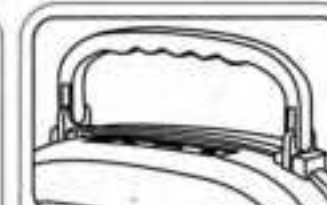

Intimate small portable easy to carry, reduce the risk of falling.

Microphone storage

The microphone can be stored on the back of the stereo.

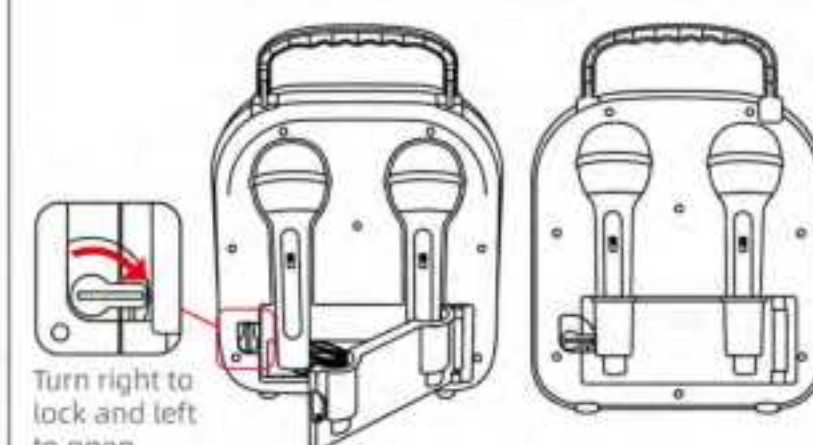

Turn right to lock and left to open.



Warm reminder

If no operation is performed for more than 10 minutes in the power-on state, a hibernation announcement will be played to enter the intelligent power-saving mode. Press any button to wake up.