



Gaming is winning.™

T4 Mini



User Manual ►


System Requirements

- Android 9.0 or above
- iOS 13 or above
- Windows 7/10 or above

Package Contents

- GameSir-T4 Mini *1
- Type-C cable (1m) *1
- User manual *1

Device Layouts

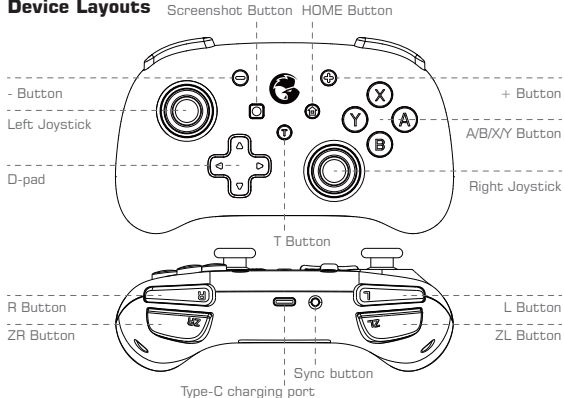

Power On: Press and hold the HOME button for 2s to power on;

Power off: Press and hold the HOME button for 3s to power off.

Auto-Sleep:

- When the console screen of Switch or Switch Lite is off, the gamepad will go to sleep automatically.
- If no button is pressed on the gamepad within 5 minutes, the gamepad will go to sleep automatically.
- Under Bluetooth connection, after pressing the HOME button for 3 seconds to power off and disconnect, the gamepad will go to sleep automatically.

How to charge the gamepad

Use the charging cable to connect the Type-C interface on the top of the gamepad to the USB charging port.

Battery Status

LED Indicator	Description
LED indicators blinking during gaming	Low battery
LED 4 blinking	Charging
LED 4 staying on	Fully charged

Note: The current connection mode indicator will cover LED 4 if charging while using the gamepad.

How to connect to Switch or Switch Lite via Bluetooth

- 1.Go to the main interface of the Switch or Switch Lite, and click: Controllers——Change Grip/Order to enter the pairing interface.
- 2.Press and hold the Sync button for 2s.
- 3.The gamepad will automatically pair with Switch or Switch Lite. After successful connection, Switch or Switch Lite will automatically assign the channel light on the gamepad.
- 4.The next time you connect it to Switch or Switch Lite, just by pressing the HOME button to power on, the gamepad will automatically wake up the console and connect.

NOTE: If the gamepad has been switched to another mode, it needs to be paired with Switch or Switch Lite again.

How to connect to Mobile Phone via Bluetooth

Play android controller-supported games

Refers to mobile games that support using a gamepad

- 1.Press the X + HOME button until the gamepad is turned on and LED4 blinks.
- 2.Turn on the phone's Bluetooth, search for GameSir-T4 Mini gamepad, click and pair.
- 3.The next time you use, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

LED indicator	Description
LED4 slow blinking	Connecting
LED4 fast blinking	Pairing
LED4 staying on	Connected

Play Apple Arcade and MFi games

Refers to mobile games that support using a gamepad

- 1.Press the B + HOME button until the gamepad is turned on and LED3 blinks.
- 2.Turn on the phone's Bluetooth, search for Xbox Wireless Controller gamepad, click and pair.
- 3.The next time you use, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

LED Indicator	Description
LED3 slow blinking	Connecting
LED3 fast blinking	Pairing
LED3 staying on	Connected

How to connect to PC via USB Cable

Plug the USB cable to the USB port of your computer.

The gamepad supports both XInput and DirectInput modes. The default is XInput mode. You can switch between these two modes by long pressing + and - button for 3s.

LED Indicator	Description
LED1+LED4 staying on	XInput
LED2+LED3 staying on	DirectInput

Joysticks Backlight Adjustment

Key Combinations	Descriptions
T+L3 button (one-click)	Cycle through backlight colors under Monochrome Permanent Mode-blue, red, green, yellow, cyan, orange, purple, pink, and rainbow color
T+L3 button (double-click)	Cycle through 3 lighting effects-breathing (multi-color cycling), rainbow breathing, off

Motor Vibration Intensity Adjustment

Key Combinations	Descriptions
T button + D-pad's up / down button	Upshift / Downshift

Turbo Combo Function

Key Combinations	Descriptions
Single key turbo mode 1: press and hold the button that needs a combo set, then press the T button	Set a manual combo. Pressing the button once means combo once. After releasing the button, the combo stops.
Single key turbo mode 2: Under single key turbo mode 1, press and hold the button that needs a combo set + T button	Set an auto combo. After releasing the button, auto combo starts continuously without triggering the button again.
Clear single key turbo mode: Under single key turbo mode 2, press and hold the button that has a combo set+ T button	Cancel the combo function of the single button
Long press the T button for 5s	Clear all the combo buttons that have been set
Programmable buttons: A,B,X,Y,L,ZL,R,ZR	

NOTICE: Please read this Precautions carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

Nintendo Switch™ is a registered trademark of Nintendo Inc. All rights reserved. All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license form or approved, sponsored or endorsed by Nintendo Inc. This product is not manufactured for Nintendo Inc.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

システム要件

- Android 9.0またはそれ以上 (Androidデバイス)
- iOS 13またはそれ以上 (Appleデバイス)
- Windows7 / 10以上

パッキングリスト

- GameSir-T4 Mini *1
- Type-Cデータケーブル (1メートル) *1
- 取扱説明書* 1