

WARRANTY

Secure Wireless offers a Lifetime Warranty on this product. Secure Wireless agrees to repair or replace this product at no cost to the user.

For return authorization please contact:

Secure Wireless
1185 Park Center Drive, Suite A/B
Vista, CA 92083
866-966-9473

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by Secure Wireless could void user's authority to operate the equipment.

Secure Wireless

4 Button Wireless Transmitter
For use with Part #: EV-F319/EV-F345/EV-F433
USER MANUAL



I. Programming the Remote into the Alarm System

Refer to the programming guide that came with your alarm system for programming a wireless device (KEYFOB) into the security system.

II. Changing Panic Operation to Delay Mode or Instant Mode

Note: To use this feature you must have programmed button 4 into the alarm panel as "PANIC".

SETTING PANIC BUTTON INTO INSTANT TRANSMISSION MODE

1. Press all 4 button at the same time until the LED begins to flash. (This will take approximately 3 seconds before LED flashes.)

2. Release all 4 buttons
3. Press Button 1 (TOP LEFT BUTTON)
4. LED should stop flashing

SETTING PANIC BUTTON FOR DELAY TRANSMISSION MODE

(You must hold down panic for 3 seconds before transmission is sent)

1. Press all 4 button at the same time until the LED begins to flash. (This will take approximately 3 seconds before LED flashes.)
2. Release all 4 buttons
3. Press Button 2 (TOP RIGHT BUTTON)
4. LED should stop flashing