



MP3 HUMMER H1

ATTENTION PARENTS:
IT IS RECOMMENDED THAT THIS TOY
AND ALL ACCESSORIES BE
PERIODICALLY EXAMINED FOR
POTENTIAL HAZARDS AND THAT ANY
POTENTIALLY HAZARDOUS PARTS
BE REPAIRED OR REPLACED.

Item # 91389LA
FAST LANE is a mark of
da una marca de Geoffrey, Inc.
(C) Geoffrey, Inc.
Distributed by ToyRus Pty. Ltd.
Imported by ToyRus Pty. Ltd.
ToyRus (Australia) PTY Ltd.
Regents Park NSW 2143, Australia.
Made in China/Hecho en China
www.toyrus.com



Operation instruction
Please read carefully before starting to operate.
It is recommended to operate the vehicle under adult supervision.
Not recommended for children under 8 years of ages.
Keep the instruction manual for future reference.
Note: Can not play 2 vehicles together in the same frequency.

Features

 
- Full function - runs forward & backward, turns left & right and stops.
- Radio control with the function of playing music, with USB cable to download music from PC.
- Runs with working headlights.

Battery requirement


- One 9V battery (included) for transmitter.
- Five 1.5V AA batteries (included) or one 5V battery pack (not included) for vehicle.
- Alkaline batteries are recommended.

Battery installation

- 1) Transmitter
- 1) Slide ON/OFF to OFF.
- 2) Press and pull the battery compartment cover in the direction of the arrow to remove it.
- 3) Put the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery compartment cover.

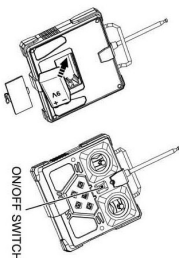

 - 1) Slide ON/OFF to OFF.
- 2) Use a coin to turn the battery door and open the battery door.
- 3) Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door and use a coin to turn the stopper back.

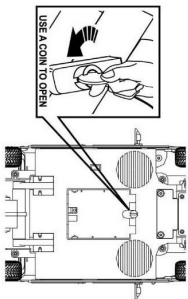

The vehicle can also be operated with a 6V Ni-Cd rechargeable battery pack (not included).

- 1) Make sure the battery pack has been fully charged.
- 2) Remove the battery case.
- 3) Put 6V battery pack in the battery compartment according to the polarity symbols (+ and -) marked inside.
- 4) Replace the battery door.

How to operate

- 1) Slide ON/OFF on the bottom of the vehicle to ON.
 - 2) Slide ON/OFF on the transmitter to ON.
 - 3) Use the transmitter's levers to control the movement and direction of the vehicle.
- Note: If the vehicle moves slowly or does not move at all, replace the batteries with fresh ones.

Left Control Lever

- Push forward to move forward.
- Pull backward to move backward.
- Release to stop.

CARE

 
- Never drive the vehicle on a wet floor, on sand or in mud, rain, or snow. These conditions can damage it.
- Do not store vehicle or controller near sources of heat in direct sunlight for long periods.
- Do not leave outside overnight, as light dampness is harmful to interior mechanism.
- If there is any indication of thunder, do not play outside.
- Do not try to disassemble any part of the vehicle.
- Do not drop or attempt to crash the vehicle into walls or other obstacles.
- Occasionally wipe the vehicle with damp cloth to keep it looking new. Do not use harsh chemicals to clean the vehicle.

BATTERY CAUTION

- Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Observe correct polarity.
 - Remove batteries when not in use.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the toy before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short circuited.
- NOTE:** Dispose of old batteries promptly and properly, do not burn or bury them.


THE FCC WANTS YOU TO KNOW:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

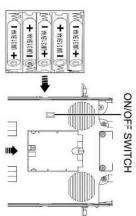

Right Control Lever (Works together with Left Control Lever)

 - Push left to turn left.
- Push right to turn right.
- Release to go straight.

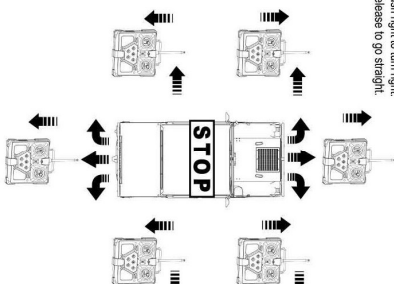

Interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio TV technician for help.

FCC NOTE:
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) If the device does cause any interference received, including interference that may cause undesired operation.

Radio control with the function of playing music
- Press A & C to select the music.
- Press B to play or pause the music. Long press B for 2 second to stop the music.
- Press D & E to adjust the volume.
- MP3 POWER ON—Long press B for 2 second.
- MP3 POWER OFF—Long press B for 2 second.

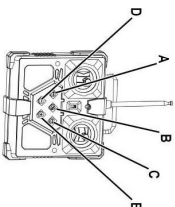

Download Music

Remove the trunk and connect the USB cable to the vehicle and computer to download music.

