

SKYTECH II, INC

9230 Conservation Way, Fort Wayne,
In 46809, USA
Tel: 260-459-1703
Fax: 260-459-1592

FCC ID: K9LTS-R-1

SKY TS/R-1 Digital Thermostat USER MANUAL

- 1) Rear Case- press ON/OFF(ON-the back left button, OFF- the back right button)
at the same time to change C or F
- 2) Front Case- move rod to OFF then send 3 times OFF signal to receiver
- 3) Front Case- move rod to ON then send 3 times ON signal to receiver
- 4) Front Case- move rod between OFF & ON for adjusting desire temperature.
When temperature below adjusted temperature then it will turn on receiver with
flame icon after 2 minutes. When temperature higher than adjusted temperature
then it will disable the flame icon then turn off the receiver. It will have SET icon
when rod was moved between ON & OFF scale.

The action of SKY TS/R-1

Use component RT-103AT to sense the temperature and compare with ROD SETTING temperature which setting by users. When setting temperature below the room temperature then transmitter will send 3 times signals to turn on the receivers. If SETTING temperature is higher than room temperature then transmitter will send 3 times signals to turn off the receiver (fire place).

Caution:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

“Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.”