# Media player voice commands

Voice command	Colloquial alternatives	Function
Play <track <br="" album="" artist=""/> Composer/music genres/track lists>	Play <track/>	The names of all available tracks, albums, artists, composers, genres or playlists are accepted during the search. In the case of a clear search result the track found is played back immediately.
Search for track <track/>	Search for Song/Track/Video <title>&lt;/td&gt;&lt;td&gt;The names of all available tracks, albums, artists, composers, genres or playlists are accepted during the search. A selection list appears from&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Search for album &lt;album&gt;&lt;/td&gt;&lt;td&gt;Look for music album &lt;album&gt;&lt;/td&gt;&lt;td&gt;which you can select the desired music. If you wish to play all the tracks in a selection list, say "Play all tracks".&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Search for artist &lt;artist&gt;&lt;/td&gt;&lt;td&gt;Search for artist/singer/band&lt;br&gt;&lt;artist&gt;&lt;/td&gt;&lt;td&gt;&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Search for composer &lt; composer&gt;&lt;/td&gt;&lt;td&gt;Search for the songwriter&lt;song-&lt;br&gt;writer&gt;&lt;/td&gt;&lt;td&gt;&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Search for music genre &lt;music genre&gt;&lt;/td&gt;&lt;td&gt;Look for music type/music style &lt;music genre&gt;&lt;/td&gt;&lt;td&gt;&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Search for playlist &lt;playlist&gt;&lt;/td&gt;&lt;td&gt;Show me tracklist/playlist &lt;play-list&gt;&lt;/td&gt;&lt;td&gt;&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Next track&lt;/td&gt;&lt;td&gt;Other track&lt;/td&gt;&lt;td&gt;Plays back the next track on the current playlist&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;Previous track&lt;/td&gt;&lt;td&gt;Repeat last song&lt;/td&gt;&lt;td&gt;Plays back the previous track on the current playlist&lt;/td&gt;&lt;/tr&gt;&lt;/tbody&gt;&lt;/table&gt;</title>	

## 252 LINGUATRONIC

Voice command	Colloquial alternatives	Function
Random track list on	Switch on random mode	Switches on random mode
Random track list off	Switch off shuffle mode	Switches off random mode
Show me the current playlist	Let me look at the current playlist/ track list	The current playlist is displayed.
What am I listening to	Which music is currently playing	The information about the track currently playing is read aloud.

# Overview of message voice commands

Text messages and e-mails can be created, edited and listened to using the message voice commands.

# Message voice commands

Voice command	Colloquial alternatives	Function
Text message to <name></name>	New message to <name></name>	To create a text message. All address book names are available.
E-mail to <name></name>	New e-mail to <name></name>	To create an e-mail. All address book names are available.
Forward text message	Forward text	To forward selected or open text messages.
Forward e-mail	Forward electronic mail	To forward selected or open e-mails.

Voice command	Colloquial alternatives	Function
Read out text messages	Read out all texts	To have text messages read aloud.
Read out e-mails	Read out e-mails from <name></name>	To have e-mail read aloud.
Reply	Compose a message/e-mail/text message to the sender	To reply to a message

# Overview of vehicle voice commands

You can use the vehicle voice commands to directly call up the corresponding menus for the vehicle settings.

# Vehicle voice commands


Voice command	Colloquial alternatives	Function
Ambient light menu	Can you show me the ambient light menu, please?	To display ambient light settings
Ambient light blue	I would like to change the interior lighting to ambient light blue	To switch ambient lighting, e.g. to blue
Display and styles menu	Go to display and styles menu settings	To show display settings

## LINGUATRONIC

Voice command	Colloquial alternatives	Function
Assistance menu	Open the driver assistance menu	To display assistance settings
Energy flow menu	I would like to switch to the energy flow menu.	To display energy flow settings
Climate control menu	Can I go to the climate control menu, please?	To display climate control settings
Automatic climate control driver on	Turn off the climate control on the driver's side	To switch on the automatic climate control settings on the driver's side
Light menu	Can you show me the light settings?	To display light settings
Massage menu	Can you show me the massage menu?	To display massage settings
Massage driver's seat on	Switch on the driver's massage	To switch on the massage function for the driver's seat
Massage driver's seat off	Switch the driver's side massage off	To switch off the massage function for the driver's seat
Seats menu	Can you please display the seat settings?	To display seat adjustment settings

Voice command	Colloquial alternatives	Function
Seat heating front passenger level 2	Seat heating front-passenger on level 2	To set the seat heating for the front passenger seat to level 2
Outside temperature	How cold is it outside?/How warm is it?	To display the outside temperature
Engine data	Can I switch to the motor menu?	To display engine data
Vehicle data	Can you please display the vehicle data menu?	To display vehicle data
Consumption	Can I switch the consumption menu, please?	To show consumption settings
Average consumption	Read out the average fuel consumption	To show average consumption
Range	Tell me the current range	To show range data
Current speed limit	Tell me the maximum permitted speed	To show the current speed limit
Next service	Tell me my next service appointment	To show the next service due date

# Overview and operation Overview of the MBUX multimedia system

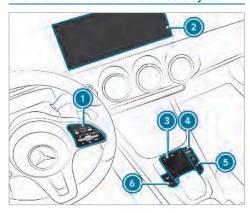

- Touch ControlOperates Touch Control(→ page 259)
- Multimedia system display with touch functionality

Home screen overview (→ page 258)

- Operates the touchscreen (→ page 260)
- ③ Touchpad Operates the touchpad(→ page 261)
- Control knob Press and hold: switches the multimedia system or display on or off Press briefly: switches the mute function on/off

Turn: adjusts the volume

- Buttons for navigation, radio/media and telephone
  - Calls up applications(→ page 263)
- Buttons for vehicle functions/system settings and favourites/moods
   Calls up applications(→ page 263)

You can operate the MBUX multimedia system with the following central control elements:

- Touch Control and touchpad 
   The operation for both control elements is achieved by cursor control.
- Multimedia system display ②

Numerous application, online services, services and apps are available for you. You can call these up using the home screen or using buttons and next to the touchpad.

You can conveniently call up and add favourites on the steering wheel using the  $\bigstar$  rocker switch or next to the touchpad using the  $\bigstar$  button. Quick-access in the home screen and in the applications serve to select functions more quickly.

If you use the learn function of the multimedia system, you will receive suggestions during operation of the most probable navigation destinations, radio stations and contacts. The configuration of the suggestions takes place in your profile. You can compile your profile from various vehicle settings and settings of the multimedia system. For different driving situations, you can set moods within a profile. You can also call up and add moods using the rocker switch or the

The Notifications Centre collects incoming notifications e.g. about an available software update. Depending on the type of notification it offers various actions.

With the global search in the vehicle you can search on-board across many categories as well as online in the Internet. Both functions call up the home screen.

## Anti-theft protection

This device is equipped with technical provisions to protect it against theft. More detailed information about anti-theft protection can be obtained at a qualified specialist workshop.

## Notes on the multimedia system display

Observe the notes on caring for the interior (→ page 386).

Automatic temperature-controlled switchoff feature: if the temperature is too high, the brightness is initially reduced automatically. The multimedia display may then switch off completely for a while.

i If you are wearing polarised sunglasses, it may be difficult to read the multimedia display.

# Home screen overview




- In the home screen: calls up the status display
  - In other displays: calls up the home screen
- Calls up the profile
- 3 Calls up the global search

- Oisplay only when the Mercedes-Benz emergency call system is not available
- (3) Displays, for example network display, signal strength of the mobile phone network, time
- Calls up the Notifications Centre

- The star indicates new notifications.
- ② Calls up an application using the symbol
- Name of the application, beneath the current selection or display
- Quick-access

• Number of applications and currently selected display area

## Central control elements overview

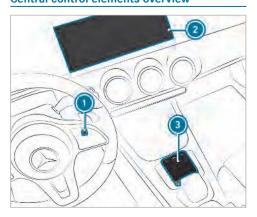


- Touch Control
- 2 Multimedia system display with touch functionality
- 3 Touchpad

Calls up the air conditioning menu (→ page 136)

## **Touch Control**

Operating Touch Control (MBUX multimedia system)

Calls up SUGGESTIONS, MOODS and FAVOURITES

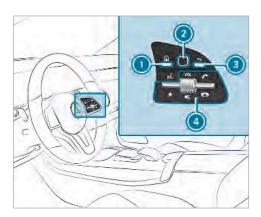

1 button

Shows the home screen and calls up applications

Calls up suggestions, moods and favourites: when the home screen is shown, swipe down on Touch Control ②.

## 260 MBUX (Mercedes-Benz User Experience)

- 2 Touch Control
- 3 button

Press briefly: returns to the previous display

Press down briefly: calls up favourites and

moods
Press down and hold: adds favourites and moods

Turn the control knob: sets the volume VOL Press the control knob: switches off sound

rocker switch

Press up: makes or accepts a call

rocker switch

Press down: rejects or ends a call

You can navigate in menus and lists via the touch-sensitive surface of Touch Control ② by using a single-finger swipe.

- To select the menu item or entry: swipe up, down, left or right.
- ► Press Touch Control ②.

- To enter a character: enter a character using the keyboard.
- ➤ To move the digital map: swipe in any direction.

Setting the sensitivity for the Touch Control Multimedia system:

→ 🔝 >> Settings >> System >> Controls >> Touch Control sensitivity

Select Fast, Medium or Slow.

# Setting acoustic operating feedback for the Touch Control

Multimedia system:

→ 🔝 ➤ Settings ➤ System ➤ Controls

The function is supported by the selection in a list

- Select Acoustic operating feedback.
- Set Normal, Loud or Off.

If the function is activated you will hear a clicking sound when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

# Operating the touchscreen

#### **Tapping**

- To select a menu item or entry: tap on a symbol or an entry.
- To increase the map scale: tap twice quickly with one finger.
- To reduce the map scale: tap with two fingers.
- To enter characters with the keyboard: tap on a button.

## Single-finger swipe

- To navigate in menus: swipe up, down, left or right.
- To move the digital map: swipe in any direction.
- To use handwriting to enter characters: write the character with one finger on the touchscreen.

#### Two-finger swipe

To zoom in and out of the map: move two fingers together or apart.

- To enlarge or reduce the size of a section of a website: move two fingers together or apart.
- To turn the map: turn anti-clockwise or clockwise using two fingers.

#### Touching, holding and moving


- To move the map: touch the touchscreen and move your finger in any direction.
- To set the volume on a scale: touch the touchscreen and move the finger to the left or right.

#### Touch and hold

- To save the destination in the map: touch the touchscreen and hold until a message is shown.
- To call up a global menu in the applications: touch the touchscreen and hold until the OPTIONS menu appears.

## Touchpad

## Operating the touchpad

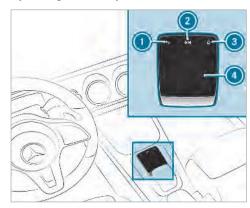

- 1 button
  - Press briefly: returns to the previous display
- ② ►► button
  - Calls up the control menu of the last active audio source
- 3 button

Shows the home screen and calls up applications

Calls up suggestions, moods and favourites: when the home screen is shown, swipe down on touchpad (4).

Touchpad

You can navigate in menus and lists via the touch-sensitive surface of touchpad 4 by using a single-finger swipe.

- To select the menu item or entry: swipe up, down, left or right.
- Press touchpad (4).
- To enter a character: enter a character using the keyboard.

- Write a character on the touchpad.
- To move the digital map: swipe in any direction.

Use the following functions with a two-finger swipe:

To call up the Notifications Centre: swipe down with two fingers.

- To close the Notifications Centre: swipe up with two fingers.
- To call up the control menu of the last active audio source: swipe up with two fin-
- To zoom in and out of the map: move two fingers together or apart.
- To enlarge or reduce the size of a section of a website: move two fingers together or

## Setting the sensitivity for the touchpad Multimedia system:

→ Settings → System → Controls >> Touchpad sensitivity

- Select Fast, Medium or Slow.
- To set the pressure sensitivity: switch Touchpad tap on or off.

If the function is switched on, a tap on the touchpad is enough to select a menu item. Switching the read-aloud function for handwriting recognition on/off

## Requirements:

- The multimedia system is equipped with a voice control system.
- The read-aloud function is available for the selected system language.

## Multimedia system:

→ Settings → System ➤ Audio ➤ System feedback

Switch Read out handwriting recognition on or off.

When the function is selected, the character input on the touchpad is read aloud.

## Activating/deactivating haptic operating feedback on the touchpad

Multimedia system:

→ Settings → System → Controls

The function supports you when making entries on the touchpad and when selecting menus.

Switch Haptic operating feedback on or off. When the function is activated, a tactile feedback in the form of a vibration is effected when the touchpad is operated.

## Setting acoustic operating feedback for the touchpad

Multimedia system:

→ Settings → System → Controls

The function is supported by the selection in a

- Select Acoustic operating feedback.
- Set Normal, Loud or Off. If the function is activated you will hear a clicking sound when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

## Selecting a station and track using the touchpad

▶ Press the ▶ button on the touchpad.


- Swipe upwards using two fingers on the touchpad.
  - The control menu appears for the audio source that was last selected.
- Swipe left or right using one finger. Radio: the previous or next station is set. Media source: the previous or next track is selected.
- To hide the control menu: swipe down on the touchpad using two fingers.

## Alternatively:

➤ Swipe to the left or right over the ►► but-Radio: the previous or next station is set. Media source: the previous or next track is selected.

## **Main functions**

## Calling up applications

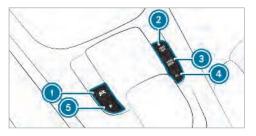

- CAR button Calls up vehicle functions
- 2 NAVI MAP button Calls up navigation
- 3 RADIO MEDIA button Calls up radio or media
- 4 TEL button Calls up the telephone
- ⑤ ★ button

Press briefly: calls up favourites and moods Press and hold: adds a favourite and mood

Alternatively in the home screen: when you start the vehicle the home screen is shown in the multimedia system display.

Select the application by swiping and tapping.

or in any display

▶ Press the 🙀 button on the Touch Control or on the touchpad.

- ▶ Briefly press the 🖳 symbol in the multimedia system display. The applications are displayed.
- Select the application by swiping and tapping.

#### Profile

## Notes on profiles

**WARNING** Risk of becoming trapped during adjustment of the driver's seat after calling up a profile

If the driver's seat is adjusted after selection of a profile, you or other drivers could become trapped.

To stop adjustment before somebody becomes trapped: briefly press on the warning message on the multimedia system display.

Press one of the memory position buttons or a seat adjustment switch in the driver's door. The adjustment process is stopped.

#### Overview of profiles

Using the multimedia system up to seven profiles can be created in the vehicle.

Profiles store your personal vehicle settings and settings for the multimedia system.

If the vehicle is used by several drivers, the driver can select their profile before the journey, without changing the settings of other drivers.

You can select the profile:

- when entering (→ page 266)
- on the home screen (→ page 258)

The profile settings are activated as soon as a profile is selected.

(i) When you call up your profile, the driver's seat and outside mirrors can be set.

You can cancel the setting process with the following actions:

- Briefly press the Positioning seat and steering wheel. Please tap to cancel. warning message in the multimedia system display.
- Press one of the seat operating buttons in the driver's door.

#### Profile content

Depending on the vehicle equipment, the following settings can be stored in your profile, for example:

- Driver's seat and mirror settings
- · Driver's seat memory
- Radio (including station list)
- Previous destinations
- Climate control
- Ambient lighting
- DYNAMIC SELECT I (individual)
- Instrument Display, Head-up Display and style (display style of the multimedia system)
- Favourites, moods and suggestions
- (i) Settings for driver assistance systems are not personalised.

## Mercedes me connect profile and synchronisation

If you use a profile from Mercedes me connect, the following online functions are available, for example:

- You can configure the settings in the vehicle using the Mercedes me app and the Mercedes me portal.
- The synchronisation enables the adjustment between the profiles on Mercedes me connect and the profiles in the vehicle (profile management).
- You can add a personal profile photo that is shown in the vehicle.
- You can take your profile with you in new vehicles.

Requirements for using Mercedes me connect profiles (vehicle owner)

- You have a Mercedes me user account.
- The vehicle has been connected with the user account.
- The personalisation service is activated.

Requirements for using Mercedes me connect profiles (additional vehicle users)

- You have a Mercedes me user account.
- · The vehicle owner has invited you to connect your user account on Mercedes me with that of his vehicle.
- You have accepted the invitation.

## Creating a new profile

Multimedia system:

- → 🔝 » 📘 Profiles
- ▶ Select + Create profile .
- Select an avatar.
- Enter the name and confirm with OK
- Select Continue >.
- To select the profile basis: select the settings with which you want to start your new profile, Current system settings or Factory settings.
- Select Save.
- To accept or reject data recording for suggestions: when the notification appears that the vehicle will offer personalised sugges-

tions based on the navigation destinations visited, numbers called and music preferences, select Accept or Reject. Accept allows the data recording and enables the suggestions function.

Reject rejects data recording.

# Selecting profile options

Multimedia system:

- → 🔝 **>>** Profiles
- Select ••• for a profile.
- To edit a profile: select Edit profile.
- Select an avatar.
- Change the name, if necessary.
- Select Save.
- ➤ To configure suggestions: select Suggestions settings ( $\rightarrow$  page 269).
- ➤ To reset favourites or moods: select Reset favourites to factory settings or Reset moods to factory settings.
- Select Yes.

## 266 MBUX (Mercedes-Benz User Experience)

- To reset a profile: select Reset profile to factory settings.
- Select Yes.
- ► To delete a profile: select Delete profile.
- Select Yes.
- (i) The guest profile cannot be deleted.

## Selecting a profile

Multimedia system:

- → Profiles
- (i) When you call up your profile, the driver's seat and outside mirrors can be set.

You can cancel the setting process with the following actions:

- Briefly press the Positioning seat and steering wheel. Please tap to cancel. warning message in the multimedia system display.
- Press one of the seat operating buttons in the driver's door.
- Select a profile.

Press the OK button to confirm the message.

The profile is loaded and activated.

 Alternatively, the profile can already be selected when the vehicle is entered (→ page 266).

#### Synchronising a profile

#### Requirements:

- You have a Mercedes me user account.
- The vehicle is connected with your Mercedes me user account.
- The personalisation service is activated on Mercedes me connect.

Multimedia system:

→ ♠ Profiles → General settings

Synchronisation enables the following:

- You can configure the vehicle settings using the Mercedes me app.
- The profile on Mercedes me connect and the profile in the vehicle are aligned (profile management).

Activate Synchronise profiles automatically.

or

Select Synchronise profiles now. Synchronise profiles now: the profiles are synchronised when this option is selected.

Synchronise profiles automatically: the profiles in the vehicle are automatically aligned with the profiles on Mercedes me connect when the ignition is switched on and off.

During synchronisation the profile list and the profile functions are blocked.

## Showing the profile selection when entering

#### Requirements:

• At least one profile has been created.

Multimedia system:

→ 🔝 » 🚹 Profiles

If the option is activated, you can see a profile as soon as you get in.

Select General settings.

Activate Show profile selection when enter-

When the vehicle is started, the multimedia system display shows the active profile.

#### Moods

#### Overview of moods

You can configure the vehicle settings according to your preferences and save as a mood. A mood can be called up any time via the home screen. There is then no need to make the desired settings again.

There are pre-defined moods available, e.g. Journey, Nature and Lounge.

#### Example for the use of moods

For recurring driving situations, such as long drives on the motorway, you can save you preferred settings in a mood in the vehicle. For example, you can have displays such as the navigation map, the tachometer and the trip computer shown, set your favourite radio station and your preferred drive program. These settings are saved when you set a mood (→ page 267) under the name you desire (e.g. "Long journey"). On

the next motorway trip you can then select this mood directly and thereby restore your settings without the need to make each setting separately.

#### Elements of a mood

Depending on vehicle equipment the following settings can be saved in a mood:

- Setting of the Instrument Display  $(\rightarrow page 230)$
- Setting of the Head-up Display (→ page 238)
- Setting of the ambient lighting (→ page 124)
- Starting screen for the multimedia system display
- Visual style (→ page 281)
- DYNAMIC SELECT drive program (→ page 149)
- Eco start/stop setting (→ page 148)
- Navigation system settings
- (i) A mood contains the currently active settings in the vehicle.

#### Calling up moods

Multimedia system:

- **→** 🔝
- When the home screen is shown, swipe up until MOODS appears.
- Select a mood.

## Creating a new mood

## Requirements:

• The settings which are to be saved in the mood are active.

The overview shows the available settings  $(\rightarrow page 267)$ 

#### Multimedia system:

- → Mood
- Select + Create new mood.
- Select an entry screen.
- Select Continue >.
- Select an image.
- Enter the names into the entry field and confirm with OK.

## 268 MBUX (Mercedes-Benz User Experience)

► To save a mood: select Save.

## Selecting additional settings

- Select Advanced settings.
- Activate or deactivate the settings.

# When the maximum number that can be saved is reached:

- ► Select OK from the prompt.
- Select a mood that should be overwritten.
- Proceed as described above.

# Creating using the rocker switch or button

Press and hold the bottom section of therocker switch on the steering wheel.

or

- Press and hold the button next to the touchpad.
- Select Create new mood.
- Proceed as described above.

## Modifying a mood

Multimedia system:



- When the home screen is shown, swipe up until MOODS appears.
- Press on a mood until the OPTIONS menu is shown.
- ► Select OK .
- Select an image. Enter the name.
- ► Select OK.
- To save a mood: select Save ✓.

# Moving a mood

Multimedia system:

**→** 

- When the home screen is shown, swipe up until MOODS appears.
- Press on a mood until the OPTIONS menu is shown.
- Select Move.
- Tap on ◀ or ▶.

► Tap on 🕢 .

## Moving the moods menu in the home screen

- ► Select 🖟.
- Swipe upwards and select Neue Reihenfolge festlegen (Define new order).
- Select Moods.
- ► Tap on or .
- Tap on 👩 .

## Deleting a mood

Multimedia system:

**→** 

- When the home screen is shown, swipe up until MOODS appears.
- Press on a mood until the OPTIONS menu is shown.
- Select Delete.
- Select Yes.

## Showing information about moods (DIBA) Multimedia system:

**→** 

- When the home screen is shown, swipe up until MOODS appears.
- Press on a mood until the OPTIONS menu is shown.
- Select Owner's Manual.

#### Suggestions

## Suggestions overview

The vehicle can learn the habits of the driver. Based on previously used functions, the most likely navigation destinations, radio stations or contacts are offered under SUGGESTIONS.

Suggestions are shown when the following requirements are fulfilled:

- a profile has been created (→ page 265). No suggestions are available in the Guest profile.
- a profile has been selected.
- you have accepted data recording.

• from the beginning of usage, the multimedia system must analyse the user habits. When sufficient data is collected then the suggestions are available.

If the requirements mentioned are not fulfilled, a preview with a description of the function appears in the SUGGESTIONS menu.

You can configure data recording (→ page 269) or delete the suggestions recorded ( $\rightarrow$  page 270).

## Calling up suggestions

Requirements:

 a profile has been created and is selected  $(\rightarrow page 266)$ .

If the profile Guest is active, no suggestions can be cancelled.

This profile is selected when the vehicle is purchased.

▶ Briefly press in the multimedia system

The home screen is shown.

Swipe up until the SUGGESTIONS menu is shown.

Select a navigation destination, a radio station or a contact.

If route guidance is already active, you cannot start a new route guidance or set an intermediate destination for the existing route.

## Configuring suggestions

Multimedia system:

- Select of for a profile.
- Select Suggestions settings.
- To switch the suggestions display on/off: switch Learn from location history, Allow music suggestions and Allow contact suggestions on or off.

If an option is switched on, suggestions for navigation destinations, radio stations or contacts are shown.

If the option is switched off, no suggestions are shown.

To deactivate the learn function for one day: activate Deact. learn. for 24h.

For 24 hours no new actions will be trained

and no data recorded for the active profile. Suggestions will continue to be shown. The remaining time is shown next to Deact. learn. for 24h.

Before the time runs out, a message is shown that the multimedia system will continue the learn function shortly.

Example: if the option is switched on and a route to a new destination has been calculated, this destination would not be taken into account for the learn function.

- Resetting the suggestion history: select Reset suggestion history.
- i This process cannot be reversed.
- Select OK.
- ► To protect settings using a PIN: switch on PIN-Schutz (PIN protection). If PIN protection is switched on, you must enter the Mercedes me PIN to have access to your suggestions. This PIN will be set in

the Mercedes me portal for the personalisation service to protect your personal settings.

#### Renaming suggestions

Only navigation destinations can be renamed.

- ▶ Briefly press the ☐☐ symbol in the multimedia system display.

  The home screen is shown.
- Swipe up until the SUGGESTIONS menu is shown.
- Highlight a navigation destination and press until the OPTIONS menu is shown.
- Select Rename.
- Enter the name.
- To confirm the entry: select Yes.

#### Deleting a suggestion

- ▶ Briefly press in the multimedia system display.
   The home screen is shown.
- Swipe up until the SUGGESTIONS menu is shown.

- Highlight a suggestion and press until the Options menu is shown.
- Select Delete.

## Deleting suggestions in the applications

You can delete suggestions in the previous destinations, in the radio station list and in the contacts.

- ▶ Select ▼ for a suggestion.
- Select Do not suggest.
- To delete a suggestion from a current list: select Not now.

The suggestion will be shown again at a later time in the list.

- To delete a suggestion permanently: select Never.
- Select Yes. The suggestion will not be shown again in future. All suggestions are reset.
- ➤ To cancel the function: select Cancel.

## **Favourites**

#### Overview of favourites

Favourites offer you quick access to frequently used applications. It is possible to create 20 favourites in total.

You can select favourites from categories or you add favourites directly from an application.

## Calling up favourites

## In the multimedia system display

- ► Tap on 🚡. The home screen is shown.
- Swipe up until FAVOURITES is shown.

## On the steering wheel or the touchpad

Press the rocker switch on the steering wheel down.

Press the button next to the touchpad.

## Adding favourites

## Selecting favourites from categories

- Briefly press in the multimedia system display.
  - The home screen is shown.
- Swipe up until FAVOURITES is shown.
- Select + New favourite. The categories are displayed.
- Select the category. The favourites are displayed.
- Select a favourite. The favourite is stored at the next available position.
- All positions in the favourites are taken: confirm the message shown with OK. A list shows all the favourites.
- Select a favourite which should be overwritten.

#### Adding a favourite from an application

Examples of adding from an application are:

· Saving a contact.

- Storing a radio station.
- · Adding a media source.
- · Saving a navigation destination.
- · Adding an ENERGIZING comfort program (if available).
- To store a radio station as a global favourite: set a radio station.
- Press on the radio station until the OPTIONS menu is shown.
- Select Save as favourite. The radio station is added as a favourite.

#### Renaming favourites

- ▶ Briefly press in the multimedia system display. The home screen is shown.
- Swipe up until FAVOURITES is shown.
- Press on a favourite until the OPTIONS menu is shown.
- Select Rename.
- Enter the name.
- Select OK.

## Moving favourites

## Moving favourites in the favourites menu

- ► Briefly press in the multimedia system display.
  - The home screen is shown.
- Swipe up until FAVOURITES is shown.
   Press on a favourite until the Options menu is shown.
- Select Move.
- Move the favourite to the desired position.
- ► Tap on 🕢 .

# Moving the favourites menu in the personalisation

- ▶ Briefly press in the multimedia system display.
  The home screen is shown.
- Swipe up until Neue Reihenfolge festlegen (Define new order) is shown.
- Select Neue Reihenfolge festlegen (Define new order).
- Move Favourites to the new position.

- Tap on 🕢 .
- ► To close the menu: select Close.

## **Deleting favourites**

- ► Briefly press in the multimedia system display.
- The home screen is shown.
- ► Swipe up until FAVOURITES is shown.
- Press on a favourite until the OPTIONS menu is shown.
- Select Delete.
- Select Yes.

#### **Notifications Centre**

#### **Overview of the Notifications Centre**

The following communications are collected in the Notifications Centre:

- Communications which are generated by the vehicle or from MBUX.
- Communications which are received through the use of services.

The following notification types are available for you:

- Navigable destinations and routes
- Messages (text messages, e-mail)
- Calendar entries and reminders, e.g. from "In Car Office"
- System information, e.g. software update available
- Other notifications, e.g. from additional online services that can be subscribed to

The Notifications Centre can be found on the home screen, in menus and at the top right of the navigation map  $\bigcirc$  ( $\rightarrow$  page 258).

A star in the symbol informs you of new notifications.

Notifications are briefly shown as they are received. This occurs for nearly every application that you are currently using. If you take no action, these are stored for future access in the Notifications Centre.

The notifications are sorted chronologically. The most recent notifications are at the top.



A notification shows the following information:

- Symbol or image (1) for the application
- Title 2, which contains the name, a telephone number or a navigation destination
- The type of notification and additional information (3)
- A time stamp (5)
- If several actions are available, symbol 4 to open or close the notification.

Depending on the type of notification, up to four different actions (3) are available.

Examples of actions include:

- Read aloud
- Placing a call
- Reply
- Calling up a web page
- Navigation

Some notifications, e.g. a navigation destination, are stored longer. Therefore, it is not necessary to carry out available actions directly on the receipt of the notifications. A route guidance can be started at a later time.

(i) You can start a global search in the Notifications Centre ( $\rightarrow$  page 274).

## Calling up notifications

## **Opening the Notifications Centre**

On the touchpad: swipe down with two fingers.

or

On the multimedia system display: press briefly on the symbol for the Notifications Centre.

- On the Touch Control and on the touchpad: mark the symbol for the Notifications Centre by swiping.
- Press on the control element.

#### Selecting a notification

- Swipe up or down.
- Tap or press on the control element.

#### Closing the Notifications Centre

On the touchpad: swipe up with two fingers.

#### Selecting actions for a notification

The following options are available:

- Select the action directly in an application after a notification is received and shown.
- Select the action later after calling up in the Notifications Centre.
- An action is available: select the action.
- Several actions are available: if the notification is not open, select the vsymbol.
- Select the action. The notification is still available.

#### **Editing notifications**

- Calling up the Notifications Centre (→ page 273).
- ► To make settings: select 🔘 .
- (i) If no settings can be made, a message appears.
- Activate or deactivate the setting.
- ▶ To delete: select the recycle bin.
- Select Delete or Delete all.
   Delete deletes a single notification.
   Delete all deletes all notifications currently shown.
- With Finished you will exit delete mode.

#### Global search

#### Global search overview

You can use the global search in the home screen and in the notifications.

The global search provides search results for the following categories and their sub-categories:

Navigation

- Media
- · Telephone, social media, Office in Car
- User interface and Digital Owner's Manual
- Internet

This enables you to search for towns, roads and tourist attractions with the navigation system, for example.

During the entry process the most likely suggestions are shown beneath the search field. When you enter "S", "Stuttgart", "Steak" and "Sandra" are shown, for example. If you select "Stuttgart", you receive the suggestions "Starbucks", "Steak" and "City railway", for example.

The search results in the list are shown, sorted according to category. Next to the category is the number of results. You will be shown the best results from each category. Additional results can be found after selecting the respective category.

If you confirm an entry with OK, all categories and the number of results will be shown in a summary. After selecting a category you can select the search results within the category.

When you select a search result the detailed view opens. In the detailed view you can choose whether and which actions you want to carry out with the respective search result. For example, you can start route guidance or place a call to somebody. The actions are named correspondingly.

The search can be carried out with the following input methods:

- Entering characters using the on-screen keyboard
- Entering characters with handwriting recognition
- · Dictation function

#### Using the global search

Multimedia system:

- **→**
- Select Search.
- or
- Call up the notifications (→ page 273).
- Select Search.

- i Alternatively, you can use the dictation function for the search.
- Enter the search term into the search field. Use the character input function During the entry process the three most likely suggestions are offered beneath the search field.

In the list on the right, the top two search results are shown for each category.

- ► To accept a suggestion: select the sugges-
  - The three most likely suggestions are
- Continue the search or accept a suggestion.
- To accept the second search result: select the search result.

An action starts or a list is shown.


- Select a search result or an action in the list.
- To show all categories: select OK.
- To show search results for a category: select a category.
- To show details: select a search result.

To start an action: select an action. After selection of an action, a track is played back or the route to a destination is calculated, for example.

## Switching the sound on/off



On the multifunction steering wheel

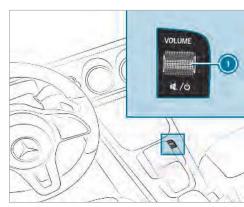

On the multimedia system


To mute: press volume control 1. The symbol appears in the status line of the multimedia system display.

You will also hear traffic announcements and navigation announcements even when the sound is muted.


## **276** MBUX (Mercedes-Benz User Experience)

To switch on: turn volume control or change the media source.

## Adjusting the volume

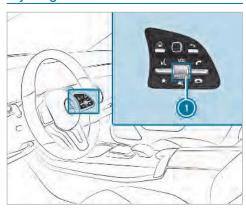

On the multifunction steering wheel

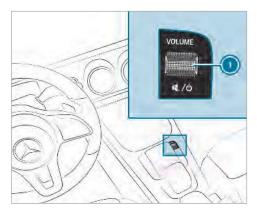

On the multimedia system

Turn volume control ①. The volume of the current radio or media source is set. The volume of other audio sources can be adjusted separately.

Adjust the volume in the following situations:

- during a traffic announcement
- during a navigation announcement

The volume of the current media source changes in accordance with the volume of the navigation announcement.

- during a telephone call
- when entering or exiting a parking space while using Active Parking Assist

or

- Press the 🛕 button.
- Select Settings.
- ► Select System.
- Select Audio.
- Select a volume setting.
- Set the volume.

## **Entering characters**

## Using the character input function

**WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Character entry can be carried out with these control elements:

- Touch Control
- Touchscreen (multimedia system display)
- Touchpad

Character entry takes place by cursor control when using the Touch Control and the touchpad. Character entry on the touchscreen is carried out with direct interaction.

Character input can be started with a control element and resumed with another.

When the keyboard is shown, enter the characters on the control element by swiping and pressing or by tapping (touchscreen).

or

Write the characters on the touchpad or the touchscreen.

Entering characters on the touchpad

• The handwriting recognition supports character entry with character suggestions.

· If the read aloud function is activated for handwriting recognition then the entered characters are read aloud.

Requirements:

The multimedia system is equipped with a voice control system.

The read-aloud function is available for the selected system language.

Examples of character entry:

- Renaming a favourite
- · Entering a destination address in the navigation system
- Entering a web address.

## Entering characters on the touchpad

#### Requirements:

- . If you wish to have the character input read aloud: the read aloud function of the handwriting recognition is switched on  $(\rightarrow page 262)$ .
- An online connection is required for some functions.

## Using the keyboard




- 1 Input line
- 2 Suggestions
- Output
  Deletes the entry
- Switches to voice input
- Deletes
   Pressing or pressing briefly deletes the last character entered

Pressing and holding deletes the entry

- 6 Accepts an entry
- Switches to handwriting input
- Enters a space
- Ohanges the keyboard language
- Switches to digits and special characters (level 2)
  - #+= switches to additional special characters (level 3)
  - ABC switches to letters (level 1)
- Pressing or pressing briefly switches between upper-case and lower-case letters Pressing and holding switches to upper-case letters permanently
- (i) When Touchpad tap is switched on, tapping is sufficient to select a character or an option (→ page 262).
- Call up the character entry to rename a favourite, for example (→ page 271).
- Select the character by swiping and pressing.
   The character is entered in input line ①.
   Suggestions are shown in ②.

- To select a suggestion: select one of the entries.
- Resume character input.
- To enter an alternative character: press and hold a character.
- Select the character.
- To end character input: press the \_\_\_\_ button.
- (i) The available editing functions depend on the editing task, the language set and the character level.
- (i) Entry using the keyboard can also be completed using the Touch Control.

## Using handwriting input

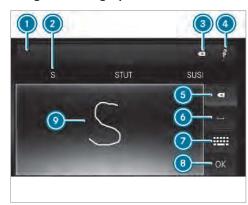

- Input line
- 2 Suggestions
- Oeletes the entry
- Switches to voice input
- Deletes Pressing or pressing briefly deletes the last character entered

Pressing and holding deletes the entry

- 6 Enters a space
- Switches to input using the keyboard
- Accepts an entry
- (i) When Touchpad tap is switched on, tapping is sufficient to select an option  $(\rightarrow page 262)$ .
- Call up the character entry to rename a favourite, for example ( $\rightarrow$  page 271).
- When the keyboard is displayed, select 7
- Write the character on the touchpad with a

The character is entered in input line ①. Suggestions 2 are shown.

- To select a suggestion: select one of the entries.
- Resume character input. The letters can be written next to each other or above each other.
- ► To end character input: press the 🛨 button.

# Entering characters on the touchscreen

## Requirements:

 An online connection is required for some functions.

## Using the keyboard



- 1 Input line
- 2 Suggestions

## 280 MBUX (Mercedes-Benz User Experience)

- 3 Deletes the entry
- Switches to voice input
- Operation Deletes

Pressing briefly deletes the last character entered

Pressing and holding deletes the entry

- 6 Accepts an entry
- Switches to handwriting input
- ® Enters a space
- Ohanges the keyboard language
- Switches to digits and special characters (level 2)


#+= switches to additional special characters (level 3)

ABC switches to letters (level 1)

- Pressing briefly switches between uppercase and lower-case letters
   Pressing and holding switches to upper-case letters permanently
- Call up the character entry to rename a favourite, for example (→ page 271). The keyboard is shown.

- Press briefly on a character key.
   The character is entered in input line ①.
   Suggestions ② are shown.
- ➤ To select a suggestion: select one of the entries.
- Resume character input.
- To enter an alternative character: press and hold a character.
- Select the character.
- ► To end character input: press the 🛨 button.
- (i) The available editing functions depend on the editing task, the language set and the character level.

## Using handwriting input

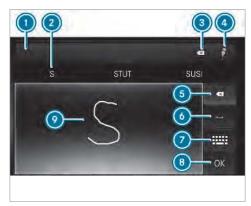

- 1 Input line
- ② Suggestions
- 3 Deletes the entry
- Switches to voice input
- Deletes
   Pressing briefly deletes the last character entered

Pressing and holding deletes the entry

- 6 Enters a space
- Switches to input using the keyboard
- Accepts an entry
- Call up the character entry to rename a favourite, for example ( $\rightarrow$  page 271).
- When the keyboard is displayed, select ₹7.
- Write the character with one finger on the touchscreen.
  - The character is entered in input line ①. Suggestions 2 are shown.
- ► To select a suggestion: select one of the entries.
- Resume character input. The letters can be written next to each other or above each
- ► To end character input: press the 🛨 button.

## Setting the keyboard for character entry Multimedia system:

→ Settings → System → Controls → Keyboards and handwriting

Confirm Select keyboards. Select the keyboard language in the list.

## System settings

## **Display**

# Configuring display settings

Multimedia system:

→ Settings → System → Styles

## Styles

Select Classic, Sport or Progressive. The multimedia system display changes depending on the style selected. If you revert to the factory settings, the Classic style is set.

## Adapting the ambient lighting for the style

Select Adapt ambient lighting. Activate or deactivate the function. This function adjusts the ambient lighting for the selected display style.

## Setting the display brightness

- Select Display brightness.
- Select a brightness value.

## Switching the display off/on

- ▶ Off: select Display off.
- On: press a button, TEL, for example.

## Selecting the display design

- Select Day/night design.
- Select Automatic, Day design or Night design.

#### Switching the temperature display on/off

- ► Select Temperaturanzeige (Temperature display).
- Select Außentemperatur (Outside temperature) or Kühlmitteltemp. (Coolant temperature).

The selected temperature is displayed in the instrument cluster.

## Time and date

# **Setting the time and date automatically** Multimedia system:

- Deactivate Manual time adjustment. The time and date are set automatically for the selected time zone and summer time option.
- (i) The correct time is required for the following functions:
  - Route guidance with time-dependent traffic guidance.
  - Calculation of expected time of arrival.

## Setting the time zone

Multimedia system:

→ ♠ Settings → System → Time and date

## Setting the time zone manually

Requirements:

Automatic time zone is deactivated.

▶ Select Time zone:.

The list of countries is displayed.

- (i) If there are several time zones available in a country, these will be shown after the country is selected.
- Select a country and, if required, a time zone.

The time zone set is displayed after Time zone:.

#### Setting the time zone automatically

Activate Automatic time zone.

# Setting the time and date format

Multimedia system:

→ ♠ Settings → System → Time and date → Set format

Set the date and time format •.

#### Setting the time and date manually

#### Requirements:

 The Manual time adjustment function is switched on. Multimedia system:

#### Setting the time

- Select Set time.
- Set a time.
- (i) For vehicles with GPS the time is set automatically through the selected time zone.

## Setting the date

Requirements:

- · GPS is not installed.
- Select Set date.
- Set a date.
- (i) In vehicles with GPS, a date cannot be set even with active manual time adjustments. The date is then set automatically through the selected time zone.

## Connectivity

#### Switching transmission of the vehicle position on/off

Multimedia system:

→ 🙀 >> Settings >> System >> Wi-Fi & Bluetooth

- Select Transmit vehicle position.
- Activate or deactivate the function.

#### Bluetooth®

## Information about Bluetooth®

Bluetooth® technology is a standard for shortrange wireless data transfer up to approximately 10 m. You can use Bluetooth® to connect your mobile phone to the multimedia system and use the following functions, for example:

- · hands-free system with access to the following options:
  - call lists (→ page 338)
- Internet connection
- listening to music via Bluetooth® audio

• transferring business cards (vCards) into the vehicle

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

(i) Internet connection via Bluetooth® is not available in all countries.

## Activating/deactivating Bluetooth® Multimedia system:

→ Settings → System → Wi-Fi & Bluetooth

Activate or deactivate Bluetooth<sup>®</sup>.

## Wi-Fi

#### Wi-Fi connection overview

You can use Wi-Fi to establish a connection with a Wi-Fi network and to access the Internet or other network devices.

The following connection options are available:

• Wi-Fi connection

The Wi-Fi connection to a Wi-Fi-capable device, e.g. the customer's mobile phone or a tablet PC is established.

- multimedia system as a Wi-Fi hotspot Using this function, a tablet PC or notebook can be connected, for example. The connected device can use the data tariff of the vehicle.
- (i) The use of the vehicle data tariff by external devices is not available in all countries.

To establish a connection, you can use the following methods:

WPS PIN

The connection to a secure Wi-Fi network is made via a PIN.

WPS PBC

The connection to a secure Wi-Fi network is made by pressing a button (push button).

Security key

The connection to a secure Wi-Fi network is made via a security key.

## Setting up Wi-Fi

#### Requirements:

 The device to be connected supports one of the three means of connection described.

#### Multimedia system:

→ 🔝 ➤ Settings ➤ System ➤ Wi-Fi & Bluetooth

## Activating/deactivating Wi-Fi

Switch Wi-Fi on or off. If Wi-Fi is deactivated, communication via Wi-Fi to all devices is interrupted. This also means that a connection to the communication module cannot be established. Then some functions such as dynamic route guidance with Live Traffic Information are not available.

# Connecting the multimedia system with a new device via Wi-Fi

This function is available if a communication module is not installed.

The type of connection established must be selected on the multimedia system and on the device to be connected.

- (i) The connection procedure may differ depending on the device. Follow the instructions that are shown in the display. Further information (see the manufacturer's operating instructions).
- Select Internet settings.
- Select Connect via Wi-Fi.
- Select Add hotspot.

## Using a security key:

- Select the options of the desired Wi-Fi network.
- Select Connect using security key.
- Have the security key displayed on the device to be connected (see the manufacturer's operating instructions).
- Enter this security key on the multimedia system.
- Confirm the entry with ok.

(i) All devices support a security key as a means of connection.

## Using a WPS PIN:

- Select the options of the desired Wi-Fi network.
- Select Connect using WPS PIN input. The multimedia system generates an eightdigit PIN.
- Enter this PIN on the device to be connected.
- Confirm the entry.

## Using a button:

- Select the options of the desired Wi-Fi network.
- Select Connect via WPS PBC.
- Select "Connect via WPS PBC" in the options on the device to be connected (see the manufacturer's operating instructions).
- Press the WPS button on the device to be connected.
- Select Continue in the multimedia system.

## **Activating automatic connection**

- Select Connect via Wi-Fi.
- Select the options \( \rightarrow \) of the desired Wi-Fi network.
- Activate Permanent Internet connection.

#### Connecting with a known Wi-Fi

- Select Connect via Wi-Fi.
- Select a Wi-Fi network. The connection is established again.

## Setting up a Wi-Fi hotspot

Multimedia system:

→ Settings → System → Wi-Fi & Bluetooth

## Configuring the multimedia system as a Wi-Fi hotspot

The type of connection established depends on the device to be connected. The function must be supported by the multimedia system and by the device to be connected. The type of connection established must be selected on the multimedia system and on the device to be connected.

- Select Vehicle hotspot.
- Select Connect device to vehicle hotspot.

## Connecting using WPS PIN generation

- Select Connect using WPS PIN generation.
- Enter the PIN shown in the multimedia system display on the device to be connected and confirm.

#### Connecting using WPS PIN entry

- Select Connect using WPS PIN input.
- Enter the PIN that is shown on the external device's display on the multimedia system.

## Connecting using a button

- Select Connect via WPS PBC.
- Press the push button on the device to be connected (see the manufacturer's operating instructions).
- Select Continue.

#### Connecting using a security key

Select Connect device to vehicle hotspot. A security key is displayed.

- Select the vehicle from the device to be connected. It will be shown with the DIRECT-MB Hotspot 12345 network name.
- Enter the security key which is shown in the multimedia system display on the device to be connected.
- Confirm the entry.

#### Connecting using NFC

- Select Connect via NFC.
- Activate NFC on the mobile device (see the manufacturer's operating instructions).
- Bring the mobile device into the NFC area of the vehicle ( $\rightarrow$  page 332).
- Select Finished. The mobile device is now connected to the multimedia system hotspot via NFC.

## Generating a new security key:

- Select Vehicle hotspot.
- Select Generate security key. A connection will be established with the newly created security key.

To save a security key: select Save. When a new security key is saved, all existing Wi-Fi connections are then disconnected. If the Wi-Fi connections are being re-established, the new security key must be entered.

System language

#### Notes on the system language

This function allows you to determine the language for the menu displays and the navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

## Setting the system language

Multimedia system:

→ 🔝 ➤ Settings ➤ System ➤ Language

- Set the language.
- i If you are using Arabic map data, the text information can also be shown in Arabic on the navigation map. To do so, select العربية as

the language from the language list. Navigation announcements are then also made in Arabic.

## Setting the distance unit

Multimedia system:

→ Settings → System → Units

- Select km or mi.
- In the multifunction display of the instrument display, switch the Additional speedometer display on.

## Data import and export

#### Data import/export function

The following functions are possible:

- transferring data from one system or vehicle to another system or vehicle.
- creating a backup copy of your personal data and loading it again.
- protecting your personal data against unwanted export with PIN protection.

(i) Please note that the NTFS file system is not supported. The FAT32 file system is recommended.

## Importing/exporting data

- **NOTE** Data loss
- Do not remove the data storage medium when data is being exported.

Mercedes-Benz is not liable for any loss of data.

## Requirements:

- The vehicle is stationary.
- The ignition is switched on.
- · A USB device is connected.

#### Multimedia system:

→ ♠ Settings → System → System backup

Select Import data or Export data.

# **Importing**

Select a data storage medium. A prompt appears asking whether you really wish to overwrite the current data. If data originates from another vehicle, this is recognised during data reading.

The multimedia system is restarted once the data has been imported.

(i) Current vehicle settings can be edited after the import.

#### Exporting

If PIN protection is activated, your PIN is requested.

- Enter the four-digit PIN.
- Select a data storage medium. The data is exported. The data export may take several minutes.
- (i) After successful export, the data is saved in the "MyMercedesBackup" directory which can be found on the storage medium.

# Activating/deactivating PIN protection

Multimedia system:

→ 🔝 >> Settings >> System >> PIN protection

## Setting the PIN

- Select Set PIN.
- Enter a four-digit PIN.
- Enter the four-digit PIN again. If both PINs match, PIN protection is active.

# Changing the PIN

Requirement:

- A current PIN must be set.
- Select Change settings.
- Enter the current PIN.
- Select Change PIN.
- Set a new PIN.

# Activating PIN protection for data export

Select Change settings. Confirm with the PIN.

Select Protect data export. Activate or deactivate the function.

#### Unblocking the PIN

Requirements:

- There is an Internet connection.
- A Mercedes me account exists at http:// www.mercedes.me.
- An individual user profile is active  $(\rightarrow page 266)$ .

If the PIN has been entered incorrectly three times, the PIN will be blocked. You can have a single-use password sent to you via the Mercedes me connect online portal to reset the PIN protection.

- Select Unblock PIN.
- Enter the single-use password. PIN protection is reset, and you can set a new PIN.
- (i) Alternatively, you can have PIN protection reset at a Mercedes-Benz service centre.

# Software update

#### Information on software updates

A software update consists of three steps:

- Downloading or copying of the data required for installation
- Installation of the update
- Activation of the update by restarting the system

The multimedia system provides a message when an update is available.

Depending on the source, you can perform various updates:

Source of the update	Update type
Internet	Navigation map, system updates, Digital Owner's Manual
External storage medium, e.g. USB flash drive	Navigation maps

Software updates ensure your vehicle's technology is always up-to-date.

In order to constantly improve the quality of our services you will receive future updates for your multimedia system, the Mercedes me connect services and your vehicle's communication module. These will conveniently be sent to you via the mobile phone connection in your vehicle and, in many cases, installed automatically. You can monitor the status of your updates at any time on the Mercedes me portal and find information about potential innovations.

Your advantages at a glance:

- conveniently receive software updates via the mobile phone network
- the long-term quality and availability of Mercedes me connect is guaranteed
- keep your multimedia system and communication module up-to-date

Further information about software updates can be found at http://me.mercedes-benz.com

# Performing a software update

### Requirements:

 An Internet connection is required for updates which are obtained online (→ page 352).

Multimedia system:

→ 🕠 ➤ Settings ➤ System ➤ Software update

# Automatically

Requirements:

- Your vehicle has a built-in communication module.
- Activate Automatic online updates. The updates will be downloaded and installed automatically.

The current status of the updates is displayed.

#### Manually

- Deactivate Automatic online updates.
- Select an update from the list and start the update.

# Activating the software update

Restart the system. The modifications from the software update will be active.

#### Important system updates

Important system updates may be necessary for the security of your multimedia system's data. Install these updates, or else the security of your multimedia system cannot be ensured.

(i) If automatic software updates are activated, the system updates will be downloaded automatically ( $\rightarrow$  page 288).

As soon as an update is available for download, a corresponding message appears on the multimedia system display.

You have the following selection options:

- Accept and install
  - The update will be downloaded in the background.
- Information
  - Information about the pending system update is displayed.

#### Later

The update can be downloaded manually at a later time ( $\rightarrow$  page 288).

# Deep system updates

Deep system updates access vehicle or system settings and can therefore only be carried out when the vehicle is stationary and the ignition is switched off.

If the download of a deep system update is completed and the update is ready for installation, you will be informed of this after the next ignition cycle, for example.

(i) Park the vehicle safely in a suitable location before starting the installation.

Requirements for the installation:

- The ignition is switched off.
- Notes and warnings have been read and accepted.
- The electric parking brake is applied.

If all requirements are met, the update will be installed. The multimedia system cannot be

operated while the update is being installed and vehicle functions are restricted.

If errors should occur during the installation, the multimedia system automatically attempts to restore the previous version. If restoration of the previous version is not possible, a symbol appears on the multimedia system display. Please consult a qualified specialist workshop to resolve the problem.

#### Reset function

Multimedia system:

→ 🔝 ➤ Settings ➤ System ➤ Reset

Personal data is deleted, for example:

- station presets
- connected mobile phones
- · individual user profiles
- (i) The guest profile is reset when the settings are restored to the factory settings.
- Select Yes.

# **290** MBUX (Mercedes-Benz User Experience)

If PIN protection is activated, a prompt appears asking if you also wish to restore this to the factory settings during a reset.

- Select Yes.
- Enter the current PIN. The PIN is reset.

Or

- Select No.
  - The current PIN stays the same after resetting.
- (i) If you have forgotten your PIN, a Mercedes-Benz service centre can deactivate the PIN protection for you. Alternatively, you can request a one-time password via the Mercedes me connect online portal, in order to reset the PIN protection (→ page 287).

A prompt appears again asking whether you really wish to reset.

Select Yes.

The multimedia system is reset to the factory settings.

# Navigation

Switching navigation on

Multimedia system:

→ Navigation (Navigation)



Example: digital map with menu

- To enter a POI or address and additional destination entry options
- To interrupt route guidance (if route guidance is active)
- To repeat a navigation announcement and switch navigation announcements on/off

To activate / deactivate announcements using the Advanced settings option:

- · Announcement of street names which should be turned into
- Announcement of traffic warnings
- Audible indication when approaching a POI
- 4 To call up a route menu

#### Route

- Alternative routes
- Route overview
- Alternatively: press the NAVI button. The map appears. The current vehicle position is shown. The menu is shown.

# Showing/hiding the navigation menu

→ Navigation (Navigation)

If no route guidance is active the map and the menu appear.

If route guidance is active the map appears in full-screen mode and the menu is hidden.

- Route list
- Avoidance options
- Route settings

#### Traffic

- Traffic reports
- Local area messages
- Report a traffic incident
- Live Traffic subscription information

#### Position

- To store a position
- To show: tap on the multimedia system display.

or

- Press the Touch Control or the touchpad.
- ➤ To hide: the menu is hidden automatically.

- To show the compass
- To show Qibla (available in selected countries)
- To call up the menu settings To use or switch options on/off:
  - To show traffic information
  - To show motorway information
  - To show augmented reality objects
  - Settings for map content and traffic

# **Destination entry**

#### Notes on destination entry

**WARNING** Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

# **Entering a POI or address**

**WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- ▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road

and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system. Multimedia system:

→ Navigation (Navigation) >> Where to?

Method 1: on-board search



Destination entry uses the on-board search of the database stored in the multimedia system.

The country in which the vehicle is located is set

Enter the POI or the address using the keyboard (in the image) or using handwriting recognition **(6)** in **(2)**. The entries can be made in any order.

During destination entry, suggestions are made by the multimedia system. Destination selection takes place in list (a) or with OK.

The following entries can be made, for example:

• City, street, house number

- Street, city
- Postcode
- POI name
- POI category, e.g. Tankstelle (Filling station)
- Town, POI name

- Telephone number, if this is available for the POI
- · Contact name

Example of quick address entry:

- If you are searching for Königsstraße in Stuttgart, for example, you can enter STUT and KÖN.
- If you are searching for a POI in the United Kingdom, for example, you can enter THE SHARD.

If you would like to try out both examples, you may also need to change the country.

- As an alternative, voice input (3) can also be
- To switch to handwriting recognition: select 6.
- Write the character on the touchpad. The letters can be written next to each other or above each other ( $\rightarrow$  page 277).
- To return to entry using the keyboard:

Press the touchpad.

To delete an entry: select 4. The characters are deleted individually.

or

- If characters have been entered in 2, select (x) next to the input line. The complete entry is deleted.
- To switch to upper-case or lower-case letters: select 11.
- To switch to special characters and sym**bols:** select **10**.
- With #+= you can switch to additional special characters.
- To enter a space: select 2.
- To set the language: select ②.
- Select the language.
- (i) This function is useful for countries in which several character sets are supported. An example is Russia, which uses Cyrillic and Latin characters.
- To change the country: select country indicator 1.

- Enter the country indicator, e.g. F for France. The list is filtered.
- Select the country on list 3. The destination can be entered.
- To accept a destination: select the destination in list 3.
- If the destination is ambiguous, select the destination in the list. The destination address is shown. The route can be calculated.

#### Method 2: on-board search

Destination entry uses online map services. If the on-board search finds no suitable destinations or if you change countries, the online search is available.

- Select country indicator ①.
- Select the provider for the online service from the countries list.

or

- If the on-board search delivers no search results, select Online search.
- ► Enter the destination or the POI in the input line. The entry order is not relevant, e.g.

or

street and town. Use the functions described for the on-board search.

The search results are displayed.

- Select the destination or the POI in the list. The detailed view for the route is displayed.
- (i) Online search is not available in all countries.

#### Requirements:

- You have a user account for the Mercedes me portal.
- The service is activated.

You can carry out the activation yourself or have it carried out at a Mercedes-Benz service centre.

Further information can be found at: http://www.mercedes.me

#### Selecting previous destinations

#### Requirements:

- Previous destinations are stored.
- For destination suggestions: you have created a profile (→ page 265).

The Learn from location history option is activated for your profile ( $\rightarrow$  page 269).

The multimedia system has already gathered sufficient data in order to show destination suggestions.

#### Multimedia system:

→ Navigation (Navigation) → Where to? → PREV. DESTINATIONS

The following destinations can be selected:

- Previous destinations and routes
- Destination suggestions
- Stored destinations and routes(→ page 306)
- External destinations and routes (→ page 312)
- Select the destination or route The destination address is shown. The route can be calculated.
- (i) If you save a previous destination or a suggestion as a favourite (→ page 312), you can select these from the favourites (→ page 299).

# Selecting a POI

Multimedia system:

→ Navigation (Navigation) → Where to? → POIs

# Searching using categories (no route guidance)

Select the category.

or

- Select ALL CATEGORIES.
- Select the category and the sub-category (if available).
- When searching, filter with the search field according to categories or within the search results.

The search takes place in the vicinity of the vehicle's current position. The search result are sorted by distance in ascending order.

The POIs show the following information:

- direction of the linear distance to the POI (arrow)
- name of POI
- · linear distance to the POI

Select a POI with OK or select from the

The destination address is shown. The route can be calculated.

# Searching using categories (route guidance active)

Select the category.

- Select ALL CATEGORIES.
- Select the category and the sub-category (if available).
- ▶ When searching, filter with the search field according to categories or within the search results.
- Select the search positions In the vicinity, Near destination or Along the route.
- If there are intermediate destinations for the route and Near destination has been selected, select the POI in the route overview.
- Select a POI with OK or select from the

The destination address is shown. The route can be calculated.

## Searching for personal POIs

Requirements:

- · A USB device is connected with the multimedia system.
- · Personal POIs with the GPS Exchange format (.gpx) have been saved in the "PersonalPOI" folder on the USB device.
- Select Personal POIs.
- Select a category.
- If route guidance is active, select a search position In the vicinity, Near destination or Along the route.
- Select a personal POI. The destination address is shown. The route can be calculated.

or

- Enter a search entry into the search field and filter the list.
- Select a personal POI.

# **Editing personal POI categories**

- Select a personal POI category from the list **\**. A menu opens.
- ▶ To change a name: select Change name.
- Enter the name.
- Select OK .
- To change a symbol: select Change icon.
- Select a symbol.
- To delete a personal POI category: select Delete.
- Select Yes.

# Configuring categories for quick-access Up to five categories can be configured for quick-access.

- Select ALL CATEGORIES.
- Select the category and the sub-category (if available).
- Select ☆ or ★. ☆ adds the category. removes the category.

If there are already five categories, select the category which should be replaced.

# Selecting a contact

#### Requirements:

A mobile phone is connected to the multimedia system (→ page 330).

## Multimedia system:

→ Navigation (Navigation) → Where to? → Contacts

## Using the contact list

- Select a contact.
  The contact details are displayed.
- Select the address.

#### Using search entry

- Enter names or telephone numbers, for example, into the search field.
- ► Select OK .
- Select the contact.

Select the address.

The destination address is shown. The route can be calculated.

- (i) Route guidance to a contact address is reliable in the following cases:
  - The contact address is complete.
  - The contact data matches the map data in the digital map.

# **Entering geo-coordinates**

Multimedia system:

→ Navigation (Navigation) → Where to? → Geo-coordinates

- Select Latitude or Longitude.
- Select geo-coordinates as latitude and longitude coordinates in degrees, minutes and seconds. To do this swipe up or down respectively.

The map shows the position.

- Confirm the entry with OK.
- To set the destination: select the arrow or the arrow with ⊕.

# Selecting from the map

Multimedia system:

→ Navigation (Navigation)

- $\blacktriangleright$  Move the map ( $\rightarrow$  page 320).
- When the crosshair marks the destination, press and hold on the control element. If a destination is located exactly on the crosshair, the destination address is displayed.

If several destinations are located around the crosshair, a list shows the available roads and POIs.

Select the destination in the list. The destination address is shown. The route can be calculated.

# Showing POIs in the vicinity of the map

If several destinations are located around the crosshair, the function is available.

- Select ....
- Select POIs in the vicinity. The map appears.

- Swipe left or right on the control element. The previous or next POI is highlighted on the map. The name or the address is shown.
- Select the POI symbol.
- Alternatively, to filter the display according to the POI category: scroll on the control element.
- Select the POI category.
- (i) User defined permits the selection of personal POI symbols ( $\rightarrow$  page 321).

## Selecting from favourites

#### Requirements:

• Destinations are saved as favourites. Save a previous destination or a destination suggestion as a favourite ( $\rightarrow$  page 312).

#### Multimedia system:

→ Navigation (Navigation) ➤ ✓ Where to? ➤ Aus Favoriten (From favourites)

Select a favourite. The destination address is shown. The route can be calculated.

#### **Route**

# Calculating a route

# Requirements:

- The destination has been entered.
- The destination address is shown.

# Route guidance is not active



Select ①. The route to the destination is calculated. The map shows the route. Route guidance then begins.

# Route guidance is active

- Select ①. The arrow shows a (+). A prompt is shown.
- ► Select Add to route or Single destination. Single destination: the selected destination address is set as the new destination. The previous destinations and intermediate desti-

nations are deleted. Route guidance to the new destination begins.

Add to route: the selected destination address is set as the next intermediate destination. Route guidance begins.

If there are already four intermediate destinations, the multimedia system asks whether intermediate destination 4 should be deleted. Confirm the prompt with Yes.

# Searching for POIs in the vicinity

- (i) The POI symbols to the right of POIs in the vicinity show the first three categories for quick-access. You can configure these categories (→ page 296).
- Select a POI symbol. The search results are displayed.
- Select a POI. The destination address is shown. The route can be calculated.

0

► Select POIs in the vicinity .

- Search using categories, enter a search entry or search for a personal POI (→ page 296).
- Select a POI. The destination address is shown. The route can be calculated.

#### Other menu functions

- ► To save the destination: select 🏠 .
- Select an option.

The following options are available for you:

- Save in "Previous destinations"
- Save as favourites
- Save as "My home"
- Save as "Work" address
- To call the destination: if a telephone number is available, select Call.
- To share the destination using NFC or QR code: select Share via NFC or QR code.
- ► Hold the NFC area of the mobile phone (see manufacturer's operating instructions) on the mat or place the mobile phone on it (→ page 332).

- Hold the mobile phone near to the multimedia system and scan the QR code.
- To call up an Internet address: if a web address is available, select www.
- To show on the map: select Display on map.

# Selecting a route type

Multimedia system:

→ Navigation (Navigation) → Route Icon → Route → Route settings

Select the route type.

If no route has been created, the next route is calculated on the basis of the new route type.

If a route has already been created, the route is calculated on the basis of the new route type.

Fast route

A route with a quick journey time is calculated.

Short route

0

A route with a short driving distance is calculated.

#### Eco route

An economical route is calculated. The journey time may be somewhat longer than for quicker routes.

#### • Trailer mode

Requirement: the option is available if a trailer has been coupled with the vehicle.

A prompt is shown in the multimedia system. Confirm the prompt.

The route is optimised for trailer operation.

The dynamic route can be switched on or off for the route types named.

#### Automatic

The route is calculated with the currently set route type.

Traffic messages via Live Traffic Information or FM RDS-TMC are taken into account ( $\rightarrow$  page 313).

Live Traffic Information and FM RDS-TMC are not available in all countries.

#### AFTER ASKING

A prompt appears when a new route is detected with a shorter journey time based on traffic reports. You can continue to use the current route or use the dynamic route instead ( $\rightarrow$  page 317).

#### Off

No traffic reports are taken into account for the route.

The following additional route settings can be activated or deactivated:

#### Suggest alternative route

If the option is switched on ( $\rightarrow$  page 304), then an alternative route is calculated for each route.

### Activate commuter route

Requirements:

You have created a profile ( $\rightarrow$  page 265). The Learn from location history option is activated for your profile ( $\rightarrow$  page 269).

The multimedia system has gathered sufficient data in order to show destination suggestions.

Routes have been learned for these destination suggestions.

If the option is activated ( $\rightarrow$  page 304), navigation starts route guidance for the learned routes automatically without voice output.

### Alternative for calling up route types

▶ Select Navigation (Navigation) ► Advanced settings ► Route settings.

#### Selecting route options

Multimedia system:

→ Navigation (Navigation) → Route Icon → Route → Avoid options

#### Avoiding areas

Select Avoid areas (→ page 323).

# Avoiding motorways, ferries, tunnels, motorail trains, unpaved roads

Switch on the avoid option.

## Using toll roads

- Select Use toll roads.
- Switch the Payment by cash or card and Electronic billing options on or off. The route takes into account roads that require the payment of a usage fee (toll) corresponding with the payment type selected.

These route options are not available in every country.

The selected route options cannot always be implemented. Therefore, a route may include a ferry, for instance, even though the avoid Ferries option is enabled. A message appears and you will hear a corresponding message.

# Using routes requiring a special toll sticker

- Select Use vignette roads.
- Activate All.

or

Switch on the countries that should be taken into account.

The route takes into account roads in the selected countries which require you to pay a time-based fee (vignette). A vignette allows for the use of a route network for a limited time period.

#### Alternative for calling up route options

Select Navigation (Navigation) Navigation Navigatio

# Selecting notifications

Multimedia system:

- Switch an announcement on or off.
  - Announce street names

The multimedia system announces the names of the roads that will follow the upcoming change of direction.

This function is not available in all countries and languages.

• Announce traffic warnings

# Showing destination information for the route

#### Requirements:

A destination is entered.

Multimedia system:

→ Navigation (Naviga-

tion) → Route Icon → Route

Select Route overview.

When route guidance is active, the destination and intermediate destinations are shown, if these have been entered and not yet been passed.

The route can include up to four intermediate destinations.

 Select a destination or an intermediate destination.

The following information is displayed:

- Remaining driving distance
- Time of arrival
- Remaining journey time
- · Name, destination address

- Phone number (if available)
- Web address (if available)

## Planning routes

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Route overview

- Select Set intermediate destination.
- ► Enter the intermediate destination as a POI or address, for example ( $\rightarrow$  page 293).
- Select the intermediate destination. After selection of an intermediate destination, the route overview is shown again.
- Calculating the route with intermediate desti $nations(\rightarrow page 303)$
- (i) If there are already four intermediate destinations, delete an intermediate destination  $(\rightarrow page 303)$ .

# Editing a route with intermediate destinations

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Route overview

- To change the sequence of destinations: select ▼ for a destination. A menu opens.
- Select Move.
  - is highlighted.
- Move the intermediate destination or the destination with  $\frown$  or  $\frown$  to the desired position.
- Tap on 🕢 .
- ► To delete a destination: select ▼ for an intermediate destination or destination.
- Select Delete.
  - The destination is deleted.

# Calculating a route with intermediate destinations

## Requirements:

• The destination and at least one intermediate destination have been entered.

#### Multimedia system:

→ Navigation (Naviga-

tion) → Route Icon → Route overview

Select Start route guidance.

- If the route has been edited, select To Navigation.
- Confirm the prompt with Yes. The route is calculated. Route guidance begins.

# Displaying the route list

Multimedia system:

→ Navigation (Navigation) → Route Icon → Route

#### Select Route list.

The list shows the route sections. The current vehicle position is marked on the map. The current vehicle position is shown with the following information:

- The symbol for the current vehicle position is displayed.
- The name of the road on which you are currently driving is shown.
- The road number of the road on which you are currently driving is shown.

The route list is updated during the journey.

► To show route sections: swipe up or down on the control element.

The route section is shown on the map.

# Selecting an alternative route

Multimedia system:

→ Navigation (Navigation) → Route Icon

▶ Select Alternative route.

The routes are displayed in accordance with the setting made in the route settings.

The routes are numbered.

Select the alternative route.

### Activating a commuter route

#### Requirements:

- The Learn from location history option is activated for your profile (→ page 269).
- The multimedia system has gathered sufficient data in order to show destination suggestions.
- Routes have been learned for these destination suggestions.

### Multimedia system:

→ Navigation (Navigation) → Route Icon → Route → Route settings

► Activate Activate commuter route.

The navigation system automatically detects that the vehicle is on a commuter route. It automatically starts a route guidance without voice output.

For the daily commuter route, traffic incidents on the route are also reported when driving without active route guidance.

# Switching the automatic filling station search on/off

Multimedia system:

→ 🔝 >> Settings >> Fahrzeug (Vehicle)

Switch Reserve fuel level on or off. When the fuel reserve level is reached, and the option is switched on, a prompt appears asking whether you want to start searching for filling stations.

# Starting an automatic filling station search

#### Requirements:

. The automatic filling station search is activated ( $\rightarrow$  page 304).

## **Driving situation**

The fuel level in the fuel tank reaches the reserve fuel level.

The Fuel tank reserve level Do you want to start the search for filling stations? message is shown.

Select Yes.

The automatic filling station search begins. The available filling stations along the route or in the vicinity of the vehicle's current position are displayed.

- Select a filling station. The address of the filling station is displayed.
- ► Calculate the route ( $\rightarrow$  page 299). The filling station is set as the destination or the next intermediate destination.

If there are already four intermediate destinations: select Yes in the prompt. The filling station is entered in the route overview. Intermediate destination 4 is deleted. Route guidance begins.

### Starting the automatic service station search

#### Requirements:

- ATTENTION ASSIST and the Suggest rest area function are activated ( $\rightarrow$  page 213).
- There are service stations along the route section ahead.

### **Driving situation**

The Suggest rest area. Do you want to start the rest area search? message is shown.

Select Yes.

The service station search starts. The available service stations along the route or in the vicinity of the vehicle's current position are displayed.

Select a service station. The service station address is displayed.

- Calculate the route (→ page 299). The service station is set as the destination or the next intermediate destination.
- If there are already four intermediate destinations: select Yes in the prompt. The service station is entered in the route overview. Intermediate destination 4 is deleted. Route guidance begins.

#### Showing a stored route on the map

# Requirements:

- · A USB device with stored routes is connected with the multimedia system ( $\rightarrow$  page 365).
- The route is stored in the "Routes" folder with the GPS Exchange format (.gpx).

#### Multimedia system:

→ Navigation (Navigation) → Where to? → Stored routes

- Select a route.
- Select Display on map.
- Move the map (→ page 320).

# Starting a saved route

#### Requirements:

- A USB device with stored routes is connected with the multimedia system (→ page 365).
- The route is stored in the "Routes" folder with the GPS Exchange format (.gpx).

#### Multimedia system:

→ Navigation (Navigation) → Where to? → Stored routes

- Select a route.
- Select Start route guidance from the beginning or Start route guidance from current location.

Route guidance starts.

i The route can be saved with ☆ in the menu (→ page 299).

## Recording a route

#### Requirements:

A USB device is connected with the multimedia system (→ page 365).

# Multimedia system:

→ Navigation (Navigation) → Where to? → Stored routes

**To start recording:** select Start to record new route.

A red recording symbol is shown.

The route is stored on the USB device.

► To stop recording: select End recording.

## Saving a recorded route

### Requirements:

A USB device is connected with the multimedia system (→ page 365).

#### Multimedia system:

→ Navigation (Navigation) → Where to? → Stored routes

- Select a route.
- ➤ Select ☆.
- Select Store in "Previous destinations". The route is stored in the "Previous destinations" memory and can be called up from there for route guidance.

# Editing a stored route

## Requirements:

A USB device with stored routes is connected with the multimedia system (→ page 365).

#### Multimedia system:

Navigation (Navigation) → Where to? → Stored routes

- Select a route with ▼.
- ▶ To enter a name: select Change name.
- Enter the name.
- ► Select OK.

or

- When the name has been changed, press the button.
- Select Yes.
- ➤ To delete a route: select Delete.
- Select Yes.

# Route guidance

### Notes on route guidance



**WARNING** Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Route guidance begins once a route has been calculated.

The road and traffic rules and regulations always have priority over multimedia system driving recommendations.

Driving recommendations are:

- Navigation announcements
- Route guidance displays
- Lane recommendations

If you do not follow the navigation announcements or if you leave the calculated route, a new route is calculated automatically.

Driving recommendations may differ from the actual road and traffic conditions if:

- The route is diverted
- The direction of a one-way street has been changed

For this reason, you must always observe road and traffic rules and regulations during your journey.

The route may differ from the ideal route due to the following:


- Roadworks
- Incomplete digital map data

# Changing direction overview

Changes of direction are shown in the following displays:

- Detailed image of the junction The display appears when you drive into a junction.
- 3D image

The display appears when driving on junction-free, multi-lane roads, for example on motorway exits and motorway interchanges.

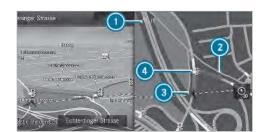

Example: detailed image of the crossing with upcoming changes of direction

- ① Current distance to the change of direction
- Changing direction
- 3 Current vehicle position
- Manoeuvre point



Example: 3D image of the upcoming change of direction

- ① Current distance to the change of direction
- ② Changing direction
- 3 Current vehicle position
- Manoeuvre point

There are three phases when changing direction:

Preparation phase

If there is enough time between the changes of direction, the multimedia system prepares you for the upcoming change of direction. A navigation announcement, e.g. "Prepare to turn right", is issued.

The map appears in full-screen mode.

The status line shows: the direction information or the name of the road which is to be turned into and the distance to the change of direction.

Announcement phase

The multimedia system announces the upcoming change of direction, e.g. by announcing "Turn right in 100 m".

The display is split into two parts. The map is displayed on the left; on the right, there is a detailed image of the junction or a 3D image of the upcoming change of direction.

• Change-of-direction phase

The multimedia system announces the imminent change of direction, e.g. by announcing "Now turn right".

The display is split into two parts.

The change of direction takes place when the distance to manoeuvre point (a) is shown with 0 m and the symbol for vehicle position (a) has reached manoeuvre point (a).

When the change of direction is complete, the map appears in full-screen mode.

(i) Changes of direction are also shown in the Instrument Display.

#### Lane recommendations overview

This display appears for multi-lane roads.

The multimedia system can show lane recommendations if the digital map contains the relevant data.



- Recommended lane (white arrow, blue background)
- Possible lanes (white arrow)
- 3 Lanes not recommended (grey arrow)

- Recommended lane (1) In this lane, you will be able to complete both the next change of direction and the one after that.
- Possible lane ② In this lane, you will only be able to complete the next change of direction.
- Lane not recommended (3) In this lane, you will not be able to complete the next change of direction without changing lane.

During the change of direction, new lanes may be added.

(i) Bus lanes are also shown. Lane recommendations can also be displayed in the Instrument Display and in the Head-up Display.

# Using motorway information

#### Requirements:

• The Motorway information option is switched on ( $\rightarrow$  page 322).



When driving on the motorway, upcoming motorway facilities 1 and available service facilities 2 are shown in the overview. These include filling stations, car parks, service stations and motorway exits, for example.

- To open the display: select . The entries are sorted according to increasing distance from the current vehicle position.
- Select an entry.
- Select a service facility from the list. The details are displayed. The map shows the position and the driving time to this location.

The following functions can be used in the detailed display, for example:

- Search for a POI in the vicinity.
- · Save the destination.
- Place a call at the destination.
- Calculate the route (→ page 299).

#### **Destination reached**

Once the destination is reached, you will see the chequered flag. Route guidance is finished.

When an intermediate destination has been reached, you will see the intermediate destination flag with the number of your wintermediate destination. After this, route guidance is continued.

#### Switching navigation announcements on/off

To switch off: turn the volume control on the steering wheel or next to the touchpad during a navigation announcement (→ page 275).

The Spoken driving recommendations have been deactivated. message appears.

- ▶ Show the navigation menu ( $\rightarrow$  page 292).
- ➤ Select 📶».

The symbol changes to .

To activate: select .

The current navigation announcement is played.

The symbol changes to .

 This function can be added and called up from the favourites within the navigation category.

# Switching navigation announcements on/off during a phone call

Press the n button on the steering wheel or on the touchpad.

or

- Briefly press in the multimedia system display.
- Select Settings.
- Select System.
- Select Audio.
- Select Navigation and traffic announcements.

Switch Driving recommendations during call on or off.

# Adjusting the volume of navigation announcements

Multimedia system:

→ Settings → System → Audio → Navigation and traffic announcements

- Select Fahrempfehlungslautstärke (Driving recommendation volume).
- Set the volume.

# Route guidance is active

Turn the volume control on the steering wheel or next to the touchpad during a navigation announcement.

# Switching audio fadeout on/off during navigation announcements

Press the button on the steering wheel or on the touchpad.

or

▶ Briefly press in the multimedia system display.

or

- Select Settings.
- Select System.
- Select Audio.
- Switch Audio fadeout on or off.

#### Repeating navigation announcements

#### Requirements:

- a route has already been created.
- route guidance is active.

#### Multimedia system:

**¬→** Navigation (Navigation)

- ➤ Select 📶».
- ► Select 📶. The current navigation announcement is repeated.
- (i) This function can be added and called up from the favourites within the navigation category.

## Cancelling route guidance

#### Requirements:

a route has been created.

- route guidance is active.
- Show the navigation menu.

# Route guidance to an off-road destination

An off-road destination is within the digital map. The map contains no roads that lead to the destination.

You can enter geo-coordinates or off-road destinations on the map. Route guidance guides you for as long as possible with navigation announcements and displays on roads that are known to the multimedia system.

Shortly before you reach the last known position on the map, you will hear the "Please follow the direction arrow" announcement, for example. The display shows a direction arrow and the linear distance to the destination.

### Route guidance from an off-road location to a destination

In an off-road position, the current vehicle position is located within the digital map on roads that are not available.

The following displays appear when route guidance begins:

- A message appears that the road is not on the map.
- · A direction arrow showing the linear direction to the POI.

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

## Off-road status during route guidance

Due to roadworks, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases. the multimedia system will temporarily be unable to locate the vehicle's current position on the digital map. The vehicle is off-road.

The following displays appear when the vehicle is off-road:

- A message appears that the road is not on
- · A direction arrow showing the linear direction to the POI.

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

#### **Destination**

# **Saving the current vehicle position** Multimedia system:

→ Navigation (Navigation) → Route Icon → Position

Select Store position.

The current vehicle position is saved to the "Previous destinations" memory.

# **Editing the previous destinations** Multimedia system:

→ Navigation (Navigation) → Navigation (Navigation) → PREV. DESTINATIONS

The following destinations can be edited:

- Previous destinations and routes
- Destination suggestions

Requirements: the Learn from location history option is activated for your profile ( $\rightarrow$  page 269).

The multimedia system has gathered sufficient data in order to show destination suggestions.

- External destinations and routes
- To no longer display a destination suggestion: select ▼ for a destination suggestion.
- Select Do not suggest.

# Saving the last destination as a favourite

- (i) After saving, the destination can be called up via the favourites (→ page 271).
- Select for a destination.
- Select Save as favourite.
- To save as a favourite: select Save as favourite.
- To save as "Home" address: select Save as "My home".

To save as "Work" address: select Save as "My work".

# Deleting a previous destination

- ➤ To delete a destination: select ▼ for the previous destination.
- Select Delete.
- Select Yes.
- ➤ To delete all destinations: select .
- ► Select Delete all.
- Select Yes.

#### Using external destinations and routes

External destinations and routes can be received from the following sources, for example:

- Mercedes-Benz Apps
- door-to-door navigation

A prompt appears on the multimedia display. Received destinations and routes are saved in the previous destinations.

A destination has been received: select Yes.

- Calculate the route.
- If route guidance is already active, select Set as intermediate dest. or Start new route guidance.

or

- If a destination was received with photo information, select Start route guidance.
- Calculate the route.

or

- If a destination has been received from an app, select Details.
- Calculate the route.
- A route has been received: select Yes.
- Select Start route guidance from the beginning or Start route guidance from current location.
  - Route guidance starts from the selected position.

# Route guidance with current traffic reports

#### Traffic information overview

(i) The services are not available in every coun-

Traffic reports can be received with the following services:

- Live Traffic Information
- FM RDS-TMC

It is not possible to use both services simultaneously.

Live Traffic Information or FM RDS-TMC is displayed with a symbol.

- (i) Hazard warnings can be received using the Car-to-X service.
- (i) There may be differences between the traffic reports received and the actual road and traffic conditions.

Important information on Live Traffic Information:

 Current traffic reports are received via the Internet connection (for selected countries).

- The traffic situation is updated at short, regular intervals.
- In selected countries, the subscription service is available free of charge for a period of three years from the manufacturing date. Subscription information shows the status  $(\rightarrow page 314)$ .

Registering Live Traffic Information

• The service must be registered with Mercedes me ( $\rightarrow$  page 314):

This secures the free-of-charge period of three years.

Information on the vehicle's position is regularly sent to Daimler AG. The data is immediately rendered anonymous by Daimler AG and forwarded to the traffic data provider. Using this data, traffic reports relevant to the vehicle's position are sent to the vehicle. The vehicle acts as a sensor for the flow of traffic and helps to improve the quality of the traffic reports.

If you do not want to transmit the vehicle position, you have the following options:

- You deactivate the service in the Mercedes me portal.
- You have the service deactivated at a Mercedes-Benz service centre.

Useful information on FM RDS-TMC:

- A FM RDS-TMC radio station broadcasts traffic reports alongside the radio programme.
- FM RDS-TMC is not available in all countries.

# Displaying subscription information

#### Requirements:

The vehicle is equipped with Live Traffic Information.

Multimedia system:

→ Navigation → Route

To display manually: select Live Traffic Subscription Info.

Depending on the status, one of the following messages appears:

- the traffic data supplier's logo and the validity of the subscription are displayed.
- the logo of the traffic data provider is shown. The subscription is valid.
- the logo of the traffic data provider is shown. The subscription has expired.

The subscription expiry date is automatically displayed:

- one month before the expiry date
- one week before the expiry date
- on the expiry date
- (i) The subscription can be extended (→ page 315).

# **Registering Live Traffic Information**

### Requirements:

- The vehicle is equipped with Live Traffic Information.
- You have a user account on the Mercedes me website.

The Live Traffic Information service must be registered. This secures the full period of three years.

- Create a user account at Mercedes me at: http://www.mercedes.me. A valid email address is required for this.
- Register the vehicle using the vehicle identification number (VIN).
- ➤ To carry out the registration yourself: connect the vehicle with your Mercedes me user account in the Mercedes me portal.

  A code is sent to the multimedia system.
- Enter the code into the multimedia system.
- Accept the general and specific terms of use.

Registration in the Mercedes-Benz service centre: have the connection carried out in a Mercedes-Benz service centre.

## Extending a subscription

#### Requirements:

- The vehicle is equipped with Live Traffic Information.
- You have a user account on the Mercedes me website.
- Call up the Mercedes me website.
- Call up the Mercedes me user account.
- Switch to the Mercedes me connect online store via the linked vehicle.
- Select the Live Traffic Information service.
- Select the renewal period.
- Add the product to the shopping basket.
- Accept the general and specific terms of use. Live Traffic Information remains activated for the selected extension period. Activation begins on the date of extension.

# Showing traffic information

# Requirements:

- The Traffic display is switched on (→ page 316).
- The following traffic displays are switched on  $(\rightarrow page 316)$ :

Incidents

Freier Verkehrsfluss (Free traffic flow) Delay

Multimedia system:

**→** 🔝

Select Navigation (Navigation).

The map shows the following traffic informa-

- traffic incidents, for example:
  - roadworks
  - road blocks
  - warning messages

When route guidance is active, the symbols for traffic incidents will be shown in colour on the route. Off the route they are

- warning message symbols:
  - symbol 🔨
  - road safety notes, e.g. when approaching the end of a traffic jam If the vehicle approaches a danger area on the route, a warning message is displayed on the map. In addition, an audible notification can follow a hazard warning.
- traffic flow information:
  - traffic jam (red line)
  - congested traffic conditions (orange
  - slow-moving traffic (yellow line)
  - free-flowing traffic (green line)
- · display for traffic delays on the route lasting at least one minute

# Displaying traffic incidents

#### Requirements:

 The Incidents display is switched on (→ page 316).

#### Multimedia system:

→ Navigation (Navigation) → Route symbol → Traffic

► Select Traffic messages 3.

The list is sorted according to distance and shows the traffic incidents received.

The traffic incidents on the route are shown first.

A traffic incident shows the following information:

- Street number
- Traffic incident symbol
- Cause
- Distance from current vehicle position
- Select a traffic incident.

The detailed information, for example the route section, is shown.

# Showing traffic incidents in the vicinity of the map

- Select a traffic incident symbol on the map. The details about the traffic incident are displayed.
- Select ....
- Select Traffic incidents in vicinity. The map shows the traffic incident symbols in the vicinity.

Traffic incident information is displayed in the status line:

- Traffic incident symbol
- Cause of the traffic incident, e.g. construction work
- Warning message (highlighted red)
- To select a traffic incident symbol: select or .
- To select the map section: tap on the multimedia system display.

or

- Press the Touch Control or the touchpad.
- Move the map

To return to the navigation map: tap on \_\_\_\_\_\_.

or

Press the <u></u>button on the Touch Control or on the touchpad.

Switching the traffic information display on Multimedia system:

- → 🔝 >> Navigation >> 💍
- Activate Traffic.
   With this option additional traffic flow information and delays can be shown.

# Activating Incidents, Free Flow and Delay

- Select Advanced settings.
- In the TRAFFIC category, activate the Incidents, Freier Verkehrsfluss (Free traffic flow) and Delay entries.

If traffic information has been received, then traffic incidents such as roadworks, road blocks, local area reports (e.g. fog) and warning messages are displayed.

The traffic delay is displayed for the current route. Traffic delays lasting one minute or longer are taken into consideration.

### Showing local area messages

Multimedia system:

→ Navigation → Route Icon **▶** Traffic

- Select Area messages. Local area messages are shown, for example fog or heavy rain.
- Select a local area message. The details are displayed.

# Accepting a detour recommendation after a prompt

#### Requirements:

- AFTER ASKING is activated (→ page 300).
- route guidance is active.
- there are traffic reports for the current route.

If a new route with a shorter driving time is determined, the current and new routes will be shown.

- (i) The notification is shown in another application. Confirm the notification.
- ► To accept the new route: select Accept recommended detour.
- To maintain the current route: select Keep to current route.

#### Car-to-X-Communication

#### Car-to-X-Communication overview

Requirements:

- The vehicle is equipped with a multimedia system featuring navigation and a communication module with an activated, integrated SIM card.
- Car-to-X-Communication is activated.
- (i) Car-to-X-Communication is available in selected countries.

The communication module automatically establishes an Internet connection once the ignition is switched on. If there are any hazard warnings, they will be provided shortly thereafter. Depending on the mobile phone connection, the provision takes place from within a second up to about a minute.

- Hazards are recognised automatically be the vehicle or may be reported by the driver. These are then sent to vehicles with Car-to-X-Communication in the immediate vicinity.
- · Current and precise details relating to hazard spots near the vehicle's current position are received.

This gives you sufficient time to adapt your driving style to the traffic conditions.

The use of Car-to-X-Communication requires the regular transmission of vehicle data to Daimler AG. The data is then immediately pseudonymised by Daimler AG. The vehicle data is deleted after an appropriate amount of time has elapsed (several weeks) and is not stored permanently.

(i) Data which serves as identification is replaced during the pseudonymisation process. In this way, your identity is protected against access by unauthorised third parties.

# Displaying hazard warnings

Multimedia system:



Select Navigation (Navigation).

If hazard warnings are available these will be shown on the map.

The following hazard warnings are shown on the map:

- broken-down vehicles
- accidents
- · hazardous weather
- · general hazards
- · hazard warning lights, if activated
- · mobile roadworks

The display is not available in all regions.

In the Federal Republic of Germany the display is currently available in the Federal State of Hesse.

(i) If the vehicle is approaching a hazard spot with a vehicle speed of at least 60 km/h, the voice output "Traffic incident ahead" is issued. The voice output is not issued for hazardous weather.

### Sending hazard warnings

Automatically detected hazard warnings are sent by the vehicle.

- Select Traffic incident.
   A prompt is shown.
- Select Yes.

The Thank you for supporting accident prevention. message appears.

# Route guidance with augmented reality (AR)

# Activating route guidance with augmented reality

Multimedia system:

Navigation (Navigation)

Activate Augmented Reality.

When the option is activated, the video image from the camera shows the driver's view in the multimedia system display.

You can also select the following options:

- The video image will always be shown with the visible objects during route guidance.
- The video image will be shown with the visible objects instead of the navigation map before a turning manoeuvre.

After the turning manoeuvre, the navigation map will be shown again.

Examples of objects could be driving manoeuvre arrows, street names and house numbers, for example.

- Select Advanced settings.
- Select Augmented Reality.
- Select Always or When cornering.

# Switching on display of POIs with augmented reality for route guidance

# Requirements:

Augmented reality is activated (→ page 318).

#### Multimedia system:

→ Navigation (Navigation) → Advanced settings → Augmented Reality

Activate POI symbols.

When the option is switched on, the same POI symbols are shown in the video image as those configured for the navigation map.

# Selecting a POI for route guidance with augmented reality

#### Requirements:

- Augmented reality is activated (→ page 318).
- The display of POIs is activated  $(\rightarrow page 318)$ .

#### Multimedia system:

→ Navigation (Navigation)

Selection of a POI is possible up to a vehicle speed of 50 km/h.

Briefly press on a POI symbol.

or

- Select a POI when the next POIs are shown in a list during route guidance. The detailed view appears.
- Calculate the route (→ page 299).

Activating displays of street names and house numbers for route guidance with augmented reality

### Requirements:

Augmented reality is activated (→ page 318).

Multimedia system:

→ Navigation (Navigation) ➤ Advanced settings ➤ Augmented Reality

Activate Street names and Show house numbers.

During route guidance, street names and house numbers are shown as objects in the video image.

# Switching on display of traffic lights with augmented reality for route guidance

#### Requirements:

Augmented reality is activated (→ page 318).

Multimedia system:

→ Navigation (Navigation) → Advanced settings → Augmented Reality

The video image will be enlarged to show traffic lights under the following conditions:

- The vehicle is standing at a junction in first position in the lane.
- The option is switched on. When the vehicle pulls away the navigation map is shown again.
- Scroll up until TRAFFIC LIGHT INDICATOR is shown.
- Select Off, AFTER ASKING or Automatic. If AFTER ASKING is set and a traffic light display is available, a message is shown. When the message is confirmed the video image shows a traffic light.

If Automatic is set the video image shows a traffic light if available.

#### Map and compass

# Setting the map scale

Multimedia system:

→ Navigation (Navigation)

# Zooming in

When the map is shown, tap twice quickly with one finger on the multimedia system display or the touchpad.

or

Move two fingers apart on the multimedia system display or on the touchpad.

## Zooming out

Tap with two fingers on the multimedia system display or the touchpad.

or

- Move two fingers together on the multimedia system display or on the touchpad.
- (i) You can set the unit of measurement of the map scale (→ page 286).

# Moving the map

Multimedia system:

→ Navigation (Navigation)



- On the multimedia system display: move a finger in any direction when the map is displayed.
- On the touchpad: call up the navigation menu by pressing.
- Swipe your finger up.
   Symbol appears on the map. The map can be moved.

Touch the control element and move your finger in any direction.

The map moves in the corresponding direction under the crosshair. The more you move your finger away from the starting position, the faster the map moves. The position of shows the direction and the speed the map is moving.

When the map has been moved the following information appears in the status line, for example:

- The distance from the vehicle's current position is shown.
- Information about the current map position, e.g. the name of the road, is shown.

If you select ③, the map with the current position is shown again.

The following functions can be used:

- Select a destination on the map (→ page 298).
- Select a POI (→ page 296).
- Show traffic incidents on the map (→ page 316).

### Rotating the map

- Move the map a little on the multimedia system display with your finger.
- With two fingers, rotate anti-clockwise or clockwise.

# Selecting the map orientation Multimedia system:

→ Navigation (Naviga-

- Swipe up until MAP ORIENTATION is shown.
- Select the map orientation.

The • dot indicates the current setting.

- 2D north up: the 2D map view is displayed so that north is always at the top.
- 2D heading up: the 2D map view is aligned to the direction of travel.
- 3D: the 3D map view is aligned to the direction of travel.

# Alternative using quick-access

Repeatedly tap or press on the ocmpass symbol on the map. The view changes in the sequence 3D, 2D heading up to 2D north up.

If the map is moved, it can switch between 3D and 2D north up.

## Selecting POI symbols for the map display Multimedia system:

→ Navigation (Navigation) **→** Advanced settings

POIs include filling stations and hotels, for example. These can be displayed as symbols on the map. Not all POIs are available everywhere.

Personal POIs are destinations which you have saved on a USB device, for example.

- (i) The display of POI symbols on the map can be activated or deactivated as a favourite.
- Activate POI symbols.

# Configuring the map display

Select > POI symbols.

- Switch Show all on or off.
- Switch the categories (Quick POI) on or off.
- Select > ALL CATEGORIES.
- Switch Show all on or off.

- Select the categories and sub-categories (if available) >.
- Switch the categories and sub-categories (if available) on or off.

The POI symbols for the selected categories are displayed.

# Configuring personal POIs

- Select > Personal POIs.
- Activate or deactivate the categories. When the category is switched on and the vehicle approaches a personal POI in this category, a visual and audible notification can be issued.
- To set a notification when approaching: select a category or a personal POI ▼. A menu opens.
- Switch Visual and Audible on or off.

### Resetting personal POIs

- ► Select 🙀 .
- Select RESET. The settings are reset to the standard settings.

# Selecting text information

Multimedia system:

→ Navigation (Navigation) → Advanced settings

- Scroll up until TEXT INFORMATION is shown.
- Select Current street, Geo-coordinates or None.

Current street shows the street you are currently driving on at the bottom of the display.

When the map is moved, the street name, the POI name or the area name appears under the crosshair.

Geo-coordinates displays the following information:

- longitude and latitude
- elevation

The elevation shown may deviate from the actual elevation.

number of satellites from which a signal can be received

When the map is moved, this information does not appear.

None switches the display off.

# **Switching motorway information on/off** Multimedia system:

Navigation (Navigation)

Switch Motorway information on or off. When the option is switched on, additional information about the motorway facilities ahead appears during the motorway journey. These include car parks, service stations and motorway exits, for example.

# Displaying the next intersecting street

#### Requirements:

• Route guidance is not active.

# Multimedia system:

→ Navigation (Navigation) → Advanced settings

- ► Swipe up until TEXT INFORMATION is shown.
- Activate Next intersecting street. If the function is switched on and the journey continues without route guidance, the name of the next intersecting street will be displayed at the upper edge of the display.

# Displaying the map version

Multimedia system:

- Swipe upwards and select Map version.
- (i) Information about new versions of the digital map can be obtained from a Mercedes-Benz service centre.

# Overview of avoiding an area

You can define areas along a route that you would like to avoid.

Motorways or multi-lane expressways, which are routed through an area to be avoided are taken into account for the route.

### Avoiding a new area

Multimedia system:

→ Navigation (Naviga-

tion) → Route Icon → Avoid options → Avoid areas

- Select Avoid new area.
- To start in the map: select Using map.
- Move the map ( $\rightarrow$  page 320).
- To start via destination search: select Search destination.
- Enter the address (→ page 293).
- Select the destination in the list or accept with OK.

The map appears.

To show an area: tap or press on the control

A red rectangle appears. This designates the area that should be avoided.

To change the map scale: move two fingers apart or together on the multimedia system display or on the touchpad. The map is zoomed in or out.

To set an area: press on the central control element.

The area is entered into the list.

#### Changing an area

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Avoid options ➤ Avoid

- areas Select an area in the list.
- Select Edit.

## Moving the area on the map

Swipe in any direction on the central control element.

## Changing the size of the area

- Press on the central control element.
- Swipe up or down on the central control element.

Press on the central control element.

## Taking the area for the route into account

- Select an area in the list.
- Activate Avoid area.

If route guidance is active, a new route is calculated.

If there is no route yet, the setting is carried over to the next route guidance.

The route can include an area that is to be avoided in the following cases:

- the destination is located in an area that is to be avoided
- there is no sensible alternative route

# Deleting one or all areas

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Avoid options ➤ Avoid areas

#### Deleting an area

- Select an area in the list.
- Select Delete.

Confirm the prompt with Yes.

### Deleting all areas

- Select O.
- Select Delete all.
- Confirm the prompt with Yes.

#### Updating the map data

# **Updating at the Mercedes-Benz Service Centre**

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimal route guidance can only be provided by the navigation system in conjunction with the most up-to-date map data. Information about new versions of the digital map can be obtained from a Mercedes-Benz service centre.

You can receive updates to the digital map there.

## Online map update

(i) The online map update service is not available in all countries.

The online map update service from Mercedes me connect can be used to update the map data.

You can use the following update options:

- for one region (automatic map update)
- for several or all regions (manual map update)

The map data will first be downloaded onto a storage medium and then updated on the multimedia system.

The service must be activated at a Mercedes-Benz service centre in order to use automatic updates.

Further information on the online map update http://www.mercedes.me.

Further information on updates: http://manuals.daimler.com/baix/cars/connectme/de DE/index.html.

#### Map data

Your vehicle is supplied with map data at the factory. Depending on the country, map data for your region is either pre-installed or the map data is supplied on a data storage medium. You

do not require an activation code for the map data which is provided with your vehicle.

If the map data on your vehicle has been installed at the factory and you wish to reinstall it, you do not need to enter the activation code.

An activation code is required for purchased map data.

Observe the following when entering the activation code:

- The activation code can be used for one vehicle
- The activation code is not transferable
- The activation code has six digits

In the event of the following problems, please contact a Mercedes-Benz service centre:

- The multimedia system does not accept the activation code
- You have lost the activation code

# Displaying the compass

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Position

Select Compass.

The compass display shows the following information:

- the current direction of travel with bearing (360° format) and compass direction
- longitude and latitude coordinates in degrees, minutes and seconds
- height (rounded)
- · number of GPS satellites from which a signal can be received

#### Displaying Qibla

Multimedia system:

→ Navigation (Navigation) ➤ Route Icon ➤ Position

Select Qibla.

The arrow on the compass shows the direction to Mecca in relation to the current direction of travel.

- The number of satellites received is shown.
- (i) This function is not available in all countries.

# Setting the map scale automatically Multimedia system:

→ Navigation (Navigation) **→** Advanced settings

The map scale is set automatically depending on your driving speed and the type of road.

- Activate Auto zoom.
- (i) The automatically selected map scale can be changed manually. After a few seconds, this is automatically reset.

# Displaying the satellite map

Multimedia system:

→ Navigation (Navigation) ➤ 🗘 ➤ Advanced settings

Switch Satellite map on or off. If the option is activated, satellite maps are displayed in map scales from 2 km.

If the option is deactivated, satellite maps are not displayed in map scales from 2 km to 20 km.

(i) The satellite maps for these map scales are not available in all countries.

### Showing the range

#### Requirements:

The function is available.

Multimedia system:

→ Navigation (Navigation) ➤ 🐧 ➤ Advanced settings

When the function is active the range is shown on the map.

- · For petrol and diesel vehicles: green display
- For hybrid vehicles:

Total range: green display Electrical range: blue display

When the lower reserve capacity is reached then the range display on the map is switched off.

Swipe upwards and switch on Range.

# Displaying weather information and other map contents

Multimedia system:

→ Navigation (Navigation) → Advanced settings

Select ONLINE MAP CONTENTS.

The available services are displayed. The services are provided by Mercedes me connect.

Switch on a service, e.g. Weather. Current weather information is displayed on the navigation map, e.g. temperature or cloud cover. The service information, e.g. weather symbols, is not shown in all map scales.

Further information about available services and about displaying information in the map scales: http://www.mercedes.me

The services are not available in every country.

- (i) Requirements:
  - You have a user account for the Mercedes me portal.

- The service is available.
- The service is activated.

Further information can be found at: http://www.mercedes.me

# Showing map view in the multifunction display of the instrument cluster

Multimedia system:

Navigation (Navigation)

Navigation (Navigation)

Advanced settings

- Swipe upwards and select Map view in instrument cluster.
- ➤ To set the map scale automatically: switch Auto zoom on or off.

When the option is activated, the map scale is set automatically depending on your driving speed and the type of road.

- **To select the map orientation:** select the map orientation.
  - The dot indicates the current setting.
  - 2D heading up: the 2D map view is aligned to the direction of travel.

- 2D north up: the 2D map view is displayed so that north is always at the top.
- 3D: the 3D map view is aligned to the direction of travel.

## Parking service

### Selecting parking options

### Requirements:

- The navigation services option is available, subscribed to and activated in the Mercedes me portal.
  - The parking service is within the scope of the navigation service.
- Parking is activated (→ page 327).

#### Multimedia system:

→ Navigation (Navigation)

- Tap on P in the map.
- Select a parking option. The following information is displayed (if available):

- · Destination address, distance from current vehicle position and arrival time
- Information on the multi-storey car park/car park
  - For example, opening times, parking changes, current occupancy, maximum parking time, maximum access height.
- Available payment options (Mercedes pay, coins, bank notes, cards)
- Details on parking tariffs
- Number of available parking spaces
- Payment method (e.g. at the parking machine)
- Services/facilities at the parking option

- Telephone number
- Calculating the route (→ page 299).

The following functions can also be selected (if available):

- Search for POIs in the vicinity.
- Save the destination.
- Place a call at the destination.
- Share the destination using NFC or QR code.
- Call up the web address.
- Show the destination on the map.

## Displaying parking options on the map

# Requirements:

• The navigation services option is available, subscribed to and activated in the Mercedes me portal.

The parking service is within the scope of the navigation service.

#### Multimedia system:

→ Navigation (Navigation) 🕨 🔯

Activate Parking.

The parking options within the vicinity of the current vehicle position are shown.

# Telephone

# **Telephony**

# Telephone menu overview



- Battery status of the connected mobile phone
- Bluetooth® device name of the currently connected mobile phone/the mobile phone in the foreground (two phone mode)
- 3 Signal strength of the mobile phone network
- Options
- Obevice manager
- To switch mobile phones (two phone mode)
- Numerical pad
- ® contact search

# Bluetooth® profile overview

Bluetooth® profile of the mobile phone	Function
PBAP (Phone Book Access Profile)	Contacts are automatically displayed in the multimedia system
MAP (Message Access Profile)	Message functions can be used

# Telephony operating modes overview

The following telephone operating modes are available:

- · A mobile phone is connected to the multimedia system via Bluetooth<sup>®</sup> ( $\rightarrow$  page 330).
- Two mobile phones are connected with the multimedia system via Bluetooth® (two phone mode).
  - You can use all the functions of the multimedia system with the mobile phone in the foreground.

You can receive incoming calls and messages with the mobile phone in the background.

You can interchange the mobile phone in the foreground and background any time  $(\rightarrow page 331)$ .

i Irrespective of this, Bluetooth® audio functionality can by used with any mobile phone  $(\rightarrow page 365)$ .

# Notes on telephony

**WARNING** Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road

and traffic conditions and operate the equipment with the vehicle stationary.

**WARNING** Risk of distraction from operating mobile communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

Further information can be obtained from a Mercedes-Benz service centre or at: http:// www.mercedes-benz.com/connect.

# Information on telephony

The following situations can lead to the call being disconnected while the vehicle is in motion:

- there is insufficient network coverage in the area
- you move from one transmission/reception station to another and no communication channels are free
- the SIM card used is not compatible with the network available
- a mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

#### HD Voice®:

- To improve voice quality, the multimedia system supports telephone calls in HD Voice®.
- In order to use this function, the mobile phones and the mobile phone network provider of the person you are calling must support HD Voice<sup>®</sup>.

Depending on the quality of the connection, the voice quality may fluctuate.

# Connecting a mobile phone

## Requirements:

- Bluetooth<sup>®</sup> is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth<sup>®</sup> is activated on the multimedia system (→ page 283).

### Multimedia system:

→ 🔝 >> Telephone >> 🛪

# Searching for a mobile phone

Select Connect new device.

# Connecting a mobile phone (authorisation using Secure Simple Pairing)

- Select a mobile phone.
   A code is displayed in the multimedia system and on the mobile phone.
- If the codes match: confirm the code on the mobile phone.

- (i) For older mobile phone models, enter a one to sixteen-digit number code on the mobile phone and on the multimedia system for authorisation.
- (i) Up to 15 mobile phones can be authorised on the multimedia system.

  Authorised mobile phones are reconnected automatically.

# Connecting a second mobile phone (two phone mode)

#### Requirements:

At least one mobile phone is already connected to the multimedia system via Bluetooth<sup>®</sup>.

#### Multimedia system:

- → 🔝 ➤ Telephone ➤ 🛪
- Select Connect new device.
- Select the mobile phone.
- Select With <Mobile phone>.
   The selected mobile phone is connected to the multimedia system.

#### Functions of the mobile phone in two phone mode

#### **Functions overview**

Functions of the mobile phone in the foreground	Functions of the mobile phone in the background
Full range of functions	Incoming calls and messages

# Interchanging mobile phones (two phone mode)

Multimedia system:



You can also interchange the two connected mobile phones in the following submenus:

- Contacts
- Call list
- Messages

After interchanging the mobile phones in one of the submenus, the mobile phone in the foreground is replaced by the mobile phone in the background.

## Changing the function of a mobile phone Multimedia system:

# → Telephone → 🖠

# Activating a function

Select a grey symbol in the line of a mobile

The corresponding function is activated.

## Deactivating a function

- ▶ A function is active: select the coloured symbol in the line of a mobile phone. The mobile phone is disconnected from the multimedia system.
- Several functions are active: select a coloured symbol in the line of a mobile phone. The corresponding function is deactivated.

# Disconnecting/deauthorising a mobile phone

Multimedia system:

- Select ••• in the line of the mobile phone.
- ➤ To disconnect: select Disconnect. If applicable, the mobile phone will be automatically reconnected when the vehicle is next started.
- To deauthorise: select De-authorise.

# Information on Near Field Communication (NFC)

NFC enables short-range wireless data transfer or (re)connection of a mobile phone with the multimedia system.

The following functions are available without having authorised a mobile phone:

- Transferring a URL or a contact to be viewed in the multimedia system (see the manufacturer's operating instructions).
- Setting up the vehicle's Wi-Fi access data via the system settings ( $\rightarrow$  page 285).

Further information can be obtained at: http://www.mercedes-benz.com/connect

# Using the mobile phone with Near Field Communication (NFC)

#### Requirements:

- NFC is activated on the mobile phone (see the manufacturer's operating instructions)
- The mobile phone's screen is switched on and unlocked (see the manufacturer's operating instructions)



To connect a mobile phone: hold the NFC area of the mobile phone (see manufactur-

er's operating instructions) on mat ① or place the mobile phone on it.

- Follow the additional prompts on the multimedia system display to connect the mobile phone. Connect the mobile phone in single telephone mode (→ page 330). Connect the mobile phone in two phone mode (→ page 330).
- To replace a mobile phone: hold the NFC area of the mobile phone (see manufacturer's operating instructions) on mat ① or place the mobile phone on it.
- Follow the additional prompts on the multimedia system display to replace the mobile phone in one or two phone mode (→ page 331).
- If required, confirm the prompts on your mobile phone (see the manufacturer's operating instructions).

Further information can be found at: http://www.mercedes-benz.com/connect

# Setting the reception and transmission volume

#### Requirements:

A mobile phone is connected (→ page 330).

Multimedia system:

→ Telephone → 🕻

This function ensures optimal language quality.

- Select in the line of the mobile phone.
- Select Reception volume, Transmission volume or Ringtone.
- Set the volume.

Further information on the recommended reception and transmission volume: http://www.mercedes-benz.com/connect

#### Setting the ringtone

Multimedia system:

- Select ••• in the line of the mobile phone.
- Select Ringtone.
- Set the ringtone.

(i) If the mobile phone supports the transfer of the ringtone, you will hear the ringtone of the mobile phone instead of that of the vehi-

## Starting/stopping mobile phone voice recognition

#### Requirements:

• The mobile phone in the foreground is connected with the multimedia system  $(\rightarrow page 330)$ .

## Starting mobile phone voice recognition

▶ Press and hold the <a>(m€)</a> button on the multifunction steering wheel for more than one second.

You can use mobile phone voice recognition.

## Stopping mobile phone voice recognition

- ▶ Press the 🙀 or 🕿 button on the multifunction steering wheel.
- (i) If a mobile phone is connected via Smartphone Integration, the voice recognition of this mobile phone is started or stopped.

 
## Calls

# Telephone operation Multimedia system:


→ Telephone

# Making a call by entering the numbers

- ► Select :: .
- Enter a number.



Accepting a call

 

## Rejecting a call



# Ending a call



#### Activating functions during a call

The following functions are available during a call:

- Numerical keypad (show to send DTMF tones)
- + Add call
- Transfer to phone (an active call in hands-free mode is transferred over to the telephone)
- Select a function.

# Conducting calls with several participants

#### Requirements:

- There is an active call (→ page 333).
- Another call is being made.

### Switching between calls

Select the contact. The selected call is active. The other call is on hold.

### Activating or ending a call on hold

Select Continue call or End call.

#### Conducting a conference call



Create conferen. call.

The new participant is included in the conference call.

#### Ending an active call



(i) On some mobile phones, the call on hold is activated as soon as the active call is ended.

# Accepting/rejecting a waiting call

### Requirements:

There is an active call (→ page 333).

If you receive a call while already in a call, a message is displayed.

Depending on the mobile phone and network operator you will hear a call-waiting sound. In addition, in two phone mode you will hear an acoustic signal when the call goes through to the other (not yet active) mobile phone.



The incoming call is active.

If only one mobile phone is connected with the multimedia system, the previous call will be put on hold.

If during a call you accept a call with the other mobile phone when in two phone mode then the existing call is ended.



(i) This function and behaviour depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

#### Contacts

#### Information about the contacts menu

The contacts menu contains all contacts from existing data sources, e.g. mobile phone or memory card.

Depending on the data source, you have the following number of contacts:

- Permanently saved contacts: 3,000 entries
- Contacts loaded from the mobile phone: 5,000 entries per mobile phone

From the contacts menu, you can perform the following actions:

- Make a call, for example call a contact  $(\rightarrow page 336)$
- Navigation (→ page 298)
- Compose messages (→ page 339)
- Additional options(→ page 336)

If a mobile phone is connected to the multimedia system (→ page 330) and automatic call up (→ page 335) is activated, the mobile phone's contacts are displayed in the address book.

The multimedia system can show suggestions based on frequently used contacts as well as incoming and outgoing calls. ( $\rightarrow$  page 269). These are shown at the top of the contact list.

# Downloading mobile phone contacts Multimedia system:



## Automatically



#### Manually



Select Synchronise contacts.

# Calling up contacts

Multimedia system:



The following options can be used to search for contacts:

- · searching by initials
- searching by name
- · searching by phone number
- Enter characters into the search field.
- Select the contact.

A contact can contain the following details:

- phone numbers
- navigation addresses
- · geo-coordinates
- Internet address
- E-mail address
- Voice Tag (if set)
- Relation (if set)

# Editing the format of a contact's name

Multimedia system:

→ ☐ → Telephone → ☐ → General settings ▶ Name format

The following options are available:

- Surname, first name
- · Surname First name
- First name Surname
- Select an option.

# Overview of importing contacts

# **Contacts from various sources**

Source	Requirements:
USB device	The USB device is connected with the USB port.
Bluetooth® connection	If the sending of vCards via Bluetooth® is supported, vCards can be received on mobile phones or netbooks, for example.  Bluetooth® is activated in the multimedia system and on the respective device (see the manufacturer's operating instructions).

# Importing contacts into the contacts menu Multimedia system:

Select an option.

# Saving a mobile phone contact

Multimedia system:

Telephone > 1

Select in the line of the mobile phone contact.

- ► Select ···..
- ➤ Select Save in vehicle.
- Select Yes.

The contact saved in the multimedia system

is identified by the symbol.

# Calling a contact

Multimedia system:

- → ☐ → Telephone → 🔼
- ► Select Search contacts .

- Enter characters into the search field.
- Select the contact.
- Select the telephone number. The number is dialled.

# Selecting further options in the contacts menu

Multimedia system:

- → 🙀 >> Telephone >> 🔼
- ➤ Select → in the line of the contact.
- ► Select •••.

Depending on the stored data, the following options are available:

- Add voice tag/Delete voice tag
- Set relationship/Remove relationship
- Send DTMF tones (for a number with DTMF tones)

The function is available when a call is active.

Select an option.

## Selecting options for suggestions in the contacts menu

# Requirements:

- a profile has been created (→ page 265).
- the Allow contact suggestions setting is switched on ( $\rightarrow$  page 269).

# Multimedia system:



The following options are available:

· Save as favourite

The suggestions are saved as global favourites and do not appear on the home screen.

- Do not suggest
- Select an option.

# **Deleting contacts**

### Requirements:

- The contacts are saved in the vehicle.
- To delete an individual contact, this has been imported manually into the vehicle.

# Multimedia system:

→ Telephone

## **Deleting all contacts**

- Select .
- Select General settings.
- Select Delete contacts >.
- Select an option.

### Deleting a contact

- Select \( \rightarrow \) in the line of the contact.
- Select ···.
- Select Delete contacts.
- Select Yes.

# Saving a contact as a favourite

Multimedia system:

- → 🔝 **>>** Telephone **>>** (+) Add favourite
- Select a contact.
- Select in the line of the contact.
- Select the telephone number. The contact is stored as a favourite on the home screen.

# **Deleting favourites**

Multimedia system:

- → ☐ > Telephone
- Select a favourite on the home screen.
- Press and hold the favourite.
- Select Delete.
- Select Yes.

#### **Deleting all favourites**

- Select 🔼 .
- Select Device settings.
- Select Delete all favourites.
- Select OK.

#### **Call list**

#### Overview of the call list

Depending on whether your mobile phone supports the PBAP Bluetooth® profile or not, this can have different effects on the presentation and functions of the call list.

If the PBAP Bluetooth® profile is supported, the effects are as follows:

- The call lists from the mobile phone are displayed in the multimedia system.
- When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If the PBAP Bluetooth<sup>®</sup> profile is not supported, the effects are as follows:

- The multimedia system generates a call list independently as soon as calls are made in the vehicle.
- The call list is not synchronised with the call lists in the mobile phone.

The multimedia system can show suggestions based on frequently used contacts as well as

incoming and outgoing calls ( $\rightarrow$  page 269). These are shown at the top of the call list.

# Making a call from the call list

Multimedia system:



Select an entry. The call is made.

# Calling up additional options in the call list Multimedia system:



➤ Select in the line of an entry. The following options are available:

- Open Contact (if the contact is saved)
- Send message

# Selecting options for suggestions in the call list

#### Requirements:

- A profile has been created (→ page 265).
- The Allow contact suggestions setting is switched on (→ page 269).

# Multimedia system:



- Save as favourite
- Do not suggest
- Select an option.

# Deleting the call list

Multimedia system:

→ Telephone → Device settings

- Select Delete call lists.
- Select Yes.
- (i) This function is only available if your mobile phone does not support the PBAP Bluetooth® profile.

# Text messages

#### Overview of message functions

In the messages menu you can receive and send text messages.

If the connected mobile phone supports the Bluetooth® MAP profile, the message function can be used on the multimedia system.

You can obtain further information about settings and supported functions of Bluetooth®capable mobile phones from a Mercedes-Benz service centre or at: http://www.mercedesbenz.com/connect

Some mobile phones require further settings after being connected to the multimedia system (see manufacturer's operating instructions).

## Configuring displayed messages

Multimedia system:

→ Telephone → Messages

Select 🙍 .

The following options are available:

- All messages
- New and unread messages
- Messages while the vehicle is in motion
- · Off (the message function is no longer available.)
- Select a setting.

# Reading messages

Multimedia system:

- Select a contact.

The messaging history with this contact is shown.

# Reading a text message

Select a message.

## Using the read-aloud function

Select a message.



The message is read aloud.

# Dictating and sending a new message

# Requirements:

There is an Internet connection.

Multimedia system:





Select a new message.

# Adding a recipient

- Select (+).
- Select a contact.

# Dictating text

Select

The dictating function is started.

Say the message. After the voice message has been processed, it is shown as text.

# Sending a message



(i) When the vehicle is stationary you can use the keyboard to write a message. No Internet connection is required to use the keyboard.

# Replying to a message in the messaging history

Multimedia system:



Select a contact.

The messaging history opens.

Dictate the text and send the message (→ page 339).

# Using templates

Multimedia system:



Select Messages.

Select

# Using a template as a new message

in the menu for a new message. Select a template.

## Answering a message with a template

- Select a message sequence with a contact.
- ➤ Select ► .
- Select a template.

# Forwarding a message

Multimedia system:



- Select a contact.
- Select a message.
- Select ···.
- ► Select Forward.

# Calling a message sender

Multimedia system:



- Select a contact.
- Select ....
- ► Select Call.

# Using telephone numbers or URLs from a text message

# Requirements:

• An Internet connection is required to call up a URL.

#### Multimedia system:

→ Telephone → Messages

- Select a contact.
- Select a message.
- Select a telephone number or a URL in the

If a URL is selected the web browser opens. If a telephone number is selected the following options are available:

- Call
- Write new text message
- Select an option.

# Deleting a message

Multimedia system:

→ Telephone → Messages

- Select a contact.
- Select a message.
- Select ···.
- To delete the message: select Delete.

## In Car Office

#### "In Car Office" functions

Using "In Car Office", you can connect your online services with the multimedia system.

The following functions are available:

- · Display of upcoming meetings in the calen-
- Selection of a meeting as a destination in the navigation
- Display of upcoming telephone conferences
- Display of participants in a telephone confer-
- · Display and selection of calls to be made
- (i) Please note that certain functions are only available when the vehicle is stationary.

#### Calling up In Car Office

#### Requirements:

- · A mobile phone is connected to the multimedia system as the main telephone.
- You have a user account on the website from Mercedes me (http://www.mercedes.me).

- The "In Car Office" service is activated in the Mercedes me portal.
- You have a user account with an online service, for example Office 365.
- Select In Car Office. You will see an appointments overview for the current day.

You can find the following displays in the appointments overview:

- All day: all-day appointment
- · Lightning: appointment clash

## Selecting a calendar entry function in "In Car Office"

Multimedia system:



Select an appointment.

The following functions are available:







- × Reject
- Select a function.

# **Selecting the functions of Tasks & Calls** Multimedia system:

→ 🔝 ➤ In Car Office ➤ Tasks & calls

Select an entry.

The following functions are available:

- Read aloud
- No translation
- Call

This option is only available for calls.

- Delete
- Select an option.

# Apple CarPlay™

# Overview of Apple CarPlay™

▲ WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

iPhone<sup>®</sup> functions can be used via the multimedia system using Apple CarPlay™. They are operated using the touchscreen, touchpad, Touch

Control or the Siri® voice-operated control system. You can activate the voice-operated control system by pressing and holding the  $\to$  button on the multifunction steering wheel.

When using Apple CarPlay<sup>TM</sup> via the voice-operated control system, the multimedia system can still be operated via LINGUATRONIC ( $\rightarrow$  page 240).

Only one mobile phone at a time can be connected via Apple CarPlay™ to the multimedia system. Also for use of Apple CarPlay™ with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The availability of Apple CarPlay $^{\text{TM}}$  may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

# Information on Apple CarPlay™

When Apple CarPlay™ is being used, the iPod® media source is not available for the respective iPhone®.

Only one route guidance can be active at a time. If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

# Connecting an iPhone<sup>®</sup> via Apple CarPlay™

### Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- The full range of functions for Apple Car-Play™ is only available with an Internet connection.
- Connect the iPhone® to the USB port 🗀 on the multimedia system using a suitable cable ( $\rightarrow$  page 365).

### Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

Select Accept & start.

(i) When the Apple CarPlay™ connection is active, you can switch Start automatically on or off.

# **Exiting Apple CarPlay™**

- Press the 命 button.
- (i) If Apple CarPlay™ was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay™ in the main menu.

## Calling up Apple CarPlay™ sound settings

Select Smartphone under the application.

## Ending Apple CarPlay™

Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

# Android Auto

#### Android Auto overview

▲ WARNING Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system. Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. It is operated

using the touchscreen or the voice-operated control system. You can activate the voice-operated control system by pressing and holding the button on the multifunction steering wheel.

When using Android Auto via the voice-operated control system, the multimedia system can still be operated via LINGUATRONIC (→ page 240).

Only one mobile phone at a time can be connected via Android Auto to the multimedia system. Also for use of Android Auto with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The availability of Android Auto and Android Auto Apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

#### Information on Android Auto

If a mobile phone is used with Android Auto, USB access using the media menu is not possible for this mobile phone. Only one route guidance can be active at a time. If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

# Connecting a mobile phone via Android Auto Requirements:

- The first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary for safety reasons.
- The mobile phone supports Android Auto from Android 5.0.
- The Android Auto app is installed on the mobile phone.
- In order to use the telephone functions, the mobile phone must be connected to the multimedia system via Bluetooth<sup>®</sup> (→ page 330).
   If there was no prior Internet connection, this is established with the use of the mobile phone with Android Auto.
- The mobile phone is connected to the multimedia system via the USB port ☐☐☐ using a suitable cable (→ page 365).

 The full range of functions for Android Auto is only possible with an Internet connection.

Multimedia system:

¬→ Smartphone → Android Auto

# Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

- Select Accept & start.
- (i) When the Android Auto connection is active, you can switch Start automatically on or off.

## **Exiting Android Auto**

- Press the 命 button.
- (i) If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto in the main menu.

# Calling up the Android Auto sound settings

Select Smartphone

under the applica-

### **Ending Android Auto**

Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

# Transferred vehicle data with Android Auto and Apple CarPlay™

#### Overview of transferred vehicle data

When using Android Auto or Apple CarPlay™, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

The following system information is transmitted:

- Software release of the multimedia system
- System ID (anonymised)

The transfer of this data is used to optimise communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset ( $\rightarrow$  page 289).

The following driving status data is transmitted:

- Transmission position engaged
- Distinction between parked, standstill, rolling and driving
- Day/night mode of the instrument cluster

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

This data is only transferred while the navigation system is active, in order to improve it (e.g. so it can continue functioning when in a tunnel).

#### Mercedes me connect

#### Information on Mercedes me connect

Mercedes me connect provides the following

- · Accident and breakdown management (me button or automatic accident or breakdown detection)
- · Concierge Service (when the service is activated), appointment requests or similar (me button)
- Mercedes-Benz emergency call system (SOS button)

Mercedes me connect accident and breakdown management, the Mercedes me connect Concierge Service and the Mercedes-Benz emergency call centre are available for you around the clock.

The me button and the emergency call system can be found on the vehicle's overhead control panel ( $\rightarrow$  page 346).

You can also call the Mercedes-Benz Customer Centre using the multimedia system (→ page 346).

Please note that Mercedes me connect is a Mercedes-Benz service. In emergencies, always call the national emergency services first using the standard national emergency service phone numbers. In emergencies, you can also use the Mercedes-Benz emergency call system  $(\rightarrow page 349)$ .

Further information on Mercedes me connect, the provided service scope and operation: http://manuals.daimler.com/baix/cars/connectme/de DE/index.html

# Calling the Mercedes-Benz Customer Centre using the multimedia system

# Requirements for using Mercedes me connect services in the vehicle:

- You have access to a GSM network.
- The contract partner's GSM network coverage is available in the respective region.

 The ignition must be switched on so that vehicle data can be transferred automatically.

#### Multimedia system:

→ 🔝 >> Telephone >> 👪


Call Mercedes me connect.

After confirmation, the multimedia system sends the required vehicle data.

The data transfer is shown in the multimedia system display. Then, you can select a service and be connected to a specialist at the Mercedes-Benz Customer Centre.

Further information on Mercedes me connect, the provided service scope and operation are available at: http://manuals.daimler.com/baix/cars/connectme/en\_GB/index.html

# Making a call via the overhead control panel

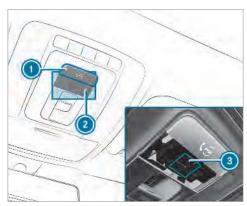

- Service call button (me button)
- SOS button cover
- SOS button
- To make a service call: press me button
  - **1**

- To make an emergency call: press SOS button cover 2 briefly to open.
- ▶ Press and hold SOS button ③ for at least one second.

If a service call is active, an emergency call can still be triggered. This has priority over all other active calls.

#### Information about the service call using the me button

A call to the Mercedes-Benz Customer Centre has been initiated via the me button in the overhead control panel or the multimedia system.

In the event of a breakdown, you will get sup-

· A qualified Mercedes-Benz technician carries out repairs on site and/or the vehicle will be towed to the nearest Mercedes-Benz service centre.

You may be charged for these services.

You can find information on the following topics:

- · Activation of Mercedes me connect
- Operating the vehicle

- Nearest Mercedes-Benz service centre
- · Other products and services from Mercedes-Benz

Data is transmitted during the connection to the Mercedes-Benz Customer Centre (→ page 348).

## Information on Mercedes me connect accident management

The Mercedes me connect accident management is an extension of the Mercedes-Benz emergency call system ( $\rightarrow$  page 349).

An emergency call is made to the Mercedes-Benz emergency call centre after an accident:

- · A voice connection is made to a contact person at the Mercedes-Benz emergency call
- If necessary, the contact person at the Mercedes-Benz emergency call centre forwards the call to Mercedes me connect accident management.
- If necessary, the vehicle will be towed to a Mercedes-Benz service centre.

If the vehicle detects a minor accident, a message appears in the multimedia system.

The message is confirmed in the multimedia sys-

- A voice connection is made to a contact person at Mercedes me connect accident man-
- If necessary, the vehicle will be towed to a Mercedes-Benz service centre.

## Mercedes me connect service message

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz Customer Centre. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds vou after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

To arrange a service appointment: select Call.

After your agreement the vehicle data is sent and a Mercedes-Benz Customer Centre employee deals with your appointment. The information is then sent to your desired service outlet.

This service outlet will then contact you within 24 hours.

i If you select Later after the service message appears, the message is hidden and reappears after a certain period of time.

# Consenting to data transfer for Mercedes me connect

## Requirements:

- There is an active service call via the multimedia system or the me button in the overhead control panel (→ page 346).
- (i) In certain countries you must confirm the data transfer.

If the accident and breakdown service and Mercedes me connect Concierge Service are not activated on Mercedes me, the Do you want to transmit vehicle data and the vehicle's position to the Mercedes-Benz Customer Centre in order to improve the processing of your request? message appears.

 Select Yes.
 Relevant identification data is transmitted automatically.

More information on Mercedes me: http://www.mercedes.me

# Transferred data during a service call

When you make a service call via Mercedes me connect, various data will be transmitted.

Depending on which service is activated, the following data is transmitted when a call is made:

- Vehicle identification number
- Mercedes me customer identification number
- Reason for the initiation of the call
- Language set in the multimedia system
- Confirmation of the data protection prompt
- Current vehicle location

- Service and workshop code
- Selected data about the status of the vehicle

The following data is transmitted if no service is activated and the data protection prompt has been confirmed:

- · Vehicle identification number
- Mercedes me customer identification number
- Reason for the initiation of the call
- Language set in the multimedia system
- Confirmation of the data protection prompt

The following data is transmitted if the data protection prompt has been rejected:

- · Reason for initiating the call
- Rejection of the data protection prompt

#### Mercedes me and apps

#### Information about Mercedes me

When you log in with a user account to the Mercedes me portal, then services and offers from Mercedes-Benz will be available to you.

Availability is country-dependent.

For more information consult a Mercedes-Benz service centre or visit the Mercedes me portal: http://me.secure.mercedes-benz.com

## Calling up the Mercedes me user account Multimedia system:

→ Mercedes me & Apps

### Your vehicle is connected with a user account

Select Mercedes me. Information about the connected user account appears.

## Your vehicle is not yet connected with a user account

- Select Mercedes me.
- ► The instructions for creating a user account and connecting the vehicle with this follow on the multimedia system display.
- (i) If the Mercedes me app is available on a mobile phone, the vehicle connection can be accomplished using the QR code shown.

# Calling up the Mercedes me services

### Requirements:

• The vehicle is connected with the user account.

#### Multimedia system:

→ Mercedes me & Apps

Select Services.

Within the various categories you can see the Mercedes me services you have already purchased and also those still available to purchase.

To activate or deactivate the services, log in to your user account in the Mercedes me portal.

### Deleting a connection between a user account and the vehicle

Multimedia system:

→ Mercedes me & Apps ➤ Mercedes me

- ► Select Delete vehicle assignment.
- Enter the PIN of the connected user account.

## Mercedes-Benz emergency call system

# Information on the Mercedes-Benz emergency call system

The Mercedes-Benz emergency call system only functions in areas where mobile phone coverage is available from the relevant contract partner. Insufficient network coverage from the relevant contract partner may result in an emergency call not being transmitted.

The ignition must be switched on before an automatic emergency call can be made.

# Overview of the Mercedes-Benz emergency call system

The Mercedes-Benz emergency call system can help to decisively reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access.

The emergency call can be made automatically (→ page 350) or manually . Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

# Notification in the multimedia system display:

SOS NOT READY: the ignition is not on or there is a malfunction with the emergency call system.

As soon as the emergency call system is available, the notification disappears.

During an active emergency call, **Sos** appears in the display.

You can find more information on the regional availability of the Mercedes-Benz emergency call system at: http://www.mercedes-benz.com/connect\_ecall.

i If an emergency call is unavailable, a message to this effect also appears in the multifunction display of the instrument cluster.

# Triggering an automatic emergency call Requirements:

- The ignition is switched on.
- The starter battery is sufficiently charged.

If restraint systems such as airbags or seat belt tensioners have been activated after an accident, the Mercedes-Benz emergency call system may automatically initiate an emergency call.

The emergency call has been made:

- A voice connection is made to the Mercedes-Benz emergency call centre.
- A message with accident data is transmitted to the Mercedes-Benz emergency call centre.
   The Mercedes-Benz emergency call centre can transmit the vehicle position data to one of the public emergency services call centres.
- Under certain circumstances data is also transmitted in the voice channel to the Mercedes-Benz emergency call centre.

This allows measures for rescue, recovery or towing to a Mercedes-Benz service centre to be initiated quickly.

If your vehicle is equipped with an SOS button in the overhead control panel, it flashes until the emergency call has been completed.

It is not possible to immediately end an automatic emergency call.

If the Mercedes-Benz emergency call system cannot connect to the Mercedes-Benz emergency call centre, the emergency call is automatically sent to the public emergency services call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the display.

Dial the emergency number 999 or **112** on your mobile phone.

If an emergency call has been initiated:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call centre operator.
- On the basis of the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

# Triggering a manual emergency call

If the vehicle has an SOS button in the overhead control panel: press and hold the button for at least one second.

The emergency call has been made:

- · A voice connection is made to the Mercedes-Benz emergency call centre.
- If the road and traffic conditions permit. remain in the vehicle until a voice connection is established with the emergency call centre operator.
- On the basis of the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- A message with accident data is transmitted to the Mercedes-Benz emergency call centre. The Mercedes-Benz emergency call centre can transmit the vehicle position data to one of the public emergency services call cen-
- · In certain situations data is also transmitted in the voice channel to the Mercedes-Benz emergency call centre.

This allows measures for rescue, recovery or towing to a Mercedes-Benz Service Centre to be initiated quickly.

If the Mercedes-Benz emergency call system cannot connect to the Mercedes-Benz emergency call centre, the emergency call is automatically sent to the public emergency services call centre.

If no connection can be made to the public emergency services, a corresponding message appears in the display of the multimedia system.

Dial the emergency number 999 or **112** on your mobile phone.

# Transmitted data with the Mercedes-Benz emergency call system

In the event of an automatic or manual emergency call, as well as for a 112 emergency call, data is transmitted to the Mercedes-Benz emergency call centre or the public emergency services call centre.

The following data is transmitted:

the vehicle's GPS position data

- the last GPS position data on the route (a few 100 metres before the incident)
- · direction of travel
- · vehicle identification number
- the vehicle drive type
- the estimated number of people in the vehicle
- · whether Mercedes me connect is available or
- · whether the emergency call was initiated manually or automatically
- the time of the accident
- the language setting on the multimedia system

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- the current vehicle position can be called up
- a voice connection to the vehicle occupants can be established

(i) For Russia: various functions, e.g. receiving traffic information, cannot be performed for up to two hours after sending an emergency call.

# Self-diagnosis display of the emergency call system (Russia)

Your car verifies the operability of the emergency call system each time the ignition is ON. In case of system failure, you will be informed with text message on the instrument cluster and with red indicator SOS NOT READY on the multimedia display.

Please, make sure, that during 3-10 seconds after switching ignition ON the red indicator SOS NOT READY in the upper right corner of the multimedia display is switched OFF, this means the emergency call system passed diagnostics successfully. If necessary, switch ON the multimedia display, if it was switched OFF before.

# Starting/ending ERA-GLONASS test mode (Russia)

# Requirements:

• The starter battery has sufficient charge.

- the ignition is switched on.
- The vehicle has been stationary for at least one minute.
- To end the test mode manually: switch off the ignition. The test mode is ended.

The test mede is ended

# Online and Internet functions Internet connection

#### Information on connecting to the Internet

A

**WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle

when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

To use Mercedes-Benz Apps and access the Internet, Mercedes me connect must be activated and operational. Furthermore, Mercedes me connect must be activated for Internet access.

Depending on the vehicle's equipment, you can establish an Internet connection in the following ways:

 Vehicles with a communication module: Internet use including Mercedes me connect services and data roaming (→ page 353).

#### · Vehicles without a communication module:

- via Bluetooth® with a data-enabled mobile phone ( $\rightarrow$  page 353)
- via Wi-Fi with a data-enabled mobile phone ( $\rightarrow$  page 353)
- via business telephony

The Internet functions can only be used to a limited degree whilst driving.

# Internet connection via communication mod-

On vehicles with a built-in communication module, the Internet connection is established via an integrated SIM card.

If the data volume limit is reached, the availability of Mercedes me connect services is limited. The data volume must be purchased on Mercedes me connect.

# Setting up an Internet connection via Wi-Fi

# Requirements:

• the Wi-Fi function is activated on the multimedia system ( $\rightarrow$  page 284).

- · the Wi-Fi function is activated on the mobile phone (see the manufacturer's operating instructions).
- Internet access via Wi-Fi is activated (see the manufacturer's operating instructions).

The Internet connection via Wi-Fi is restricted or does not function if:

- the mobile phone is switched off
- mobile data use is deactivated on the mobile phone
- the Wi-Fi function is deactivated on the multimedia system
- the Wi-Fi function is deactivated on the mobile phone
- Internet access via Wi-Fi is deactivated on the mobile phone

#### Multimedia system:

→ Settings → System → Wi-Fi & Bluetooth ▶ Internet settings ▶ Connect via Wi-Fi

Select the network.

Log in to the Wi-Fi network (→ page 284).

# Setting up an Internet connection via Bluetooth®

#### Requirements:

- The mobile phone support the Bluetooth® profile PAN (Personal Area Network)
- The mobile phone is connected to the multimedia system via Bluetooth<sup>®</sup> ( $\rightarrow$  page 330).

The Internet connection via Bluetooth® is restricted or does not function if:

- the mobile phone is switched off
- the mobile phone is connected a an additional mobile phone
- the mobile phone network coverage is insuf-
- mobile data use is deactivated on the mobile phone
- the Bluetooth® function on the multimedia system is switched off and the mobile phone is to be connected via Bluetooth®

- the Bluetooth<sup>®</sup> function is switched off on the mobile phone and the mobile phone is to be connected via Bluetooth<sup>®</sup>
- neither the mobile phone network nor the mobile phone allow simultaneous use of a telephone and an Internet connection
- the mobile phone has not been enabled for Internet access via Bluetooth<sup>®</sup>

If a mobile phone is connected to the multimedia system for the first time via Bluetooth<sup>®</sup>, you will be assisted through the process of setting up an Internet connection.

The Internet connection can also be configured manually.

Further information can be obtained at http:// www.mercedes-benz.com/connect or from a Mercedes-Benz service centre.

### Multimedia system:

Select the mobile phone.
The Internet connection is established.

# Establishing an automatic Internet connection

Multimedia system:

- Highlight the mobile phone.
- Select .

Activate Permanent Internet connection.

# Cancelling Internet access permission for a mobile phone

Multimedia system:

- ► Select in the line of the mobile phone.
- Select Delete configuration.
- Select Yes.

# Displaying mobile phone details

Multimedia system:

→ ♠ Settings → System → Wi-Fi & Bluetooth → Internet settings

- ➤ Select > in the line of the mobile phone.
- Select Details.

# **Establishing an Internet connection** Multimedia system:

→ Mercedes me & Apps

► For example, select Free Browser.

(i) The multimedia system usually establishes the Internet connection automatically. If the multimedia system is not connected to the Internet, the Internet connection is established when an Internet application is used.

## Setting automatic disconnection of the Internet connection

Multimedia system:

→ Settings → System → Wi-Fi & Bluetooth **▶** Internet settings

- ➤ Select → in the line of the mobile phone.
- Select Disconnect when inactive.

The following options are available:

- 5 minutes
- 10 minutes
- 20 minutes
- Unlimited
- Select an option.

#### **Connection status**

#### Connection status overview



 Display of existing connection and reception field strength of the communication module or of the connected Bluetooth® device

# Displaying the connection status

Multimedia system:

→ 🔝 >> Settings >> System >> Wi-Fi & Bluetooth

- Select Internet status.
- i When connected via Wi-Fi or a Bluetooth® device, the approximate data volume transmitted is displayed. The exact values can be requested from your mobile phone network provider.

#### Web browser

# Calling up a web page

**WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

# **356** MBUX (Mercedes-Benz User Experience)

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

# Multimedia system:

→ Mercedes me & Apps → Browser

# Calling up a new web page


- Select URL.
- Enter a web address.
- ► Select ok .
- i The function is country-dependent.

(i) Websites cannot be shown while the vehicle is in motion.

# Calling up a website from the browser history

To call up the previous or next page from the history: select ← or →.

# Web browser overview

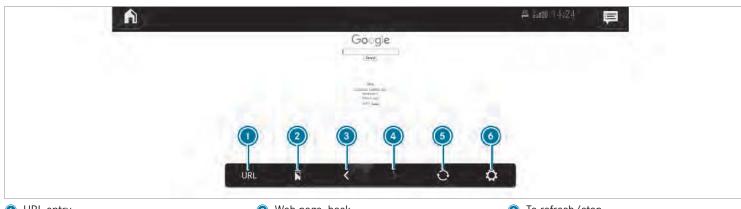

- URL entry
- 2 Bookmarks

- Web page, back
- 4 Web page, forwards

- To refresh/stop
- Options

# Calling up web browser options

Multimedia system:

→ Mercedes me &

Apps → Browser → ©

The following functions are available:

- Bookmarks
- Options with the settings:
  - Browser settings
  - Delete browser data
- Select an option.
- ► Change the settings.

# Calling up the web browser settings

Multimedia system:

The following functions are available:

- Block popups
- Enable Javascript
- Enable cookies

# **Deleting Internet history**

Multimedia system:

The following options are available:

- All
- Cache
- Cookies
- Entered URLs
- Select an option.
- Select Yes.

# Managing bookmarks

Multimedia system:



# Selecting a bookmark

Select an entry.

## Creating a bookmark

- Select Aktuelle Seite zu Lesezeichen hinzufügen (Add current page to the bookmarks).
- Enter a name.
- Select Bestätigen (Confirm).

# Editing a bookmark

- Select after a bookmark.
- Select Edit.
- Enter a name.
- ► Select Bestätigen (Confirm).

# Deleting a bookmark

- Select after a bookmark.
- Select Delete.
- Select Yes.

## Closing the browser

Multimedia system:



► Select 🖟 .

#### Internet radio

## Calling up Internet radio

#### Requirements:

 There is an account on http:// www.mercedes.me.

- The Internet radio service is activated.
- The data volume is available. Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.
- i The functions and services are countrydependent. For more information, consult a Mercedes-Benz service centre.

## Multimedia system:



- Select TuneIn Radio. The Internet radio menu appears. The last station set starts playing.
- i The connection quality depends on the local mobile phone reception.

## Internet radio overview



### Selecting and connecting to Internet radio stations

Multimedia system:

→ Radio → TuneIn radio

Select

- Select a category.
- Select a station.

The connection is established automatically.

- Select the search field.
- Enter a station name using the entry field.
- (i) A relatively large volume of data can be transmitted when using Internet radio.

#### Saving/deleting Internet radio stations as favourites

Multimedia system:

- → Radio → Tuneln radio
- Select a station.
- Select 🛨 .

The list of saved favourite stations appears.

Select Add to favourites.

or

Create an account for the online provider (TuneIn radio) and then log in on the multimedia system.

Your favourites are imported to the multimedia system.

#### **Deleting favourites**

- Select a station.
- Select 🛨 .
- Select Delete favourite.

## **Setting Internet radio options**

Multimedia system:

→ Radio → TuneIn radio → 🐧

- The following options are available:
- Select stream: select the stream quality. Login to TuneIn account: log in to your TuneIn user account.
- Log out of account: log out of your TuneIn user account.
- Select an option.

#### Showing the station list for the last category selected

Multimedia system:

→ Radio → TuneIn radio

Press the cover of the current station. Depending on how the station was selected, a station list is shown.

#### Media

#### Information about media mode

Information about supported formats and data storage media

**WARNING** Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the traffic conditions. This could also cause you to lose control of the vehicle.

Only handle a data storage medium when the vehicle is stationary.

# The multimedia system supports the following formats and data media:

Permissible file systems	FAT32, exFaT, NTFS
Permissible data carriers	USB devices, iPod®/iPhone®, MTP devices, Bluetooth® audio equipment
Supported formats:	Audio: MP3, WMA, AAC, WAV, FLAC, ALAC Video: MPEG, AVI, DivX, MKV, MP4, M4V, WMV

- The multimedia system supports a total of up to 50,000 files.
- Data storage media up to 2 TB are supported (32-bit address space).
- (i) Observe the following notes:
  - Due to the large variety of available music and video files regarding encoders, sampling rates and data transfer rates, playback cannot always be guaranteed.

- Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
- Videos up to FullHD (1920x1080) are supported.
- Copy-protected music and video files or DRM (Digital Rights Management) encrypted files cannot be played back.
- MP3 players must support Media Transfer Protocol (MTP).

# Information on copyright protection and trademarks

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection. In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder. Make sure that you know about the applicable copyright regulations and that you comply with these.



Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.



Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID and Playlist Plus are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

For DTS Patents, see http://patents.dts.com. Manufactured under licence from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and

the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

## Overview of the media menu



- Previous track or fast rewind
- Next track or fast forward
- 3 Album cover
- Active media source
- © Current track/track in the playback list
- 6 Active data storage medium

- Track title
- Artist
- Repeat
- Options (video mode only)
- Mathematical Additional options
- Controls playback

- Timeline
- Categories
- (5) Music search
- Random playback


## Connecting the data storage medium to the multimedia system

## Connecting USB devices

NOTE Damage caused by high temperatures

High temperatures can damage USB devices.

Remove the USB device after use and take it out of the vehicle.

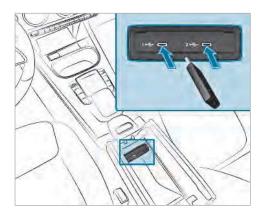

The multimedia connection unit is found in the stowage compartment under the armrest and has two USB ports. Depending on the vehicle's equipment, additional USB ports can be found in the stowage compartment of the centre console or rear folding compartment.

Connect the USB device to the USB port.

## Searching for and authorising Bluetooth® audio equipment

#### Requirements:

- Bluetooth® is activated on the multimedia system and audio equipment.
- The audio equipment supports the Bluetooth® audio profiles A2DP and AVRCP.
- The audio equipment is "visible" for other devices.

#### Multimedia system:



## Authorising new Bluetooth® audio equipment

- Select Connect new device. Detected equipment is displayed in the device list.
- Select an audio device. Authorisation starts. A code is displayed on the multimedia system and on the mobile phone.
- If the codes are identical, confirm on the audio equipment.

#### **366** MBUX (Mercedes-Benz User Experience)

Select Only as Bluetooth audio device. The Bluetooth® audio equipment is connected with the multimedia system.

# Connecting Bluetooth® audio equipment that has already been authorised

Select a Bluetooth® audio device from the list.
Establishing a connection.

#### Starting media playback

A data storage medium is connected to the multimedia system.

Multimedia system:

- → Media
- Select USB or Bluetooth as the media source.

## Controlling media playback

Multimedia system:

- → 🔝 ➤ Media
- To pause playback: select II.

► To continue playback: select ►.

To repeat a track: select

For the repeat function there are the following settings:

- Select once: the active playlist is repeated.
- Select twice: the current track is repeated.
- Select three times: the repeat function is deactivated.
- To play back tracks in random order:

select

- To wind a track forwards or backwards: tap on the desired point on the timeline.
- To select the next track: select ► |.
- ➤ To select the previous track: select | ◄.
- To scroll through tracks quickly: press and hold | ◄ or ► |.

To show the current track list: select the track image shown.

#### **Additional options**

Multimedia system:

→ Media

#### Calling up additional options

► Select ☆.
The additional options are shown.

The following options are available:

- Play similar tracks
  - Select during playback of a track in order to create a playlist with similar tracks
- Surprise mix

A playlist with randomly selected tracks is created.

Add to favourite songs

The current track is added to the favourite songs.

• Delete from favourite songs

The current track is removed from the favourite songs.

Select an option.

#### Media search

#### Information about the search function in categories

My Music you can search through all available media files. There are several categories available for selection. The categories shown depend on the connected device and data format.

Available categories with Bluetooth audio:

Current tracklist

The folders and categories of the connected device are shown.

Available categories with audio files:

- Current tracklist
- Playlists
- Folder

- Albums
- Artists
- Tracks
- Favourite songs
- Frequently played
- · Most recently added
- Mood (→ page 368).
- Music genres
- Year
- Composers
- Select by cover
- Podcasts (Apple<sup>®</sup> devices)
- Audiobooks (Apple<sup>®</sup> devices)

Available categories with video files:

- Folder
- Videos
- (i) The categories are available as soon as the entire media content has been read in and analysed.

## Starting a search in categories

Multimedia system:

→ Media → My Music

Select a category. The media files are shown corresponding to the selected category, e.g. all albums will be shown for the Albums category.

#### Sorting results shown or playing back all media found

- ► Select ···..
- To play back all results found in the category: select Play all.

If, for example, the album category is active, all albums found by the desired artist will be played back.

- ► To sort results alphabetically: select Sort from A-Z.
- To sort results in reverse alphabetical order: select Sort from Z-A.
- (i) The available options depend on the selected category and the connected device.

## Using the keyword search

Multimedia system:

→ Media → My Music

In the categories under My Music you can use the keyword search with free text input to look for content.

- Select a category.
- Select Search. A keyboard for character entry appears.
- Enter the term searched for.
- (i) The search begins with the first character entered. The more characters entered the more concrete the search results become.
- Select the desired entry from the result list. If the selected result is an album, song or a playback list then playback is started. If the

selected result is a new category then this is opened in the search.

### Searching for a track according to mood Multimedia system:

→ Media → My Music

Using the My Music search, you can find music tracks suitable for a mood.

Select Mood.

A grid with the following moods appears:

- Positive
- Calm
- Dark
- Energetic
- Pull the controller to the desired position. The system searches for tracks that are suitable for the mood entered.

## Making video settings

Multimedia system:

→ 🔝 >> Media >> 🔯

- Select Video settings.Select an aspect ratio.

## Setting full screen

▶ Select .

#### Radio

## Switching on the radio

Multimedia system:

→ Radio

Alternatively: press the RADIO MEDIA button. The radio display appears. You will hear the last station played on the last frequency band selected.

## Radio overview



- Active frequency band
- ② Station name or set frequency
- 3 Artist, title, album and radio text
- Options
- Full screen/DAB slideshow
- Mute function

- Station list
- Search

## Setting the frequency band

Multimedia system:

→ 🔝 **>>** Radio

Select a frequency band.

### Selecting a radio station

Multimedia system:

→ Radio

Swipe to the left or right on the control element.

## Calling up the radio station list

Multimedia system:

→ 🔝 >>> Radio

Select :=

The station list appears.

Select a station.

# Sorting station lists according to categories (only for FM/DAB)

- Select Category.
- Select a category.

# Searching for radio stations using station names or direct frequency entry

Multimedia system:

→ 🔝 **>>** Radio

Select .

- Select [>.
- Enter a station name or frequency.
- Select a station.

## Storing radio stations

Multimedia system:

- ¬→ 🔝 → Radio
- Select a radio station.

## Memory slots are available in station presets

► Select + .

## Replacing an entry in the station presets

- Press and hold on an entry in the station presets.
- Select Yes.

### **Editing station presets**

Multimedia system:

¬→ 🔝 Radio

### Moving stations:

- Press and hold a stored station.
- Select Move.
- Move the station to the new position.

#### **Deleting stations:**

- Press and hold a station.
- ► Select Delete.

#### Replacing a station:

Press and hold a station.

Select Replace radio station.

#### Calling up a slide show (FM/DAB radio mode)

Multimedia system:

→ Radio

The slide show displays additional information provided by the station as an image. This can include logos, album covers, music tracks, programmes, news or service information, for example.

► Select □ .

#### Activating or deactivating the frequency fix function

Multimedia system:

¬→ 😭 → Radio → 💍

Select Frequency fix to switch on or off. If the function is activated, the set frequency is kept even if the reception is poor.

#### Activating/deactivating traffic announcements

Multimedia system:

¬→ 🔝 >> Radio >> 💆

Switch Traffic announcements on or off.

#### Setting the traffic information service volume increase

Multimedia system:

→ Radio → Sound

Select Other sound settings.

- Select Navigation and traffic announce-
- Select TRAFFIC ANNOUNCEMENTS VOL-UME INCREASE.
- Set a value.
- ➤ To adopt the value: select < .</p>

#### Editing the voice tag function

Multimedia system:

→ 🔝 >> Radio >> 👣

- Select Voice tag.
- Select Hinzufügen (Add), Löschen (Delete) or Anhören (Listen to).

#### Displaying radio text

Multimedia system:

¬→ 🔝 → Radio → 💍

Switch Display radio text information on or off.

#### Sound

#### Tone settings

#### Information about the sound system

The sound system has a total output of 100 watts and is equipped with 6 speakers. It is available for all functions in the radio and media modes.

## Calling up the sound menu

Multimedia system:

→ Media → Sound

The following functions are available:

- Equaliser
- Balance and Fader
- Auto. volume adjustment
- Other sound settings
- Select a sound menu.

# Adjusting treble, mid-range and bass settings

Multimedia system:

- → Media → Sound
- ► Set TREBLE, MID or BASS.

# Activating/deactivating automatic volume adjustment

Multimedia system:

→ Media → Sound → ··· → A uto. volume adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

Switch Auto. volume adjustment on or off.

# Adjusting the balance/fader

Multimedia system:

- → Media → Sound
- Adjust the balance and fader.

## Burmester® surround sound system

# Information about the Burmester® surround sound system

The Burmester® surround sound system has a total output of 590 watts and is equipped with 12 speakers. It is available for all functions in the radio and media modes.

# Calling up the sound menu in the Burmester® surround sound system

Multimedia system:

→ Media → Burmester

The following functions are available:

- Soundsets
- Equaliser
- Sound focus
- · Automatic volume adjustment
- Select a function.

Adjusting the treble, mid and bass settings on the Burmester® surround sound system Multimedia system:

- → Media → Burmester
- ► Set TREBLE, MID or BASS.

## Activating/deactivating volume adjustment in the Burmester® surround sound system Multimedia system:

→ Media → Burmester → ··· ➤ Auto. volume adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

Activate or deactivate the function.

## Adjusting the balance/fader in the Burmester® surround sound system Multimedia system:

→ Media → Burmester

Adjust the balance and fader.

### Switching surround sound on/off in the Burmester® surround sound system Multimedia system:

→ Media → Burmester → ((5.1)) S urround sound

Select Pure or Surround.

## Adjusting the sound focus in the Burmester® surround sound system

Multimedia system:

→ Media → Burmester → SF

Select a position for the sound focus or All seats.

#### Advanced sound system

#### Information about the Advanced sound system

The Advanced sound system has a total output of 225watts and is equipped with 10 speakers. It is available for all functions in the radio and media modes.

## Calling up the sound menu in the Advanced sound system

Multimedia system:

→ Media → Sound

The following functions are available:

- Equaliser
- Balance and Fader
- Auto. volume adjustment

- Other sound settings
- Select a function.

Adjusting treble, mid-range and bass settings in the Advanced sound system Multimedia system:

- → Media → Sound → Equaliser
- ► Set TREBLE, MID or BASS.

Switching volume adjustment in the Advanced sound system on/off Multimedia system:

→ Media → Sound → ··· → A uto. volume adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

Switch Auto. volume adjustment on or off.

## Setting the balance/fader in the Advanced sound system

Multimedia system:

→ Media → Sound

Adjust the balance and fader.

## **ASSYST PLUS service interval display**

## Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display in the instrument display provides information on the remaining time or distance before the next service due date.

You can hide this service message using the back button on the left-hand side of the steering wheel.

You can obtain further information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.

#### Displaying the service due date

On-board computer:

¬→ Service → ASSYST PLUS

The next service due date is displayed.

To exit the display: press the back button on the left-hand side of the steering wheel. Be sure to observe the following related topic:

· Operating the on-board computer  $(\rightarrow page 229)$ .

#### Carrying out maintenance work at regular intervals

**NOTE** Premature wear through failure to observe service due dates

Service work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- Always observe the prescribed service intervals.
- ► Always have the prescribed service work carried out at a qualified specialist workshop.

#### Special service requirements

The prescribed service interval is based on normal operation of the vehicle. Maintenance work will need to be performed more often if the vehicle is operated under arduous conditions or increased loads.

Examples of arduous operating conditions:

- · regular city driving with frequent intermediate stops
- mainly short-distance driving
- frequent operation in mountainous terrain or on poor road surfaces
- · when the engine is often left idling for long periods
- operation in particularly dusty conditions and/or if air-recirculation mode is frequently used

In these or similar operating conditions, have the interior air filter, engine air cleaner, engine oil and oil filter etc. changed more frequently. The tyres must be checked more frequently if the vehicle is operated under increased loads. Further information can be obtained at a qualified specialist workshop.

#### **Battery disconnection periods**

The ASSYST PLUS service interval display can only calculate the service due date when the battery is connected.

Note down the service due date displayed on the instrument display before disconnecting the battery ( $\rightarrow$  page 374).

## Engine compartment

**Active bonnet (pedestrian protection)** 

#### Operation of the active bonnet (pedestrian protection)

In certain accident situations, the risk of injury to pedestrians can be reduced by the actuation of the active bonnet. The rear area of the engine bonnet is raised by approximately 70 mm.

For the drive to the workshop, reset the triggered active bonnet yourself. After the active bonnet has been triggered, pedestrian protection may be limited.

A qualified specialist workshop must re-instate the full functionality of the active bonnet.


The active bonnet is not available in all countries.

#### Resetting the active bonnet

**WARNING** Danger of burns from hot component parts in the engine compart-

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Let the engine cool down and only touch the component parts described below:

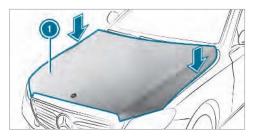

- With your hand flat, push down active bonnet in the area around the hinges on both sides (arrows). In doing so, the actuator is depressurised and you may hear a hissing sound. The engine bonnet must engage in position.
- If the active bonnet can be raised slightly at the rear in the area of the hinges, repeat the step until it engages correctly.



**WARNING** Risk of accident due to driving with the engine bonnet unlocked

An unlocked engine bonnet may open up when the vehicle is in motion and block your view.

- Never unlock the engine bonnet when driving.
- Before every trip, ensure that the engine bonnet is locked.

**WARNING** Risk of accident and injury when opening and closing the engine bonnet

When opening or closing the engine bonnet, it may suddenly drop into the end position.

There is a risk of injury for anyone in the engine bonnet's range of movement.

Only open or close the engine bonnet when there are no persons in the engine bonnet's range of movement. **WARNING** Danger of burns when opening the bonnet

If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the bonnet, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

**WARNING** Risk of injury due to moving parts

Certain components in the engine compartment may continue to move or suddenly move again even after the ignition has been switched off, e.g. the cooler fan.

Make sure of the following before performing tasks in the engine compartment:

Switch the ignition off.

- Never touch the danger zone surrounding moving component parts, e.g. the rotation area of the fan.
- ▶ Remove jewellery and watches.
- Keep items of clothing and hair away from moving parts.

**WARNING** Risk of injury from touching component parts under voltage

The ignition system and the fuel injection system work under high voltage. If you touch component parts which are under voltage, you could receive an electric shock.

Never touch components of the ignition system or the fuel injection system when the ignition is switched on.

▲ WARNING Danger of burns from hot component parts in the engine compartment


Certain component parts in the engine compartment may be very hot, e.g. the engine,

the radiator and parts of the exhaust system.


- Let the engine cool down and only touch the component parts described below:
- **WARNING** Risk of injury from using the windscreen wipers while the engine bonnet is open

When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.

Always switch off the windscreen wipers and ignition before opening the engine bonnet.

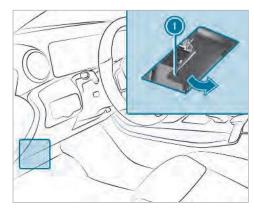

► To open: pull lever 1 to release the engine bonnet.

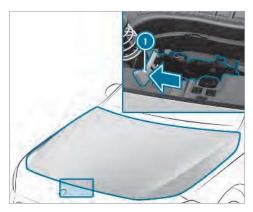

- Push the yellow handle of the bonnet catch to the left as far as it will go and lift the bonnet until it is automatically raised by the pneumatic strut.
- To close: lower the bonnet and let it fall from a height of approximately 20 cm.
- If the bonnet can still be lifted slightly, open the bonnet again and close it with a little force until it engages correctly.

#### Engine oil

#### Checking the engine oil level with an onboard computer

The engine oil level is determined during driving. The oil level display is only available after a driving time of up to 30 minutes and if the ignition is switched on, depending on the driving profile.

It is not possible to correctly measure the oil level if:

- the vehicle is not level during the measuring
- the bonnet was previously opened.

The engine must be restarted and the engine oil level will be determined again when driving.

On-board computer:

→ Service → Engine oil level:

#### You will see one of the following messages in the multifunction display:

► Engine oil level Measuring now: measurement of the oil level is not yet possible. Repeat the request after a maximum of 30 minutes' driving.

- Engine oil level OK and the bar display for indicating the oil level in the multifunction display is green and is between "min" and "max": the oil level is correct.
- Engine oil level Add 1.0 I and the bar display for indicating the oil level in the multifunction display is orange and is below "min": top up with 1 I of engine oil.
- Reduce engine oil level and the bar display for indicating the oil level in the multifunction display is orange and is above "max": drain off the excess engine oil. Consult a qualified specialist workshop.
- For engine oil level turn on ignition: switch on the ignition to check the engine oil level.
- Engine oil level System inoperative: sensor faulty or not inserted. Consult a qualified specialist workshop.
- Engine oil level System currently unavail.: close the bonnet.

## Topping up engine oil

**WARNING** Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Let the engine cool down and only touch the component parts described below:

**WARNING** Risk of fire and injury from engine oil


If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

- Make sure that no engine oil is spilled next to the filler opening.
- Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.

- **NOTE** Engine damage caused by an incorrect oil filter, incorrect oil or additives
- Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- ▶ Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- ► Follow the instructions in the service interval display regarding the oil change.
- **NOTE** Damage caused by topping up too much engine oil

Topping up too much engine oil can cause damage to the engine or the catalytic converter.

► Have excess engine oil removed at a qualified specialist workshop.

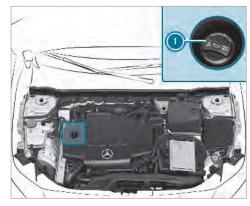

- Turn cap (1) anti-clockwise and remove it.
- Top up the engine oil.
- Replace cap 1 and turn it clockwise as far as it will go.
- ► Check the oil level again Checking the engine oil level with an on-board computer( $\rightarrow$  page 378).

## Checking the coolant level

**WARNING** Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.


Let the engine cool down and only touch the component parts described below:

WARNING Risk of scalding from hot coolant

The engine cooling system is pressurised, particularly when the engine is warm. If you open the cap, you could be scalded by hot coolant spraying out.

- Let the engine cool down before opening the cap.
- ► When opening the cap, wear gloves and safety glasses.

Open the cap slowly to release pressure.

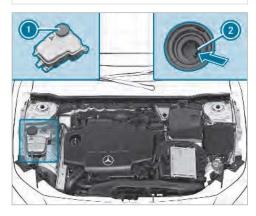

- Park the vehicle on a level surface.
- Check the coolant temperature display in the instrument cluster.
   The coolant temperature must be below

The coolant temperature must be below 70 °C.

- Slowly turn cap **()** anti-clockwise to relieve overpressure.
- Continue turning cap anti-clockwise and remove it.

The coolant level is correct:

- if the engine is cold, up to marker bar 2.
- if the engine is warm, up to 1.5 cm over marker bar 2.
- If necessary, top up with coolant that has been approved by Mercedes-Benz.
- Further information on coolant (→ page 438)

## Topping up the windscreen washer system

▲ WARNING Danger of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment may be very hot, e.g. the engine, the radiator and parts of the exhaust system.

Let the engine cool down and only touch the component parts described below:

**WARNING** Danger of burns when opening the bonnet


If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- Before opening the bonnet, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.

**WARNING** - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

Make sure that no windscreen washer concentrate spills out next to the filler opening.

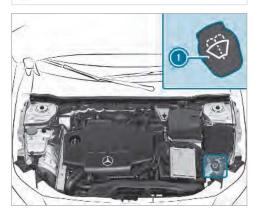

- Remove cap 

  by the tab.
- Top up the washer fluid.

## Cleaning and care

# Information on washing the vehicle in a car

**WARNING** Risk of an accident due to reduced braking power after washing the vehicle

Braking efficiency is reduced after washing the vehicle.

After the vehicle has been washed. brake carefully while paying attention to the traffic conditions until braking power has been fully restored.

To avoid damage to your vehicle when using a car wash, ensure the following beforehand:

- · Active Distance Assist DISTRONIC and the HOLD function are deactivated.
- the 360° camera or the reversing camera is switched off.
- · the side windows and sliding sunroof are completely closed.

- the blower for the ventilation/heating is switched off.
- the windscreen wiper switch is in position
- in car washes with a towing mechanism: neutral N is engaged.
- The key is at a distance of at least 3 m away from the vehicle, otherwise the tailgate could open unintentionally.
- (i) If, after the car wash, you remove the wax from the windscreen and wiper rubbers, this will prevent smearing and reduce wiper noise.

## Information on using a high-pressure cleaner

**WARNING** Risk of an accident when using high-pressure cleaners with circular jet nozzles

The water jet of a circular jet nozzle (dirt grinder) can cause externally invisible damage to the tyres or chassis parts.

Components damaged in this way may unexpectedly fail.

- Do not use high-pressure cleaners with circular jet nozzles to clean the vehicle.
- ► Have damaged tyres or chassis parts replaced immediately.

To avoid damage to your vehicle, observe the following when using a high-pressure cleaner:

- Keep the key at least 3 m away from the vehicle. Otherwise the tailgate could open unintentionally.
- Maintain a distance of at least 30 cm to the vehicle.

- Vehicles with decorative foil: parts of your vehicle are covered with a decorative foil.
   Maintain a distance of at least 70 cm between the foil-covered parts of the vehicle and the nozzle of the high-pressure cleaner.
   Move the high-pressure cleaner nozzle around whilst cleaning.
- Observe the information on the correct distance in the equipment manufacturer's operating instructions.
- Do not point the nozzle of the high-pressure cleaner directly at sensitive parts such as tyres, gaps, electrical components, batteries, light sources and ventilation slots.

## Washing the vehicle by hand

Observe the legal requirements, e.g. in a number of countries, washing by hand is only permitted in specially designated wash bays.

- ▶ Use a mild cleaning agent, e.g. car shampoo.
- Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- Carefully hose the vehicle off with water and dry using a chamois. Take care not to point the water jet directly towards the air inlet.

# Notes on paintwork/matt finish paintwork care

## Observe the following information:

	Cleaning and care	Avoiding paintwork damage
Paintwork	<ul> <li>Insect remains: soak with insect remover and rinse off the treated areas afterwards.</li> <li>Bird droppings: soak with water and rinse off afterwards.</li> <li>Coolant, brake fluid, tree resins, oils, fuel and greases: remove by gently rubbing with a cloth soaked in petroleum ether or lighter fluid.</li> <li>Tar stains: use tar remover.</li> <li>Wax: use silicone remover.</li> </ul>	<ul> <li>Do not attach stickers, films or similar.</li> <li>Remove dirt immediately, where possible.</li> </ul>
Matt finish	Only use care products approved by Mercedes-Benz.	<ul> <li>Do not polish the vehicle and light-alloy wheels.</li> <li>Only use car washes that correspond to the latest engineering standards.</li> <li>Do not use car wash programmes with a final hot wax treatment.</li> <li>Do not use paint cleaners, buffing or polishing products, gloss preservers, e.g. wax.</li> <li>Always have paintwork repairs carried out at a qualified specialist workshop.</li> </ul>

## Notes on care of car parts

**MARNING** Risk of entrapment if the windscreen wipers are switched on while the windscreen is being cleaned

If the windscreen wipers are set in motion while you are cleaning the windscreen or wiper blades, you can be trapped by the wiper arm.

Always switch off the windscreen wipers and the ignition before cleaning the windscreen or wiper blades.

**WARNING** Risk of burns from tailpipes and tailpipe trim

The tailpipe and tailpipe trim can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

- Always be particularly careful around the tailpipe and the tailpipe trim.
- ► Allow the vehicle parts to cool down before you touch them.

## Observe the following information:

	Notes on cleaning and care	Avoiding vehicle damage
Wheels/rims	Use water and acid-free wheel cleaners.	<ul> <li>Do not use acidic wheel cleaners to remove brake dust. This could damage wheel bolts and brake components.</li> <li>To avoid corrosion of the brake discs and brake pads, drive the vehicle for a few minutes after cleaning before parking it. The brake discs and brake pads warm up and dry out.</li> </ul>
Windows	Clean the windows on the inside and outside using a damp cloth and cleaning agents recommended by Mercedes-Benz.	Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the inside of windows.

	Notes on cleaning and care	Avoiding vehicle damage
Wiper blades	Fold out the wiper blades and clean them using a damp cloth.	Do not clean the wiper blades too often.
Exterior lighting	Clean the lenses with a wet sponge and mild cleaning agent, e.g. car shampoo.	Only use cleaning agents or cleaning cloths that are suitable for plastic covers.
Sensors	Clean the sensors in the front and rear bumper and in the radiator trim with a soft cloth and car shampoo.	When using a high-pressure cleaner, maintain a minimum distance of 30 cm.
Reversing camera and 360° Camera	<ul> <li>Open the camera cover with the multimedia system (→ page 205).</li> <li>Use clear water and a soft cloth to clean the camera lens.</li> </ul>	Do not use a high-pressure cleaner.
Exhaust pipes	Clean with cleaning agents recommended by Mercedes-Benz, particularly in the winter and after washing the vehicle.	Do not use acidic cleaning agents.
Trailer tow hitch	<ul> <li>Remove traces of rust on the ball, e.g. with a wire brush.</li> <li>Remove dirt with a lint-free cloth.</li> <li>After cleaning, oil or grease the ball coupling lightly.</li> <li>Observe the notes on care in the trailer tow hitch manufacturer's operating instructions.</li> </ul>	Do not clean the ball coupling with a high-pressure cleaner or solvent.

## Notes on care of the interior

**WARNING** Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous.

When the airbags are deployed, plastic parts may break away.

Do not use any care or cleaning prod-ucts containing solvents to clean the cockpit.

**WARNING** Risk of injury or death from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

▶ Never bleach or dye seat belts.

## Observe the following information:


	Cleaning and care	Avoiding vehicle damage
Seat belts	Clean with lukewarm and soapy water.	<ul> <li>Do not use chemical cleaning agents.</li> <li>Do not dry seat belts by heating them to over 80 °C or exposing them to direct sunlight.</li> </ul>
Display	Clean the surface carefully with a microfibre cloth and TFT/LCD display care product.	<ul><li>Switch off the display and let it cool down.</li><li>Do not use any other cleaning products.</li></ul>
Plastic trim	<ul> <li>Clean with a damp microfibre cloth.</li> <li>For heavy soiling: use care product recommended by Mercedes-Benz.</li> </ul>	<ul> <li>Do not attach stickers, films or similar.</li> <li>Do not allow cosmetics, insect repellent or sun cream to come in contact with the plastic trim.</li> </ul>

	Cleaning and care	Avoiding vehicle damage
Real wood/trim elements	<ul> <li>Clean with a microfibre cloth.</li> <li>Piano-lacquer black look: clean with a damp cloth and soap solution.</li> <li>For heavy soiling: use care product recommended by Mercedes-Benz.</li> </ul>	Do not use solvent-based cleaning agents, polishes or waxes.
Roof lining	Clean with a brush or dry shampoo.	
Carpet	Use carpet and textile cleaning agents recommended by Mercedes-Benz.	
Genuine leather seat covers	<ul> <li>Clean with a damp cloth and then wipe with a dry cloth.</li> <li>Leather care: use leather care agents that have been recommended by Mercedes-Benz.</li> </ul>	Do not allow the leather to become too damp.  Do not use a microfibre cloth.
DINAMICA seat covers	Clean with a damp cloth.	Do not use a microfibre cloth.
Artificial leather seat covers	Clean with a damp cloth and 1% soapy water.	Do not use a microfibre cloth.
Cloth seat covers	Clean with a damp cloth and 1% soapy water and allow to dry.	

### Emergency


## Removing the reflective safety jacket

The reflective safety jackets are located in the safety jacket compartments in the driver's and front-passenger door stowage compartments.

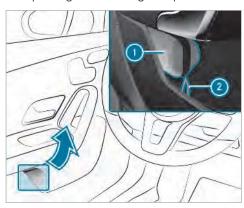

► To remove: pull out safety jacket bag ① by loop ②.

- Open safety jacket bag (1) and pull out the safety jacket.
- (i) There are also safety jacket compartments in the rear door stowage compartments in which safety jackets can be stowed.

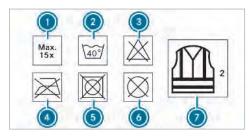

- Maximum number of washes
- Maximum wash temperature
- 3 Do not bleach
- O not iron
- O not use a laundry dryer
- 6 Do not dry-clean
- 7 This is a class 2 jacket


The requirements defined by the legal standard are only fulfilled if the safety jacket is the correct size and is fully closed.

Replace the safety jacket if:

- it is damaged or dirt on the reflective strips can no longer be removed
- the maximum number of washes is exceeded
- the fluorescence of the safety jacket has faded

## Warning triangle

## Removing the warning triangle

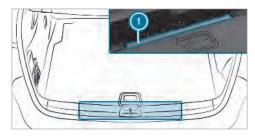


► Remove ①warning triangle.

## Setting up the warning triangle



- Fold side reflectors (1) upwards to form a triangle and attach at the top using press-stud 2.
- Fold legs 3 down and out to the side.


## First-aid kit (soft sided)

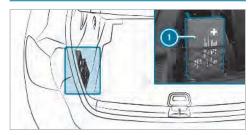

The first-aid kit ① is in the luggage compartment in the left-hand stowage net.

(i) Depending on the vehicle's equipment, the first-aid kit is in the recess in the side trim.

## Removing the fire extinguisher

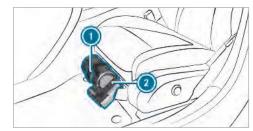

- Left-hand-drive vehicle: Pull tab 1 upwards.
- ► Remove fire extinguisher ②.

#### Flat tyre

#### Notes on flat tyres

**WARNING** Risk of accident due to a flat

A flat tyre severely affects the driving characteristics as well as the steering and braking of the vehicle.

#### Tyres without run-flat characteristics:

- Do not drive on with a flat tyre.
- ► Change the flat tyre immediately with the emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

#### Tyres with run-flat characteristics:

Observe the information and warning notes on MOExtended tyres (run-flat tyres).

In the event of a flat tyre, the following options are available depending on your vehicle's equipment:

- Vehicles with MOExtended tyres: it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tyres (run-flat tyres)  $(\rightarrow page 390)$ .
- Vehicles with a TIREFIT kit: you can repair the tyre so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit ( $\rightarrow$  page 391).
- Vehicles with Mercedes me connect: you can make a call for breakdown assistance via the overhead control panel in the case of a breakdown (→ page 346).
- All vehicles: change the wheel (→ page 422).
- (i) The emergency spare wheel is only available in certain countries.

## Notes on MOExtended tyres (run-flat tyres)

▲ WARNING Risk of accident when driving in limp-home mode

When driving in emergency mode the handling characteristics are impaired. e.g. when cornering, when accelerating strongly and when braking.

- ▶ Do not exceed the specified maximum
- Avoid any abrupt steering and driving manoeuvres as well as driving over obstacles (kerbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- Stop driving in the emergency mode if you notice:
- banging noise
- vehicle vibration
- · smoke which smells like rubber
- continuous ESP® intervention
- · cracks in tyre side walls

- After driving in emergency mode have the rims checked by a qualified specialist workshop with regard to their further
- The defective tyre must be replaced in every case.

With MOExtended tyres (run-flat tyres), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tyres. However, the tyre affected must not show any clearly visible damage.

You can recognise MOExtended tyres by the MOExtended marking which appears on the side wall of the tyre.

Vehicles with tyre pressure loss warning system: MOExtended tyres may only be used in conjunction with an activated tyre pressure loss warning system.

Vehicles with tyre pressure monitoring system: MOExtended tyres may only be used in conjunction with an activated tyre pressure monitoring system.

If a pressure loss warning message appears in the multifunction display:

- Check the tyre for damage.
- If driving on, observe the following notes.

Driving distance possible in limp-home mode after the pressure loss warning:

Load condition	Driving distance pos- sible in limp-home mode
Partially laden	80 km
Fully laden	30 km

- The driving distance possible in limp-home mode may vary depending on the driving style.
- Maximum permissible speed 80 km/h.

If a tyre has gone flat and cannot be replaced with an MOExtended tyre, you can use a standard tyre as a temporary measure.

## Using the TIREFIT kit

#### Requirements

Have the following tools readily available:

- · tyre sealant bottle
- TIREFIT sticker
- · tyre inflation compressor

You can use TIREFIT tyre sealant to seal perforation damage of up to 4 mm, particularly those in the tyre contact surface. You can use TIREFIT in outside temperatures down to -20 °C.

## **WARNING** Risk of accident when using tyre sealant

In the following situations, the tyre sealant is unable to provide sufficient breakdown assistance, as it is unable to seal the tyre properly:

- there are cuts or punctures in the tyre larger than those previously mentioned.
- the wheel rim is damaged.

- you have driven at very low tyre pressures or on a flat tyre.
- Do not drive on.
- Consult a qualified specialist workshop.
- **WARNING** Risk of injury and poisoning from tyre sealant

Tyre sealant is hazardous to health and causes irritation. Do not allow it to come into contact with your skin, eyes or clothing, and do not swallow it. Do not inhale any vapours. Keep the tyre sealant away from children.

Observe the following if you come into contact with the tyre sealant:

- Rinse off the tyre sealant from your skin using water immediately.
- If tyre sealant gets into your eyes, thoroughly rinse them using clean water immediately.
- If tyre sealant has been swallowed, thoroughly rinse out your mouth immediately and drink plenty of water. Do not

- induce vomiting and seek medical attention immediately.
- Change out of clothing which has come into contact with tyre sealant immediately.
- If an allergic reaction occurs, seek medical attention immediately.
- NOTE Overheating due to the tyre inflation compressor running too long
- Do not run the tyre inflation compressor for longer than ten minutes without interruption.

Comply with the manufacturer's safety notes on the sticker on the tyre inflation compressor.

Have the tyre sealant bottle replaced in a qualified specialist workshop every five years.

Do not remove any foreign objects which have entered the tyre.



- Affix part 1 of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- Affix part ② of the TIREFIT sticker near the valve on the wheel with the defective tyre.



- Pull plug 4 with the cable and hose 5 out of the tyre inflation compressor housing.
- ► Push the plug of hose ⑤ into flange ⑥ of tyre sealant bottle 1 until the plug engages.
- ▶ Place tyre sealant bottle **①** head downwards into recess 2 of the tyre inflation compres-



- Remove the valve cap from valve 7 on the faulty tyre.
- Screw filling hose (3) onto valve (7).
- Insert plug 4 into a 12 V socket in your vehicle.
- Switch the ignition on.
- Press on and off switch (3) on the tyre inflation compressor.

The tyre inflation compressor is switched on. The tyre is inflated. First, tyre sealant is pumped into the tyre. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

## Do not switch off the tyre inflation compressor during this phase.

Let the tyre inflation compressor run for a maximum of ten minutes. The tyre should then have attained a tyre pressure of at least 200 kPa (2.0 bar/ 29 psi).

If tyre sealant leaks out, make sure you clean the affected areas as quickly as possible. It is preferable to use clean water.

If you get tyre sealant on your clothing, have it cleaned as soon as possible with perchloroethylene.

#### If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has not been achieved:

- switch off the tyre inflation compressor.
- unscrew the filling hose from the valve of the defective tyre.

Please note that tyre sealant may leak out when unscrewing the filling hose.

- very slowly drive forwards or reverse approximately 10 m.
- Pump up the tyre again. After a maximum of ten minutes the tyre pressure must be at least 200 kPa (2.0 bar/ 29 psi).
- ▲ WARNING Risk of accident due to the specified tyre pressure not being achieved

If the specified tyre pressure is not achieved after the specified time, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

Damaged tyres and a tyre pressure that is too low can significantly impair braking and handling characteristics.

- ▶ Do not drive on.
- Consult a qualified specialist workshop.

If, after ten minutes, a tyre pressure of 200 kPa (2.0 bar/29 psi) has been achieved:

switch off the tyre inflation compressor.

- unscrew the filling hose from the valve of the defective tyre.
  - **WARNING** Risk of accident from driving with sealed tyres

A tyre temporarily sealed with tyre sealant impairs handling characteristics and is not suitable for higher speeds.

- Adapt your driving style accordingly and drive carefully.
- Do not exceed the specified maximum speed with a tyre that has been sealed using tyre sealant.
- Observe the maximum permissible speed for a tyre sealed with tyre sealant 80 km/h.
- ➤ Fasten the upper section of the TIREFIT sticker to the instrument cluster where it will be easily seen by the driver.
- **NOTE** Staining from leaking tyre sealant

After use, excess tyre sealant may leak out from the filling hose.

- Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.
- ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal

Tyre sealant contains pollutants.

- Have the tyre sealant bottle disposed of professionally, e.g. at a Mercedes-Benz Service Centre.
- Store the tyre sealant bottle, the tyre inflation compressor and the warning triangle.
- Pull away immediately.
- Stop driving after approximately ten minutes and check the tyre pressure using the tyre inflation compressor.

The tyre pressure must now be at least 130 kPa (1.3 bar/19 psi).

**WARNING** Risk of accident due to the specified tyre pressure not being achieved

If the specified tyre pressure is not achieved after a brief drive, the tyre is too badly damaged. The tyre sealant cannot repair the tyre in this instance.

Damaged tyres and a tyre pressure that is too low can significantly impair braking and handling characteristics.

- Do not drive on.
- Consult a qualified specialist workshop.

#### Countries that have Mercedes-Benz

Service24h: a sticker with the telephone number can also be found in your vehicle, e.g. on the B-pillar on the driver's side.

- Correct the tyre pressure if it is still at least 130 kPa (1.3 bar/19 psi). See the tyre pressure table on the fuel filler flap for values.
- To increase the tyre pressure: switch on the tyre inflation compressor.



- To reduce the tyre pressure: press pressure release button next to manometer
- When the tyre pressure is correct, unscrew the filling hose from the valve of the sealed
- Screw the valve cap onto the tyre valve of the sealed tyre.
- Pull the tyre sealant bottle out of the tyre inflation compressor. The filling hose stays on the tyre sealant bot-

tle.

Drive to the nearest qualified specialist workshop and have the tyre, tyre sealant bottle and filling hose replaced there.

## Battery (vehicle)

#### Notes on the 12 V battery

**WARNING** Risk of an accident due to work carried out incorrectly on the bat-

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can lead to function restrictions in safety-relevant systems, e.g. the lighting system, ABS (anti-lock braking system) or ESP® (Electronic Stability Program). The operating safety of your vehicle may be restricted.

You could lose control of the vehicle in the following situations:

- when braking
- in the event of abrupt steering manoeuvres and/or when the vehicle's speed is not adapted to the road conditions

- In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- Do not continue driving.
- Always have work on the battery carried out at a qualified specialist workshop.
- Further information on ABS (→ page 169)
- Further information on ESP<sup>®</sup> (→ page 170)

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz. These batteries provide increased impact protection to prevent vehicle occupants from suffering acid burns should the battery be damaged in the event of an accident.

**WARNING** Risk of explosion due to electrostatic charge

Electrostatic charge can cause sparks which may ignite the highly flammable gas mixture in the battery.

To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

**WARNING** Danger of chemical burns from the battery acid

Battery acid is caustic.

- Avoid contact with the skin, eyes or clothing.
- Do not lean over the battery.
- Do not inhale battery gases.
- Keep children away from the battery.
- Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

**ENVIRONMENTAL NOTE** Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

If you have to connect the 12 volt battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor if necessary.



Wear safety glasses.



Keep children away.



 
Observe this Owner's Manual.

If you do not intend to use the vehicle over an extended period of time:

- Activate standby mode, or
- Connect the battery to a battery charger approved by Mercedes-Benz, or
- Consult a qualified specialist workshop to disconnect the battery

## Starting assistance and charging the 12 V batterv

When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.



When using a battery charger without a maximum charging voltage, the battery or the vehicle electronics may be damaged.

Only use battery chargers with a maximum charging voltage of 14.8 V.

**WARNING** Risk of explosion from hydrogen gas igniting

A battery generates hydrogen gas during the charging process. If there is a short circuit or sparks start to form, there is a danger of the hydrogen gas igniting.

- Make sure that the positive terminal of the connected battery does not come into contact with vehicle parts.
- Never place metal objects or tools on a
- When connecting and disconnecting the battery, you must observe the described order for the battery clamps.
- ► When giving starting assistance, always make sure that you only connect battery terminals with identical polarity.
- During starting assistance, you must observe the described order for con-

- necting and disconnecting the jump lead.
- Do not connect or disconnect the battery clamps while the engine is running.

## **WARNING** Risk of explosion during charging process and starting assistance

During the charging process and starting assistance, the battery may release an explosive gas mixture.

- Avoid fire, naked flames, creating sparks and smoking.
- Make sure that there is sufficient ventilation during the charging process and during starting assistance.
- ▶ Do not lean over a battery.

If the indicator/warning lamps in the instrument cluster do not light up at low temperatures, it is very likely that the discharged battery has frozen.

## **WARNING** Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas may be released.

Always thaw a frozen battery out first before charging it or performing starting assistance.

The service life of a battery that has been thawed may be dramatically shortened.

It is recommended that you have a thawed battery checked at a qualified specialist workshop.

NOTE Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.


Avoid numerous and extended attempts to start the engine.

Observe the following points during starting assistance and when charging the battery:

- Only use undamaged jump lead/charging cables with a sufficient cross-section and insulated terminal clamps.
- Non-insulated parts of the terminal clamps must not come into contact with other metal parts while the jump lead/charging cable is connected to the battery/jump-start connection point.
- The jump lead/charging cable must not come into contact with any parts which may move when the engine is running.
- Always make sure that neither you nor the battery is electrostatically charged.
- · Keep away from fire and naked flames.
- Do not lean over the battery.
- When charging: only use battery chargers tested and approved by Mercedes-Benz and read the battery charger's operating instructions before charging the battery.

Observe the additional following points during starting assistance:

- Starting assistance may only be provided using batteries with a nominal voltage of 12 V.
- The vehicles must not touch.
- Petrol engine: only accept starting assistance if the engine and exhaust system are cold.
- Secure the vehicle by applying the electric parking brake.
- Automatic transmission: shift the transmission to position **P**.
- Make sure that the ignition and all electrical consumers are switched off.
- Open the bonnet.

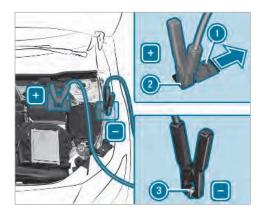

- ► Slide cover ① of positive clamp ② on the jump-starting connection point in the direction of the arrow.
- Connect positive clamp 2 on your vehicle to positive pole of the donor battery using the jump lead/charging cable. Always begin with positive clamp 2 on your own vehicle first.

- During the starting assistance proce**dure:** start the engine of the donor vehicle and run at idle speed.
- Connect the negative pole of the donor battery and earth point (3) of your own vehicle by using the jump lead/charging cable. Begin with the donor battery first.
- **During starting assistance**: start the engine of your own vehicle.
- During the charging process: start the charging process.
- During starting assistance: let the engines run for several minutes.
- During starting assistance: before disconnecting the jump lead, switch on an electrical consumer in your own vehicle, e.g. the rear window heater or lighting.

When the starting assistance/charging process is complete:

First, remove the jump lead/charging cable from earth point 3 and negative pole of the donor battery, then from positive clamp (2) and positive pole of the donor battery. Begin each time with the contacts on your own vehicle first.

After removing the jump lead/charging cable, close cover 1 of positive clamp 2.

Further information can be obtained at a qualified specialist workshop.

## Replacing the 12 V battery

Observe the notes on the 12 V battery (→ page 395).

Mercedes-Benz recommends that you have the 12 V battery replaced at a qualified specialist workshop, e.g. at a Mercedes-Benz Service Centre.

Observe the following notes if you want to replace the battery yourself:

 Always replace a faulty battery with a battery which meets the specific vehicle requirements.

- Carry over detachable parts, such as vent hoses, elbow fittings or terminal covers from the battery being replaced.
- Make sure that the vent hose is always connected to the original opening on the side of the battery.

 
Fit any existing or supplied cell caps. Otherwise, gases or battery acid could escape.

Make sure that detachable parts are reconnected in the same way.

## Tow-starting or towing away Permitted towing methods

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

For towing, use a tow rope or tow bar with both axles on the ground. Do not use tow bar systems.



Observe the instructions and notes on towing away.

## Permitted towing methods

Vehicle equipment/towing method			
	Both axles on the ground	Front axle raised	Rear axle raised
Vehicles with automatic transmission	Yes, maximum 50 km at 50 km/h	Yes, maximum 50 km at 50 km/h	Yes, maximum 50 km at 50 km/h

Towing with a raised axle: towing should be performed by a towing company.

## Towing the vehicle with both axles on the ground

- Observe the notes on the permitted towing methods ( $\rightarrow$  page 400) ( $\rightarrow$  page 401).
- Make sure that the battery is connected and charged.

When the battery is discharged:

• the engine cannot be started.

- the electric parking brake cannot be released or applied.
- vehicles with automatic transmission: the automatic transmission cannot be shifted to position N or P.
- (i) vehicles with automatic transmission: if the automatic transmission cannot be shifted to position N, or the multifunction display in the instrument cluster does not show anything, have the vehicle transported away(→ page 403). A towing vehicle with lifting equipment is required for vehicle transportation.

**! NOTE** Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- A towing speed of 50 km/h must not be exceeded.
- ► A towing distance of 50 km must not be exceeded.

**WARNING** Risk of accident when towing a vehicle which is too heavy

If the vehicle being tow-started or towed away is heavier than the permissible gross mass, the following situations can occur:

- the towing eye may become detached.
- the car/trailer combination may swerve or even overturn.
- If another vehicle is tow-started or towed away, its weight must not exceed the permissible gross mass of your own vehicle.

If a vehicle must be tow started or towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

- Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate.
- Vehicles with automatic transmission: do not open the driver's door or front passenger door, otherwise the automatic transmission automatically shifts to position P.

- Fit the towing eye (→ page 404).
- Attach the tow bar.
- ! NOTE Damage due to incorrect connection
- Only connect the tow rope or tow bar to the towing eyes.
- Deactivate the automatic locking mechanism (→ page 72).
- Do not activate the HOLD function.
- Deactivate the tow-away protection (→ page 84).
- Deactivate Active Brake Assist (→ page 178).
- Vehicles with automatic transmission: shift the automatic transmission to position
   N.
- Release the electric parking brake.

WARNING Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- the ignition is switched off.
- the brake system or power steering system is malfunctioning.
- the energy supply or the on-board electrical system is malfunctioning.

When your vehicle is then towed away, significantly more effort may be required to steer and brake than is normally required.

- Use a tow bar.
- Make sure that the steering wheel can move freely, before towing the vehicle away.

**NOTE** Damage due to excessive tractive

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.


Pull away slowly and smoothly.

## Loading the vehicle for transport

- Observe the notes on towing away  $(\rightarrow page 401)$ .
- Connect the tow bar to the towing eye to load the vehicle.
- (i) You can also attach the tow bar to the trailer hitch.
- ► Vehicles with automatic transmission: shift the automatic transmission to position N.
- (i) Vehicles with automatic transmission: the automatic transmission may be locked in position **P** in the event of damage to the electrical system. To shift to N, provide the

- on-board electrical system with power  $(\rightarrow page 397)$ .
- Load the vehicle onto the transporter.
- Vehicles with automatic transmission: shift the automatic transmission to position
- Use the electric parking brake to secure the vehicle and prevent it from rolling away.
- Only secure the vehicle by the wheels.


## 4MATIC vehicles/vehicles with automatic transmission

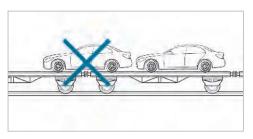

Make sure that the front and rear axles come to rest on the same transportation vehicle.

- **NOTE** Damage to the drivetrain due to incorrect positioning
- Do not position the vehicle above the connection point of the transport vehicle.


## Towing eye storage location

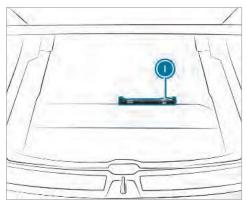

### 404 Breakdown assistance

Towing eye 
is under the load compartment floor.

## Installing the towing eye

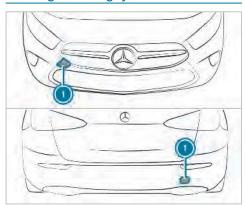

- Press the mark on cover inwards and remove.
- Screw in the towing eye clockwise as far as it will go and tighten.

Vehicles with a trailer hitch: vehicles with a trailer hitch do not have a rear bracket for the towing eye. Fasten the tow bar to the trailer hitch.

- (i) Make sure that cover (1) engages in the bumper when you remove the towing eye.
- **NOTE** Damage due to incorrect use of the towing eye

When a towing eye is used to recover a vehicle, the vehicle may be damaged in the process.

Only use the towing eye to tow away or tow start the vehicle.

# Tow-starting the vehicle (emergency engine starting)

#### Vehicles with automatic transmission

NOTE Damage to the automatic transmission due to tow-starting

The automatic transmission may be damaged in the process of tow-starting vehicles with automatic transmission.

- Vehicles with automatic transmission must not be tow-started.
- Vehicles with automatic transmission must not be tow-started.

## **Electrical fuses**

#### Notes on electrical fuses

**WARNING** Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher

amperage, the electric line could be overloa-

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.
- **NOTE** Damage caused by incorrect fuses

Incorrect fuses may cause damage to electrical components or systems.

Only use Mercedes-Benz approved fuses with the correct fuse rating.

Blown fuses must be replaced with fuses of the same rating, which you can recognise by the colour and fuse rating. Only use fuses marked with an "S". The fuse ratings are listed in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the engine compartment ( $\rightarrow$  page 405).

**NOTE** Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- When the fuse box is open, make sure that no moisture can enter the fuse box.
- ▶ When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause traced and rectified at a qualified specialist workshop, e.g. a Mercedes-Benz Service Centre.

Ensure the following before replacing a fuse:

- The vehicle is secured against rolling away.
- · All electrical consumers are switched off.
- The ignition is switched off.

The electrical fuses are located in various fuse boxes:

- Fuse box on the driver's side of the engine compartment ( $\rightarrow$  page 405)
- Fuse box in the front-passenger footwell  $(\rightarrow page 406)$
- Fuse box in the central load compartment  $(\rightarrow page 407)$

#### Fuse box in the engine compartment

Observe the notes on electrical fuses  $(\rightarrow page 404)$ .

Have the following tools readily available:

- A dry cloth
- A screwdriver


## Opening

.

▲ WARNING Risk of injury from using the windscreen wipers while the engine bonnet is open

When the engine bonnet is open, and the windscreen wipers are set in motion, you can be trapped by the wiper linkage.

- Always switch off the windscreen wipers and ignition before opening the engine bonnet.
- Open the bonnet.

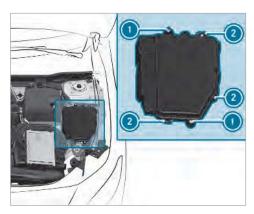

- Remove any existing moisture from the fuse box using a dry cloth.
- Loosen screws 1.
- Press clamps ② and lift the fuse box lid up and out.

The fuse assignment diagram is in a recess on the side of the fuse box.


## Closing

- Check whether the seal is positioned correctly in the lid.
- Place the lid on the fuse box.
- ► Make sure that clamps ② engage.
- Tighten screws ①.
- Close the bonnet.


## Fuse box in the front-passenger footwell

Observe the notes on electrical fuses  $(\rightarrow page 404)$ .

## Opening

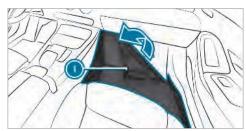

Lift carpet 1 in the direction of the arrow.

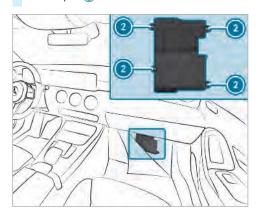

► Loosen screws ② and remove fuse box lid from the top.


## Closing

- ▶ Place the lid on the fuse box.
- Tighten screws 2.
- Fold back carpet 1.

## Fuse box in the load compartment

Observe the notes on electrical fuses (→ page 404).

Open the luggage compartment floor .

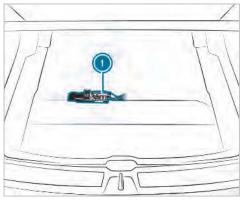

Fuse box (1) is located in the centre underneath the luggage compartment floor.

### Notes on noise or unusual handling characteristics

While driving, pay attention to vibrations, noises and unusual handling characteristics, e.g. pulling to one side. This may indicate that the wheels or tyres are damaged. If you suspect that a tyre is defective, reduce your speed immediately. Stop the vehicle as soon as possible to check the wheels and tyres for damage. Hidden tyre damage could also be causing the unusual handling characteristics. If you find no signs of damage, have the tyres and wheels checked at a qualified specialist workshop.

## Regular checking of wheels and tyres

▲ WARNING Risk of accident from damaged tyres

Damaged tyres can cause tyre pressure loss. As a result, you could lose control of your vehicle.

► Check the tyres regularly for signs of damage and replace any damaged tyres immediately.

**WARNING** Risk of aquaplaning due to insufficient tyre tread

Insufficient tyre tread will result in reduced tyre grip. The tyre tread is no longer able to dissipate water.

This means that in heavy rain or slush the risk of aquaplaning is increased, in particular where speed is not adapted to suit the conditions.

If the tyre pressure is too high or too low, tyres may exhibit different levels of wear at different locations on the tyre tread.

► Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tyres.

Minimum tread depth for:

- Summer tyres: 3 mm
- M+S tyres: 4 mm
- For safety reasons, replace the tyres before the legally prescribed limit for the minimum tread depth is reached.

Carry out the following checks on all wheels regularly, at least once a month or as required, e.g. prior to a long journey or driving off-road:

- Check the tyre pressure (→ page 409).
- Visual inspection of wheels and tyres for damage.
- Check the valve caps.
  - The valves must be protected against moisture and dirt by the valve caps approved especially for your vehicle by Mercedes-Benz.
- Visual check of the tyre tread depth and the tyre tread condition across the entire width.

The minimum tread depth for summer tyres is 3 mm and for winter tyres 4 mm.

#### Notes on snow chains

**WARNING** Risk of accident due to incorrect snow chain fitting

If you fit snow chains to the rear wheels, the snow chains may grind against the vehicle body or chassis components.

This could cause damage to the vehicle or the tyres.

- Never fit snow chains to the rear wheels.
- Always fit snow chains to the front wheels in pairs.
- NOTE Damage to the wheel trim from fitted snow chains

If snow chains are fitted to steel wheels, the wheel trims can be damaged.

- Remove the wheel trims of steel wheels before fitting snow chains.
- Snow chains are only permissible for certain wheel/tyre combinations. You can obtain

information about this from a Mercedes-Benz Service Centre.

- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.
- If snow chains are fitted, the maximum permissible speed is 50 km/h.
- Vehicles with Active Parking Assist: do not use Active Parking Assist when snow chains are fitted.
- (i) You can permanently limit the maximum vehicle speed for driving with winter tyres  $(\rightarrow page 182)$ .
- i You can deactivate ESP® to pull away  $(\rightarrow page 172)$ . This allows the wheels to spin, achieving an increased driving force.

## Tyre pressure

#### Notes on tyre pressure

**WARNING** Risk of accident due to insufficient or excessive tyre pressure

Underinflated or overinflated tyres pose the following risks:

- The tyres may burst, especially as the load and vehicle speed increase.
- The tyres may wear excessively and/or unevenly, which may greatly impair tyre
- The driving characteristics, as well as steering and braking, may be greatly impaired.
- Comply with the recommended tyre pressure and check the tyre pressure of all tyres including the spare wheel regularly:
- at least once a month
- when the load changes

## 410 Wheels and tyres

- before embarking on a longer journey
- if operating conditions change, e.g. offroad driving
- Adjust the tyre pressure as necessary.

Driving with tyre pressure that is too high or too low can:

- Shorten the service life of the tyres.
- · Cause increased tyre damage.
- Adversely affect driving characteristics and thus driving safety, e.g. due to aquaplaning.

**WARNING** Risk of accident from repeated tyre pressure drop

If the tyre pressure drops repeatedly, the wheel, valve or tyre may be damaged. Insufficient tyre pressure can cause the tyres to burst.

Inspect the tyre for signs of foreign objects.

- Check whether the wheel or valve has a leak.
- If you are unable to rectify the damage, contact a qualified specialist workshop.

Information on the recommended tyre pressure for the vehicle's factory-fitted tyres can be found on the tyre pressure table on the inside of the fuel filler flap ( $\rightarrow$  page 410).

Use a suitable pressure gauge to check the tyre pressure. The outer appearance of a tyre does not permit any reliable conclusion about the tyre pressure.

Vehicles with a tyre pressure monitoring system: you can also check the tyre pressure using the on-board computer.

Only correct tyre pressures when the tyres are cold. Conditions for cold tyres:

- The vehicle has been parked with the tyres out of direct sunlight for at least three hours.
- The vehicle has travelled less than 1.6 km.

A rise in the tyre temperature of 10 °C increases the tyre pressure by approx. 10 kPa (0.1 bar/


1.5 psi). Take this into account when checking the tyre pressure of warm tyres.

## Trailer operation notes

Always inflate the rear axle tyres to the recommended tyre pressures on the tyre pressure table for increased load.

## Tyre pressure table

The tyre pressure table is on the inside of the fuel filler flap.

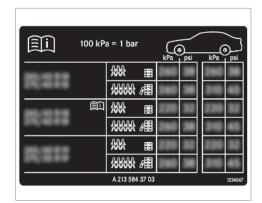

The tyre pressure table shows the recommended tyre pressure for all tyres approved for this vehicle. The recommended tyre pressures apply for cold tyres under various operating conditions, i.e. loading and/or speed of the vehicle.

If one or more tyre sizes precede a tyre pressure, the tyre pressure information following is only valid for those tyre sizes.

If the preceding tyre sizes are complemented by the symbol, the tyre pressure information following shows alternative tyre pressures. These tyre pressures may improve your vehicle's ride comfort. Fuel consumption may then increase slightly.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

Be sure to also observe the following further related subjects:

Notes on tyre pressure (→ page 409)

## Tyre pressure monitoring system

## Function of the tyre pressure monitoring sys-

The system checks the tyre pressure and the tyre temperature of the tyres fitted to the vehicle by means of a tyre pressure sensor.

New tyre pressure sensors, e.g. in winter tyres, are automatically taught-in the first time they are driven.

The tyre pressure and the tyre temperature appear in the multifunction display  $(\rightarrow page 231)$ .

If there is a substantial pressure loss or if the tyre temperature is excessive, a warning will be given:

- Via display messages (→ page 477).
- Via the (!) warning lamp in the instrument cluster  $(\rightarrow page 511)$ .

It is the driver's responsibility to set the tyre pressure to the recommended cold tyre pressure suitable for the operating situation. Set the tyre pressure for cold tyres using a tyre pressure gauge. Note that the correct tyre pressure for the current operating situation must first be taught-in to the tyre pressure monitoring sys-

In most cases, the tyre pressure monitoring system will automatically update the new reference values after you have changed the tyre pressure. You can, however, also update the reference values by restarting the tyre pressure monitoring system manually ( $\rightarrow$  page 412).

## System limitations

The system may be impaired or may not function in the following situations:

- If the tyre pressure is set incorrectly.
- If there is a sudden pressure loss caused, for example, by a foreign object penetrating the tyre.
- If there is a malfunction caused by another radio signal source.

Make sure to observe the following further related subject:

Notes on tyre pressure (→ page 409)

## Checking the tyre pressure with the tyre pressure monitoring system

#### Requirement:

• the ignition is switched on.

On-board computer:

¬→ Service → Tyres

One of the following displays appears:

• Current tyre pressure and tyre temperature of the individual wheels:



- Tyre pressures will be displayed after a few minutes of driving
- Tyre pressure monitor active: the teach-in process of the system is not yet complete.
   The tyre pressures are already being monitored.
- Compare the tyre pressure with the recommended tyre pressure for the current operating condition (→ page 410). Observe the notes on tyre temperature (→ page 409).
- (i) The values displayed in the multifunction display may deviate from those of the tyre pressure gauge as they refer to sea level. At high altitudes, the tyre pressure values indicated

by pressure gauges are higher than those shown by the on-board computer. In this case, do not reduce the tyre pressure.

Make sure to observe the following further related subject:

Notes on tyre pressure (→ page 409)

## Restarting the tyre pressure monitoring system

## Requirements:

 The recommended tyre pressure is correctly set for the respective operating condition on each of the four wheels (→ page 409).

Restart the tyre pressure monitoring system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.

#### On-board computer:

## → Service → Tyres

- Swipe downwards on Touch Control on the left-hand side of the steering wheel. The Use current pressures as new reference values? message is shown in the multifunction display.
- To begin restart, press Touch Control on the left-hand side of the steering wheel. The OK message is shown in the multifunction display.

Current warning messages are deleted and the (!) yellow warning lamp goes out.

After you have driven for a few minutes, the system checks whether the current tyre pressures are within the specified range. The current tyre pressures are then accepted as reference values and monitored.

Make sure to observe the following further related subject:

Notes on tyre pressure (→ page 409)

## Radio-equipment approval of the tyre pressure monitoring system

## Radio equipment approval numbers

Country	Radio equipment approval number
Abu Dhabi	Huf Electronics Bretten GmbH Model: TSSRE4A Model: TSSSG4G6 TRA Registered No: ERXXXXX/XX Dealer No: DAXXXXXXX/XX
Australia	

Country	Radio equipment approval number
Brazil	<b>a</b> anatel
	MODELO: TSSRE4A ANATEL: XXXX-XX-XXXX Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contrain- terferência prejudicial, mesmo de
	estações do mesmo tipo e não pode causar interferência a siste- mas operando em caráter pri- mário.

## 414 Wheels and tyres

Country	Radio equipment approval number
Dubai	Huf Electronics Bretten GmbH Model: TSSRE4A Model: TSSSG4G6 TRA Registered No: ERXXXXX/XX Dealer No: DAXXXXXXX/XX

Country	Radio equipment approval number
European Union Iceland Norway	Hereby, Huf Hülsbeck & Fürst
	GmbH & Co. KG declares that the radio equipment type TSSRE4A & TSSSG4G6 is in compliance with Directive 2014/53/EU.
	The full text of the EU declaration of conformity is available at the following internet address: http://www.huf-group.com/eudoc
	Frequency band: 433,92 MHz
	Maximum Transmission Power: <10 mW
	Manufacturer:
	Huf Electronics Bretten GmbH
	Gewerbestr. 40

Country	Radio equipment approval number
	75015 Bretten
	Germany
Indonesia	POSTEL
	827872337732
Israel	A. The use of this product does not need a wireless operation license.
	B. The product does not include an RF disturbance protection, and should not disturb other licensed products.
	C. It is forbidden to replace the antenna or to make any change in this product.

Country	Radio equipment approval number
Jordan	Kingdom of Jordan Type approval for Tyre Pressure Sensor and ECU Manufacturer: Huf Electronics Bretten GmbH Model: TSSRE4Dg Type Approval Number: TRC/LPD/2017/223 Model: TSSSG4G6 Type Approval Number: TRC/LPD/2017/223
Malaysia	XXXX/XXX/XXXX/XXXXXX
Morocco	AGREE PAR L'ANRT MAROC Numero d'agrement: MR XXXXX ANRT 2017 Date d'agrement: XX/XX/2017
Mexico	IFT: XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

Country	Radio equipment approval number
Moldova	1024
Oman	OMAN - TRA X/NNNN/YY Dyynnnn
Philip- pines	NTC Type Approved. No: ESD-XXXXXXXX

Country	Radio equipment approval number
Russia	ERE
	Model: TSSRE4A
	XXXXXXXXXXXXXX Model: TSSSG4G6
	XXXXXXXXXXXXXXX
Singapore	Complies with IDA Standards DA 103787
South Africa	IC N.SA
	Type approval number: TA-2017/ XXXX
	Type approval number: TA-2017/ XXXX

## Radio equipment approval Country number . Taiwan 經型式認證合格之低功率射頻 電機,非經許可,公司、商號或使 用者均 不得擅自變更頻率、加大功率 或變更原設計之特性及功能。 低功率射 頻電機之使用不得影響飛航安 全及干擾合法通信;經發現有干 擾現象 時,應立即停用,並改善至無干擾 時方得繼續使用。前項合法通 信,指依 電信法規定作業之無線電通 信。低功率射頻電機須忍受合 法通信或工 業、科學及醫療用電波輻射性 電機設備之干擾。

Country	Radio equipment approval number
	According to "Administrative Reg- ulations on Low Power Radio Waves Radiated Devices".
	Without permission granted by the DGT, any company, enter- prise, or user is not allowed to change frequency, enhance transmitting power or alter origi- nal characteristic as well as per- formance to a approved low power radio-frequency devices.
	The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.
	The said legal communications means radio communications is operated in compliance with the Telecommunications Act.

Country	Radio equipment approval number
	The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.
Thailand	This telecommunication equipment conforms to NTC technical requirement.
Ukraine	XX.XXX.XXX.XXX
United Arab Emi- rates	Huf Electronics Bretten GmbH Model: TSSRE4A Model: TSSSG4G6 TRA Registered No: ERXXXXX/XX Dealer No: DAXXXXXXX/XX

## Tyre pressure loss warning system

## Function of the tyre pressure loss warning system

The tyre pressure loss warning system warns the driver by means of display messages when there is a severe tyre pressure loss.

After a change in tyre pressure, a wheel rotation or a wheel change, the tyre pressure loss warning system has to be taught-in again by being restarted ( $\rightarrow$  page 417).

The tyre pressure loss warning system does not replace the need to regularly check the tyre pressures.

#### **System limitations**

The system may be impaired or may not function in the following situations:

- If the tyre pressure is set incorrectly.
- If there is a sudden pressure loss caused, for example, by a foreign object penetrating the
- If the pressure loss in several tyres decreases at the same rate.

The system has a limited or delayed function:

- When the road surface is poor, e.g. snow or gravel.
- When driving with snow chains.
- When driving in a very sporty driving style with high cornering speeds or sudden acceleration.
- When driving with a high load.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 409)
- Display messages about the tyres (→ page 477)

## Restarting the tyre pressure loss warning system

#### Requirement:

• The recommended tyre pressure is correctly set for the respective operating condition on each of the four wheels ( $\rightarrow$  page 409).

On-board computer:

→ Service → Tyres

Swipe downwards on Touch Control on the left-hand side of the steering wheel. The Tyre pressure loss warning activeRestart message is shown in the multifunction dis-

Restart the tyre pressure loss warning system in the following situations:

- The tyre pressure has changed.
- The wheels or tyres have been changed or newly fitted.
- To begin restart, press Touch Control on the left-hand side of the steering wheel. The Tyre pressure now OK? message is shown in the multifunction display.
- Select Yes.
- To confirm restart, press Touch Control on the left-hand side of the steering wheel. The Run Flat Indicator restarted message is shown in the multifunction display.

After you have driven for a few minutes, the tyre pressure loss warning system monitors the set tyre pressures of all the tyres.

Be sure to also observe the following further related subjects:

Notes on tyre pressure (→ page 409)

#### Wheel change

Notes on selecting, fitting and replacing tyres

You can ask for information regarding permitted wheel/tyre combinations at a Mercedes-Benz Service Centre.

**WARNING** Risk of accident due to incorrect dimensions of wheels and tyres

If wheels and tyres of the wrong size are used, the wheel brakes or wheel suspension components may become damaged.

Always replace wheels and tyres with those that fulfil the specifications of the original part.

When replacing wheels, make sure to fit the correct:

- Designation
- Type

When replacing tyres, make sure to fit the correct:

- Designation
- Manufacturer
- Type

**WARNING** Risk of injury through exceeding the specified tyre load-bearing capacity or the permissible speed rating

Exceeding the specified tyre load-bearing capacity or the permissible speed rating may lead to tyre damage and to the tyres burst-

► Therefore, only use tyre types and sizes approved for your vehicle model.

- Observe the tyre load-bearing capacity rating and speed rating required for your vehicle.
- **NOTE** Damage to vehicle and tyres due to non-approved tyre types and sizes

For safety reasons, only use wheels, tyres and accessories which have been approved for your vehicle by Mercedes-Benz.

These tyres have been specially adapted for use with the control systems, e.g. ABS or ESP®, and are marked as follows:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (run-flat tyres only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tyres)

Certain characteristics, e.g. handling, vehicle noise emissions or fuel consumption, may otherwise be adversely affected. In addition. when driving with a load, tyre dimension variations could cause the tyres to come into

contact with the body and axle components. This could result in damage to the tyres or the vehicle.

Only use tyres, wheels or accessories tested and approved by Mercedes-Benz.

**NOTE** Risk to driving safety from retreaded tyres

Retreaded tyres are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tyres.

For this reason driving safety cannot be guaranteed.

- Do not use used tyres if you have no information about their previous usage.
- **NOTE** Possible damage to wheels or tyres when driving over obstacles

Large wheels have a lower tyre section width. The lower the tyre section width, the greater

is the risk of damage to wheels or tyres when driving over obstacles.

- Avoid obstacles or drive particularly carefully.
- I NOTE Damage to electronic component parts from the use of tyre-fitting tools

Vehicles with a tyre pressure monitoring system: electronic component parts are located in the wheel. Tyre-fitting tools should not be applied in the area of the valve.

The tools could damage the electronic component parts.

- Have the tyres changed at a qualified specialist workshop only.
- **NOTE** Damage to summer tyres at low ambient temperatures

Using summer tyres at very low ambient temperatures can cause cracks to form, thereby damaging the tyres permanently. At temperatures below 7 °C use M+Styres.

Accessory parts that are not approved for your vehicle by Mercedes-Benz or are not being used correctly can impair the operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and enquire about:

- Suitability
- · Legal stipulations
- Factory recommendations

**WARNING** Risk of accident with high performance tyres

The special tyre tread in combination with the optimised tyre compound, means that the risk of skidding or hydroplaning on wet roads is increased.

In addition, the tyre grip is greatly reduced at a low outside temperature and tyre running temperature.

- Switch on the ESP® and adapt your driving style accordingly.
- Use M+S tyres at outside temperatures of less than 50 °F.

Observe the following when selecting, fitting and replacing tyres:

- Country-specific requirements for tyre approval that define a specific tyre type for your vehicle.
  - Furthermore, the use of certain tyre types in certain regions and areas of operation can be highly beneficial.
- Only use tyres and wheels of the same type (summer tyres, winter tyres, MOExtended tyres) and the same make.
- Only fit wheels of the same size on one axle (left and right).
- It is only permissible to fit a different wheel size in the event of a flat tyre in order to drive to the specialist workshop.
- Only fit tyres of the correct size onto the wheels.

- Do not make any modifications to the brake system, the wheels or the tyres.
  - The use of shims or brake dust shields is not permitted and may invalidate the vehicle's general operating permit.
- Vehicles with a tyre pressure monitoring system: all fitted wheels must be equipped with functioning sensors for the tyre pressure monitoring system.
- At temperatures below 7 °C, use winter tyres or all-season tyres marked M+S for all wheels.

Winter tyres bearing the A snowflake symbol in addition to the M+S marking provide the best possible grip in wintry road conditions.

- For M+S tyres, only use tyres with the same tread
- Observe the maximum permissible speed for the M+S tyres fitted.

If this is below the vehicle's maximum speed, this must be indicated in an appropriate label in the driver's field of vision.

- Run in new tyres at moderate speeds for the first 100 km.
- Replace the tyres after six years at the latest, regardless of wear.
- When replacing with tyres that do not feature run-flat characteristics: vehicles with MOExtended tyres are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tyres that do not feature run-flat characteristics, e.g. winter tyres.

For more information on wheels and tyres, contact a qualified specialist workshop.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 409)
- Tyre pressure table (→ page 410)
- Notes on the emergency spare wheel (→ page 427)

## Notes on interchanging wheels

**WARNING** Risk of injury through different wheel sizes

Interchanging the front and rear wheels if the wheels or tyres have different dimensions may severely impair the driving characteris-

The disk brakes or wheel suspension components may also be damaged.

Rotate front and rear wheels only if the wheels and tyres are of the same dimensions.

Interchanging the front and rear wheels if the wheels or tyres have different dimensions can render the general operating permit invalid.

The wear patterns on the front and rear wheels differ:

- · Front wheels wear more on the shoulder of
- · Rear wheels wear more in the centre of the tyre

On vehicles with the same front and rear wheel size, you can interchange the wheels every 5,000 to 10,000 km, depending on the wear. Ensure the direction of rotation is maintained for the wheels.

It is imperative to observe the instructions and safety notes on "Wheel change" when doing so.

## Notes on storing wheels

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tyres from contact with oil, grease or fuel.

## Overview of the tyre-change tool kit


Apart from some country-specific variants, vehicles are not equipped with a tyre-change tool kit. For more information on which tyre-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

Required tyre-change tool kits may include, for example:

- Jack
- Chock
- Wheel wrench
- Centring pin
- (i) The jack weighs approximately 3.4 kg. The maximum payload of the jack can be found on the sticker affixed to the jack. The jack is maintenance-free. If there is a malfunction, please contact a qualified specialist workshop.

The tyre-change tool kit is in tool bag 10 under the load compartment floor.

## 422 Wheels and tyres

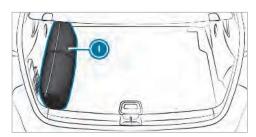

## 1 Tool bag

Tool bag ① contains:

- Jack
- Gloves
- · Wheel wrench
- Centring pin
- Folding wheel chock
- · Ratchet for jack

## Setting up the folding wheel chock



## Preparing the vehicle for a wheel change

### Requirements:

The required tyre-change tool kit is available.
 If your vehicle is not equipped with the tyre-change tool kit, consult a qualified specialist workshop to find out about suitable tools.

- The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.
- Apply the electric parking brake manually.
- Move the front wheels to the straight-ahead position.
- ➤ Vehicles with automatic transmission: shift into position P.
- Switch off the engine.
- Make sure that the engine cannot be started.
- Place chocks or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- Remove the hub caps if necessary (→ page 422).
- Raising the vehicle (→ page 423).


## Removing and fitting hub caps

## Requirements:

 The vehicle is prepared for a wheel change (→ page 422).

#### Vehicles with steel wheels

The wheel trim covers the wheel bolts. Before you can unscrew the wheel bolts, you must remove the wheel trim.

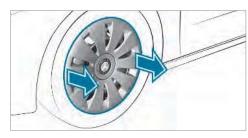

To remove: using both hands, carefully reach into two wheel trim openings and remove the wheel trim.

## Plastic hub cap

- **To remove:** turn the centre cover of the hub cap anti-clockwise and remove the hub cap.
- **To fit:** make sure that the centre cover of the hub cap is turned anti-clockwise.

Position the hub cap and turn the centre cover clockwise until the hub cap engages physically and audibly.

#### Raising the vehicle when changing a wheel


## Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change ( $\rightarrow$  page 422).
- The hub caps have been removed  $(\rightarrow page 422)$ .

Important notes on using the jack:


- only use the vehicle-specific jack that has been tested and approved by Mercedes-Benz to raise the vehicle.
- · the jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- the jack must be placed on a firm, flat and non-slip surface. If necessary, use a large, load-bearing, non-slip underlay.

• the foot of the jack must be positioned vertically under the jacking point.

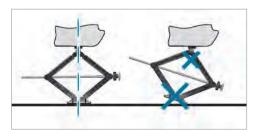


Rules of conduct when the vehicle is raised:

- Never place your hands or feet under the vehicle.
- Do not lie under the vehicle.
- Do not start the engine and do not release the electric parking brake.
- Do not open or close any doors or the tailgate.

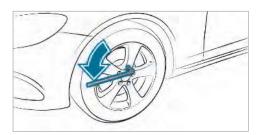

Using the wheel wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the bolts completely.

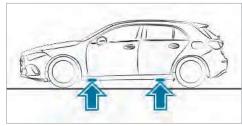

Position of jack support points

**WARNING** Risk of injury from incorrect positioning of the jack


If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.

Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

! NOTE Vehicle damage from the jack

If you do not position the jack correctly at the appropriate jack support point of the vehicle, the jack could tip over with the vehicle raised.

- The jack is designed exclusively for jacking up the vehicle at the jack support points.
- ➤ Take the ratchet ring spanner out of the tyrechange tool kit and place it on the hexagon nut of the jack so that the lettering "AUF" is visible.

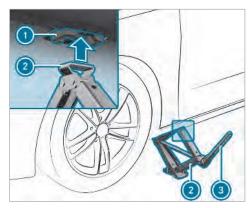

- Position jack ② at jack support point ①.
- Turn ratchet ring spanner (3) clockwise until jack 2 sits completely on jack support point 1 and the base of the jack lies evenly on the ground.
- Continue to turn ratchet ring spanner (3) until the tyre is raised a maximum of 3 cm off the ground.
- Loosen and remove the wheel (→ page 425).


## Removing a wheel

## Requirement:

The vehicle is raised (→ page 423).

When changing a wheel, avoid applying any force to the brake discs, since this could impair the level of comfort when braking.

- NOTE Damage to threading from dirt on wheel bolts
- Do not place wheel bolts in sand or on a dirty surface.
- Unscrew the uppermost wheel bolt completely.

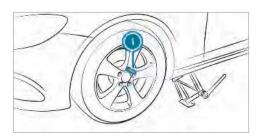

- Screw centring pin (1) instead of the wheel bolt into the threading.
- Unscrew the remaining wheel bolts fully.
- Remove the wheel.
- Fit the new wheel ( $\rightarrow$  page 425).

## Fitting a new wheel

## Requirement:

The wheel is removed (→ page 425).

## **WARNING** Risk of accident from losing a

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/ wheel nuts to come loose.

As a result, you could lose a wheel while driving.

- Never oil or grease the threads.
- In the event of damage to the threads, contact a qualified specialist workshop immediately.
- ► Have the damaged wheel bolts or damaged hub threads replaced.
- ▶ Do not continue driving.
- Observe the information on the choice of tyres (→ page 418).

For tyres with a specified direction of rotation, an arrow on the side wall of the tyre indicates the correct direction of rotation. Observe the direction of rotation when fitting.

Slide the wheel to be mounted onto the centring pin and push it on.

## **WARNING** Risk of injury from tightening wheel bolts and nuts


If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.
- For safety reasons, only use wheel bolts which have been approved by Mercedes-Benz and for the wheel in question.
- Tighten the wheel bolts until they are fingertight.
- Unscrew the centring pin.
- Tighten the last wheel bolt until it is fingertight.
- ▶ Lower the vehicle ( $\rightarrow$  page 426).

## Lowering the vehicle after a wheel change


#### Requirements:

- The new wheel has been fitted ( $\rightarrow$  page 425).
- Place the ratchet ring spanner onto the hexagon nut of the jack so that the lettering "AB" is visible.
- ➤ To lower the vehicle: turn the ratchet ring spanner of the jack anti-clockwise.

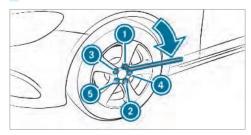

➤ Tighten the wheel bolts evenly in a diagonal pattern in the order indicated ( to s).

 Specified tightening torque: 130 Nm.



The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed tightening torque.

- ▶ Have the tightening torque checked immediately at a qualified specialist workshop after changing a wheel.
- Check the tyre pressure of the newly mounted wheel and adjust accordingly.
- Vehicles with tyre pressure loss warning system: restart the tyre pressure loss warning system ( $\rightarrow$  page 417). **Exception:** the new wheel is an emergency spare wheel.
- Vehicles with a tyre pressure monitoring system: restart the tyre pressure monitoring system ( $\rightarrow$  page 412).
  - **Exception:** the new wheel is an emergency spare wheel.

Make sure to observe the following further related subject:

Notes on tyre pressure (→ page 409)

## **Emergency spare wheel**

Notes on the emergency spare wheel

**WARNING** Risk of accident caused by incorrect wheel and tyre dimensions

The wheel or tyre size and the tyre type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. Mounting an emergency spare wheel/spare wheel may severely impair the driving characteristics.

To prevent hazardous situations:

- Adapt your driving style accordingly and drive carefully.
- Never fit more than one emergency spare wheel or spare wheel that differs in size.

- Only use an emergency spare wheel or spare wheel of a different size briefly.
- Do not switch off ESP®.
- Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist workshop. The new wheel must have the correct dimensions.

Check the tyre pressure of the emergency spare wheel fitted. Correct the pressure as necessary.

The maximum permissible speed with an emergency spare wheel fitted is 80 km/h.

Do not fit the emergency spare wheel with snow chains.

Replace the emergency spare wheel after six years at the latest, regardless of wear.

(i) Vehicles with a tyre pressure loss warning system: If an emergency spare wheel is fitted the tyre pressure loss warning system cannot function reliably. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Vehicles with a tyre pressure monitoring system: If an emergency spare wheel is fitted the tyre pressure monitoring system cannot function reliably. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Vehicles with a tyre pressure monitoring system: For a few minutes after an emergency spare wheel is fitted, the system may still display the tyre pressure of the removed wheel.

Be sure to also observe the following further related subjects:

- Notes on tyre pressure (→ page 409)
- Tyre pressure table (→ page 410)

#### Removing the emergency spare wheel

The emergency spare wheel is secured in the emergency spare wheel bag in the load compartment.

- Observe the information on mounting tyres (→ page 418).
- Open the tailgate.

- Detach the fastening straps.
- Unhook the retaining spring hooks of the fastening straps from the brackets.
- Remove the emergency spare wheel bag with the emergency spare wheel.
- Open the emergency spare wheel bag and remove the emergency spare wheel.

## Notes on technical data

The technical data was determined in accordance with EU Directives. The data stated only applies to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Centre.

Only for certain countries: you can find vehicle-specific vehicle data in the EC-Certificate of Conformity (CERTIFICATE OF CONFORMITY). These documents are delivered with your vehi-

#### **On-board electronics**

Notes on tampering with the engine electronics



**NOTE** Premature wear through improper maintenance

Improper maintenance may cause vehicle components to wear more quickly and the vehicle's operating permit may be invalidated.

Always have work on the engine electronics and related components carried out at a qualified specialist workshop.

## Two-way radios

## Notes on installing two-way radios



**WARNING** Risk of accident due to improper work on two-way radios

The electromagnetic radiation from two-way radios can interfere with the on-board electronics if RF transmitters are manipulated or retrofitted incorrectly.

This could jeopardise the operating safety of the vehicle.

You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

**WARNING** Risk of accident from incorrect operation of two-way radios

If you operate two-way radios incorrectly in the vehicle, the electromagnetic radiation could interfere with the on-board electronics. e.g.:

- if the two-way radio is not connected to an exterior aerial
- if the exterior aerial is not correctly mounted or is not of low reflection


This could jeopardise the operating safety of the vehicle.

- ▶ Have the low-reflection exterior aerial fitted at a qualified specialist workshop.
- ▶ When operating two-way radios in the vehicle, always connect them to the low-reflection exterior aerial.

NOTE Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- Only use approved frequency bands.
- Observe the maximum permissible output power in these frequency bands.
- Only use approved aerial positions.

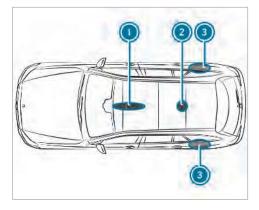

- Front roof area
- Rear roof area
- Rear wing

On vehicles with a panoramic sliding sunroof, installing an aerial to the front or rear roof area is not permitted.

On the rear wings, it is recommended that you install the aerial on the side of the vehicle closest to the centre of the road.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has fittings for two-way radio equipment, use the power supply or aerial connectors intended for use with the basic wiring. Be sure to observe the manufacturer's Supplements when installing.

## Two-way radio transmission output

The maximum transmission output (PEAK) at the base of the aerial must not exceed the values in the following table:

#### frequency band and maximum transmission output

Frequency band	Maximum transmis- sion output
Short wave 3 - 54 MHz	100 W
4 m frequency band 74 - 88 MHz	30 W
2 m frequency band 144 - 174 MHz	50 W
Trunked radio system/Tetra 380 - 460 MHz	10 W
70 cm frequency band 420 - 450 MHz	35 W
Two-way radio (2G/3G/4G)	10 W

The following can be used in the vehicle without restrictions:


- two-way radios with a maximum transmission output of up to 100 mW
- two-way radios with transmitter frequencies in the 380 410 MHz frequency band and a maximum transmission output of up to 2 W (trunked radio system/Tetra)
- mobile phones (2G/3G/4G)


There are no restrictions when positioning the aerial on the outside of the vehicle for the following frequency bands:

- trunked radio system/Tetra
- 70 cm frequency band
- 2G/3G/4G

#### Vehicle identification plate, VIN and engine number


#### Vehicle identification plate

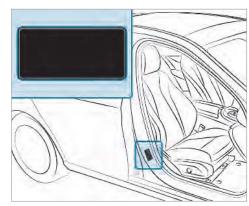

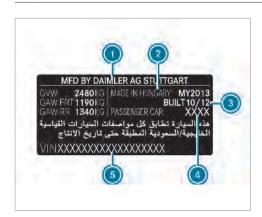

Vehicle identification plate (example: Kuwait)

- Vehicle manufacturer
- Place of manufacture
- Manufacturing date
- Vehicle model
- VIN

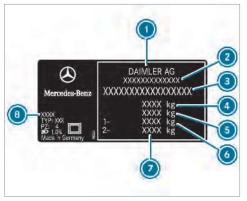


Vehicle identification plate (example: all other countries)

- Vehicle manufacturer
- ② EU general operating permit number (only for certain countries)
- 3 VIN (vehicle identification number)
- Permissible gross mass (kg)
- Permissible gross mass of vehicle combination (kg) (only for specific countries)

- Permissible front axle load (kg)
- Permissible rear axle load (kg)
- Paint code
- (i) The data shown in the illustration is example data

#### VIN and engine number

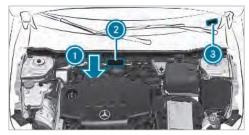

- Engine number stamped into the crankcase
- VIN (vehicle identification number) stamped into the crossmember
- 3 VIN (vehicle identification number) at the lower edge of the windscreen

The VIN at the lower edge of the windscreen (3) is only available in some countries. You can obtain further information from any qualified specialist workshop.



#### Notes on operating fluids

**WARNING** Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- Observe the text on the original containers when using, storing or disposing of operating fluids.
- Always store operating fluids sealed in their original containers.
- Always keep children away from operating fluids.

**ENVIRONMENTAL NOTE** Environmental pollution caused by environmentally irresponsible disposal

Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- fuels
- · exhaust gas aftertreatment additives, e.g. AdBlue<sup>®</sup>
- lubricants
- coolant
- brake fluid
- · windscreen washer fluid
- · climate control system refrigerant

Only use products approved by Mercedes-Benz. Damage caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

You can identify operating fluids approved by Mercedes-Benz by the following inscription on the containers:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids:

- in the Mercedes-Benz Specifications for operating fluids at http://bevo.mercedesbenz.com (by entering the designation)
- in the Mercedes-Benz Specifications for Operating Fluids in the Mercedes-Benz BeVo app (by entering the designation)
- · at a qualified specialist workshop

**WARNING** Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, naked flames, smoking and creating sparks must be avoided.
- Switch off the ignition and, if it has been in use, switch off the stationary heater before you refuel your vehicle.

#### **WARNING** Risk of injury from fuel

Fuels are poisonous and harmful to your health

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapour.
- Keep children away from fuel.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel.

#### **Fuel**

## Information on fuel grades for vehicles with petrol engines

Observe the notes on operating fluids ( $\rightarrow$  page 433).

I NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Only refuel using unleaded fuel that conforms to EN 228, or an equivalent specification.

Fuel of this specification may contain up to 10 % ethanol. Your vehicle is suitable for use with E10 fuel.

Do not refuel using:

- diesel
- E85, E100
- petrol containing methanol (M15, M30, M85, M100)

petrol with additives containing metal

If you accidentally refuel with the wrong fuel:

- do not switch the ignition on.
- consult a qualified specialist workshop.

If the available fuel is not sufficiently low in sulphur, this can produce unpleasant odours.

The recommended octane number for your vehicle can be found on the instruction label in the fuel filler flap ( $\rightarrow$  page 154).

As a temporary measure, if the recommended fuel is not available, you may also use regular unleaded petrol with at least 91 RON. This may reduce engine output and increase fuel consumption.

Never refuel using petrol with a lower RON. Further information on fuel can be found:

- at a filling station
- · at a qualified specialist workshop

Information on additives in petrol Observe the notes on service products (→ page 433).

! NOTE Damage caused by non-approved additives

Even small amounts of the wrong additive may lead to malfunctions occurring.

Only add cleaning additives recommended by Mercedes-Benz to the fuel.

Mercedes-Benz recommends that you use brand-name fuels with additives.

The fuel grade available in some countries may not be sufficient. Residue could build up in the fuel injection system as a result. In this case, in consultation with a Mercedes-Benz Service Centre, the fuel may be mixed with the cleaning additive recommended by Mercedes-Benz. Be sure to observe the notes and mixing ratios specified on the container.

## Information on fuel grades for vehicles with a diesel engine

#### **General notes**

Observe the notes on operating fluids ( $\rightarrow$  page 433).

**WARNING** Risk of fire through fuel mixture

If you mix diesel fuel with petrol, the flash point of the fuel mixture is lower than that of pure diesel fuel.

While the engine is running, component parts in the exhaust system may overheat unnoticed.

- Never refuel using petrol.
- Never mix diesel fuel with petrol.

NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- Only refuel using diesel fuel that conforms to EN 590, or an equivalent specification.
- Vehicles with diesel particulate filters: in countries outside the EU, only use low-sulphur Euro diesel with a sulphur content of under 50 ppm.

Do not use the following:

- petrol
- marine diesel
- · heating oil
- bio-diesel
- · vegetable oil
- paraffin
- kerosene

#### Information on low outside temperatures

Refuel your vehicle with as much winter diesel fuel as possible at the beginning of winter.

Before changing over to winter diesel fuel, the fuel tank should be empty, if possible. When refuelling with winter diesel fuel for the first time, keep the fuel level low, for example at reserve level. The fuel tank can be filled as usual when next refuelling.

Further information on fuel can be found:

- at a filling station
- at a qualified specialist workshop

#### Tank content and fuel reserve

The total capacity of the fuel tank may vary, depending on the vehicle equipment.

#### Capacity

Model	Total capacity
A 250	43.0 l or 51.0 l
All other models	43.0 I
Model	of which reserve fuel
All models	5.0

#### Adblue<sup>®</sup>

#### Notes on AdBlue®

Observe the notes on operating fluids ( $\rightarrow$  page 433).

AdBlue® is a water-soluble fluid for the exhaust gas aftertreatment of diesel engines.

I NOTE Damage caused by mixing additives with AdBlue® or from diluting AdBlue®

The BlueTEC exhaust gas aftertreatment system could be destroyed by:

- Additives in AdBlue<sup>®</sup>
- Diluting AdBlue®
- Only use AdBlue® in accordance with ISO 22241.
- Do not add additives.
- Do not dilute AdBlue®.

I NOTE Damage and malfunctions due to impurities in AdBlue®

Impurities in AdBlue® lead to:

- Increased emissions values
- Damage to the catalytic converter
- Engine damage
- BlueTEC exhaust gas aftertreatment malfunctions

Avoid impurities in AdBlue<sup>®</sup>.

**ENVIRONMENTAL NOTE** Contamination caused by AdBlue®

AdBlue® residues crystallise after a period of time, and contaminate the surfaces with which they come into contact.

Surfaces that have come into contact with AdBlue<sup>®</sup> while refilling must be immediately rinsed with water, or AdBlue<sup>®</sup> must be removed with a damp cloth and cold water.

If AdBlue<sup>®</sup> has already crystallised, clean it with a sponge and cold water.

When you open the AdBlue® tank, small amounts of ammonia vapour may escape. Do not inhale any ammonia vapours that may be released. Only fill the AdBlue® tank in well-ventilated areas.

#### AdBlue® capacity

Missing values were not available at the time of going to press.

#### Total capacity of AdBlue® tank

Model	Total capacity
All models	23.8

#### **Engine oil**

#### Notes on engine oil

Observe the notes on service products ( $\rightarrow$  page 433).



- NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives
- Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- Have the engine oil renewed at regular intervals.

Mercedes-Benz recommends that you have the oil change carried out at a qualified specialist workshop.

Only Mercedes-Benz approved engine oils may be used in Mercedes-Benz engines.

Further information on engine oils and oil filters:

 in the Mercedes-Benz Specifications for Service Products at http://bevo.mercedesbenz.com (by entering the designation) at a qualified specialist workshop

**Petrol engines:** for certain countries, different engine oils can be used in conjunction with reduced maintenance intervals.

(i) Further information on different engine oils can be obtained at a qualified specialist workshop.

#### Quality and capacity of engine oil

#### MB-Freigabe or MB-Approval

Petrol engines	MB-Freigabe or MB- Approval
All models	229.51, 229.52, 229.61, 229.71

#### MB-Freigabe or MB-Approval

Diesel engines	MB-Freigabe or MB- Approval
All models	226.51, 229.31, 229.51, 229.52, 229.61, 229.71

If the engine oils listed in the table are not available, you may add a maximum of 1.0 I of the following engine oils once only:

- petrol engines: MB-Freigabe or MB-Approval 229.31 or ACEA C3
- diesel engines: ACEA C3

The following values refer to an oil change, including the oil filter.

#### Replacement amount

Model	Replacement amount
A 180 d	5.5 I
All other models	5.1

#### Notes on brake fluid

Observe the notes on operating fluids ( $\rightarrow$  page 433).

WARNING Risk of an accident due to vapour pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapour pockets may form in the brake system when the brakes are applied hard.

This impairs the braking effect.

Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly changed at a qualified specialist workshop.

Only use brake fluid approved by Mercedes-Benz according to MB-Freigabe or MB-Approval 331.0.

Further information on brake fluid:

- in the Mercedes-Benz Specifications for Operating Fluids at http://bevo.mercedesbenz.com
- at a qualified specialist workshop

#### Coolant

#### Notes on coolant

Observe the notes on service products (→ page 433).

**WARNING** Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- Allow the engine to cool down before you top up the antifreeze.
- Make sure that no antifreeze spills out next to the filler opening.
- ➤ Thoroughly clean the antifreeze from component parts before starting the vehicle.

- NOTE Damage caused by incorrect coolant
- Only add coolant that has been premixed with the required antifreeze protection.

Further information on coolant:

- In the Mercedes-Benz Specifications for Operating Fluids 310.1, e.g. online at http://bevo.mercedes-benz.com.
- At a qualified specialist workshop.
- ! NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the engine cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- Always use coolant approved by Mercedes-Benz.
- Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 310.1.

Have the coolant regularly replaced at a qualified specialist workshop.

The proportion of corrosion inhibitor/antifreeze concentrate in the engine cooling system should be:

- a minimum of 50% (antifreeze protection down to approximately -37 °C).
- a maximum of 55% (antifreeze protection down to -45 °C).

#### Notes on windscreen washer fluid

Observe the notes on service products ( $\rightarrow$  page 433).

**WARNING** - Risk of fire and injury due to windscreen washer concentrate

Windscreen washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

Make sure that no windscreen washer concentrate spills out next to the filler opening. NOTE Damage to the exterior lighting due to unsuitable windscreen washer fluid

Unsuitable windscreen washer fluids may damage the plastic surface of the exterior lighting.

- Only use windscreen washer fluids which are also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.
- NOTE Blocked spray nozzles caused by mixing windscreen washer fluids
- Do not mix MB SummerFit and MB WinterFit with other windscreen washer fluids.

Do not use distilled or de-ionised water as the fill level sensor may be triggered erroneously.

Recommended windscreen washer fluid:

- Above freezing point: e.g. MB SummerFit
- Below freezing point: e.g. MB WinterFit

#### 440 Technical data

For the correct mixing ratio, refer to the information on the antifreeze container.


Mix the washer fluid with the windscreen washer fluid all year round.

#### Vehicle data

#### **Vehicle dimensions**

The heights specified may vary as a result of the:

- tyres
- load
- condition of the suspension
- · optional equipment

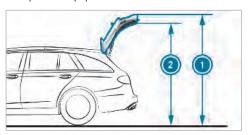

#### Height when opened and headroom

Model	Height when opened	2 Head- room
A 250	2002 mm	1857 mm
All other models	1997 mm	1852 mm

#### Vehicle dimensions

All models	
Vehicle length	4419 mm
Vehicle width including outside mirrors	1992 mm
Vehicle width excluding outside mirrors	1796 mm
Wheelbase	2729 mm

#### Vehicle height

Model	
A 250	1445 mm
All other models	1440 mm

#### Weights and loads

Please note that for the specified vehicle data:

- items of optional equipment increase the unladen weight and reduce the payload.
- vehicle-specific weight information can be found on the vehicle identification plate .

#### Roof load

All models	
Maximum roof load	100 kg

#### Trailer hitch


#### General notes on the trailer hitch


Not all models can be used to tow a trailer  $(\rightarrow page 221)$ .

Modifications to the engine cooling system may be necessary, depending on the vehicle model.
The retrofitting of a trailer hitch is only permissible if a towing capacity is specified in your vehicle documents.

Further information can be obtained at a qualified specialist workshop.

#### **Mounting dimensions**

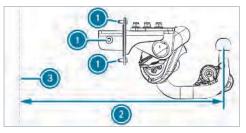

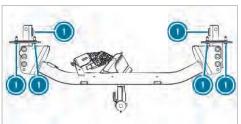

- Fastening point
- Overhang dimension
- 3 Rear axle centre line

The overhang dimension and fastening points are valid for a trailer hitch installed at the fac-

Missing values were not available at the time of going to press.

Model	Over- hang dimen- sion
All models	

#### Permissible towing capacity

The tongue weight is not included in the towing capacity.

Permissible towing capacity, braked (at a minimum start-off gradeability of 8 %)

Model	Permissible towing capacity, braked
A 180 d	1600 kg
All other models	1800 kg

#### 442 Technical data

# Permissible towing capacity, braked (at a minimum start-off gradeability of 12 %)

Model	Permissible towing capacity, braked
A 180 d	1400 kg
All other models	1600 kg

#### Permissible towing capacity, unbraked

Model	Permissible towing capacity, unbraked
A 180 d	705 kg
A 200	680 kg
A 250	720 kg

#### Maximum tongue weight

NOTE Damage caused by the trailer coming loose

If the tongue weight used is too low, the trailer may come loose.

- The tongue weight must not be below 50 kg.
- Use a tongue weight that is as close as possible to the maximum permissible tongue weight.

#### Maximum tongue weight

Model		
All models		80 kg

# Permissible rear axle load during trailer operation

#### Axle load

Model	Axle load
A 180 d	970 kg
A 200	976 kg
A 250	986 kg

#### Introduction

#### Notes on display messages

Display messages appear on the multifunction display.

Display messages with graphic symbols are simplified in the Owner's Manual and may differ from the symbols on the multifunction display. The multifunction display shows high-priority display messages in red. Certain display messages are accompanied by a warning tone.

Please respond in accordance with the display messages and follow the additional notes in this Owner's Manual.

For some display messages, a symbol is also shown:

• **i** Further information

Hide display message

You can select the desired symbol by swiping left or right on the left-hand touch control. Press the i symbol to show further information on the multifunction display. Press the symbol to hide the display message.

You can hide low-priority display messages by pressing the 🕞 button or the left-hand touch control. The display messages are then stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The multifunction display shows these display messages continuously until the cause of the message has been rectified.

#### Calling up stored display messages On-board computer:

¬→ Service → 1 message

If there are no display messages, No messages appears on the multifunction display.

- Scroll through the display messages by swiping upwards or downwards on the left-hand touch control.
- ► To exit the message memory: press the û≤ button.

#### Safety systems

## Display messages

# (ABS)



inoperative See Owner's Manual

#### Possible causes/consequences and ▶ Solutions

\* ABS and ESP® are malfunctioning.

Other driving and driving safety systems may also be malfunctioning.

The brake system continues to operate normally. The braking distance may increase in an emergency braking situation.

**A** WARNING Risk of skidding if ABS and ESP® are malfunctioning

If ABS and  $\mathsf{ESP}^{\$}$  are malfunctioning, the wheels could lock when braking and  $\mathsf{ESP}^{\$}$  cannot carry out vehicle stabilisation.

The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ► Have ABS and ESP® checked immediately at a qualified specialist workshop.
- Drive on carefully.
- Consult a qualified specialist workshop immediately.



currently unavailable See Owner's Manual

#### Possible causes/consequences and > Solutions

\* ABS and ESP® are temporarily unavailable.

Other driving systems and driving safety systems may also be temporarily unavailable.


The brake system continues to operate normally. The braking distance may increase in an emergency braking situation.

#### **A** WARNING Risk of skidding if ABS and ESP® are malfunctioning

If ABS and ESP® are malfunctioning, the wheels could lock when braking and ESP® cannot carry out vehicle stabilisation.

The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ► Have ABS and ESP® checked immediately at a qualified specialist workshop.
- Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 30 km/h.
- If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

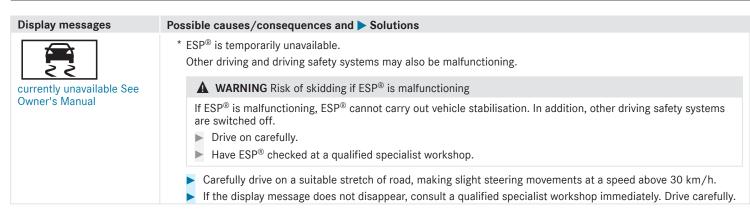



inoperative See Owner's Manual

#### Possible causes/consequences and ▶ Solutions

\* ESP® is malfunctioning.


Other driving and driving safety systems may also be malfunctioning.

The brake system continues to operate normally. The braking distance may increase in an emergency braking situation.

#### **A** WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ► Have ESP® checked at a qualified specialist workshop.
- Drive on carefully.
- Consult a qualified specialist workshop immediately.

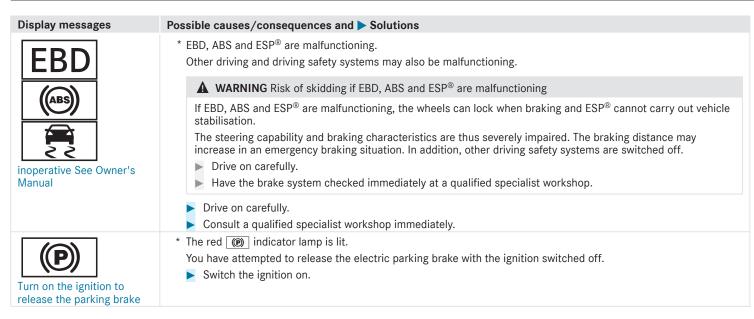

#### Display messages Possible causes/consequences and ▶ Solutions \* The red (P) indicator lamp flashes. The electric parking brake is applied while you are driving: • A condition for automatic release of the electric parking brake is not fulfilled . Release parking brake • You are performing emergency braking using the electric parking brake . ▶ Check that the conditions for automatic release of the electric parking brake are fulfilled. Release the electric parking brake manually.



Parking brake See Owner's Manual

#### Possible causes/consequences and > Solutions

\* The yellow place indicator lamp is lit. The electric parking brake is malfunctioning.

#### To apply:

- Switch off the ignition and switch it back on.
- Apply the electric parking brake manually .

If it is not possible to apply the electric parking brake:

- Consult a qualified specialist workshop.
- ▶ Where necessary, also safeguard the parked vehicle against rolling away.

The yellow (a) indicator lamp and the red (b) indicator lamp are lit. The electric parking brake is malfunctioning.

#### To release:

- Switch off the ignition and switch it back on.
- Release the electric parking brake manually .

or

▶ Release the electric parking brake automatically .

If it is still not possible to release the electric parking brake:

Do not continue driving under any circumstances. Consult a qualified specialist workshop.

The yellow (a) indicator lamp is lit and the red (b) indicator lamp is flashing. The electric parking brake is malfunctioning.

The electric parking brake could not be applied or released.

#### Display messages Possible causes/consequences and > Solutions Switch off the ignition and switch it back on. To apply: Release and then apply the electric parking brake manually. To release: Apply and then release the electric parking brake manually. If it is not possible to apply the electric parking brake or the red (n) indicator lamp continues to flash: Do not continue driving under any circumstances. Consult a qualified specialist workshop. Where necessary, also safeguard the parked vehicle against rolling away. The yellow ( indicator lamp is lit and the red ( indicator lamp flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning. If the battery charge level is too low: Charge the battery. To apply: Switch off the ignition. The electric parking brake is applied automatically.

Display messages	Possible causes/consequences and ▶ Solutions
	If the electric parking brake should not be applied, e.g. when washing the vehicle in an automatic car wash or wher having the vehicle towed, leave the ignition switched on. Do not do this when having the vehicle towed with the rear axle raised.
	If the electric parking brake is not applied automatically:
	Switch off the ignition and switch it back on.
	Release and then apply the electric parking brake manually .
	If it is still not possible to apply the electric parking brake:
	Consult a qualified specialist workshop.
	Where necessary, also safeguard the parked vehicle against rolling away.
	To release:
	If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually.
	If it is still not possible to release the electric parking brake:
	Do not continue driving under any circumstances. Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	* There is insufficient brake fluid in the brake fluid reservoir.
	▲ WARNING Risk of an accident due to low brake fluid level
Check brake fluid level	If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
	<ul><li>Consult a qualified specialist workshop.</li><li>Do not top up the brake fluid.</li></ul>
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
	<ul><li>Consult a qualified specialist workshop.</li><li>Do not top up the brake fluid.</li></ul>
101	* The brake pads have reached the wear limit.
Check brake pad wear	Consult a qualified specialist workshop.
Check brake pad wear	* At least one of the main functions of the Mercedes me connect system is malfunctioning.
Inoperative	Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Mercedes me connect Services limited See Own- er's Manual	<ul> <li>* Service limited.</li> <li>At least one of the main functions of the Mercedes me connect system is malfunctioning.</li> <li>Dobserve the notes on the diagnostics connection .</li> <li>Consult a qualified specialist workshop.</li> </ul>
Active Brake Assist Functions limited See Owner's	* <b>Vehicles with Driving Assistance Package</b> : Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS is malfunctioning.
Manual	Vehicles without Driving Assistance Package: Active Brake Assist is malfunctioning.
	Consult a qualified specialist workshop.
Active Brake Assist Functions currently limited See	* Vehicles with the Driving Assistance Package: Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS are temporarily unavailable or only partially available.
Owner's Manual	Vehicles without the Driving Assistance package: Active Brake Assist is temporarily unavailable.
	The ambient conditions are outside the system borders .
	Drive on. As soon as the ambient conditions are within the system borders, the system will become available again.
	If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine.
PRE-SAFE inoperative See	* PRE-SAFE® functions are malfunctioning.
Owner's Manual	Consult a qualified specialist workshop.



Restraint sys. malfunction Consult workshop

#### Possible causes/consequences and ▶ Solutions

\* The restraint system is faulty .

**A** WARNING Risk of injury or fatal injury due to a malfunction in the restraint system

If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example.

▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Detection of a restraint system malfunction:

- the prestraint system warning lamp does not light up when the ignition is switched on.
- the prestraint system warning lamp lights up continuously or repeatedly during a journey.
- Consult a qualified specialist workshop immediately.

Front left malfunction Consult workshop (example)

Left windowbag malfunc-

tion Consult workshop (example)

#### Possible causes/consequences and ▶ Solutions

\* The corresponding restraint system is malfunctioning .

**A** WARNING Risk of injury or fatal injury due to a malfunction in the restraint system

If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example.

Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Detection of a restraint system malfunction:

- the prestraint system warning lamp does not light up when the ignition is switched on.
- the 🔭 restraint system warning lamp lights up continuously or repeatedly during a journey.
- Consult a qualified specialist workshop immediately.
- $^{\star}$  The corresponding windowbag is malfunctioning .

**MARNING** Risk of injury or fatal injury due to a malfunction in the window airbag

The window airbag might be triggered unintentionally or might not be triggered at all in the event of an accident with high deceleration.

- Have the window airbag checked and repaired immediately at a qualified specialist workshop.
- Consult a qualified specialist workshop immediately.

abled See Owner's Manual

## Front-passenger airbag dis-

#### Possible causes/consequences and > Solutions

\* The front passenger airbag is disabled, even though an adult or a person with a build corresponding to that of an adult is seated on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low.

**A** WARNING - Risk of injury or even fatal injury when the front passenger airbag is disabled

If the front passenger airbag is disabled, It will not be deployed in the event of an accident and cannot perform its intended protective function.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the dashboard.

- ▶ Be aware of the status of the front passenger airbag both before and during the journey.
- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.
- Check the status of the automatic front passenger airbag shutoff.
- If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
Front-passenger airbag enabled See Owner's Man- ual	<ul> <li>* The front passenger airbag is enabled while the vehicle is in motion:</li> <li>even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat</li> <li>even when the front passenger seat is not occupied</li> </ul>
	The system may detect objects or forces that are adding to the weight applied to the seat.
	▲ WARNING Risk of injury or fatal injury when using a child restraint system while the front passenger airbag is enabled
	If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident.
	The child could be struck by the airbag.
	Ensure, both before and during the journey, that the status of the front passenger airbag is correct.
	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE FRONT AIRBAG in front of it; DEATH or SERIOUS INJURY to the CHILD can occur.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.
	Check the status of the automatic front passenger airbag shutoff.
	▶ If necessary, consult a qualified specialist workshop immediately.

#### **Driving systems**

Display messages	Possible causes/consequences and ▶ Solutions
ATTENTION ASSIST: Take a break!	<ul> <li>* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (→ page 211).</li> <li>▶ If necessary, take a break.</li> </ul>
ATTENTION ASSIST inoperative	* ATTENTION ASSIST is malfunctioning.  Consult a qualified specialist workshop.
Active Lane Keeping Assist currently unavailable See Owner's Manual	<ul> <li>* Active Lane Keeping Assist is temporarily unavailable.</li> <li>The ambient conditions are outside the system borders (→ page 219).</li> <li>Drive on.</li> <li>As soon as the ambient conditions are within the system borders, the system will become available again.</li> </ul>
Active Lane Keeping Assist inoperative	<ul> <li>* Active Lane Keeping Assist is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Blind Spot Assist currently unavailable See Owner's Manual	<ul> <li>* Blind Spot Assist is temporarily unavailable. The system borders have been reached (→ page 216).</li> <li>▶ Drive on. Once the cause of the problem is no longer present, the system will be available again.</li> <li>or</li> <li>▶ If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine.</li> <li>▶ If necessary, clean the rear bumper. If the bumper is extremely dirty, the sensors in the bumper may be malfunctioning.</li> </ul>
Active Blind Spot Assist currently unavailable See Owner's Manual	<ul> <li>* Active Blind Spot Assist is temporarily unavailable. The system borders have been reached (→ page 216).</li> <li>▶ Drive on. Once the cause of the problem is no longer present, the system will be available again.</li> <li>▶ If the display message does not disappear, stop the vehicle while paying attention to road and traffic conditions and restart the engine.</li> </ul>
Blind Spot Assist not availa- ble when towing a trailer See Owner's Manual	<ul> <li>* When you establish the electrical connection to the trailer, Blind Spot Assist is unavailable.</li> <li>Press the left-hand touch control and acknowledge the display message.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Active Blind Spot Assist not available when towing a trailer See Owner's Man- ual	* When you establish the electrical connection to the trailer, Active Blind Spot Assist is unavailable.  Press the left-hand touch control and acknowledge the display message.
Blind Spot Assist inoperative	<ul> <li>* Blind Spot Assist is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Active Blind Spot Assist inoperative	<ul> <li>* Active Blind Spot Assist is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Active Parking Assist and PARKTRONIC inoperative See Owner's Manual	<ul> <li>* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning.</li> <li>Stop the vehicle, paying attention to road and traffic conditions, and restart the engine.</li> <li>If the display message continues to be displayed, consult a qualified specialist workshop.</li> </ul>
Traffic Sign Assist currently unavailable See Owner's Manual	<ul> <li>* Traffic Sign Assist is temporarily unavailable.</li> <li>Drive on.</li> <li>Once the cause of the problem is no longer present, the system will be available again.</li> </ul>
Traffic Sign Assist inoperative	<ul> <li>* Traffic Sign Assist is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>

#### Display messages and warning/indicator lamps

Display messages	Possible causes/consequences and ▶ Solutions
HOLD	* The HOLD function is deactivated because the vehicle is skidding or a condition for activation is not met.  Reactivate the HOLD function later or check the activation conditions for the HOLD function .
Active Distance Assist available again	* Active Distance Assist DISTRONIC is operational again and can be activated ( $\rightarrow$ page 184).
mph	* Active Distance Assist DISTRONIC cannot be activated as not all activation conditions have been fulfilled.  Comply with the activation conditions of Active Distance Assist DISTRONIC.

#### Display messages Possible causes/consequences and ▶ Solutions \* The radar sensor system is malfunctioning. Possible causes: soiling of the sensors heavy rain • extended country driving without other traffic, e.g. in the desert Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, driving systems and driving safety systems will become available again. Currently unavailable Radar sensors dirty If the display message does not disappear: ▶ Pull over and stop the vehicle safely, paying attention to road and traffic conditions. Clean all sensors. Restart the engine.

Display messages	Possible causes/consequences and ▶ Solutions
	<ul> <li>* The camera view is restricted. Possible causes:</li> <li>dirt on the windscreen in the camera's field of vision</li> <li>heavy rain, snow or fog</li> </ul>
OFF	Driving systems and driving safety systems may be malfunctioning or temporarily unavailable.  Once the cause of the problem is no longer present, driving systems and driving safety systems will become available again.
<b>≅</b> ®	If the display message does not disappear:  Pull over and stop the vehicle safely, paying attention to road and traffic conditions.  Clean the windscreen.
Currently unavailable Camera dirty	
Active Distance Assist cur- rently unavailable See Own- er's Manual	<ul> <li>* Active Distance Assist DISTRONIC is temporarily unavailable.</li> <li>The ambient conditions are outside the system borders (→ page 183).</li> <li>▶ Drive on.</li> <li>As soon as the ambient conditions are within the system borders, the system will become available again.</li> </ul>
Active Distance Assist inoperative	<ul> <li>* Active Distance Assist DISTRONIC is malfunctioning.</li> <li>Other driving and driving safety systems may also be malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Active Steering Assist currently unavailable See Owner's Manual	<ul> <li>* Active Steering Assist is temporarily unavailable.</li> <li>The ambient conditions are outside the system borders (→ page 188).</li> <li>Drive on.</li> <li>As soon as the ambient conditions are within the system borders, the system will become available again.</li> </ul>
Active Steering Assist inoperative	* Active Steering Assist is malfunctioning. Active Distance Assist DISTRONIC remains available.  Consult a qualified specialist workshop.
Limiter passive	* If you depress the accelerator pedal beyond the pressure point (kickdown), the limiter is switched to passive mode (→ page 181).
mph	* Cruise control cannot be activated as not all activation conditions are fulfilled.
	Observe the activation conditions for cruise control .
Cruise control off	* Cruise control has been deactivated.
	If there is an additional warning tone, cruise control has been switched off automatically ( $\rightarrow$ page 179) ( $\rightarrow$ page 179).

#### Display messages and warning/indicator lamps

Display messages	Possible causes/consequences and ▶ Solutions
Cruise control inoperative	<ul> <li>* Cruise control is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Cruise control and Limiter inoperative	<ul> <li>* Cruise control and the limiter are malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Limiter inoperative	<ul><li>* The limiter is malfunctioning.</li><li>Consult a qualified specialist workshop.</li></ul>
LIM mph	<ul> <li>* The limiter cannot be activated as not all activation conditions have been fulfilled.</li> <li>Deserve the activation conditions of the limiter .</li> </ul>
Speed limit (winter tyres) XXX mph	* You have reached the stored maximum speed for winter tyres. It is not possible to exceed this speed.
120 km/h!  Maximum speed exceeded	* The maximum permissible speed has been exceeded (only for certain countries).  Drive more slowly.

#### Engine

## Display messages Possible causes/consequences and > Solutions \* The coolant level is too low. Top up coolant See Owner's Manual **NOTE** Engine damage due to insufficient coolant Avoid long journeys with insufficient coolant. Add coolant . \* The coolant is too hot. > Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. Coolant Stop vehicle **A** WARNING Danger of burns when opening the bonnet Switch engine off If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids. ▶ Before opening the bonnet, allow the engine to cool down. ▶ In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service. Wait until the engine has cooled down. Make sure that the air supply to the radiator is not obstructed. Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Display messages	Possible causes/consequences and ▶ Solutions
<del></del>	* The battery is not being charged.
	I NOTE Possible engine damage if you continue driving
See Owner's Manual	▶ Do not continue driving under any circumstances.
	Consult a qualified specialist workshop.
	<ul> <li>Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine.</li> <li>Consult a qualified specialist workshop.</li> </ul>
	* The engine is off and the battery charge level is too low.
	Switch off electrical consumers that are not required.
Start engine See Owner's Manual	Leave the engine running for a few minutes, or drive for a longer distance.  The battery charges.

Display messages	Possible causes/consequences and ▶ Solutions
<del>_</del>	* The battery is no longer being charged and the battery charge level is too low.
	I NOTE Possible engine damage if you continue driving
Stop vehicle See Owner's	▶ Do not continue driving under any circumstances.
Manual	Consult a qualified specialist workshop.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
	➤ Switch off the engine.
	Consult a qualified specialist workshop.
<b></b>	* The battery charge level is too low.
- +	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
Stop vehicle Leave engine	➤ Leave the engine running.
running	Wait until the display message disappears before pulling away.

Display messages	Possible causes/consequences and ▶ Solutions
QI.	* The engine oil level has dropped to the minimum level.
	NOTE Engine damage caused by driving with insufficient engine oil
Check eng. oil lev. when next refuelling	Avoid long journeys with insufficient engine oil.
next refueiling	► Check the engine oil level when next refuelling.
	Top up the engine oil ( $\rightarrow$ page 378).
	Notes on engine oil (→ page 437).
AT a	* Display message only for certain engines:
	The engine oil level is too low.
Engine oil level Stop vehi-	I NOTE Engine damage caused by driving with insufficient engine oil
cle Switch engine off	Avoid long journeys with insufficient engine oil.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
	Switch off the engine.
	► Check the engine oil level.
	Top up the engine oil ( $\rightarrow$ page 378).
	Notes on engine oil (→ page 437).

# Display messages Possible causes/consequences and ▶ Solutions \* Display message only for certain engines: The engine oil level is too high. **NOTE** Engine damage caused by driving with excess engine oil Engine oil level Reduce oil level Avoid long journeys with excess engine oil. Consult a qualified specialist workshop immediately and have the engine oil siphoned off. \* Display message only for certain engines: The engine oil level has dropped to the minimum level. I NOTE Engine damage caused by driving with insufficient engine oil Add 1 litre engine oil when next refuelling Avoid long journeys with insufficient engine oil. ► Check the engine oil level when next refuelling. Top up the engine oil ( $\rightarrow$ page 378). Notes on engine oil ( $\rightarrow$ page 437).

Display messages	Possible causes/consequences and ▶ Solutions
مِين	* Display message only for certain engines: The engine oil pressure is too low.
Engine oil pressure Stop	I NOTE Engine damage caused by driving with insufficient engine oil pressure
Switch off engine	Avoid long journeys with insufficient engine oil pressure.
	<ul> <li>Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Engine oil level cannot be measured	<ul> <li>* The electrical connection to the oil level sensor is interrupted or the oil level sensor is faulty.</li> <li>The engine oil level has dropped to the minimum level.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Clean the fuel filter	<ul> <li>Vehicles with diesel engines: the fuel filter is dirty or the water in the fuel filter must be drained off.</li> <li>Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Replace air cleaner	<ul> <li>Vehicles with diesel engines: the engine air filter is dirty and must be replaced.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Reserve fuel level	* The fuel supply has dropped into the reserve range.  Refuel.
Antriebssystem Störung Anhalten Motor aus	<ul> <li>* The drive system is malfunctioning.</li> <li>Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Antriebssystem Störung Werkstatt aufsuchen	<ul> <li>* The drive system is malfunctioning.</li> <li>▶ Consult a qualified specialist workshop.</li> </ul>
<b>≈</b> ₩	* The fan motor is defective.  Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

Display messages	Possible causes/consequences and ▶ Solutions
Top up AdBlue Perf. reduced in XXX miles See Owner's Manual	* The low AdBlue <sup>®</sup> level will lead to limited performance after the remaining distance displayed has been driven.  Refill AdBlue <sup>®</sup> immediately .  The message disappears after driving at a speed above 15 km/h for approximately one minute.
Top up AdBlue Perf. reduced: XXX mph No start in XXX miles	* The low AdBlue <sup>®</sup> level will lead to limited performance as of the speed displayed.  After the displayed remaining distance has been covered, it will no longer be possible to start the engine.  Refill AdBlue <sup>®</sup> immediately.
AdBlue system fault Perf. reduced: XXX mph No start in XXX miles	<ul> <li>Power reduction due to the AdBlue<sup>®</sup> system fault. After the distance displayed has been covered, it will no longer be possible to start the engine.</li> <li>Consult a qualified specialist workshop immediately.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
*	<ul> <li>* The AdBlue® system is malfunctioning. You can no longer start the engine.</li> <li>▶ Consult a qualified specialist workshop immediately.</li> </ul>
AdBlue system fault Engine start not possible	
AdBlue system fault Perf. reduced in XXX miles See Owner's Manual	<ul> <li>* The AdBlue® system is malfunctioning. Performance will be reduced after the remaining distance displayed has been covered.</li> <li>▶ Consult a qualified specialist workshop immediately.</li> </ul>
AdBlue system fault See Owner's Manual	* The AdBlue® system is malfunctioning.  Consult a qualified specialist workshop immediately.
Refill AdBlue See Owner's Manual	* The AdBlue® level has fallen below the reserve range.  Refill AdBlue® immediately .

# Display messages

# Refill AdBlue Eng. start not possible

# Possible causes/consequences and ▶ Solutions

- \* The AdBlue® tank is empty. You can no longer start the engine.
- Top up at least 4.5 I of AdBlue®.

Switch the ignition on.
You can restart the engine after approximately one minute.

# Tyres

Display messages	Possible causes/consequences and ▶ Solutions
Tyre pressure Check tyres	* The tyre pressure loss warning system has detected a significant loss in pressure.
	▲ WARNING Risk of an accident due to insufficient tyre pressure
	Tyres with insufficient tyre pressure pose the following risks:
	The tyres may burst, especially as the load and vehicle speed increase.
	The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction.
	- The driving characteristics, steering and braking may be greatly impaired.
	You could then lose control of the vehicle.
	▶ Observe the recommended tyre pressures.
	Adjust the tyre pressure if necessary.
	Stop the vehicle, paying attention to road and traffic conditions.
	➤ Check the tyre pressure and the tyres.
	▶ When the tyre pressure is correct, restart the tyre pressure loss warning system .
Check tyre pressures then restart Run Flat Indicator	* The tyre pressure loss warning system generated a display message and has not been restarted since.
	▶ When the tyre pressure is correct, restart the tyre pressure loss warning system .
Run Flat Indicator inopera-	* The tyre pressure loss warning system is malfunctioning.
tive	Consult a qualified specialist workshop.

 
Display messages	Possible causes/consequences and ▶ Solutions
Rectify tyre pressure	<ul> <li>* The tyre pressure is too low in at least one of the tyres, or the tyre pressure difference between the wheels is too great.</li> <li>Check the tyre pressure and add air, if necessary.</li> <li>When the tyre pressure is correct, restart the tyre pressure monitoring system.</li> </ul>
	* The tyre pressure in one or more tyres has dropped significantly. The wheel position is displayed.
	▲ WARNING Risk of an accident due to insufficient tyre pressure
Check tyre(s)	Tyres with insufficient tyre pressure pose the following risks:
	The tyres may burst, especially as the load and vehicle speed increase.
	The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction.
	- The driving characteristics, steering and braking may be greatly impaired.
	You could then lose control of the vehicle.
	Observe the recommended tyre pressures.
	Adjust the tyre pressure if necessary.
	Stop the vehicle, paying attention to road and traffic conditions.
	➤ Check the tyre pressure and the tyres.

Display messages	Possible causes/consequences and ▶ Solutions
7.1	* The tyre pressure in one or more tyres has dropped suddenly. The wheel position is displayed.
	▲ WARNING Risk of an accident from driving with a flat tyre
Warning tyre defect	<ul> <li>Flat tyres are dangerous in the following ways:</li> <li>The tyres can overheat and cause a fire.</li> <li>The driving characteristics, steering and braking may be greatly impaired.</li> <li>You could then lose control of the vehicle.</li> <li>Do not drive with a flat tyre.</li> <li>Observe the notes on flat tyres.</li> </ul>
	Notes on flat tyres (→ page 390).  Stop the vehicle, paying attention to road and traffic conditions.  Check the tyres.
Tyre press. monitor currently unavailable	* No signals can be received from the tyre pressure sensors due to strong radio signal source interference. The tyre pressure monitoring system is temporarily unavailable.  Drive on. The tyre pressure monitoring system restarts automatically as soon as the cause has been rectified.

Display messages	Possible causes/consequences and ▶ Solutions
Wheel sensor(s) missing	<ul> <li>* There is no signal from the tyre pressure sensor of one or more wheels. The pressure of the affected tyre is not displayed.</li> <li>Have the faulty tyre pressure sensor replaced at a qualified specialist workshop.</li> </ul>
Tyre press. monitor inoperative No wheel sensors	* The wheels fitted do not have suitable tyre pressure sensors. The tyre pressure monitoring system is deactivated.  Fit wheels with suitable tyre pressure sensors.
Tyre press. monitor inoper-	* The tyre pressure monitoring system is faulty.
ative	▲ WARNING There is a risk of an accident if the tyre pressure monitoring system is malfunctioning
	If the tyre pressure monitoring system is malfunctioning, it is not able to issue a warning if there is pressure loss in one or more of the tyres.
	Tyres with insufficient tyre pressure may, for example, affect the vehicle's handling characteristics, steering and braking
	► Have the tyre pressure monitoring system checked at a qualified specialist workshop.
	Consult a qualified specialist workshop.
Tyre(s) overheated	* At least one tyre is overheating. The affected tyres are displayed in red. At temperatures close to the limit value, the tyres are displayed in yellow.
	➤ Drive more slowly.

Display messages	Possible causes/consequences and ▶ Solutions
Tyre(s) overheated Reduce speed	* At least one tyre is overheating.
	▲ WARNING Risk of an accident from driving with overheated tyres
	Overheated tyres may burst, particularly at high speeds.
	Reduce speed so that the tyres cool down.
	Reduce speed so that the tyres cool down.

# Key



Display messages	Possible causes/consequences and ▶ Solutions
Replace key See Owner's Manual	<ul> <li>* Vehicles with a digital vehicle key: only a few or no authorisations remain for starting the engine.</li> <li>Make sure that the internet connection is not limited by certain mobile phone settings.</li> <li>Open the Mercedes me connect web app http://www.mercedes.me. and call up the digital vehicle key service.</li> <li>Deactivate the service first and then activate it again.</li> <li>If the display message still appears, contact the Mercedes-Benz Customer Assistance Center (CAC).</li> <li>Vehicles with a digital vehicle key sticker: only a few or no authorisations remain for starting the engine.</li> <li>Order a new digital vehicle key sticker from a Mercedes-Benz Service Centre or at http://www.mercedes-benz.com/connect.</li> </ul>
Change key batteries	* The key battery is discharged.  Replace the battery.
Key not detected (white display message)	* The key is currently undetected.  Change the location of the key in the vehicle.  If the key is still not recognised, start the engine with the key in the stowage compartment.

### Display messages Possible causes/consequences and ▶ Solutions \* The key cannot be detected and may no longer be in the vehicle. The key is no longer in the vehicle and you switch off the engine: • you can no longer start the engine. Key not detected (red dis-• you cannot centrally lock the vehicle. play message) Ensure that the key is in the vehicle. If the key detection function has a malfunction due to a strong radio signal source: > Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. ▶ Place the key in the stowage compartment for starting the engine with the key . \* The key detection function is malfunctioning. Change the location of the key in the vehicle. Start the vehicle with the key in the stowage compartment . Place the key in the marked space See Owner's Manual

# Vehicle

# Display messages Possible causes/consequences and ▶ Solutions \* Retract or extend the ball neck. Do not attempt to speed up, slow down or initiate the retracting or extending process using your hand, foot or other aids. During the retracting or extending process, do not couple a trailer. When the ball neck has reached an operational position, the display message disappears.

#### Display messages



Check trailer hitch lock

#### Possible causes/consequences and > Solutions

- \* The trailer hitch is not operational when you are driving with a trailer.
- Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine.
- Uncouple the trailer and safeguard it against rolling away.
- Initiate a new swivelling procedure.
- When the display message disappears, couple up the trailer and drive on.

## ▲ WARNING Risk of an accident if the ball neck is not locked

If the ball neck is not in the locked position, the trailer may come loose.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Uncouple the trailer and secure it against rolling away.
- ▶ Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears.

If the display message does not disappear, the trailer hitch is defective and the ball neck is not locked.

- Do not couple up the trailer. Drive on without the trailer. Note the reduced ground clearance due to the unlocked ball neck.
- Consult a qualified specialist workshop.

The trailer hitch is not operational when the vehicle is at a standstill.

- Uncouple the coupled trailer and safeguard it against rolling away.
- Initiate a new swivelling procedure .

Display messages	Possible causes/consequences and ▶ Solutions
	If the display message does not disappear, the trailer hitch is defective and the ball neck is not locked.
	Do not couple up the trailer. Drive on without the trailer. Note the reduced ground clearance due to the unlocked ball neck.
	Consult a qualified specialist workshop.
Apply brake to deselect	* You have attempted to shift the transmission out of position [P] and into another transmission position.
Park (P) position	▶ Depress the brake pedal.
To shift out of P or N,	* You have attempted to shift the transmission out of position P or N into another transmission position.
depress brake and start	Depress the brake pedal.
engine	Start the engine.
Risk of vehicle rolling	* The driver's door is not fully closed and the transmission is in position R, N or D.
Driver door open and trans- mission not in P	Shift the transmission to position P when you park the vehicle.
N permanently active Risk	* While the vehicle is rolling or while you are driving, the transmission has been shifted to position N.
of vehicle rolling	Depress the brake pedal to stop and, when the vehicle is stationary, shift the transmission to position P.
	➤ To continue your journey, shift the transmission to position <b>D</b> or <b>R</b> .
Only select Park (P) when vehicle is stationary	* The transmission can be shifted to position P only when the vehicle is stationary.

Display messages	Possible causes/consequences and ▶ Solutions
Without changing gear, consult workshop	<ul> <li>* The transmission is malfunctioning. The transmission position can no longer be shifted.</li> <li>When the transmission is in position D, consult a qualified specialist workshop and do not shift the transmission position.</li> <li>For all other transmission positions, park the vehicle safely.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Vehicle is operational Switch off the ignition before exiting	<ul> <li>* You are leaving the vehicle when it is in a ready-to-drive state.</li> <li>When leaving the vehicle, switch off the ignition, secure the vehicle against rolling away and take the key with you.</li> <li>If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heater. Otherwise, the 12-V battery may discharge and it will then be possible to start the vehicle only using a donor battery (starting assistance).</li> </ul>
Transmission Malfunction Stop	<ul> <li>* The transmission is malfunctioning. The transmission shifts to position N automatically.</li> <li>Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.</li> <li>Switch the transmission to position P.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Reversing not poss. Consult workshop	<ul> <li>* The transmission is malfunctioning. Reverse gear can no longer be engaged.</li> <li>Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Auxiliary battery malfunction	<ul> <li>* The auxiliary battery for the transmission is no longer being charged.</li> <li>Consult a qualified specialist workshop.</li> <li>Until then, always manually set the transmission to position P before you switch off the engine.</li> <li>Before leaving the vehicle, apply the electric parking brake.</li> </ul>
Air conditioning Malfunction See Owner's Manual	<ul> <li>* Operation of the climate control system is temporarily restricted. Airflow and fresh air supply are set to automatic mode.</li> <li>Have the climate control system checked at a qualified specialist workshop.</li> </ul>
Getriebe Störung Werk- statt aufsuchen	* The transmission is malfunctioning.  Consult a qualified specialist workshop.
Teaching in transmission complete	* The transmission's teach-in process is complete. All transmission positions can be engaged again.
Getriebe wird eingelernt Wählhebel betätigen Bremse für XX s treten Wegrollgefahr	<ul> <li>* The transmission is being taught in. There is a risk of the vehicle rolling away.</li> <li>Depress and hold the brake pedal until the teach-in procedure has been completed. The electric parking brake is applied automatically during the teach-in procedure.</li> <li>Switch the ignition on.</li> <li>Select transmission position P, R or N.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Trans. oil overheated Drive on with care	<ul> <li>* The transmission is overheating. When the display message is active, starting up and driving characteristics may be temporarily impaired.</li> <li>Drive at low speeds.</li> <li>Avoid sporty driving.</li> <li>Before starting up on uphill gradients, let the transmission cool down until the display message disappears.</li> </ul>
Anti-theft alarm system Malfunction	<ul> <li>* The anti-theft alarm system is malfunctioning.</li> <li>&gt; Consult a qualified specialist workshop.</li> </ul>
Apply brake to select R	<ul> <li>You have attempted to shift the transmission out of position D and into transmission position R.</li> <li>Depress the brake pedal.</li> <li>Switch the transmission to position R.</li> </ul>
Operation only possible in transmission position N	* You have attempted to swivel the ball neck and the transmission is not in position N.  Switch the transmission to position N.

Display messages	Possible causes/consequences and ▶ Solutions
Operation only possible in transmission position P	<ul> <li>You have attempted to swivel the ball neck and the transmission is in position R, N or D.</li> <li>Depress the brake pedal.</li> <li>Switch the transmission to position P.</li> </ul>
	* The steering is malfunctioning. Steering capability is considerably impaired.
	▲ WARNING Risk of accident if steering capability is impaired
Steering malfunction Stop immediately See Owner's Manual	If the steering does not function as intended, the vehicle's operating safety is jeopardised.  Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.  Do not continue driving under any circumstances.  Consult a qualified specialist workshop.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
	Consult a qualified specialist workshop.
Steering malfunction Drive carefully Visit workshop	* The power assistance for the steering is malfunctioning. You may need to use more force to steer.  Drive on carefully.  Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Let fresh air into the vehi- cle interior! Air condition- ing malf. Visit workshop	* The climate control system is malfunctioning.
	▲ WARNING Risk of injury and accident due to an insufficient supply of fresh air
	If the climate control system is malfunctioning, carbon dioxide levels may increase in the passenger compartment. Breathing in carbon dioxide may cause dizziness.
	Open the window to ensure that there is a sufficient supply of fresh air.
	<ul> <li>Open the window to ensure that there is an adequate supply of fresh air.</li> <li>Consult a qualified specialist workshop immediately.</li> </ul>
Steering malfunction Increased physical effort See Owner's Manual	* The power assistance for the steering is malfunctioning.
	▲ WARNING Risk of an accident due to altered steering characteristics
	If the power assistance of the steering fails partially or completely, you will need to use more force to steer.  If safe steering is possible, drive on carefully.  Visit or consult a qualified specialist workshop immediately.
	<ul> <li>If safe steering is possible, drive on carefully.</li> <li>Visit or consult a qualified specialist workshop immediately.</li> </ul>
Active bonnet malfunction See Owner's Manual	* The active bonnet (pedestrian protection) is malfunctioning or inoperative after having already been triggered.  Consult a qualified specialist workshop.

# Display messages and warning/indicator lamps

Display messages	Possible causes/consequences and ▶ Solutions
	* The bonnet is open.
(O—O)	▲ WARNING Risk of accident due to driving with the engine bonnet unlocked
	An unlocked engine bonnet may open up when the vehicle is in motion and block your view.
	Never unlock the engine bonnet when driving.
	▶ Before every trip, ensure that the engine bonnet is locked.
	<ul><li>Pull over and stop the vehicle safely as soon as possible.</li><li>Close the bonnet.</li></ul>
	* At least one door is open.
	Close all doors.

Display messages	Possible causes/consequences and ▶ Solutions
	* The tailgate is open.
(O—O)	▲ WARNING Risk of exhaust gas poisoning
	Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the tailgate is open when the engine is running, especially if the vehicle is in motion.  Always switch off the engine before opening the tailgate.  Never drive with the tailgate open.
	Close the tailgate.
Top up washer fluid	<ul> <li>* The washer fluid level in the washer fluid reservoir has dropped below the minimum.</li> <li>Top up the washer fluid .</li> </ul>

# Lights

Display messages	Possible causes/consequences and ▶ Solutions
Left dipped beam (example)	* The corresponding light source is defective.  Consult a qualified specialist workshop.  or  Check whether you are permitted to replace the light source yourself.  (i) LED light bulbs: the display message for the corresponding lamp appears only when all the light-emitting diodes
Active Light System inoperative	in the lamp have failed.  * The active headlamps are faulty.  Consult a qualified specialist workshop.
Intelligent Light System inoperative	<ul> <li>* The Intelligent Light System is faulty. The lighting system continues to function properly without the functions of the Intelligent Light System.</li> <li>▶ Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
- <u>Ö</u> -	<ul> <li>* The exterior lighting is faulty.</li> <li>Consult a qualified specialist workshop.</li> <li>Vehicles with a trailer hitch: a fuse may have blown.</li> </ul>
Malfunction See Owner's Manual	<ul> <li>Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions.</li> <li>Check the fuses and replace them if necessary .</li> </ul>
AUTO lights inoperative	<ul> <li>* The light sensor is faulty.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Switch off lights	* You are leaving the vehicle and the lights are still switched on.  Turn the light switch to the AUTO position.
Switch on headlamps	* You are driving without dipped-beam headlamps.  Iurn the light switch to the D or Ашто position.
Adaptive Highbeam Assist Plus inoperative	<ul> <li>* Adaptive Highbeam Assist Plus is faulty.</li> <li>Consult a qualified specialist workshop.</li> </ul>

Display messages	Possible causes/consequences and ▶ Solutions
Adaptive Highbeam Assist Plus currently unavailable See Owner's Manual	<ul> <li>* Adaptive Highbeam Assist Plus is temporarily unavailable.</li> <li>The system borders have been reached (→ page 122).</li> <li>▶ Drive on.</li> <li>Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Plus available again display message appears.</li> </ul>
Adaptive Highbeam Assist inoperative	<ul> <li>* Adaptive Highbeam Assist is malfunctioning.</li> <li>Consult a qualified specialist workshop.</li> </ul>
Adaptive Highbeam Assist currently unavailable See Owner's Manual	<ul> <li>* Adaptive Highbeam Assist is temporarily unavailable.         The system borders have been reached (→ page 121).         Drive on.             Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist available again display message appears.     </li> </ul>

# Warning and indicator lamps Overview of warning and indicator lamps

Some systems perform a self-test when the ignition is switched on. Some warning and indicator lamps may briefly light up or flash. This behaviour is non-critical. These warning and indicator lamps indicate a malfunction only if they light up

or flash after the engine is started or during a journey.

#### Instrument display (standard)



#### Instrument display in the widescreen cockpit



The positions of the indicator lamps on the instrument display may differ from the sample display depending on the display setting.

#### Warning and indicator lamps:

Dipped beam (→ page 116) **■**D

Standing lights (→ page 116) -00€

≣D Main beam (→ page 118)

**♦** Turn signal light (→ page 118) Rear fog light (→ page 116) 0≑

Ä Seat belt not fastened (→ page 504)

(D) Brakes (red) (→ page 498)

(D)

(ABS) 2 2 Brakes (yellow) (→ page 498)

ABS malfunctioning (→ page 498)

 $ESP^{\otimes}(\rightarrow page 498)$ 

ÖFF  $ESP^{\otimes}$  OFF ( $\rightarrow$  page 498)

(P) Electric parking brake (→ page 498) **⊕!** 

Power-assisted steering malfunctioning ( $\rightarrow$  page 506)

Electrical fault( $\rightarrow$  page 508)

Restraint system (→ page 498)

Engine diagnostics ( $\rightarrow$  page 508)

Fuel reserve with fuel filler cap location indicator ( $\rightarrow$  page 508)

\*f\*

Vehicles with widescreen cock**pit:** coolant too hot/cold (→ page 508)

Distance warning (→ page 505)

Preglow

<del>- +</del>

**%** 

**⁴**⊑

 $\triangle$ 

000

(!)

\_

Tyre pressure monitoring system

(→ page 511)

Trailer hitch is not operational or swivels (→ page 506)

#### Safety systems

# Warning/indicator lamp



Brake system warning lamp (yellow)

# Possible causes/consequences and ▶ Solutions

The yellow brake system warning lamp is lit while the engine is running.

**WARNING** Risk of an accident due to a brake system malfunction

If the brake system is malfunctioning, braking characteristics may be impaired.

- Drive on carefully.
- Have the brake system checked immediately at a qualified specialist workshop.
- Adjust your speed and continue to drive carefully, leaving a suitable distance to the vehicle in front.
- If the multifunction display shows a display message, please observe this.
- Consult a qualified specialist workshop.

#### Warning/indicator lamp



Brake system warning lamp (red)

#### Possible causes/consequences and > Solutions

The red brake system warning lamp is lit while the engine is running.

- Possible causes:
- The brake force boosting is malfunctioning and the braking characteristics may be affected.
- There is insufficient brake fluid in the brake fluid reservoir.

#### **WARNING** There is a risk of an accident if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. Braking characteristics may be impaired. The braking distance may increase in an emergency braking situation.

- > Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- ► Consult a qualified specialist workshop.

#### **WARNING** Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop. Do not top up the brake fluid.

# Warning/indicator lamp Possible causes/consequences and > Solutions > Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. Observe the messages on the multifunction display. Consult a qualified specialist workshop. The yellow ABS warning lamp is lit while the engine is running. ABS is malfunctioning. If there is an additional acoustic warning signal, EBD is malfunctioning. ABS warning lamp Other driving systems and driving safety systems may also be faulty. **A** WARNING There is risk of skidding if EBD or ABS is malfunctioning If EBD or ABS is malfunctioning, the wheels could lock when braking The steering capability and braking characteristics are thus severely impaired. The braking distance may increase in an emergency braking situation. In addition, other driving safety systems are switched off. Drive on carefully. ► Have the brake system checked immediately at a qualified specialist workshop. Drive on carefully. Observe the messages in the multifunction display. Consult a qualified specialist workshop.

# Warning/indicator lamp Possible causes/consequences and ▶ Solutions The yellow ESP® warning lamp flashes while the vehicle is in motion. ESP® is intervening. Adapt your driving style to suit the road and weather conditions. ESP® warning lamp flashes The yellow ESP® warning lamp is lit while the engine is running. ESP® is malfunctioning. Other driving and driving safety systems may also be faulty. ESP® warning lamp lights **WARNING** Risk of skidding if ESP<sup>®</sup> is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilisation. In addition, other driving safety systems are switched off. Drive on carefully. ► Have ESP® checked at a qualified specialist workshop. Drive on carefully. ▶ Observe the messages in the multifunction display. Consult a qualified specialist workshop.

## Warning/indicator lamp



ESP® OFF warning lamp

# Possible causes/consequences and ▶ Solutions

The yellow ESP® OFF warning lamp is lit while the engine is running. ESP® is deactivated.

# **MARNING** Risk of skidding when driving with ESP® deactivated

If ESP® is deactivated, ESP® cannot carry out vehicle stabilisation. The availability of further driving safety systems is also limited.

- Drive on carefully.
- Only deactivate ESP® for as long as the situation requires.

If ESP® cannot be activated, ESP® is malfunctioning.

- ► Have ESP® checked immediately at a qualified specialist workshop.
- ▶ Observe the notes on deactivating ESP<sup>®</sup> .



Red indicator lamp, electric parking brake applied



Yellow electric parking brake indicator lamp is mal-functioning

# Possible causes/consequences and ▶ Solutions

The red electric parking brake indicator lamp flashes or is lit. The yellow indicator lamp is also lit if the electric parking brake malfunctions.

▶ Observe the messages in the multifunction display.



Restraint system warning lamp

## Possible causes/consequences and ▶ Solutions

The red restraint system warning lamp is lit while the engine is running.

The restraint system is malfunctioning.

**WARNING** Risk of injury or fatal injury due to a malfunction in the restraint system

If the restraint system is malfunctioning, restraint system components may be triggered unintentionally or might not be triggered at all in the event of an accident. This may affect the seat belt tensioner or airbag, for example.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- Drive on carefully.
- Observe the messages in the multifunction display.
- Consult a qualified specialist workshop immediately.

#### Seat belt

## Warning/indicator lamp



Seat belt warning lamp lights up

# Possible causes/consequences and ▶ Solutions

The red seat belt warning lamp lights up after the engine is started.

In addition, an acoustic warning tone may sound.

The seat belt warning lamp reminds the driver and front passenger to fasten their seat belts.

Fasten your seat belt.

If you have placed objects on the front passenger seat, the seat belt warning lamp may remain lit.



Seat belt warning lamp flashes

# Possible causes/consequences and ▶ Solutions

The red seat belt warning lamp flashes and an intermittent warning tone sounds.

The driver or front passenger has not fastened their seat belt while the vehicle is in motion.

Fasten your seat belt.

There are objects on the front passenger seat.

Remove the objects from the front passenger seat.

## **Driving systems**

## Warning/indicator lamp



Distance warning warning lamp

## Possible causes/consequences and ▶ Solutions

The red distance warning lamp lights up while the vehicle is in motion.

The distance to the vehicle in front is too small for the speed selected.

If there is an additional warning tone, you are approaching an obstacle at too high a speed.

- ▶ Be prepared to brake immediately.
- Increase the distance.

Active Brake Assist.

## Vehicle

# Warning/indicator lamp



Trailer hitch warning lamp

# Possible causes/consequences and ▶ Solutions

The red trailer hitch warning lamp is on.

The trailer hitch is not operational or swivels.

**A** WARNING Risk of an accident if the ball neck is not locked

If the ball neck is not in the locked position, the trailer may come loose.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- ▶ Uncouple the trailer and secure it against rolling away.
- Initiate a new swivelling procedure and do not re-couple the trailer until the display message disappears.
- Observe the messages in the multifunction display.

If the trailer hitch swivels:

Wait until the ball neck has reached the operational position.



Power steering system warning lamp

# Possible causes/consequences and ▶ Solutions

The red power steering system warning lamp is lit while the engine is running.

The power steering assistance or the steering itself is malfunctioning.

# **★ WARNING** Risk of accident if steering capability is impaired

If the steering does not function as intended, the vehicle's operating safety is jeopardised.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- ▶ Observe the messages in the multifunction display.

# Engine

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
Engine diagnosis warning	The yellow engine diagnostics warning lamp is lit while the engine is running.  A malfunction has occurred in the engine, the exhaust system or the fuel system.  The emissions limit value may have been exceeded and the engine may be running in emergency operation mode.  Have the vehicle checked as soon as possible at a qualified specialist workshop.
lamp	<ul> <li>Vehicles with a diesel engine: the fuel tank may have been run dry.</li> <li>Start the engine three to four times after refuelling.         If the yellow engine diagnostics warning lamp goes out, emergency operation mode is cancelled. The vehicle need not be checked.     </li> </ul>
Fuel reserve warning lamp	The yellow fuel reserve warning lamp is lit while the engine is running.  The fuel supply has dropped into the reserve range.  Refuel.
Electrical fault warning lamp	The red electrical fault warning lamp is lit.  There is a fault in the electrics.  Observe the messages in the multifunction display.



Coolant warning lamp

### Possible causes/consequences and > Solutions

The red coolant warning lamp is lit while the engine is running.

Possible causes:

- The temperature sensor is malfunctioning
- · Coolant level too low
- The air supply to the radiator is obstructed
- The radiator fan is faulty

If there is an additional warning tone, the coolant temperature has exceeded 120 °C.

## **WARNING** Danger of burns when opening the bonnet

If you open the engine bonnet when the engine has overheated or during a fire in the engine compartment, you could come into contact with hot gases or other escaping operating fluids.

- ▶ Before opening the bonnet, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the engine bonnet closed and call the fire service.
- > Stop the vehicle immediately, paying attention to road and traffic conditions, and switch off the engine. Do not continue driving under any circumstances.
- Observe the messages in the multifunction display.

If the coolant temperature display is at the lower end of the temperature scale:

Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	Otherwise:
	Leave the vehicle and keep a safe distance from the vehicle until the engine has cooled down.
	➤ Check the coolant level.
	Make sure that the air supply to the radiator is not obstructed.
	Avoiding high loads on the engine, drive on to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below 120 °C.

#### **Tyres**

# Warning/indicator lamp



Tyre pressure monitoring system warning lamp lights

# Possible causes/consequences and ▶ Solutions

The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) is lit.

The tyre pressure monitoring system has detected tyre pressure loss in at least one of the tyres.

**MARNING** Risk of an accident due to insufficient tyre pressure

Tyres with insufficient tyre pressure pose the following risks:

- The tyres may burst, especially as the load and vehicle speed increase.
- The tyres may wear excessively and/or unevenly, which may greatly impair tyre traction.
- - The driving characteristics, steering and braking may be greatly impaired.

You could then lose control of the vehicle.

- Observe the recommended tyre pressures.
- Adjust the tyre pressure if necessary.
- > Stop the vehicle, paying attention to road and traffic conditions.
- Check the tyre pressure and the tyres.



Tyre pressure monitoring system warning lamp flashes

# Possible causes/consequences and ▶ Solutions

The yellow tyre pressure monitoring system warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit.

The tyre pressure monitoring system is faulty.

**WARNING** There is a risk of an accident if the tyre pressure monitoring system is malfunctioning

If the tyre pressure monitoring system is malfunctioning, it is not able to issue a warning if there is pressure loss in one or more of the tyres.

Tyres with insufficient tyre pressure may, for example, affect the vehicle's handling characteristics, steering and braking. -

- ▶ Have the tyre pressure monitoring system checked at a qualified specialist workshop.
- Consult a qualified specialist workshop.

1, 2, 3 12 V battery	400 400	Acoustic locking verification signal Activating/deactivating  Active Blind Spot Assist Activating/deactivating Brake application Function System limitations	216 219 217 216	Steering wheel buttons Storing a speed Switching off/deactivating Switching on/activating System limitations Active Emergency Stop Assist Active headlamps function	184 184 184 183 192
see Socket (230 V)  360° Camera  Care  Function  Selecting a view  Setting as a favourite	384 202 205	Trailer operation	<ul><li>217</li><li>375</li><li>375</li><li>375</li><li>174</li></ul>	Active Lane Change Assist     Activating/deactivating Function	192 190 219 220 219
A  A/C function  Activating/deactivating (multimedia system)	136 169	Active Distance Assist DISTRONIC	178 183 192 190 184 192 183 184 184 187 184	Sensitivity (function/notes) Setting the sensitivity System limitations  Active Parking Assist Cross Traffic Alert Drive Away Assist Exiting a parking space Function Parking System limitations	221 219 205 210 209 208 205 207

Active Speed Limit Assist 186	,	AdBlue®		Adjusting the sound focus	
Display		Additives		Burmester® surround sound system	373
Function Setting		Filling capacity Notes	157	Advanced sound system Calling up the sound menu	373
Active Steering Assist	188	Purity			373
Activating/deactivating	190	Topping up		After-sales service centre	
Active Emergency Stop Assist	192	Additional door lock		see ASSYST PLUS	
Active Lane Change Assist	190 192	Additives	437	Air conditioning menu	
Displays in the Instrument Display Function	188	AdBlue		Calling up	136
System limitations		Engine oil		Air conditioning system	
Adaptive brake lights		Fuelling	434	see Climate control	
	170	Additives (AdBlue®)		Air distribution	135
Adaptive cruise control		see AdBlue®		Setting (multimedia system)	
see Active Distance Assist DISTRONIC		Additives (engine oil)		Air vents	
Adaptive functions, MULTIBEAM LED		see Additives		Adjusting (front)	
see Intelligent Light System		Additives (fuel)		Adjusting (rear)	
Adaptive Highbeam Assist	100	see Fuelling		Air vents	
Activating/deactivating		Address book		see Air vents	
Function	IZI	see Contacts		Air-recirculation mode	138
Adaptive Highbeam Assist Plus	400	Adjusting the balance/fader			
Activating/deactivating	123 122	Burmester® surround sound system	373	Airbag	
Function	IZZ	Adjusting the headlamp range		ActivationFront airbag (driver, front passenger)	
		Aujusting the heatilalily range	117	Installation locations	

Knee airbag       37         Overview       37         Protection       37         Reduced protection       39         Side impact sinker       37	Anti-lock braking system see ABS (Anti-lock Braking System) Anti-skid chains see Snow chains	Ashtray
Side impact airbag	Anti-theft alarm system see ATA (anti-theft alarm system)  Anti-theft protection Additional door lock	Menu (on-board computer)
Alternative route see Route  Ambient lighting	Anticipatory occupant protection see PRE-SAFE® (anticipatory occupant protection) see PRE-SAFE® PLUS (anticipatory occupant protection plus)	ATA (anti-theft alarm system) 83 Activating/deactivating interior protection 85 Deactivating the alarm 84 Function 83
Ending       345         Note       344         Overview       343         Sound settings       345         Transferred vehicle data       345         Animals       Pets in the vehicle       62	Apple CarPlay™       342         Connecting an iPhone®       343         Exiting       343         Notes       342         Overview       342         Tone settings       343         Transferred vehicle data       345	tection

Attention assistant see ATTENTION ASSIST  Authorised workshop see Qualified specialist workshop  Automatic distance control see Active Distance Assist DISTRONIC  Automatic driving lights	Automatic transmission  DIRECT SELECT lever Drive program display Drive programs DYNAMIC SELECT switch Engaging drive position Engaging reverse gear Kickdown Manual gearshifting Selecting park position Shifting to neutral Steering wheel gearshift paddles Transmission position display Transmission positions  Axle load Permissible Trailer operation	149 149 149 152 152 153 152 152 152 152 150 150	Battery Charging (Remote Online) Key Battery (vehicle) Charging Notes Starting assistance Belt see Seat belt Bicycle rack Trailer operation Blind Spot Assist Activating/deactivating Function System limitations Blower	397 395 397 224 216 219 216
system	B	442	Blower see Climate control	
Automatic front passenger front air- bag deactivation system see Automatic front passenger front airbag deactivation system  Automatic mirror folding function Activating/deactivating	Bag hook Ball neck Folding in/out BAS (Brake Assist System)	221	BlueTEC see AdBlue®  Bluetooth® Activating/deactivating	353

Boot lid see Tailgate  Brake Assist System see BAS (Brake Assist System)  Brake fluid Notes	372 373 373 372 373 372 373 372 373	Call list  Making a call	338 338 372 333 333 334 333 334 333
---	---	--------------------------	---

Car-to-X-Communication		Wiper blades	384	DYNAMIC BODY CONTROL	195
Displaying hazard warnings		Carpet (Care)	386	Child safety lock	
Overview	317	Changing bulbs		Rear side windows	62
Sending hazard warnings		Dipped beam	127	Child seat	
Care	386	Fitting/removing cover (front wheel	,	Attaching (notes)	53
Car wash	381	arch)	126	Front passenger seat (notes)	
Carpet	386	Main beam		Front passenger seat (rearward-	
Display	386	Notes	125	facing/forward-facing)	52
EASY-PACK boot box	386	Overview	126	Front passenger seat (without airbag	
Exhaust pipes		Reversing lights	127	shutoff)	52
Exterior lighting		Turn signal lights (rear)	127	ISOFIX/i-Size (fitting)	49
High-pressure cleaner		Changing hub caps	422	Notes	
Matt finish				Recommendations for child restraint	
Paintwork		Changing the lights		-,	59
Plastic trim		Driving abroad (symmetrical dipped	117	Seats suitable for belt-secured child	
Real wood/trim elements	386	beam)	110	restraint systems	54
Reversing camera/360° Camera		Channel tracking		Seats suitable for i-Size child	
Roof lining		Setting	371	restraint systems	58
Seat belt		Charging		Seats suitable for ISOFIX child	
Seat cover		Battery (vehicle)	397	restraint systems	
Trailer tow hitch		Mobile phone (wireless)	113	Top Tether	50
Washing by hand		USB port	113	Child seat	
Wheels/rims		Chassis		see i-Size child seat securing system	
Windows		Damping characteristics	195	see ISOFIX child seat securing system	
WIIIUUWS	304	Bamping onaraotoriotico illininiilli	1,70		

Child-safety lock Rear door  Children Restraint systems  Chock Storage location  Cigarette lighter Front centre console  City lighting  Cleaning See Care  Climate control  Activating/deactivating the A/C function (control panel) Activating/deactivating the A/C function (multimedia system) Activating/deactivating the synchronisation function (control panel) Activating/deactivating the synchronisation function (multimedia system) Activating/deactivating the synchronisation function (multimedia system) Air distribution settings Air-recirculation mode Automatic control	. 45 421 421 111 120 135 136 136 137 137 137 138	Demisting the windscreen Demisting windows Front air vents Rear air vents Residual heat Setting (multimedia system) Setting the air distribution Setting the temperature Switching on/off Switching the rear window heater on/off THERMATIC control panel THERMOTRONIC control panel Ventilating the vehicle (convenience opening)  Cockpit Overview Combination switch see Turn signal light Compass Computer On-board computer	6 6	Connection status Displaying Overview  Contacts Calling up Deleting Deleting favourites Downloading (from mobile phone) Importing Information Making a call Name format Options Saving a contact as a favourite Selecting options for suggestions Storing  Convenience closing Convenience opening Coolant (engine) Level check Notes  Cooling see Climate control Copyright	355 334 337 337 335 336 336 337 336 . 77 76
---	---	--	--------	--	---

Cornering light Cross Traffic Alert Crosswind Assist Function/notes Cruise control Buttons Calling up a speed Requirements: Selecting Setting a speed Storing a speed Switching off	210 173 181 181 181 181 181 181	Dashboard see Cockpit  Dashboard lighting see Instrument lighting  Data acquisition Vehicle	External       312         Saving (current vehicle position)       312         Saving as global favourite       312         Destination entry       293, 296         Entering a POI or address       293         Entering an intermediate destination       303         Entering geo-coordinates       298         Notes       292         Selecting a contact       298         Selecting a POI       296         Selecting from favourites       299         Selecting from the map       298         Selecting previous destinations       296
Switching on	179 179	Deactivating the alarm (ATA)	Detecting inattentiveness see ATTENTION ASSIST Diagnostics connection
Fitting/removing (centre console) Rear		TIREFIT kit	Low outside temperatures
Damage detection (parked vehicle)	167	Destination       312         Editing intermediate destinations       303         Editing the previous destinations       312	Unlocking the vehicle

Digital speedometer  Digital Vehicle Key sticker Starting the vehicle  Dinghy towing see Tow-bar system	233 142	Display (on-board computer) Displays on the multifunction display  Display message	443 443	Active Brake Assist Functions limited See Owner's Manual	454 462
Dipped beam Activating/deactivating Changing bulbs Setting Setting for abroad  DIRECT SELECT lever Engaging drive position Engaging park position automatically Engaging reverse gear Function Selecting park position Shifting to neutral	127 123 116 150 152 152 152 150 152	Display messages  473.  Active Blind Spot Assist currently unavailable See Owner's Manual  Active Blind Spot Assist inoperative  Active Blind Spot Assist not available when towing a trailer See Owner's Manual	493 492 465 460 461	Active Distance Assist currently unavailable See Owner's Manual Active Distance Assist inoperative Active Lane Keeping Assist currently unavailable See Owner's Manual Active Lane Keeping Assist inoperative Active Light System inoperative Active Parking Assist and PARKTRONIC inoperative See Owner's Manual	464 459 459 494
Display Care  Display (multimedia system) Home screen Notes Operating Settings	257 260	Active bonnet malfunction See Owner's Manual  Active Brake Assist Functions currently limited See Owner's Manual	491	Active Steering Assist currently unavailable See Owner's Manual  Active Steering Assist inoperative	

Adaptive Highbeam Assist currently		Anti-theft alarm system Malfunction	489	(D) Check brake fluid level	453
unavailable See Owner's Manual	496	Antriebssystem Störung Anhalten		Check eng. oil lev. when next	
Adaptive Highbeam Assist inopera-		Motor aus	473	refuelling	470
tive	496	Antriebssystem Störung Werkstatt		Check trailer hitch lock	485
Adaptive Highbeam Assist Plus cur-		aufsuchen	473	(!) Check tyre(s)	478
rently unavailable See Owner's Man-		Apply brake to deselect Park (P)		Clean the fuel filter	472
ual	496	position	486	Coolant Stop vehicle Switch	
Adaptive Highbeam Assist Plus inop-		Apply brake to select R	489	engine off	467
erative	495	ATTENTION ASSIST inoperative	459	Cruise control and Limiter inopera-	
▲ AdBlue system fault Engine		ATTENTION ASSIST: Take a		tive	466
start not possible	475	break!	459	Cruise control inoperative	466
▲ AdBlue system fault Perf.		AUTO lights inoperative	495	Cruise control off	465
reduced in XXX miles See Owner's		Auxiliary battery malfunction	488	Currently unavailable Camera dirty	464
Manual	475	Blind Spot Assist currently unavaila-		Currently unavailable Radar sensors	
▲ AdBlue system fault See Own-		ble See Owner's Manual	460	dirty	463
er's Manual	475	Blind Spot Assist inoperative	461	currently unavailable See Own-	
Add 1 litre engine oil when next		Blind Spot Assist not available when		er's Manual	445
refuelling	471	towing a trailer See Owner's Manual	460	gcurrently unavailable See Own-	
Air conditioning Malfunction See		<b>P</b> S	462	er's Manual	446
Owner's Manual	488	Change key batteries	482	LIM	466

Engine oil level cannot be		noperative See Owner's Man-		120km/h! Maximum speed exceeded	466
measured	472	ual	447	Mercedes me connect Services limi-	
Engine oil level Reduce oil level	471	EBD inoperative See Owner's Man-		ted See Owner's Manual	454
Engine oil level Stop vehicle		ual	448	N permanently active Risk of vehicle	
Switch engine off	470	<b>©SOS</b> Inoperative	453	rolling	486
Engine oil pressure Stop Switch		Intelligent Light System inoper-		HOLD Off	462
off engine	472	ative	494	Only select Park (P) when vehicle is	
Front left malfunction Consult		Key not detected (white dis-		stationary	486
workshop (example)	456	play message)	482	Operation only possible in	
Front-passenger airbag disabled See		Key not detected (red display		transmission position N	489
Owner's Manual	457	message)	483	Operation only possible in	
Front-passenger airbag enabled See		Left dipped beam (example)	494	transmission position P	490
Owner's Manual	458	Left windowbag malfunction		Parking brake See Owner's	
Getriebe Störung Werkstatt aufsu-		Consult workshop (example)	456	Manual	450
chen	488	Let fresh air into the vehicle interior!		Place the key in the marked	
Getriebe wird eingelernt Wählhebel		Air conditioning malf. Visit workshop	491	space See Owner's Manual	483
betätigen Bremse für XX s treten		Limiter inoperative	466	PRE-SAFE inoperative See Owner's	
Wegrollgefahr	488	Limiter passive	465	Manual	454
inoperative See Owner's Man-		Malfunction See Owner's Man-		(!) Rectify tyre pressure	478
ual	444	ual	495		

Refill AdBlue Eng. start not pos-		<b>⊗!</b> Steering malfunction Drive		Trailer coupling extending	484
sible	476	carefully Visit workshop	490	Trans. oil overheated Drive on with	
Refill AdBlue See Owner's Man-		Steering malfunction Increased		care	489
ual	475	physical effort See Owner's Manual	491	Transmission Malfunction Stop	487
Release parking brake	449	<b>⊚!</b> Steering malfunction Stop		(P) Turn on the ignition to release	
Replace air cleaner	473	immediately See Owner's Manual	490	the parking brake	448
Replace key See Owner's Man-		Stop vehicle Leave engine run-		Tyre press. monitor currently unavail-	
ual	482	ning	469	able	479
Replace key	481	Stop vehicle See Owner's Man-		Tyre press. monitor inoperative	480
Reserve fuel level	473	ual	469	Tyre press. monitor inoperative No	
Restraint sys. malfunction Con-		Switch off lights	495	wheel sensors	480
sult workshop	455	Switch on headlamps	495	Tyre pressure Check tyres	477
Reversing not poss. Consult work-		Teaching in transmission complete	488	Tyre(s) overheated	480
shop	487	To shift out of P or N, depress brake		Tyre(s) overheated Reduce speed	481
Risk of vehicle rolling Driver door		and start engine	486		
open and transmission not in P	486	Top up coolant See Owner's Manual	467	off the ignition before exiting	487
See Owner's Manual	468	Top up washer fluid	493	(!) Warning tyre defect	479
Speed limit (winter tyres) XXX mph	466	Traffic Sign Assist currently unavaila-		(!) Wheel sensor(s) missing	480
Start engine See Owner's Man-		ble See Owner's Manual	461	Without changing gear, consult work-	
ual	468	Traffic Sign Assist inoperative	461	shop	487

Display on the windscreen see Head-up display Distance control see Active Distance Assist DISTRONIC	Drive programs see DYNAMIC SELECT Driving lights see Automatic driving lights		see Active Distance Assist DISTRONIC see Active Lane Keeping Assist see Active Parking Assist see Active Speed Limit Assist
Distance recorder see Trip distance  DISTRONIC see Active Distance Assist DISTRONIC  Door Additional door lock	ESP® (Electronic Stability Program) Crosswind Assist	. 169 . 174 . 178 . 169 . 173 . 173 . 173 . 169 . 168	see Active Steering Assist see ATTENTION ASSIST see Blind Spot Assist see Cruise control: see Driving safety system see HOLD function see Limiter see Parking Assist PARKTRONIC see Reversing camera see Speed Limit Assist see Traffic Sign Assist  Driving tips Driving tips Driving abroad (changing the lights) 116 General driving tips
see Cup holder  Drive Away Assist	Driving system  DYNAMIC BODY CONTROL	. 195	see ATTENTION ASSIST
Drive position Selecting	Driving system  2 see 360° Camera  3 see Active Blind Spot Assist		Chassis 195

Configuring drive program I Displaying engine data Displaying vehicle data Drive program display	149 150 150 150 149	ECO display         148           Function         234           Resetting         234           ECO start/stop function         147, 148           Automatic engine start         147           Automatic engine stop         147           Operation         147	First-aid kit (soft sided)
FunctionOperating (DYNAMIC SELECT switch)	149 149 149 149	Switching off/on       148         Electric parking brake       165, 166, 167         Applying automatically       165         Applying or releasing manually       166         Emergency braking       167         Releasing automatically       166	Emergency engine start 404 Emergency key Locking a door 72 Unlocking a door 72 Unlocking the tailgate 74 Emergency key element
Easy entry feature Function/notes Setting Easy exit feature Function/notes Setting EBD (Electronic Brake force Distribution) Function/notes	96 97 96 97	Electrical fuses see Fuses  Electromagnetic compatibility Declaration of conformity	Inserting/removing

Engine number Starting (Digital Vehicle Key sticker) Starting (emergency operation mode) Starting (mobile phone) Starting (Remote Online) Starting (start/stop button) Starting assistance Switching off (start/stop button)  Engine bonnet Function (active bonnet) Opening/closing	142 143 142 144 141 397 160	Quality	378 277 277 281 279	Fatigue detection see ATTENTION ASSIST Fault message see Display message Favourites Adding Calling up Deleting Moving Overview	271 272 272
Resetting (active bonnet)		ESP <sup>®</sup>		Renaming	271
Engine data Displaying	150	Crosswind Assist Trailer stabilisation		Filling station search Starting an automatic filling station	
Engine electronics Notes	429	ESP® (Electronic Stability Program) Activating/deactivating		search Switching the automatic filling station search on/off	305 304
Engine number	431	EU general operating permit number		Fire extinguisher	389
Engine oil  Additives  Checking the oil level using the onboard computer  Filling capacity  MB-Freigabe or MB-Approval	437 378 437	Exhaust pipes (Care)  Exterior lighting Care  Exterior lighting see Lights	384	First-aid kit (soft sided)  Flat towing see Tow-bar system  Flat tyre  MOExtended tyres	389

Notes 39	90
TIREFIT kit 3	91
Wheel change 42	22
Floor mats 1	15
Free software	29
Frequencies	
Mobile phone 43	30
	30
Frequency band	
Selecting (on-board computer) 23	36
Front airbag (driver, front passenger)	37
Front wheel arch	
Fitting/removing the cover 12	26
Front wheel arch cover	
Fitting/removing12	26
Fuel	
E10 43	34
Petrol 43	34
Quality (petrol) 43	34
Reserve fuel level 43	36
Sulphur content 43	34
	36

Fuel consumption	
On-board computer	233
Fuelling  Additives  Diesel  Low outside temperatures  Quality (diesel)  Refuelling  Function seat  see Door control panel	434 434 435 435 435 154
Fuse insert	
see Fuses	
Fuses  Assignment diagram	404 404 405 406 407 404
G	
Garage door opener Clearing the memory	163

Opening/closing the garage door Programming buttons Radio equipment approval numbers Resolving problems Synchronising the rolling code	163 161 164 162 162
Gearshift paddles	
see Steering wheel gearshift paddles	
Gearshift recommendation	153
General operating permit number	
(EU)	431
Genuine parts	21
Glide mode	154
Global search	
Function	274
Overview	274
Glove box	
Locking/unlocking	100
Gross weight	431
=	

Handbrake see Electric parking brake

Handling characteristics (unusual)	Home screen (multimedia system display) Overview	In Car Office Selecting options of Tasks & Calls 342 Indicator lamp see Warning/indicator lamps Individual drive program Configuring
computer) 23 Adjusting the brightness (on-board computer) 23 Function 23 Menu (on-board computer) 23 Setting the position (on-board computer) 23 Using the memory function 3	Fitting	Instrument cluster         see Instrument display           Instrument display         227           Adjusting the lighting         232           Function/notes         227           Overview         8, 227           Overview (standard)         8           Overview (widescreen)         8
Headlamp flasher	Switching on (Start/Stop button) 140  Ignition key	Warning/indicator lamps 496 Instrument display
High-pressure cleaner (care) 38	4	see Instrument cluster Instrument lighting
Hill Start Assist         19           HOLD function         19           Activating/deactivating         19	4 Vehicle	Intelligent Light System         119           Activating/deactivating         120           Active headlamps function         119

Adaptive Highbeam Assist Plus	120 120 120	Starting the automatic service station search	358	Registering	
Interior lighting  Ambient lighting  Setting  Switch-off delay time	124 124	Managing bookmarks  Internet connection  Cancelling permission  Connection status	358 354	Selecting the stream Setting options Terms of use iPhone®	361
Interior lighting see Interior lighting see Lighting see Lights		Displaying the connection status Establishing	355 354 352 354	see Apple CarPlay™  ISOFIX child seat securing system  Fitting  Notes	49 47
Interior protection Activating/deactivating Function Intermediate destination Calculating a route with intermediate	85	Restrictions Setting access data Setting up (Bluetooth®) Via Bluetooth® Via communication module Via Wi-Fi	353 353 353 353	Jack Declaration of Conformity	23
destinations Editing Entering Starting an automatic filling station search	303 303 303 305	Internet radio Calling up Calling up the station list (category last selected) Deleting stations Logging out	359 361 361	Storage location	397 64

Key ring attachment Overview Panic alarm Problem Unlocking setting  KEYLESS-GO Locking the vehicle Problem Unlocking setting Unlocking the vehicle	65 64 66 64 65 67 65 70 71 65		286 286 116 124	Hazard warning lamps Headlamp flasher Headlamp range Intelligent Light System Light switch Main beam Motorway mode Parking lights Rear fog light Responsibility for lighting systems Setting the dipped beam Standing lights Turn signal light	118 117 118 116 118 120 116 117 116 123 116
Kickdown 1 Using 1 Knee airbag		Active headlamps function		Buttons	181 181 180
L Laden			232 117 125 120 118 120	Passive mode Permanent setting Requirements: Selecting Setting a speed Storing a speed Switching off Switching on	181 181 181 181

Limiting speed Displaying subscription information 314 KEYLESS-GO	69
Displaying the traffic map 315 Mobile phone	
	69
Displaying traffic incidents	•
Application and siting a support of the control of	
242 Objectively and the missing minimum of the minimum of the missing minimum of the missing minimum of the missin	69
500 Snowing local area messages	
Entering numbers 242 See Additives	
Global voice commands	
Improving speech quality	98
Language setting	
Media player voice commands	
Message voice commands 252 Bag hook 106	
Multifunction steering wheel (operat- Notes	90
ing) 240 Roof rack	
Navigation voice commands	
Operable functions	
Operating safety	118
Radio voice commands	121
Switch voice commands	us 122
Telephone voice controls	127
Text message voice commands	
Types of voice commands	
Vehicle voice commands	
Voice prompting	

MalfunctionRestraint systemMap315, 3Avoiding an area3Avoiding an area (overview)3Changing an area3Deleting an area3Displaying Oibla3Displaying the compass3Displaying the map version3Displaying the next intersectingstreet3Displaying the satellite map3	320 323 322 323 323 325 325 325 322	Switching motorway information on/off	324 . 92 383 431 256 256	Overview of the media menu Playing back similar music tracks Removing a favourite song Searching for a music track according to mood Starting media playback Starting the media search Supported format and data storage media Using the keyword search Media playback Operating (on-board computer) Media source	366 368 366 367 361 368
Displaying the traffic map	324 320 321 322 321 320 325	Media Menu (on-board computer)  Media mode  Adding a favourite song	237 366 365 365 366 362 367	Dialling (on-board computer)  Memory function  Head-up display — Calling up stored settings  Head-up display —Storing settings  Operating  Outside mirror — Calling up stored settings  Outside mirror —Storing settings  Seat — Calling up stored settings  Seat — Storing settings	97 . 97 . 97 97 97

Menu (on-board computer)		Mercedes-Benz emergency call sys-		Reading	339
Media	239	Automatic emergency call Information Manual emergency call Overview	349	Replying	340 339 340
Overview	229	Self-diagnosis		see Outside mirrors	
	237	Starting/ending ERA-GLONASS test mode	352 351	Mobile phone Cancelling permission for Internet connection	354
Mercedes me	200	Mercedes-Benz Service Centre see Qualified specialist workshop		Damage detection (parked vehicle)	
Calling up services	349	Message (multifunction display) see Display message Message memory	443	Frequencies	69 142 430
Consenting to data transfer	346 348	Messages  Calling a message sender  Composing  Configuring the displayed text messages  Deleting	340 339 339	Wireless charging	
Information  Service call with the me button  Service message  Transferred data	347 347	Forwarding Overview Read-aloud function	340 339	Mobile phone voice recognition Starting Stopping	

Model series	121	Multimodia system	201	Navigation announcements	
Model series  MOExtended tyres  Moods  Calling up Creating Deleting Displaying information (DIBA) Modifying Moving Overview	267 267 268 269 268 268	Multimedia system  Activating/deactivating standby mode	168 276 259 281 263 289	Navigation announcements  Activating/deactivating  Adjusting the volume  Repeating  Switching audio fadeout on/off  Switching on/off during a phone call  Navigation messages  On-board computer  Near Field Communication (NFC)  Connecting the mobile phone to the	310 310 310 310 235 332
Motorway mode	120	See WBOX martimedia system		multimedia system Locking the vehicle (digital vehicle	332
MULTIBEAM LED see Intelligent Light System  Multifunction display Setting Multifunction display (on-board computer)		Navigation  Menu (on-board computer)	292 291 324	key sticker) Locking the vehicle (mobile phone) Starting the vehicle (Digital Vehicle	. 69 142 142
Multifunction steering wheel Overview of buttons  Multifunction steering wheel see Steering wheel	228	Voice commands (LINGUATRONIC)  Navigation see Destination see Destination entry see Route see Route guidance see Traffic information	240	key sticker)	. 69

NFC see Near Field Communication (NFC) Notifications Centre Calling up a notification		see PRE-SAFE® PLUS (anticipatory occupant protection plus) see Restraint system see Seat belt		On-board electronics Engine electronics Notes Two-way radios	429 429
Selecting actions for a notification	274 272 272 273	Odometer see Total distance  Oil see Engine oil  On-board computer Assistant display menu	374	Coolant (engine) Fuel (petrol) Notes	436 438 438
Notifications types	272	Head-up Display menu	237 239	Operating safety  Declaration of Conformity (electromagnetic compatibility)  Declaration of conformity (jack)	
Occupant safety Pets in the vehicle  Occupant safety see Airbag see Automatic front passenger front airbag deactivation system see PRE-SAFE® (anticipatory occupant protection)	62	Multifunction display Navigation menu Operating Radio menu Service menu Telephone menu Trip menu  On-board diagnostics interface see Diagnostics connection	235 229 236 232 237	Declaration of conformity (TIREFIT kit)  Declaration of conformity (wireless vehicle components)	23 22 229 132 132

Using the memory function 97 map 32  Overhead control panel Overview 12 see Parking aid see Parking Assist PARKTRONIC  Owner's Manual Vehicle equipment 22 Manoeuvring assistance 21  Owner's Manual (digital) 18 Parking Assist PARKTRONIC 19  Paint code 431 Paintwork (cleaning instructions) 383 Panic alarm 65 Activating 65 Parking deactivating 65 Parking deactivating 65 Parking see Sliding sunroof see Sliding sunroof Selecting 52 Selecting automatically 152 Parking see Electric parking brake 152 Parking position Outside mirrors 13	Pedestrian protection see Active bonnet (pedestrian protection)  Period out of use Activating/deactivating standby mode
---	---

POI symbols Custom	321
	321
Power supply	110
Switching on (Start/Stop button)	140
Power windows	
see Side windows	
PRE-SAFE® (anticipatory occupant	
protection)	44
Function	
PRE-SAFE® Sound	44
Reversing measures	44
PRE-SAFE® PLUS (anticipatory occu-	
pant protection plus)	44
Function	
Reversing measures	44
Preventative occupant protection sys-	
tem	
see PRE-SAFE® (anticipatory occu-	
pant protection)	
Previous destinations	
Selecting	296
Profile	
Creating a new profile	265
Orodding a norr profile	200

Maximum number of profiles	264 264 266 265 266 266
see User profile	
rograms see DYNAMIC SELECT rotection of the environment Notes	
מ	
ibla	325
R code Rescue card ualified specialist workshop	26 25

R	
Radar sensors	168
Radio	
Activating/deactivating radio text	371
Calling up a slide show	371
Calling up the station list	370
Deleting stations	370
Displaying information	371
Displaying radio text	371
Editing station presets	370
Entering a frequency directly	370
Frequency fix	371
Menu (on-board computer)	236
Moving stations	370
Overview	369
Searching for stations	370
Setting a station	370
Setting a voice tag	371
Setting station tracking	371
Setting the frequency band	370
Setting the traffic information	
service volume increase	371
Storing radio stations	370
Switching on	368

Switching traffic announcements on/off	Rear window wipers Activating/deactivating	128	Replacing the vehicle battery see 12 V battery	
Voice commands (LINGUATRONIC) 249	Rear-view mirror		Rescue card	26
Radio stations	see Outside mirrors		Reserve	
Selecting (on-board computer) 236	Recycling		Fuel	436
Rain-closing feature	see Take-back of end-of-life vehicles		Reset function (multimedia system)	289
Sliding sunroof	Reducing agent			138
Displaying 233	see AdBlue <sup>®</sup> <b>Refuel</b>		Restoring (factory settings) see Reset function (multimedia system)	
Reading light see Interior lighting	Refuelling the vehicle  Refuelling	154	Restraint system	
Real wood (Care) 386	Topping up AdBlue®	158	Children Function in an accident	
Rear door (child safety lock)	Registration	100	Functionality	
Rear fog light	Vehicle	26	Malfunction	
Rear seat	Remote Online		Protection	. 30
see Seat	Charging the battery	144	Reduced protection	
Rear seat belt	Cooling or heating the vehicle inte-		Self-test	
Status display	rior	144	Warning lamp	. 31
Rear seat belt status display	Starting the vehicle	144	Reverse gear	150
	Replacing a bulb		3	152
Rear window	see Changing bulbs		Reversing camera	
Changing the wiper blade	Replacing the battery (vehicle)			
Rear window heater 135	see 12 V battery		Function	199

Switching automatic operation	205 205	Saving a recorded route	306 300 304 302 301	Displaying street names and house numbers	319 319
on/off (360° Camera)		Showing a stored route on the map	305	Route-based speed adaptation	187
Reversing lights (changing bulbs)  Rims (Care)		Starting a saved route	306 305	Route-based speed adjustment Displays in the Instrument Display Run-flat characteristics	192
see HOLD function		tion search on/off	304	MOExtended tyres	390
Roof lining (care)	386	With intermediate destinations	303	Running-in notes	145
Roof load	440	Route guidance	307		
	1 10		011	C	
Roof rack		Cancelling		S	
Roof rack	107	Cancelling Changing direction Destination reached	307 310	Safety systems see Driving safety system	
Roof rack	107 304	Cancelling  Changing direction  Destination reached  From an off-road location	307 310 311	Safety systems	388
Roof rack	107 304 317	Cancelling Changing direction Destination reached	307 310 311 309	Safety systems see Driving safety system	
Roof rack	107 304 317 304 299	Cancelling  Changing direction  Destination reached  From an off-road location  Lane recommendations	307 310 311 309 309 307	Safety systems see Driving safety system Safety vest	325

Backrest (rear) locking       102         Configuring the settings       92         Correct driver's seat position       86         Folding the backrest (rear) back       102         Folding the backrest (rear) forwards       101         Resetting the settings       92         Selecting a massage program       92         Setting options       14         Using the memory function       97         Seat         see Head restraint         Seat belt       32, 36         Activating/deactivating seat belt adjustment       36         Care       386         Fastening       35         Protection       32         Rear seat belt status display       36         Reduced protection       33	Seat belt tensioners    Activation	Service see ASSYST PLUS  Service Centre see Qualified specialist workshop  Service interval display see ASSYST PLUS  Service product Engine oil
Reduced protection         33           Releasing         36           Seat belt adjustment (function)         35	Automatic front passenger front airbag deactivation system	Setting the map scale see Map Shifting gears
Warning lamp         36           Seat belt adjustment         36           Activating/deactivating         36           Function         35	Service Menu (on-board computer)	Gearshift recommendation

Side impact airbag	37	see Apple CarPlay™		Spare wheel	
Side impact protection	197	see Telephone		see Emergency spare wheel	
Side windows	75	Snow chains	409	Spectacles compartment	100
Child safety lock in the rear	62 75	Socket (12 V)		Speech dialogue system see LINGUATRONIC	
Closing using the key	76	Socket (230 V)		Speed Limit Assist	
Convenience opening  Opening  Opening with the key	75	Software update Important system updates		Speed limitation for winter tyres Setting	182
Problem	77	Information		Speedometer Digital	233
Automatic features  Closing  Closing using the key	81 78	Sound PRE-SAFE® Sound wheels and tyres		Standby mode Activating/deactivating Function	
Opening Opening with the key Problem Rain-closing feature	78 76 82	Sound see Burmester® surround sound system see Tone settings Sound settings		Start/stop button Starting the vehicle	141
Smartphone  Locking the vehicle  Unlocking the vehicle  Smartphone	69	Adjusting the balance/fader	372	Switching off the vehicle	
see Android Auto				,	

	Steering wheel heater	. 95	Renaming	270
	Steering wheel gearshift paddles	152	Sulphur content	434
	Steering wheel heater	05	Sun visor	12/
	Stowage areas see Laden	. 95	Surround View	154
	see Stowage compartment			
370 370	Armrest	. 99	Exterior	
370 370	Door	. 99	Switching the surround sound on/off Burmester® surround sound system	373
370 370	Spectacles compartment		Activating/deactivating (multimedia	
370	see Laden		system) Switching on/off (control panel)	
			System settings	
370		106	Language	
173		269		
228				
. 94 228	Deleting	270	System settings see Multimedia system	
	370 371 370 370 370 370 370 370	Steering wheel gearshift paddles Steering wheel heater Activating/deactivating Stowage areas see Laden see Stowage compartment  Stowage compartment Armrest Centre console Door Glove box Spectacles compartment  Stowage compartment  Stowage compartment Stowage compartment Stowage compartment  Stowage compartment  Stowage compartment  Stowage space underneath the load compartment floor  Suggestions Calling up Configuring Deleting	Activating/deactivating   95	Steering wheel gearshift paddles  Steering wheel heater

T	Vehicle identification plate 431	Switching mobile phones (Near Field
Tailgate         73           Closing         74           Opening         73           Opening dimensions         440           Unlocking (emergency key)         74           Tailgate           see Locking/unlocking	Telephone237, 328Activating functions during a call333Calls with several participants334Changing a function331Connecting a mobile phone (NearField Communication (NFC))332Connecting a mobile phone (Passkey)330	Communication (NFC))
Take-back of end-of-life vehicles       20         Protection of the environment       20	Connecting a mobile phone (Secure Simple Pairing)	<b>Telephone number</b> Dialling (on-board computer)
Tank capacity       437         Fuel       436         Reserve (fuel)       436         Technical data       4xle load (trailer operation)       442         Fastening point (trailer hitch)       441         Information       429         Mounting dimensions (trailer hitch)       441         Notes (trailer hitch)       441         Overhang dimension (trailer hitch)       441         Tongue weight       442         Towing weight (towing a trailer)       441         Tyre pressure monitoring system       413	Disconnecting a mobile phone       331         Importing contacts       336         Incoming call during an existing call       334         Information       330         Interchanging mobile phones       331         Locking the vehicle (mobile phone)       69         Menu (on-board computer)       237         Mobile phone voice recognition       333         Notes       329         Operating modes       329         Reception and transmission volume       332         Ringtone volume       332         Starting the vehicle (mobile phone)       142	Telephone operation see Calls  Telephony operating modes Bluetooth® Telephony 329 Business telephony 329  Temperature 135  Text messages Voice commands (LINGUATRONIC) 252  Text messages see Messages Through-loading feature see Seat

,	282 282 282 282 282 24 391	Operating	262 262 262 262	Towing methods	371 313 315 316 314 313
Calling up the sound menu Information	372 371 442 50 233 233	Touchscreen (multimedia system display) Operating	84 84 226 404 401	Traffic map see Map  Traffic Sign Assist Function/notes Setting System limitations  Trailer hitch Axle load Bicycle rack Fastening point Folding the ball neck in/out	214 216 216 214 442 224 441 221 441

Notes		Trip	000		409
Overhang dimension Power socket		Menu (on-board computer)	233	Restarting the tyre pressure loss warning system	417
Tongue weight		Trip computer  Displaying	233	Restarting the tyre pressure monitor-	717
Trailer operation		Resetting		ing system	
Active Blind Spot Assist		Trip distance	233	TIREFIT kit Tyre pressure loss warning system	391
Bicycle rack		Displaying		(function)	417
Folding the ball neck in/out		Resetting	234	Tyre pressure monitoring system	444
Notes		<b>Trip meter</b> see Trip distance		(function) Tyre pressure table	
Power socket	223	Turn signal indicator		Tyre pressure loss warning system	410
Trailer stabilisation Function/notes	173	see Turn signal light		Function	417
Trailer tow hitch	., •	Turn signal light	118	Restarting	417
Care	384	Activating/deactivating	118	Tyre pressure monitor	440
Towing weight	441	Turn signal lights	107	Checking the tyre pressures	
Transferred vehicle data	0.45	Changing bulbs (rear)	127	Function	
Android Auto Apple CarPlay™	345 345	Two-way radios Frequencies	430	Tyre pressure monitoring system	
Transmission position display		Notes on installation		Restarting	
Transporting	100	Transmission output (maximum)	430	Technical data	
Vehicle	403	Tyre pressure		Tyre pressure table	410
Trim element (Care)	386	Checking (tyre pressure monitoring system)	412		

Tyre temperature         Checking (tyre pressure monitoring system)         4           Tyre pressure monitoring system (function)         4           Tyre tread         40           Tyre-change tool kit         4           Overview         4           Tyres         Changing hub caps         4           Checking         40           Checking the tyre pressure (tyre pressure monitoring system)         4           Fitting         4           Flat tyre         30           Noise         40           Notes on fitting         4           Removing         4           Replacing         418, 4           Restarting the tyre pressure loss           warning system         4	Storing	391         Diagnostics connection         23           409         Equipment         22           Implied warranty         26           417         Locking (automatically)         75           Locking (digital vehicle key sticker)         64           411         Locking (emergency key)         75           410         Locking (from the inside)         66           408         Locking (KEYLESS-GO)         70           Locking (mobile phone)         66           Lowering         420           Parking up         16           286         QR code rescue card         20           Qualified specialist workshop         22           Raising         42           113         Registration         20           264         Starting (Digital Vehicle Key sticker)         14           Starting (emergency operation         14           Model         Starting (mobile phone)         14           Starting (mobile phone)         14           Starting (Remote Online)         14
Restarting the tyre pressure loss	Vehicle	144         Starting (Remote Online)         14-           Starting (start/stop button)         14           168         Switching off (start/stop button)         16           68         Towing         220

Unlocking (from the inside)	Vehicle identification plate see Model series  Vehicle interior Cooling or heating (Remote Online) 144  Vehicle key	Vision Demisting windows
Vehicle data	see Key	see LINGUATRONIC
Displaying (DYNAMIC SELECT)	Vehicle maintenance see ASSYST PLUS	W
Vehicle length	Vehicle position Transmitting	Warning lamp see Warning/indicator lamps
Wheelbase 440	Vehicle tool kit	Warning system
Vehicle data storage	Towing eye 403	see ATA (anti-theft alarm system)
Electronic control units	Ventilating Convenience opening	Warning triangle Removing
Vehicle dimensions 440	Ventilation	Setting up
Vehicle identification number	see Climate control	Warning/indicator lamp
see VIN	Vents	ABS warning lamp 500
Vehicle identification plate	see Air vents	(1) Brake system warning lamp
EU general operating permit number 431 Maximum gross vehicle weight	VIN         431           Engine compartment         431	(red)
Paint code	Identification plate	(yellow)
VIN	Windscreen431	Coolant warning lamp 509

☐ Distance warning warning lamp ☐ Electrical fault warning lamp ☐ Engine diagnosis warning lamp ☐ ESP® OFF warning lamp ☐ ESP® warning lamp flashes ☐ ESP® warning lamp lights up ☐ Fuel reserve warning lamp ☐ Power steering system warning	508 508 502 501 501	Yellow electric parking brake indicator lamp is malfunctioning	Lowering the vehicle Preparation Raising the vehicle Removing a wheel Removing/fitting hub caps  Wheel change see Emergency spare wheel	426 422 423 425
lamp	507	see Windscreen washer fluid  Washing by hand (care)	1471 1	421
parking brake applied	504 505 504 506 512	Web browser         355           Calling up a web page         358           Calling up options         358           Calling up the settings         358           Deleting a bookmark         358           Deleting Internet history         358           Ending         359           Managing bookmarks         358           Overview         357           Website           Calling up         355	Changing hub caps Checking Checking the tyre pressure (tyre pressure monitoring system) Fitting Flat tyre Interchanging MOExtended tyres Noise	408 412 425 390 421 390 408

Removing 43		vs (Care)	384	Mobile phone	114
Replacing 418, 43	<sup>2</sup> Windso	reen 128,	135	Wireless vehicle components	
Restarting the tyre pressure loss	Der	nisting		Declaration of conformity	23
warning system 4		lacing the wiper blades		Workshop	
Restarting the tyre pressure monitor-	\A/: m al a a			see Qualified specialist workshop	
ing system 4	۷			see Qualified specialist workshop	
Selection 4	O	Windscreen			
Snow chains 4	9 Windso	reen washer fluid	439		
Storing 4	1 Not	es	439		
TIREFIT kit 3	1 Windso	reen washer system			
Tyre pressure (Notes) 4	Λ	ping up	380		
Tyre pressure loss warning system	\A/:	creen wipers			
(function) 4	/		127		
Tyre pressure monitoring system		vating/deactivating			
(function) 4		lacing the wiper blades	120		
Tyre pressure table 4	-	operation			
Unusual handling characteristics 4	8 Sno	w chains	409		
Wi-Fi	Winter	tyres			
Overview 25	3 Set	ting the permanent speed limita-			
Setting 2			182		
Setting up a hotspot 23		nlades			
Setting up an Internet connection 39	po		384		
		lacing			
Windowbag		S .	120		
Windows		ss charging	440		
see Side windows	Fun	ction/notes	113		

## **Publication details**

#### Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

http://www.mercedes-benz.com

http://www.daimler.com

### **Editorial office**

You are welcome to forward any queries or suggestions you may have regarding this Owner's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service, 70546 Stuttgart, Germany

<sup>®</sup>Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

### Vehicle manufacturer

Daimler AG

Mercedesstrasse 137

70327 Stuttgart

Germany

As at 12.06.17



## Digital - in the vehicle

Familiarise yourself with the contents of the Owner's Manual directly via the vehicle's multimedia system (menu item "Vehicle information"). Start with the quick guide or broaden your knowledge with practical tips.



### Vehicle document wallet

Here you can find comprehensive information about operating your vehicle and about services and guarantees in printed form.



## Digital - on the Internet

You can find the Owner's Manual on the Mercedes-Benz homepage.



## Digital - as an App

The Mercedes-Benz Guides App is available free-of-charge in familiar App stores.



Edition NA2018-04a

Order no. P177 0027 02 Part no. 177 584 44 00 Z102



Apple® iOS

