



desire

Lovehoney

Discover a happier you

We are the sexual happiness people and since 2002 we've been listening to you to understand exactly what makes you happy. Thanks to the honest and unbiased feedback you've given us in hundreds of thousands of reviews, we've been able to continually refine the toys we create for your pleasure.

The result is Desire, a collection of luxurious sex toys expertly designed with only one thing in mind: ultimate sexual happiness.

www.lovehoney.co.uk

desire

Lovehoney®

Introducing your Desire App-Controlled Knicker Vibrator

Lose yourself in an oasis of intimacy with Desire's App-Controlled Knicker Vibrator, surrendering to the blissful sensations offered by its 8 pulsating modes and 12 levels of intensity.

Tailor your pleasure using the Desire by Lovehoney app, transforming your smartphone into a remote control for operation from anywhere in the room, or the world.

Silken silicone fully envelops your sleek, saddle-shaped vibrator. Ergonomically shaped to nestle discreetly within your briefs, it offers perfect comfort and pleasure, with a contoured end for gentle clitoral contact.

Whisper quiet and app controlled, your Knicker Vibrator has been designed for effortlessly simple use, and can be worn around the house or out and about.

Keep your Desire Knicker Vibrator to yourself for heavenly solo arousal, or let your partner control its vibrations for a transformative intimate experience.

Desire App-Controlled Knicker Vibrator

PLEASURE GUIDE


Before you get started

Your vibrator needs charging before first use. Charge by plugging the USB cable into a USB charging point and the electrical connector into the socket in the vibrator, piercing the self-healing silicone to access the charger (don't worry, your vibrator will remain waterproof after removing the connector).

The light will flash during charging. When the flashing stops and the light is solid, your vibrator will be fully charged and ready to use.

The vibrator will take approximately 120 minutes to fully charge, and gives you up to 120 minutes of use between charges.

When the battery is running low the light will flash quickly to indicate charging is required.

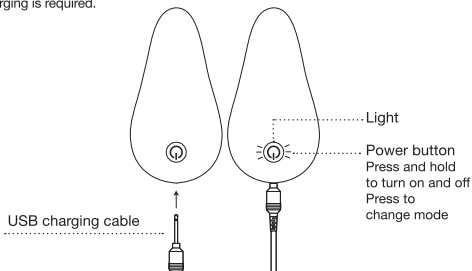

Enjoying your Desire Knicker Vibrator with the App

Download the Desire by Lovehoney app from Google Play or the App Store, and create an account.

Press and hold the power button to switch the vibrator on. The light will flash and the vibrator will buzz three times to indicate that it is in standby mode.

Follow the instructions on the app to pair the vibrator with your phone. The light on the vibrator will go solid once pairing is complete, and the vibrator will buzz twice. Your vibrator can now be controlled with your smartphone.

The app will allow you to move through the 8 patterns illustrated on page 9, and adjust the intensity of each pattern using your finger.

To use the app with your partner, you will both need to have an account.

Select 'Use with a Partner' and follow the instructions to pair with your partner's device (you will find partners you have previously connected with in your Partners list). Your partner will now be able to control your vibrator using their phone.

Enjoying your Desire Knicker Vibrator without the App

To use your vibrator without the app, press and hold the power button to switch it on, then press the button again to start the vibrations.

Keep pressing to cycle through the 8 different patterns and to stop the vibrations. Each pattern will vibrate on its highest intensity.

Press and hold the button on the vibrator to turn it off. It will buzz twice to indicate that it is off.



Pattern 1



Pattern 2



Pattern 3



Pattern 4



Pattern 5



Pattern 6



Pattern 7



Pattern 8

Looking after your Desire Knicker Vibrator

Do not use silicone-based lubricant with the vibrator.

Your vibrator should be cleaned before and after use with specialist sex toy cleaner, and left to air dry before storing.

Store your vibrator in the zip case provided, away from dust, heat and direct sunlight. Your vibrator can remain in the zip case for discreet charging.

Using the travel lock

The travel lock prevents the vibrator from accidentally switching on when not in use. To activate the travel lock, press and hold down the button for 5 seconds. The vibrator will buzz twice when the travel lock is activated.

To deactivate the travel lock, press and hold down the button for 3 seconds. The vibrator will buzz three times to indicate that the vibrator is ready for use. Alternatively, plugging the toy into a USB port will also deactivate the travel lock.

The small print

To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by use of this product.

The shape and appearance of the product inside this package are a trademark and trade dress of Lovehoney Group Ltd. Copyright © 2019.

Electronic equipment in the EU

The crossed out wheellie bin symbol indicates that this toy should not be treated as household waste. Instead, take the toy to a recycling centre that deals with electrical and electronic equipment.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Key details

Materials: silicone and ABS plastic

Charging time: 120 minutes

Usage time: up to 120 minutes

Standby time: 90 days

mAh: 160 mAh

Vibration functionality: 8 modes, 12 speeds

Waterproof: yes

Warranty

Please visit the page below for details of our returns and refunds policy.

www.lovehoney.co.uk/help/returns-policy/

Alternatively, please contact customer care:

0333 103 6969

help@lovehoney.co.uk