 


60*100mm

 
 
无线K歌音箱
使用说明书

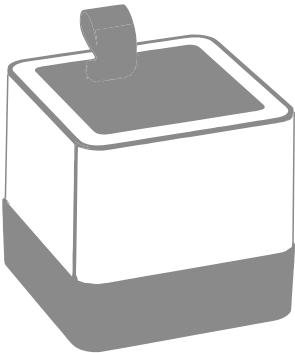

蓝牙名称：K18

结构和功能

1. 开机/待机 2. 音量/音调 3. 上一/下一曲
4. 上一/下一曲 5. 蓝牙

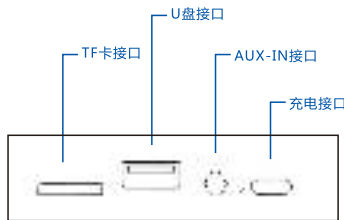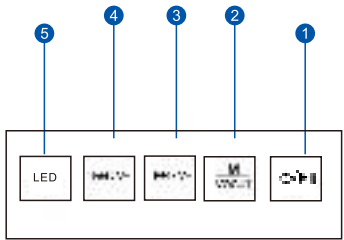

话筒功能操作

1. 开机键:长按开关机
短按切换:话筒调节/混响调节/
伴奏调节/双击控制自动播放暂停
- 2.+号键:短按切换话
筒音量加/混响音量加/伴奏音量加;
长按控制音乐下一曲
- 3.-号键:短按切换话
筒音量减/混响音量减/伴奏音量减;
长按控制音乐上一曲
- 4.话筒键:短按切换:
话筒模式/男变女/女变男/
魔音音/哇哇音
双击清除原音升/关;长按变升/关
- 5.蓝牙/充电指示灯:蓝灯/红灯
- 6.Type-C/DC5V/充电

按键功能

1. 开机/待机:长按开关机,短按切换话筒模式。

2. 上一曲/下一曲:短按。短按调节音量大小,长按切换上下曲。

3. 音量/音调:短按。短按调节音量大小,长按切换上下曲。

4. 话筒键:短按切换话筒模式/男变女/女变男/魔音音/哇哇音/双击清除原音升/关;长按变升/关。

如何使用

通过蓝牙连接手机唱歌

1. 打开手机蓝牙,长按+号键开机,电话指示灯亮起开始连接。
2. 打开手机蓝牙,打开手机蓝牙,长按+号键,长按“K18”。
3. 打开手机蓝牙,打开手机蓝牙,长按+号键,长按“K18”。
4. 打开手机蓝牙,打开手机蓝牙,长按+号键,长按“K18”。

5. 调整音量:长按+号键,短按调节音量大小,长按切换上下曲。

6. 话筒键:短按切换话筒模式/男变女/女变男/魔音音/哇哇音/双击清除原音升/关;长按变升/关。

7. 蓝牙/充电指示灯:蓝灯/红灯。

如何充电

 
1. 将充电线插入充电口,充电指示灯亮起。
2. 将充电线插入充电口,充电指示灯亮起。

技术参数

额定功率:10W/10W
额定电压:5V/5V
额定电流:1A/1A
充电电压:5V/5V

LED PARTY KARAOKE SPEAKER



User manual

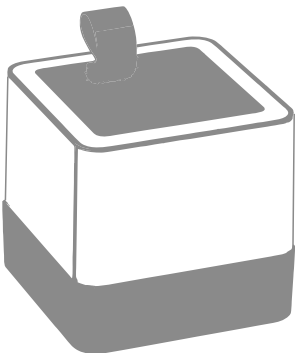

Bluetooth name : K18

Parts and controls

  1. Power/Phone 2. Previous/Next
3. Microphone Volume 4. Previous/Next
5. Bluetooth

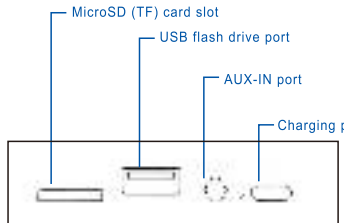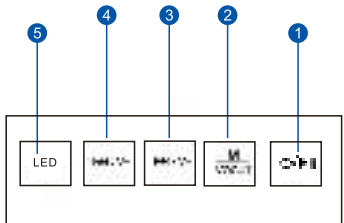

Microphone function operation

1. Power on key: long press to turn on / off short press switch: microphone adjustment / reverb adjustment / style adjustment / double click control audio playback pause.
2. +key: short press to switch microphone volume up reverb volume increase accompaniment volume increase Long press Control the next music
3. -key: short press to switch microphone volume down reverb volume decrease / accompaniment volume decrease Long press Control the previous music
4. -key: short press to switch microphone volume down reverb volume decrease / accompaniment volume decrease Long press Control the next music
5. Bluetooth / charging indicator: blue light / red light
6. Type-c: DC5V / charging

Button function details

Power/Phone: Press and hold to turn on/off the speaker. Press to pause or play the music.

Previous/Next/Volume: Short press to adjust the volume, long press to switch between up and down tracks.

Mode button: Press and hold to switch between microphone, reverb, and style. Double click to pause the music.

Change tone: Press and hold to switch between microphone, reverb, and style.

How to use

Sing by Bluetooth

1. Turn on the speaker: Press and hold the power button on the speaker. The speaker will start to work.
2. Turn on the microphone: Press and hold the power button on the speaker. The speaker will start to work.

3. Adjust sound effect: Press and hold the mode button on the speaker. The speaker will start to work.

4. Play music: Press and hold the play button on the speaker. The speaker will start to work.

5. Note: The speaker will stop working when the power is off. Please turn off the speaker when not in use.

6. The speaker will start to work when the power is on.

How to charge

1. Connect the cable to the charging port on the speaker.

2. Connect the cable to the charging port on the speaker.

Parameters

Rated power: 10W/10W
Rated voltage: 5V/5V
Rated current: 1A/1A
Charging voltage: 5V/5V

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by

Cotton On USA Inc

may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.