82X48mm 五折页 105g铜板纸

Morks with Apple Find My	Getting Started 01	Add Your Item Locator 02	Locate Your Item 03	Find Item When Out of Range 04
e-Tag Quick Start Guide	 1. Power On/Off: Press your Item Locator's function button onceto turn on -it should beep once indicating it is powered on To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Item Locator is powered off 2. Check For Updates: To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPadoS, or macOS is recommended. 	 Start the App Open Find My[™] app on your supported iPhone or iPad Allow notifications from the app Connect your Item Locator Power on your Item Locator In Find My[™] app, select the "Items" tab Tap "Add Item" then tap "Other Supported Items" Once your Item Locator is located, tap "Connect" Choose a recognizable name and emoji for your Item Locator and tap "Continue" Find My will ask for confirmation to add your Item Locator to your Apple® ID - tap "Continue" Tap "Finish" and your Item Locator will be set up and ready to be connected to whatever item you wish to locate e.g. your keys 	 Find Item Locator when it is Nearby Open Find My™ app on your supported iPhone or iPad Tap on your Item Locator from the list Tap "Play Sound" to make your Item Locator beep Tap "Stop Sound" to stop the beeps once you find your item Find Item Locator's Last Known Location Open Find MyTM app and select the "Items" tab Tap on your Item Locator from the list Your Item Locator's last known location will appear on the map as the emoji you choseduring set up To navigate to that last known location, tap "Directions" to open the MapsM app 	 Enabling "Notify When Left Behind" Open Find My™ app and select the "Items" tab Tap on your Item Locator from the list Under "Notifications", enable the "Notify When Left Behind" toggle You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device Enabling "Notify When Found" Under "Notifications", enable the "Notify When Found" toggle When your Item Locator is seen by another Find MyTM enabled device, you will receive a notification of its updated location Note: "Notify When Found" can only be activated when your Item Locator is out of range
When Your Item is Lost 05	Resetting Your Item Locator 06	But Wait There's More 07	The Fine Print 08	The Fine Print 09
 Enabling "Lost Mode" Open Find My™ app and select the "Items" tab Tap on your Item Locator from the list Under "Lost Mode", tap "Enable" A screen detailing Lost Mode will pop up, tap"Continue" Enter your phone number or email address and tap "Next" You may enter a message that will be shared with the person that finds your item Tap "Activate" to enable "Lost Mode" Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device 	 1. Remove the Item Locator from Find My app Open Find My™ app and select the "Items" tab Tap on your Item Locator from the list Please ensure "Lost Mode" is disabled Scroll to the bottom of the screen and tap"Remove Item" A summary will open, tap "Remove" to confirm 2. Factory Reset Your Item Locator: After successfully removing the Item Locator from Find My™ app, press the Item Locator's function button four times rapidly, you will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime The Item Locator is now reset and ready to be paired to a new device 	 Replace the Battery: Use your fingernails at the small gap on the side of your Item Locator to carefully open the case Replace the battery with a new CR2032 battery placing it positive side up (text facing up) Carefully close the Item Locator by aligning the top hole on both sides Unwanted Tracking Detection: If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Item Locator is Item Locator will not trigger a sound if they are with you. 	FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These	reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.