

User Manual



1.Wheel Lamp Manual

- 1.2025 New LED Base light Rock Light You can use the remote control to change the color of the light or adjust the brightness, saturation and frequency.
2. After installation, the car can be adjusted to synchronize the music rhythm with the mobile phone APP and control the remote control board. Make your car charming and extraordinary at night. LED chassis light is a general purpose product that can be used in cars, trucks, trucks, pickup off-road RZR SUV ATV UTV, etc. It is made of hard and durable plastic, using ultrasonic welding technology, with good sealing .
3. The LED rock light of the ATV accessories is reinforced with screws. Please test the underlight before installation, red line :ACC positive, black line: negative.

Wheel Lamp

K17U



2.Hardware parameter

Product model :K17U,K18U

Input Voltage : 12V

Frequency : 2402MHz~2480MHz

Version: 4.2

3.FCC Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.