

CONTENTS AND BATTERY INSTRUCTIONS

Contents

Porsche Taycan Turbo S
Remote Control
USB-C Charging Station

 
Battery Installation

Remote Control Battery Installation:


1. Use a Phillips-head or cross screwdriver to loosen the screw securing the battery cover to the back of the remote control.
2. Insert 2 AA 1.5V batteries (not included) into the battery compartment according to the polarity diagram. Using new alkaline batteries only is recommended.
3. Replace the battery cover and tighten the screw to secure.

Vehicle Battery Charging:

1. Plug the USB end of the charging station power cable into an AC power adapter (not included) or USB power source (Figure A).
2. Carefully lift the charging port cover on the left side of the Porsche Taycan Turbo S (Figure B).
3. To begin charging the vehicle, detach the power connector from the charging station and then plug the power connector into the charging port on the vehicle (Figure C).
4. Wait for the vehicle to fully charge. It can take up to 100 minutes to fully charge the vehicle's built-in 3.7V 600mAh rechargeable lithium battery (non-replaceable). The red status light will turn off when the battery is fully charged.
5. Unplug the power connector and put it back on the charging station. Close the charging port cover on the vehicle. Get ready to drive!

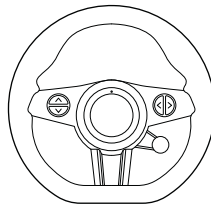


Front

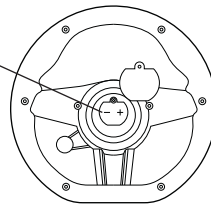 


Back

A.

 USB power source

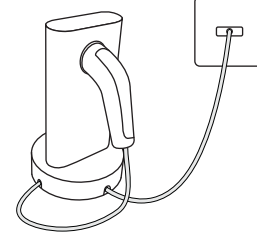


B.

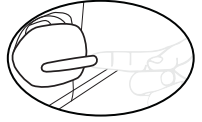 


C.

 Step 1.

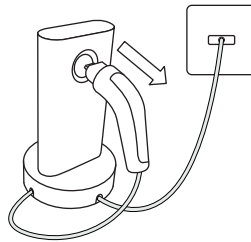

 Step 2.

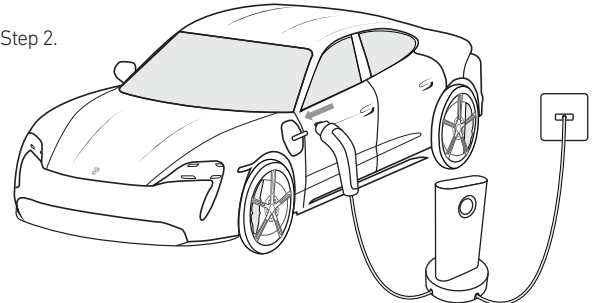

START UP

1. Power on the Porsche Taycan Turbo S by pressing the power button on the bottom of the vehicle.
2. Power on the remote control by pressing the power button on the front of the remote control.
3. Wait for the status light on the remote control to quit blinking and remain solidly lit, indicating the vehicle and remote control have successfully paired. If pairing is not successful, power off both the vehicle and remote control and then repeat steps 1 – 3.
4. Place the vehicle on a hard, flat surface with plenty of space to drive away from obstacles.
5. To drive forward or reverse, press the forward/reverse buttons on the remote control.
6. To steer left or right, either press the left/right buttons on the remote control or use gravity control by tilting the remote control left to turn left or right to turn right.

CONTROLS

Power Button

 
 
Status Light

Gravity Turn Left

Gravity Turn Right

Forward/Reverse Buttons

Left/Right Buttons

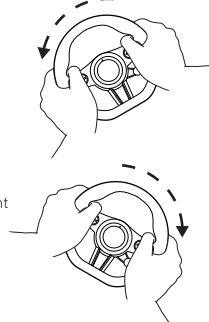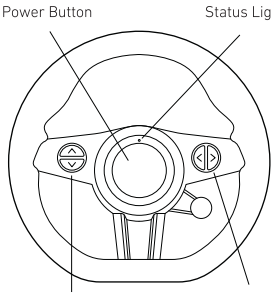

ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.

RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

SAFETY WARNINGS

- Adult supervision required.
- Do not use people or animals as obstacles.
- Never operate your vehicle in inclement weather, rain, or standing water.
- Keep fingers, hair, and loose clothing away from wheels while vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating the vehicle.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING:
CHOKING HAZARD – Small Parts.
Not for children under 3 years of age.

BC

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2023 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Porsche, the Porsche shield and the distinctive design of Porsche cars are trademarks and trade dress of Porsche AG. Permission granted.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.

FOR CUSTOMER SUPPORT, PLEASE CALL

1-800-374-2744