

Memory Recall

Display



Frequency

Memory Channel

Press **[MR]** to enter Memory Recall mode.

To exit Memory Recall mode, press **[VFO]**.

Frequency Range (MHz)
136.000 ~ 173.995

memory List

Memory Channel	Received Frequency	Transmitted Frequency
00	136.050MHz	136.050MHz
01	155.050MHz	155.050MHz
02	173.950MHz	173.950MHz