

MaxFire-Libre

Wireless G-12PS

Wireless 2.4GHz PC & PS2 Game Pad



User's Manual

English/Русский/Deutsch/Français/
Italiano/Español/Português/Brasil
Nederlands/Česky/Magyar/Polski/
Türkçe/Arabic/繁体中文

Dear User,

This product has been proved that the essential requirements regulated in R&TTE Directive 99/5/EC are fulfilled. We would like to follow Annex IV and Annex VII to mark our product by the following symbol.



We would like also to inform you that the national authorities of the following Member States have been notified, according to the Directive, for the frequency spectrum application of this product. And this product is allowed to be place in their markets. (Germany, UK, France, Italy, Spanish, Portugal, Holland, Belgium, Luxembourg, Switzerland, Austria, Denmark, Sweden, Norway, and Finland.)

Standard

EN 300 220:V1.3.1

EN 301 489:V1.2.1

EN 55022

EN 55024

EN 60950:1992+A1:1992+A2:1993+A3 And

A4:1997+A11:1997

Federal Communications Commission (FCC) Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installations, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient / Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Disclaimer

The following does not apply to any country where such provisions are inconsistent with local law:

KYE Systems Corp. makes no warranties with respect to this documentation, whether expressed or implied. All material is provided "as is". This includes, but is not limited to, any implied warranties of merchantability and fitness for a particular purpose. The information covered in this document is subject to change without notice. KYE Systems Corp. assumes no responsibility for any errors that may appear in this document.

All brand names mentioned in this manual are trademarks or registered trademarks of their respective companies.

Copyright© 2004 KYE Systems Corp. All rights reserved.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

EC-Conformity Declaration

We, the undersigned,

Company:	KYE SYSTEMS CORP.
Address:	No. 492, Sec. 5, Chung Hsin Rd., San Chung City, Taipei Hsien, Taiwan R.O.C.
Telephone number:	886-2-29956645
Fax Number:	886-2-29956649
Internet:	http://www.geniusnet.com.tw
certify and declare under our sole responsibility that the following equipment:	
Product Description:	Wireless Gamepad
EU/EFTA member States intended for use:	EU: Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxembourg, Netherlands, Portugal, Spain, Sweden, United Kingdom, EFTA: Norway, Switzerland
Manufacturer:	KYE SYSTEMS CORP.
Brand:	Genius
Model:	Wireless G-12PS

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to R&TTE Directive (99/5/EC). For the evaluation regarding the electromagnetic compatibility, the following standards were applied:

EN 300 220:V1.3.1

EN 301 489:V1.2.1

EN 55022

EN 55024

EN 60950:1992+A1:1992+A2:1993+A3 And A4:1997+A11:1997

Person responsible for this declaration

Y. J. - LAI Manager of TSD

(Name, Surname, Position/Title)



(Legal Signature, Place, Date)

How to use this manual?

 
The game controller is compatible with PC, PlayStation®2 and PlayStation®.

For PC users, please refer to section A of "Installation for PC system".

For PlayStation®2 and PlayStation®, refer to section B of "Installation for PlayStation®2 and PlayStation®".

A. Installation for PC system

1. Install four AA batteries in the game pad.
2. Make sure you turn your computer on.
3. Insert the driver disc into the CD-ROM drive, and the setup program will start automatically. If not, start the setup program manually by selecting **Start/Run** and type in "**E:\setup**" (Where "E:" represents the location of the CD-ROM drive), then press the Enter key.
(If you are using Windows 98, just follow the instructions on the screen to finish the installation.)
4. Please follow the instructions on the screen to finish the driver installation. (Some operating systems will install the DirectX program automatically first, so just follow the instructions on the screen to finish the program installation.)
5. After the software installation is completed, you can plug the USB connector of the cable to the port on the receiver and another USB connector to the USB port on your computer.
6. Press and hold the Connection/Vibration button of the game pad until the MODE LED flashes in red, then press the button of the receiver to connect with each other.
7. Click **Start / Settings / Control Panel** and double click on the "**Game Controllers**" or "**Gaming Options**" icon.
8. In the "**Game Controllers**" or "**Gaming Options**" screen, you can calibrate and test your game controller before you play any game.
9. When you finish the calibration and test, you can now play any game.

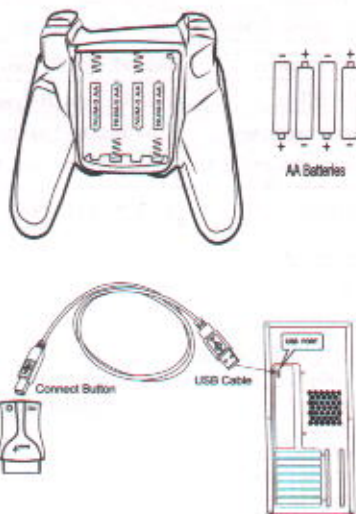


Connect Game Pad with Receiver

1. Press and hold the Connection/Vibration button of the game pad until the MODE LED flashes in red.
2. Press the button of the receiver to connect with each other.

Condition	On line	Off line	Connecting
LED	ON	OFF	Flashes

B. Installation for PlayStation®2 and PlayStation®

 1. Install four AA batteries in the game pad.
2. Make sure you turn your game console on.
3. Plug the PlayStation's standard interface of the receiver to the standard port on your game console.
4. Press and hold the Connection/Vibration button of the game pad until the MODE LED flashes in green, then press the button of the receiver to connect with each other.




AA Batteries

Condition	On line	Off line	Connecting
LED	ON	OFF	Flashes

5. When you finish the connection, you can now play any game.
6. The game controller's function is according to the game software you are using. For details, refer to the game software manual.

 Controller ports

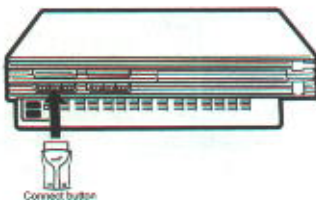

Connect button

PlayStation®2 and PlayStation® Function

1. Analog Mode: When the controller is in analog mode, the following buttons and sticks may be operated in analog fashion depending on the features supported by the software title. Refer to the game software manual for details. PlayStation®2 format software Directional buttons / TM buttons / left analog stick / right analog stick / L1, R1, L2, R2, L3, R3 buttons PlayStation® format software Left analog stick / right analog stick / L3, R3 buttons.
2. Digital Mode: When the controller is in digital mode, all function buttons are operated digitally, but the analog sticks will not work.

3. Vibration function: The game controller features a vibration function when the function is supported by the software title. The vibration function can be set to ON or OFF on the software option screen.
4. You can switch to the appropriate mode for use. But some software makes this adjustment automatically. In such cases, the software overrides the A/D mode button. For details, refer to the game software manual.

Important:

1. The driver will work with the DirectX 7.0a or a newer version in PC system. Please check the DirectX version on your system, and upgrade if necessary.
2. The vibration effect occurs according to game software. For details, refer to the game software manual.
3. This game device with radio frequency gives you free action and an enjoyable experience. For optimal performance, place the receiver at least 8 inches (about 20 cm) away from other electrical devices, such as the computer, monitor, and etc.
4. If you feel this game device does not move as smooth as usual, then the batteries have lost their charge, so please replace them.
5. Please do not use the wireless game pad with a 2.4GHz wireless mouse or a 2.4GHz wireless keyboard and mouse kit at the same time, especially when playing a game. If you do, you will encounter interference between the devices.

LED Indicator:

LED signal is compatible with PC, PlayStation®2 and PlayStation® system.

1. Vibration Mode:

You can switch the vibration mode by pressing the Vibration /Connection button.

Condition	Vibration ON	Vibration OFF
LED	Flashes	ON

2. Analog and Digital Mode:

The game device has Analog/Digital. You can switch to the appropriate mode for use.

Condition	Analog LED	Digital LED
Pressing Mode Button	Red Light	Red Light
Note: If your game pad is in Vibration mode, the LED flashes when indicating.		

Note: This game pad is equipped with Analog and Digital modes, and there are some different features with PC mode as follows:

Hardware / Mode	Analog mode	Digital mode
D-pad	POV HAT	X & Y axis motion
Left mini-stick	X & Y Axis motion	X & Y axis motion
Right mini-stick	Throttle & Rudder	Throttle & Rudder
LED Indicator	Red Light	Red Light

3. Power Saving Mode:

When you stop operating this game pad for some time (shown below), it enters a "Power Saving" status to prevent battery usage. You can wake up it by pressing one of the key-buttons like Vibration/Connection, Mode, Select and Start.

Condition	On line	Off line	Mode Setting
Time to Power Saving	2 Min	15 Sec	1 Min

4. Battery Status of the Receiver LED:

When the Low-battery LED is Red, please change new batteries in game pad.

Note: The vibration function will be **turned OFF** automatically in Low Battery Power supply.

Condition	Normal Battery Power Supply	Low Battery Power Supply
LED	Green Light	Red Light