

 FCC ID: GAO-LIFE3G	1.agenda En la agenda, puede buscar rápidamente 、 buscar contacto 、 agregar número 、 copiar todo, marcar eliminar groups grupos de llamantes 、 números adicionales, configuraciones, contacto de respaldo, marcación rápida. 2. mensaje 2.1 Escribe un mensaje Puedes escribir mensaje de texto. 2.2 Bandeja de entrada Hay SIM1 y bandeja de entrada SIM2. Incluir en la bandeja de entrada de mensajes de texto. Si la bandeja de entrada no tiene ningún mensaje, aparecerá el mensaje "Sin mensaje".. 2.3 Bandeja de salida Puede comprobar los mensajes que no se ha enviado. 2.4 Borradores Hay borradores SIM1 y SIM2. 2.5 Plantillas Al editar el mensaje, puede agregar estas cláusulas. Por favor llámame! Donde estas ahora? Gracias! Espera un minuto! Estoy ocupado hoy ! y así. 2.6 Servidor de correo de voz Servicio de correo de voz, puede configurar el número de casilla de idioma. 2.7 Bandeja de entrada de seguridad Caja de seguridad, la información confidencial puede existir aquí. 2.8 Configuraciones de mensajes Puede establecer la configuración del perfil, la configuración común, el estado de la memoria, el almacenamiento preferido. Nota: las funciones del servicio de información y el correo de voz son proporcionadas por el operador, póngase en contacto con su operador. 3 camara En la cámara, presione la tecla OK para tomar la foto. Presione la tecla de función izquierda para ir a la interfaz de opciones como sigue: Fotos: ver las fotos Ajustes de la cámara Ajustes de imagen Balance de blancos: Hay 6 opciones. Modo de escena: Modo automático o modo nocturno. Ajustes de efectos: en el estado de vista previa, presione 3 para cambiar. Hay 6 opciones. Almacenamiento:	Al teléfono o tarjeta de memoria. 4 Reproductor de música En el reproductor de audio, pulse la tecla OK para reproducir música. Pulse la tecla MP3 para detener la música. Presione la tecla izquierda / derecha para cambiar el volumen. Después de elegir la configuración de música, se realizan las siguientes operaciones:La lista de reproducción de música puede agregar canciones. Repetir: puedes repetir la reproducción. Hay 3 opciones: cerrar, repetir una vez, todas repetir. Aleatorio: establece el orden de reproducción. Puedes elegir abrir o cerrar esta función. Reproducción de fondo: elige esta función; Puedes reproducir la música en otras operaciones. (Excepto la operación de la cámara y la operación de grabación). Nota: el reproductor solo pone la música en Mi música en la lista. 5 multimedia 5.1 Visor de imágenes Ver: ver las fotos. Información de la imagen: puedes ver los detalles de las fotos. Estilo de navegación: estilo de lista o estilo de matriz. Enviar: a través de Bluetooth. Usar como: Fondo de pantalla \ Protector de pantalla \ Encendido o apagado de la pantalla. Renombrar: renombrar las fotos. Borrar: borra la foto seleccionada. Eliminar todos los archivos: borrar todas las fotos.Ordenar por: puede organizar el orden de las fotos según el nombre, el tipo, la hora, el tamaño o ninguno (el primer registro). Almacenamiento: Puede elegir el teléfono o la tarjeta de memoria. 5.2 Reproductor de video Después de ingresar a la lista de películas, puedes: Seleccione el archivo con las teclas arriba / abajo, luego presione las opciones para ir a la interfaz: reproducir, enviar, renombrar, eliminar, eliminar todos los archivos, ordenar o almacenar. Haga clic en el archivo de la película para ir a la interfaz de opción. Cuando esté listo para jugar, Presiona OK para jugar o para pausar. Presione la tecla de dirección hacia arriba o hacia abajo para ajustar el volumen. Presiona hacia la izquierda o hacia la derecha para controlar la velocidad de reproducción. Durante la reproducción de video, puede ajustar la velocidad con la tecla izquierda / derecha, y para pausar / continuar con la tecla OK. Puede presionar "1" para cambiar a pantalla completa. 5.3 Videocámara Puede ingresar a la videocámara a través de multimedia. Después de entrar en Multimedia, en el estado de vista previa. Presione la tecla izquierda / derecha para	ajustar el parámetro EV. Pulse la tecla arriba / abajo para ajustar el pliegue de ampliación. Presione la tecla ok para comenzar a grabar el video. Presione para detener la grabación por un tiempo, luego presione para continuar. 5.4 Grabadora Presione la tecla de función izquierda, puede hacer una nueva grabación o reproducir una grabación. Presione la tecla arriba / abajo para cambiar el volumen al reproducir la grabación. 5.5 Radio FM Auriculares de entrada, entonces puede recibir la radio FM. Presione la tecla OK para jugar, presione la tecla arriba / abajo para cambiar el volumen. Presione la tecla de función izquierda, Lista de canales: después de configurar 9 canales, puede alternar entre ellos presionando la tecla numérica. Entrada manual: ingrese el canal que desea Búsqueda automática: busca automáticamente los canales y los configura como una lista. Ajustes: Para establecer sobre el fondo, altavoz. Búsqueda automática: busca automáticamente los canales y los configura como una lista. También puede ponerlo afuera, reproducción de fondo y grabación y así sucesivamente. 6 Ajustes 6.1 Ajustes de teléfono Hora y fecha Programar encendido / apagado: puede activar o desactivar 4 horas diferentes. Idioma: para elegir un idioma para su auricular.Pref. Método de entrada: elija un método de entrada predeterminado. Característica de la pantalla en la interfaz inactiva: Fondo de pantalla: elija el fondo de pantalla para el modo inactivo Encendido en pantalla: elija el flash cuando encienda Pantalla de apagado: elija el flash cuando se apague Accesos directos: agregar número, buscar contacto, grupo de llamantes, escribir mensaje, estado de memoria, almacenamiento preferido, texto de saludo, pref. Métodos de entrada, tipo de alerta. Tecla dedicada: la tecla arriba es la cámara, la tecla abajo es el calendario, la tecla izquierda es el mensaje de escritura, la tecla derecha es el perfil del usuario. 6.2 Configuración dual sim Hay 4 modelos: SIM dual abierta, solo SIM1 abierta, solo SIM2 abierta y modo de vuelo. 6.3 Network settings Configuración de la red SIM1 Selección de red Red preferencial: guardar alguna red preferencial Configuración de red SIM2: El detalle se refiere a la configuración de red SIM1.	6.4 Configuraciones de seguridad Bloqueo de la tarjeta SIM: puede bloquear la tarjeta SIM para evitar el uso ilegal. Dial fijo Si la tarjeta SIM admite esta función, puede configurar la marcación determinada y solo puede marcar el número en la lista. Introduzca "dial fijo", puede configurar: Formato: abrir / cerrar esta función (se necesita el código PIN2). La lista: ingresa los números. Nota: para abrir / cerrar esta función, se necesita el código PIN2. Por favor, póngase en contacto con su operador para obtenerlo.Dial bloqueado: Establece los números que no puedes marcar. Bloqueo de teléfono Puede bloquear el teléfono para evitar su uso ilegal. Debe ingresar la contraseña del teléfono cada vez que lo encienda. Nota: La contraseña predeterminada es 1234; Por favor, cámbielo a su contraseña personal lo antes posible. Bloqueo de teclado automático Ajuste el tiempo de espera para bloquear el teclado. Después de la configuración, el teclado se bloqueará automáticamente Cambia la contraseña:Incluyendo PIN, código PIN2 y la contraseña del bloqueo del teléfono. Nota: algunas funciones necesitan el soporte del operador. 6.5 Configuración de llamadas Llamada en espera: abre o cierra esta función Desvío de llamadas Bloqueo de llamadas Cambio de línea: cambio de línea de 1 a 2. El valor predeterminado es la línea 1. 6.5.2 configuración de llamada SIM El detalle se refiere a la configuración de la llamada SIM1. Recordatorio de tiempo de llamada: puede elegir desactivado, Único, Periódico, cuando llame que le recuerde por voz. Rellamada automática: cuando configura esta función, cada vez que no logra pasar, se volverá a marcar automáticamente. Lista negra Modo: encendido / apagado Números de lista negra: puedes editar números negros. Marcación IP: ingrese el número de IP y presione OK para confirmar la configuración, y luego puede cancelarla o editarla. 6.6 Restaurar la configuración de fábrica Ingrese la contraseña del bloqueo del teléfono, puede configurar el parámetro a los valores predeterminados de fábrica. Nota: La contraseña predeterminada es 1234; 7. LEON TWIST Después de la tarjeta puede navegar por internet.
--	---	---	---	---

 FCC ID: GAO-LIFE3G	1. Phonebook In the phonebook, you can quick search 、 search contact 、 add number 、 copy all, mark delete 、 caller groups 、 extra numbers, settings, backup contact, speed dial. 2. Messages 2.1 Write message You can write Text message. 2.2 Inbox There are SIM1 and SIM2 inbox. Include in Text message inbox. If the inbox has no message, there will be a prompt "No message". 2.3 Outbox You can check the messages which one is unsent. 2.4Drafts There are SIM1 and SIM2 drafts. 2.5 Templates When edit message ,you can add this clauses Please call me!Where are you now? Thank you! Wait a minute! I am busy today ! and so on. 2.6 Voice mail server Voice mail service, you can set the language box number. 2.7 Security inbox Safety box, confidential information can exist here. 2.8 Message settings You can set profile setting ,common settings, memory status, preferred storage. Note: the functions of info service and voice mail are both supplied by the operator, please contact with your operator. 3. Camera In camera, Press OK key to take picture. Press the left function key to go to the options interface as the followings: Photos: view the pictures Camera settings Image settings White balance : There are 6 options. Scene mode: Auto mode or night mode. Effect settings: At previewing status, press 3 to switch. There are 6 options. Storage: To phone or memory card. 4. Audio player In audio player, Press OK key to play music. Press MP3 key to stop music. Press left/right key to change the volume After choosing music settings, there are the	following operations: Music playlist can add songs. Repeat: you can repeat playing. There are 3 options: close, single repeat, all repeat. Shuffle: set the playing order. You can choose to open or close this function. Background play: choose this function; you can play the music when in other operations.(Except camera operation and record operation.) Note: the player only put the music in My Music to the list. 5. Multimedia 5.1 Image viewer View: view the photos. Image information: you can view the details about photos. Browse style: list style or matrix style. Send: via Bluetooth. Use as: Wallpaper\Screen saver\Power on or off display. Rename: rename the photos. Delete: delete the selected photo. Delete all files: delete all photos. Sort by: you can arrange the photos order according to name, type, time, size or none (the first record). Storage: You can choose phone or Memory card. 5.2 Video player After entering the film list, you can: Select the file by up/down key, then you press options to go to the interface: play, send, rename, delete, delete all files, sort by or storage. Click the film file to go to the option interface. When it is ready to play, Press OK to play to play or pause it. Press up or down direction key to adjust the volume. Press left or right to control the playing speed. During video playing, you can adjust the speed by left/right key, and to pause/continue by OK key. You can press "1" to switch full screen. 5.3 Camcorder You can enter the Camcorder through multimedia. After entering Multimedia, at the previe wing status. Press left/right key to adjust EV parameter. Press up/down key to adjust the enlarging fold. Press ok key to begin recording video. Press to stop recording for a while,then press to continue . 5.4 Recorder Press left function key, you can make a new record or play recording, Press up/down key to change the volume when play the recording. 5.5 FM radio Input headset then you can receive the FM radio. Press OK key to play, Press up/down key to change the volume. Press left function key, Channel list: After setting 9 channels, you can switch among them by pressing the numeric key. Manual input:	input the channel you want Auto search : Auto search the channels and set them as a list. Settings : To set about background, Loud speaker. Auto search : Auto search the channels and set them as a list. You can also put it outside, background playback and recording and so on. 6. Settings 6.1 Phone settings Time and date Schedule power on/off: you can set 4 different times on or off. Language: to choose a language for your headset. Pref. input method: choose a default input method. Display characteristic on idle interface: Wallpaper: choose the wallpaper for the idle mode Power on display: choose the flash when power on Power off display: choose the flash when power off Shortcuts: Add number, search contact, Caller group, write message, memory s tatus, preferred storage, greeting text, pref. Input methods, alert type. Dedicated key: up key is camera, down key is calendar, left key is write message, right key is user profiles. 6.2 Dual SIM settings There are 4 models: dual SIM open, only SIM1 open, only SIM2 open and flight mode. 6.3 Network settings SIM1 network s ettings Network selection Preferential network: save some preferential network SIM2 network settings:The detail is referred to SIM1 network setup. 6.4 Security settings SIM lock: You can lock the SIM to avoid being illegally used. Fixed dial If the SIM card supports this function, you can set the certain dialing then you can only dial the number on the list. Enter "fixed dial", you can set: Format: open/close this function (PIN2 code is needed). The list: input the numbers. Note: to open/close this function, the PIN2 code is needed. Please contact with your operator to get it. Barred dial: set the numbers you can not dial. Phone lock You can lock the handset to avoid being illegally used. You have to input the handset password each time you power on the handset. Note: The default password is 1234; please change it to your personal password as soon as possible. Auto keypad lock Set the waiting time for locking keypad. After setting, the keypad will be locked automatically . Change the password: including PIN, PIN2 code and the password of the handset lock. Note: some functions need the support of the operator.	6.5 Call settings 6.5.1 SIM call settings Call waiting: open or close this function Call divert Call barring Line switch: line switch form 1 to 2. The default is line 1. 6.5.2 SIM call settings The detail is referred to SIM1 call settings. Call time reminder: you can choose off, Single, Periodic, when you are calling that can remind you by a voice. Auto redial: when you set this function, each time you fail to get through, it will redial automatically. Black list Mode: on/off Black list numbers: you can edit black numbers. IP dial: enter IP number and press OK to confirm the settings, and then you can cancel or edit it. 6.6 Restore factory settings Input the password of the handset lock, you can set the parameter to factory default. Note: The default password is 1234; 7.LEMON TWIST After the card can surf the Internet. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. Specific Absorption Rate (SAR) information: This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement: The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: FCC ID: GAO-LIFE3G has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.401W/kg and when properly worn on the body is 1.350W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. Body-worn Operation This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.
--	---	--	--	---