


# **Rhyme Band**


Audio Headband Headset

User Manual


## How to Wear

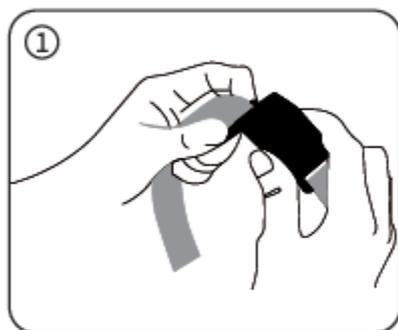

Buckle the headband on the device.

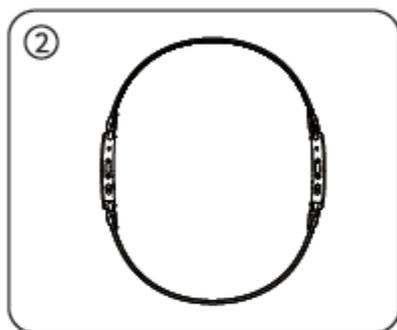

Press & hold the MFB button for 3sec.

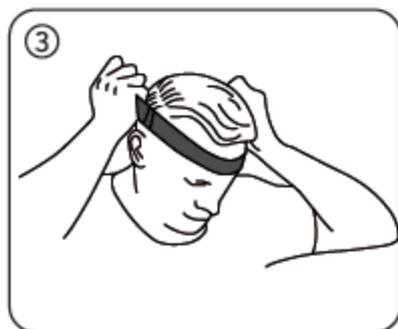

Wear Rhyme Band.



Enjoy your workouts!


## What's In the Box



Rhyme Band  
X1



Manual  
X1

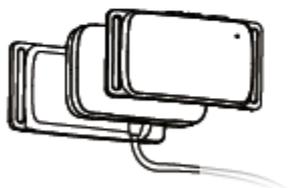

Charging Station X1  
USB Cable X1

## Specifications

Model: Rhyme Band

Type: Wireless audio headset

BT Version: BT 5.1

Frequency: 20-20kHz

Connection:  $\geq 10\text{m}$

Battery: 160mAh


Music Time:  $\geq 6\text{h}$  (80% volume)

Call Time:  $\geq 5\text{h}$  (80% volume)

Charging Time:  $\approx 2\text{h}$


Charging Voltage: DC 5V

## Button Control

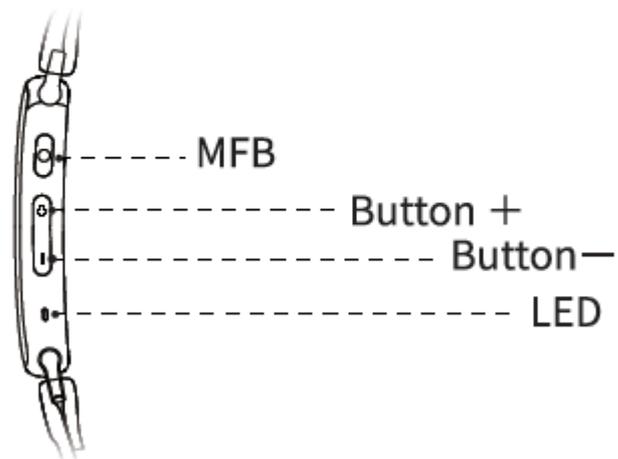


## Power On

Press & hold the MFB on both left & right headsets for 3 sec until white & green LEDs flash. Enter pairing mode. Prompt: power on pairing.

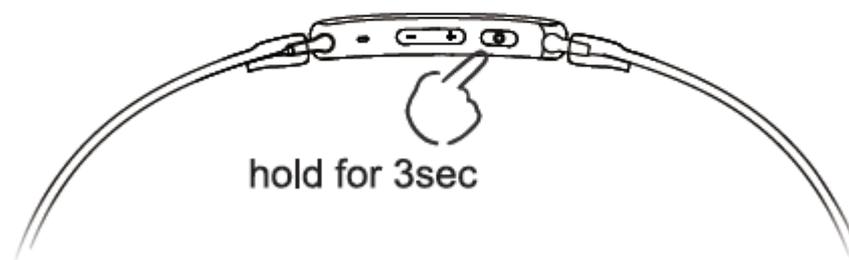


## BT Connection

Select "Rhyme Band" in BT menu to connect. Prompt: connected.

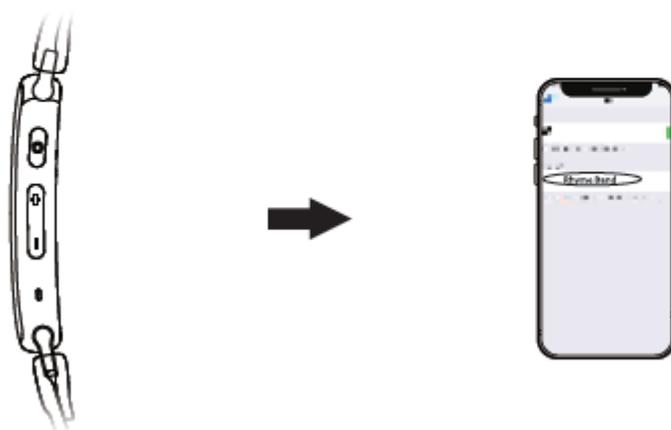


## Power Off

Press & hold the MFB on both left & right headsets for 3 sec until green LED flashes. Prompt: power off.

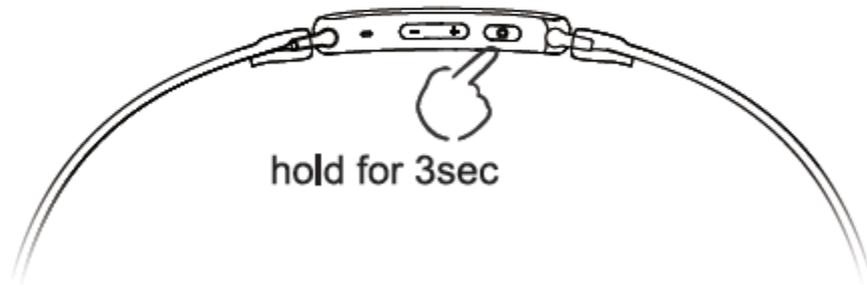


## Answer/Hang Up A Call

Click the MFB once on left or right headset.

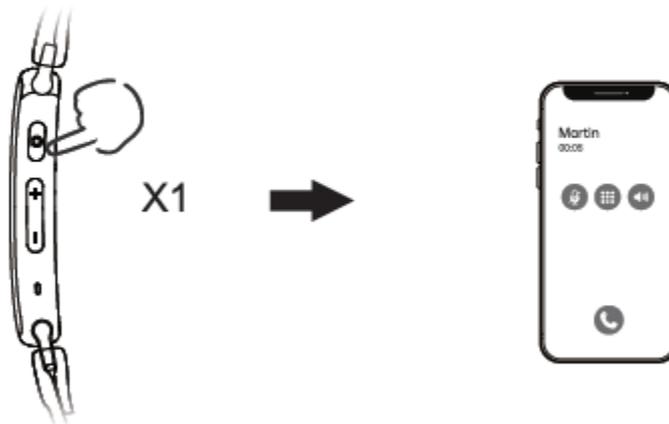

## Reject A Call


Double click the MFB on left or right headset.

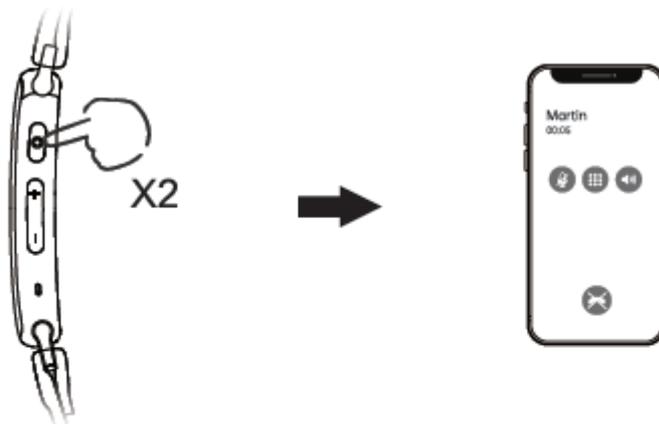

## Previous/Next Track


Press & hold the button + on left or right headset for previous track.

Press & hold the button - on left or right headset for next track.

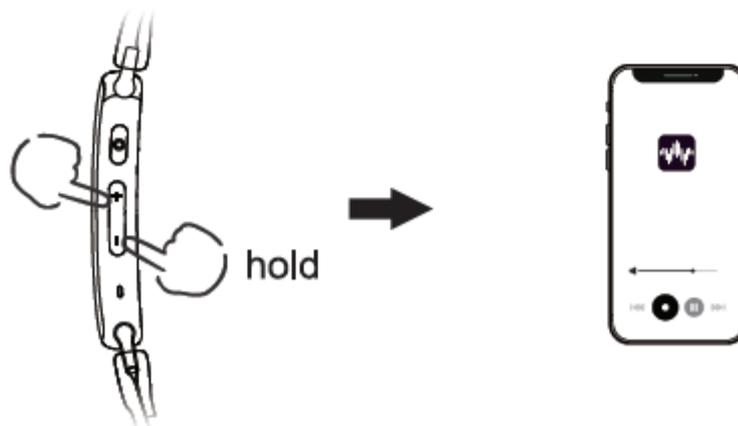

## Play/Pause Music


Click the MFB once on left or right headset.

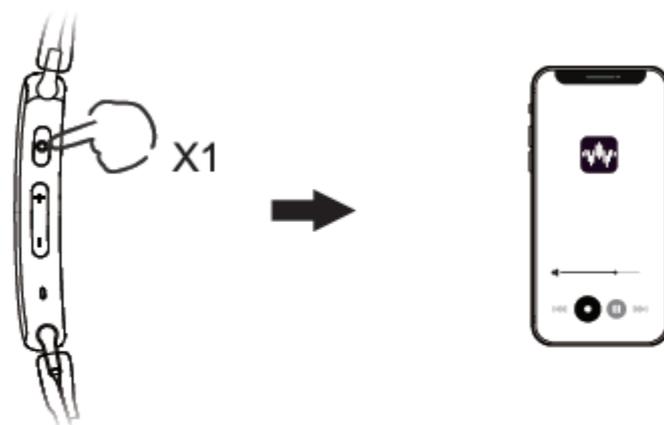

## Volume Up/Down


Click the button + once on left or right headset for volume up.

Click the button - once on left or right headset for volume down.

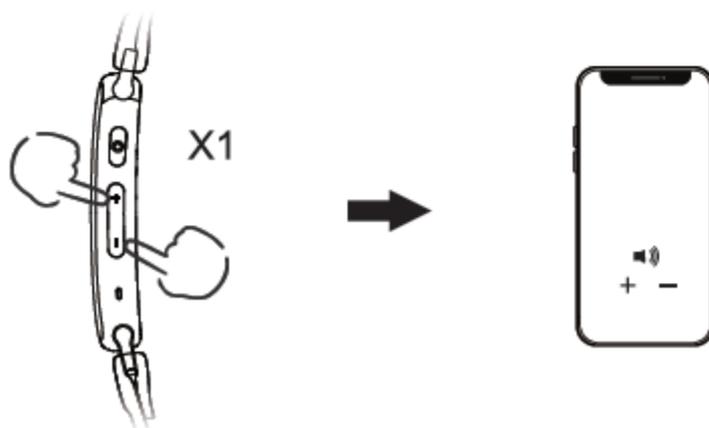


## Voice Command

Quick triple click the MFB on left or right headset.

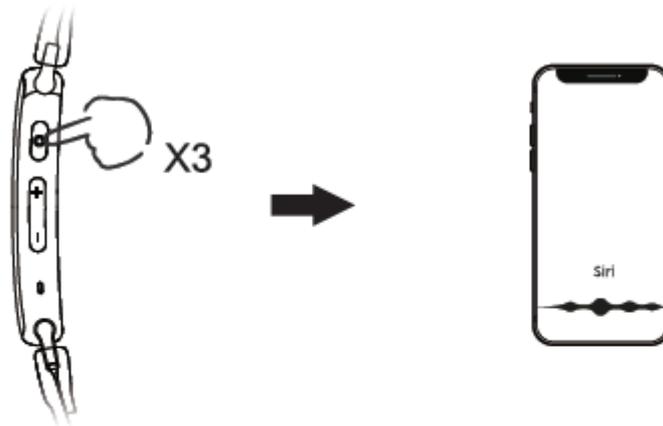

## Low Battery

When battery is lower than 10%, prompt: battery low.

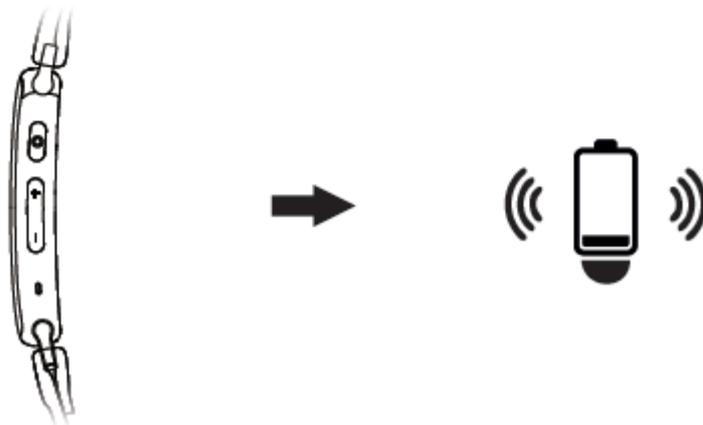


## Charging

Place the left and right headset onto the charging station. The green LED is on during charging.

The white LED is on when fully charged.


Please charge with DC 5V adapter.

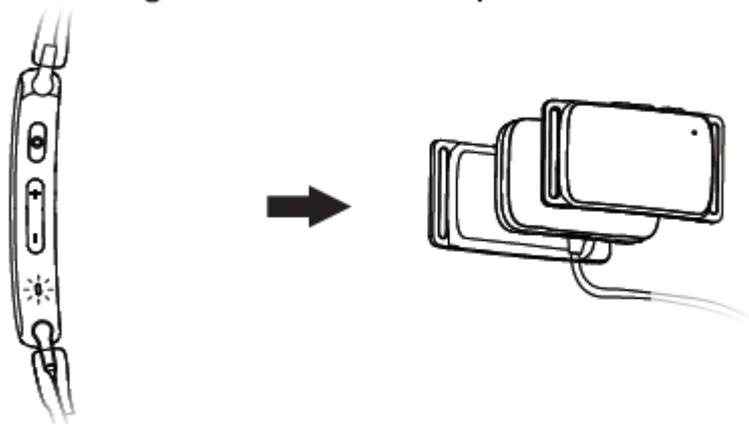

## Restore Factory Setting

Under power-off mode, press & hold the MFB button on both left and right headsets for 10sec.

hold for 10sec

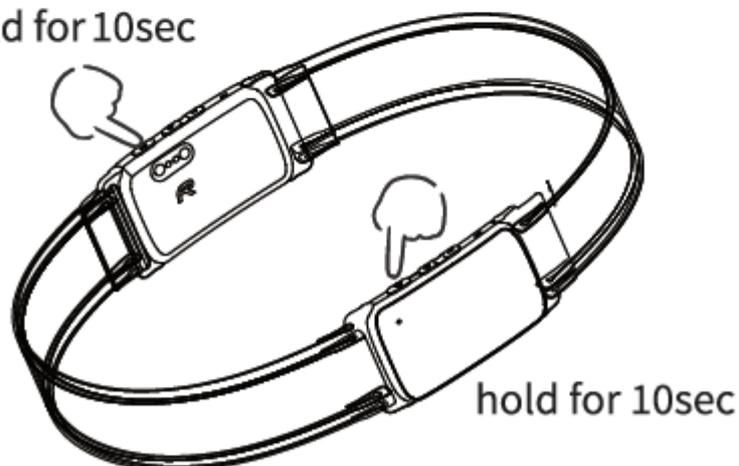

## **Attentions**

1. Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time.
  2. Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones.
  3. Do not remove or modify the headphone, as this may cause damage or burn out.
  4. Do not throw, twist on headphones or put them into a fire.
  5. Keep it away from fire, hydration and high pressure equipment.
  6. Not suitable for children under 3-year-old containing small parts.
  7. Do not classify it as household waste. Please send it to the local electrical equipment recycling station.
- Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.

**FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.