


<http://www.zebra.com/3600series>

Replace Illustration


Digital Scanner
with Keypad & Display

Quick Start Guide

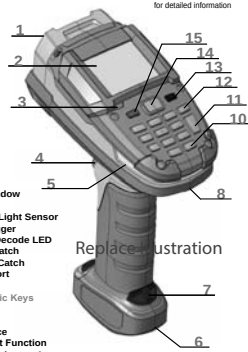

- 1 Scan Window
- 2 Display
- 3 Ambient Light Sensor
- 4 Scan Trigger
- 5 System/Decode LED
- 6 Battery Latch
- 7 Lanyard Catch
- 8 Sound Port
- 9 Home
- 10 Enter
- 11 Backspace
- 12 Blue Shift Function
- 13 4-way Navigaton Arrows
- 14 Green Shift Function


Replace Illustration

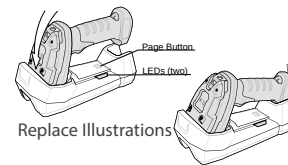

Replace Illustrations

Page Button
LEDs (two)

BATTERY INSERTION/REMOVAL

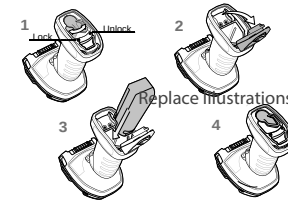


Replace Illustrations

POST IN WORK AREA

CRADLE CABLE CONNECTION

SET DEFAULTS / ENTER KEY BAR CODES

TAB KEY BAR CODE

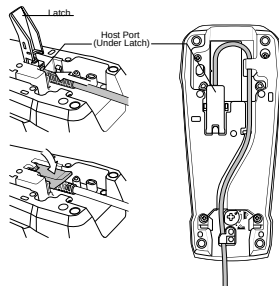

RETURN TO FACTORY DEFAULTS

ADD AN ENTER KEY
(Carriage Return/Line Feed)

To add an Enter key after scanned data, scan the bar code below.



ADD AN ENTER KEY (CARRIAGE RETURN/LINE FEED)

ADD A TAB KEY

To add a Tab key after scanned data, scan the bar code below.



ADD A TAB KEY

USB CAPS LOCK OVERRIDE BAR CODE



USB - OVERRIDE CAPS LOCK KEY (ENABLE)



*USB - DO NOT OVERRIDE CAPS LOCK KEY (DISABLE)


STEP 1 - CONNECT HOST INTERFACE

STEP 2 - SET UP INTERFACE (Scan Host Bar Codes)

USB

NOTE: Cables may vary depending on configuration

Replace Illustration

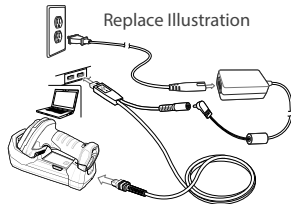

USB

Scan **ONE** of the bar codes below

The interface cable automatically detects the host interface type and uses the default setting. If the default (*) does not meet your requirements, scan another host bar code below.



*USB KEYBOARD (HID)



USB CDC Host



IBM TABLE TOP USB



SNAPI WITHOUT IMAGING



SNAPI WITH IMAGING



USB OPOS HAND-HELD



SIMPLE COM PORT EMULATION




SSI OVER USB CDC



IBM HAND-HELD USB

RS-232

Replace Illustration

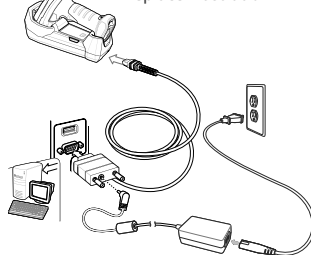

RS-232

Scan **ONE** of the bar codes below

The interface cable automatically detects the host interface type and uses the default setting. If the default (*) does not meet your requirements, scan another host bar code below.



*STANDARD RS-232



ICL RS-232



NIXDORF RS-232 MODE A



NIXDORF RS-232 MODE B




FUJITSU RS-232



OPOS/POS

Keyboard Wedge

Replace Illustration

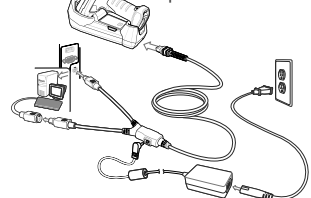Keyboard Wedge
Scan a bar code below

The Auto-Host Detect Cable feature automatically detects the host interface type and uses the default setting. If the default (*) does not meet your requirements, scan the IBM PC/AT and IBM PC COMPATIBLE bar code below.




*IBM AT NOTEBOOK



IBM PC/AT and IBM PC COMPATIBLE

IBM 46XX

Replace Illustration

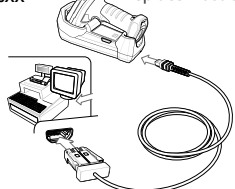

IBM 46XX

Scan **ONE** of the bar codes below

The Auto-Host Detect Cable feature automatically detects the host interface type, but there is no default setting. Scan one of the bar codes below to select the appropriate port.



NON-IBM SCANNER EMULATION (PORT 9B)



HAND-HELD SCANNER EMULATION (PORT 9B)



TABLE-TOP SCANNER EMULATION (PORT 17)

123Scan

123Scan is an easy-to-use, PC-based software tool that enables rapid and easy customized setup of a scanner via a bar code or USB cable. For more information, visit: www.zebra.com/123Scan.

