



HS3100

OTH

BTN



Rugged Bluetooth Headset

Quick Start Guide



Zebra reserves the right to make changes to any product to improve reliability, function, or design. Zebra does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein. No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Zebra products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Zebra products.

Warranty

For the complete Zebra hardware product warranty statement, go to: <http://www.zebra.com/warranty>.

Service Information

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Zebra Global Customer Support at: <http://www.zebra.com/support>.

For the latest version of this guide go to: <http://www.zebra.com/support>.



Zebra Technologies Corporation, Lincolnshire, IL USA
<http://www.zebra.com>


Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

© 2016 Symbol Technologies LLC, a subsidiary of Zebra Technologies Corporation. All rights reserved.




Features

Over-the-Head (OTH)

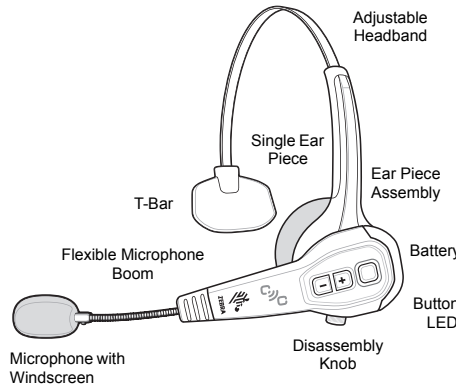


Behind-the-Neck (BTN)

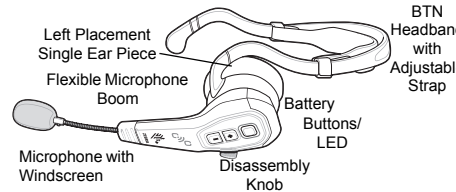

Note: This guide applies to both the OTH and BTN headband models, unless otherwise noted.


Buttons/LED

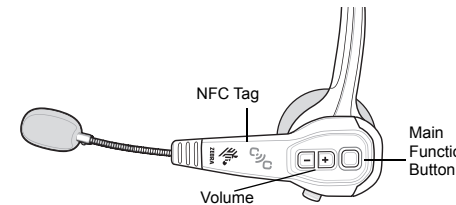

Buttons/ Function	LED Indicator
Main Function Button	
Power ON	Blue and flashes three times
Power OFF	Red and flashes three times
Pair	Blue and Red alternate flash
Connection Status	


Not Connected	Blue
Connected	Blue flash every two seconds
Battery Status	
Low Battery Shutdown	Red and flashes three times
Low Battery Warning	Red flashes twice every two seconds until battery shutdown
Battery Charging (USB)	Red

Charge the Battery

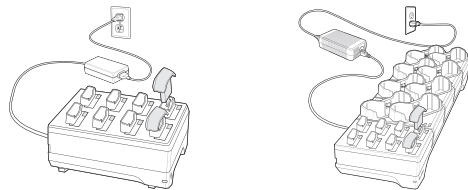


Insert the battery into the charger with the contacts facing forward.

Insert the Battery

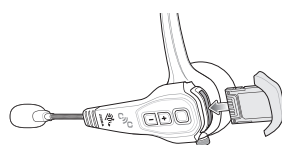


Insert the battery with the contacts facing outward.

Power On Headset

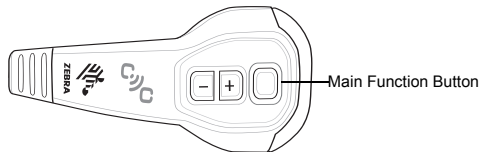

Press the Main Function button to turn the power on. The headset LED illuminates blue and flashes three times.


Pair Headset with Device

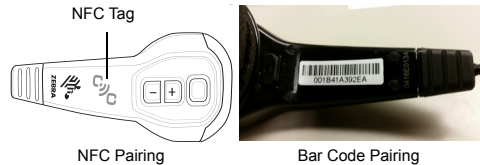

The headset can be paired in any of the following ways:

- Tap to Pair (NFC Pairing)
- Scan to Pair (Bar Code Pairing)
- Manual Pairing (Provisioning the HS MAC Address)


Position the Boom

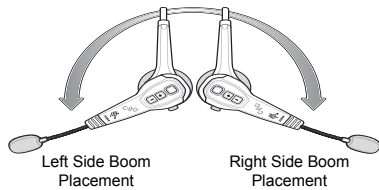

Do not rotate the boom beyond the stop point.

* Applies to OTH model. The BTN model has only left side boom placement.

Adjust the OTH Headband

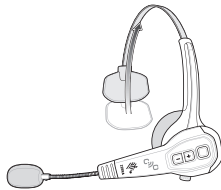

The headband can be squeezed for a tighter fit to the head and clicks as it is positioned into place. When adjusting the headband,


- Position the ear pad in the center of the ear.
- Position the T-Bar above the ear, half way between the top of the ear and the top of the head.

* Applies to OTH model.

Adjust the BTN Headband Strap




Loosen or tighten the velcro closure on each end to increase or decrease the length of the strap.

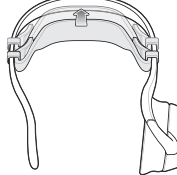

Slide the clips forward or backward to move the strap closer or further from the headband.

* Applies to BTN model.

 Adjust the Microphone



Position the microphone icon so that it is facing your mouth.

Adjust the Microphone Boom




Place the microphone two finger's width away from the corner of your mouth, so it is slightly to one side.

Mute the Microphone



Place the microphone boom in the upright position.


Adjust the Volume

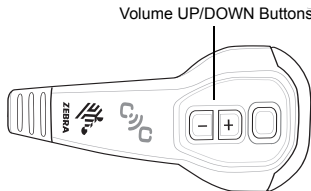

Audio Tones and Prompts

Function	Audio Tone/Prompts
Start Pairing	Tone: Two short beeps - low
Successful Pairing	Tone: Three beeps - raising
Device Connected	Tone: One beep Prompt: From the application
Bluetooth Link Lost	Tone: Two low tones followed by high tone
Low Battery	Tone: Two short beeps triggered every two minutes until shutdown Prompt: While connected from the application

Replace Headband

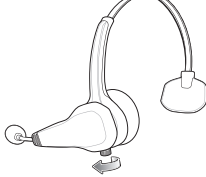

Disassemble the headset to replace the headband.

Replace Ear Pad




Firmly grip and pull the ear pad and inner casing.



Align and snap the new fear pad into position.

Replace Windscreen

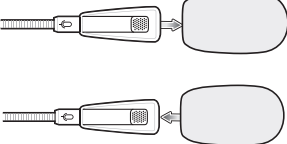

Remove the Battery

