

# Bluetooth Speaker User Guide

Customer: ODI


Product: Top Dogg/Horn Dogg/Remote

Version 1.0

Drafted by: Paul Yao

9th, Feb 2018

## 1. Overview of I/O port:

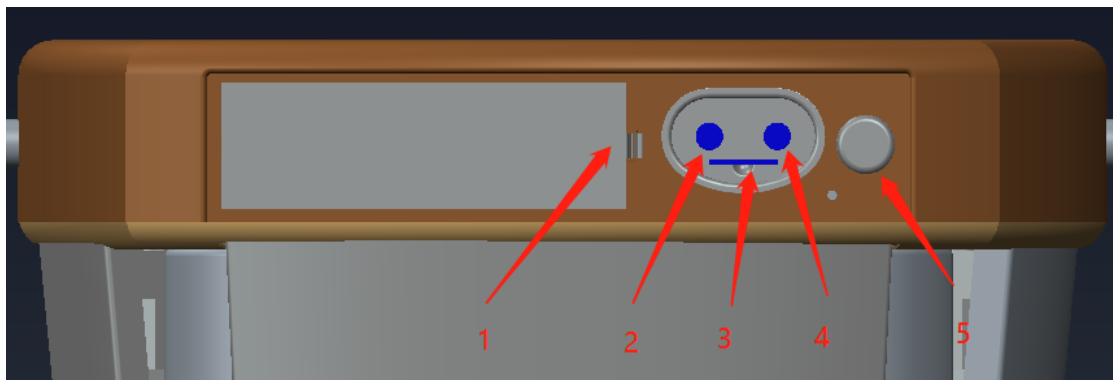

### 1.1 Item list:

1. Battery door
2. Aux in
3. TF card
4. Lineout of Decoy
5. Power Button

## 2 Operation Guide:

- 2.1 Open Battery door. Connect the cable of special battery. Close Battery door.
- 2.2 Push Power Button to Turn on the Speaker.
- 2.3 Waiting signal from Remote control.
- 2.4 Hold 5s on Power Button of Remote to Turn it on.



- 2.5 Screen will list out COYOTE/SERNADE/RABBIT.
- 2.6 Press "HOT1"(for Top Dogg) or "HOT3"(for Horn Dogg) to connect Speaker.
- 2.7 The active speaker will be connected and screen shows it in black.
- 2.8 Press Menu Back to Main Menu.

- 2.9 Screen will list out Sounds/Expert Hunts/Settings
- 2.10 Press "Arrow down" or "Arrow up" to "Settings" and press "Enter".
- 2.11 Screen will list out Source selection: SD/AUX/BT
- 2.12 Press "Arrow down" or "Arrow up" to the target source. The Speaker will change the source automatic.

### **3 SD Play(Hunts Mode):**

- 3.1 When select source on the Remote, press "Arrow down" or "Arrow up" to "SD".
- 3.2 Press Menu Back to Main Menu.
- 3.3 Press "Arrow down" or "Arrow up" to "Sounds". And press "Enter".
- 3.4 Screen will list out Speaker selection.
- 3.5 Press "Arrow down" or "Arrow up" to target Speaker. And press "Enter"
- 3.6 Screen will list out Sounds selection.
- 3.7 Press "Arrow down" or "Arrow up". Speaker will play the sounds automatic when it's highlight.

### **4 AUX Play:**

- 4.1 When select source on the Remote, press "Arrow down" or "Arrow up" to "AUX".
- 4.2 Speaker can be play line in music per connect an Aux in cable.

### **5 BT Play:**

- 5.1 When select source on the Remote, press "Arrow down" or "Arrow up" to "BT".
- 5.2 Speaker can be connect with a BT player. And then can launch your BT music.

### **6 TWS music:**

- 6.1 Set one speaker in BT play mode.
- 6.2 Turn on another speaker.
- 6.3 The two speakers can be connect TWS automatic. And lunch BT music.
- 6.4 Remind: Don't build speakers TWS group, before Mobile phone(BT player) finish connect to speaker.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.