

Keep this manual, as it contains important information.

Little Scholar

Growing Smarter Every Day



Instruction Manual



Model Numbers:

MFC181, T8032Q

CAUTION—ELECTRICALLY OPERATED PRODUCT:

Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Welcome!

Congratulations! You just bought the new **Little Scholar**[®]. Contained in this package are: one **Little Scholar tablet**, one **bumper**, and one **power adapter**. Models MFC181, T8032Q, come with one **USB cable**. We invite you to read this manual for an explanation of all the features offered by your **Little Scholar** as well as instructions for use and safety tips.

One tablet, thousands of possibilities

With the Wi-Fi and touch screen functions, you can use your **Little Scholar** with ease wherever you want, whenever you want!

Reading digital books, watching videos, playing music, and expanding your knowledge are only some of the many opportunities offered by your **Little Scholar**.

Learn, play, relax

Your **Little Scholar** is preinstalled with ready-to-use applications! With your **Little Scholar** you will have immediate access to digital books, games, music, and videos.

With the School Zone Market application on your **Little Scholar** you can download and install new applications designed for young learners.

Keep this manual, as it contains important information.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- ! Routinely examine the **Little Scholar** and the adapter to ensure that each is in proper, safe condition. If there is any damage or broken parts, such as frayed cords or a fractured screen, or if any part of this product has come in contact with liquids, cease use immediately. Failure to do so may result in injury.
- ! **The adapter is not a toy.** The adapter is not suitable for children under 3 years old and should be used only by or under the direct supervision of an adult. Misuse of the adapter may result in electric shock.
- ! The **Little Scholar** and the adapter are intended for use only in dry locations and should never be immersed in or exposed to liquids, which may cause electric shock. Do not use **Little Scholar** or the adapter with wet hands. To clean the **Little Scholar**, turn it off, unplug any cables, and then wipe with a dry cloth – do not use liquids for cleaning.
- ! Use only the adapter provided in this package to charge the **Little Scholar**.
- ! Do not attempt to disassemble or repair **Little Scholar** or the adapter. For the safety of your child, any repair of **Little Scholar** or the adapter must be performed by professionals authorized by School Zone.
- ! Do not dispose of **Little Scholar** or the adapter in fire or expose **Little Scholar** or the adapter to extreme temperatures.



! To avoid risk of fire or injury, do not allow a metal object to touch the battery contacts. Handle a damaged or leaking battery with extreme care. If you come in contact with the electrolyte, wash the exposed area with soap and water. If it contacts the eye, flush the eye with water for 15 minutes and seek medical attention. Do not charge the lithium battery pack if the ambient temperature exceeds 45°C (113°F). When discarding a battery pack, contact your local waste disposal provider regarding local restrictions on the disposal or recycling of batteries.

! It is rare but possible that certain persons could experience seizures when viewing certain flashing colors or patterns. If your child experiences dizziness, disorientation, loss or changes in vision, or convulsions, cease use and seek medical attention immediately. To reduce these risks, School Zone recommends that you use **Little Scholar** in a well-lit room and take a 15-minute break every hour.

 


! High volume, especially when using headphones, can damage your hearing. For this reason, please turn the volume down before wearing headphones. Prolonged use of this product at full volume might damage the ear of the user.



! For your child's safety, promptly discard all packaging materials.



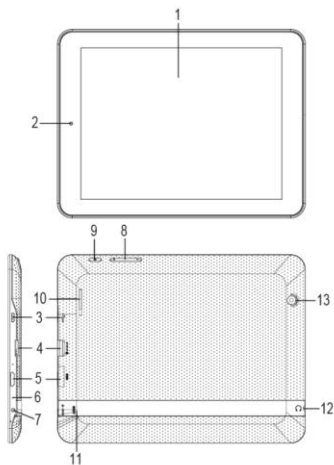

DISCOVERING YOUR Little Scholar

1. Touch screen
2. Front camera
3. Micro USB / charging port
4. Micro SD card slot
5. Mini-HDMI port
6. Microphone
7. Power input
8. Volume button +/-
9. Power button
10. Speaker



- 11. Reset button
- 12. Headphone connector (3.5mm)
- 13. Back camera



INSTRUCTIONS FOR USE

Turning Your Little Scholar On and Off

- To turn your **Little Scholar** on, press the power button for 4–5 seconds. Wait while the software loads. Once fully loaded, the home screen will appear.
- To turn your **Little Scholar** off, press the power button for 1–2 seconds. Tap "Power Off" on the screen when prompted for power down and then tap "OK." *Note: Always wait at least 5 seconds after having turned off the device before restarting it. Shutting off and immediately turning on the device can damage the electrical circuits.*

Locking and Unlocking Your Little Scholar

- You may lock your **Little Scholar** by pressing the power button briefly. Your **Little Scholar** will also lock automatically after a few minutes of inactivity.
- To unlock your **Little Scholar**, press the power button briefly. The home screen will appear with a lock visible. Drag the lock in any direction until the lock opens. This feature may be turned off or modified to require a password in the "Settings" (see the "Parent Settings" section of this manual).

The Home Screen of Your Little Scholar

- The navigation bar is located at the bottom of the screen. Status icons on the navigation bar provide information about the status of your **Little Scholar**, including Wi-Fi signal and battery charge.
- The navigation bar also includes a "Back" button  to return to the previous screen and a "Home" button  to return to the home screen.



Using the Touch Screen

- The touch screen makes navigation fast and fluid. Move your finger or a stylus (not included) on the surface of the touch screen to select different menus or applications and navigate through your **Little Scholar**. *Note: The **Little Scholar** comes with a protective film on the screen. Remove the film before use.*
- To select a menu or launch an application, press once on the touch screen.
- Your **Little Scholar** is equipped with a motion sensor that can automatically switch the display vertically or horizontally. Simply rotate your **Little Scholar** to rotate the screen. The size and direction of the current display will be automatically adjusted. *Note: The screen will not rotate while using certain programs that are formatted for a particular screen orientation.* You may deactivate this feature in the "Settings" (see the "Parent Settings" section in this manual).
- To protect the touch screen, ensure that it is not brought into contact with dirt, liquids or grease. Do not touch the touch screen with dirty hands or sharp objects/edges, and do not place heavy objects on the touch screen. If you experience problems with the touch screen, reboot or reset your **Little Scholar**. Reset the device by gently pressing the pinhole button labeled as "RESET" in red text on the back of the case. This is not a factory reset, and all apps, files, and data will be preserved through the reset process.





Using the Keyboard

- To make the virtual keyboard appear on the screen, touch on any text input field where you want to type your text.
- The virtual keyboard will appear on the lower part of the screen. To type numbers, press the "?123" key. Press the "ABC" key to return to the alphabet.
- Press the  key or anywhere outside the keyboard area to hide the keyboard.

Activating the Wi-Fi

- Touch the lock icon in the upper right corner of the home screen and enter your Parent Password (see the "Parent Control Center" section of this manual).
- Touch the "Settings" icon.
- Turn the Wi-Fi ON by touching the Off/On slider.

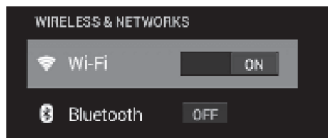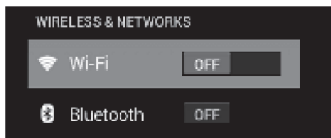  

Your device will search for the available wireless networks in your area. Select the network you wish to join. Some wireless networks will require the network's password to join. When you have successfully connected to the network, the word "Connected" will appear below the network name.



Charging the Battery

Your **Little Scholar** is equipped with an internal rechargeable battery. The battery icon in the bottom right corner of the screen indicates the level of charge. The battery life may vary based on usage patterns of the device.

You can recharge the battery using the adapter included with your Little Scholar. Charge the battery by plugging the connector of the adapter into the power input port labeled "5V DC" and plug the adapter into a power outlet.

If you have models MFC181, charge the battery using the USB adapter included with your Little Scholar. Insert the smaller end of the USB cable into your Little Scholar and the larger end into the USB adapter, then plug the USB adapter into a power outlet.

When the battery is fully charged (battery icon completely white) you can unplug the adapter from your **Little Scholar** and then the power outlet.

IMPORTANT: For maximum battery life, charge the battery initially for at least 8 to 12 hours.

 
To extend the lifetime of the adapter cable it is recommended to avoid using the tablet during charging operation. It might also take more time to fully recharge the battery if your **Little Scholar** is used while charging.

Using Headphones


A headphone connector, suitable for any headphones or earphones fitted with a 3.5mm jack plug, is located on the left side of your Little Scholar. When the headphones are in use, the speaker turns off automatically.

Using a Memory Card

You may use a MicroSD/TransFlash card (sold separately) to store additional files or to have more storage space on your **Little Scholar**. The device is compatible with MicroSD/TransFlash (TF) memory cards with capacity up to 32GB.

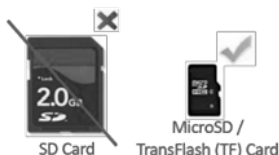


- **Inserting the Memory Card:** Insert the memory card into the card slot on the right side of your **Little Scholar**, with the metal connectors of the card facing up. Gently push the card into the card reader until it "clicks."
- **Removing the Memory Card:** Go to "Settings," select "Storage" from the menu on the left side of the screen. Locate the SD card section on the right and touch "Unmount SD card." Press "OK" to confirm and wait for the card to be unmounted. You may now remove the memory card by pressing the card to release it.

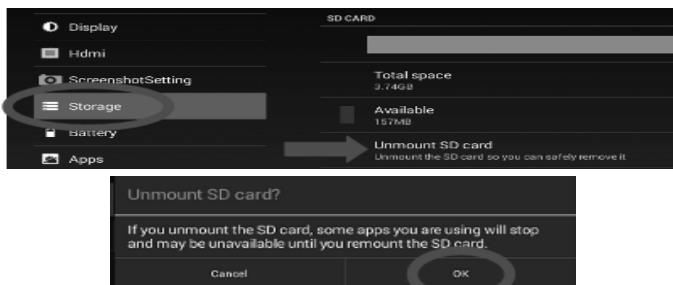 

*Note: Never remove the memory card without first unmounting it using the Settings menu, and never remove the memory card while your **Little Scholar***

is reading from or writing to the card. This may result in data loss and/or damage to the memory card.

 - Erasing the Memory Card: Go to "Settings," select "Storage" from the menu on the left side of the screen. Locate the SD card section on the right and touch "Erase SD card. Confirm by tapping on "Erase SD card" and then "Erase everything." *Note: Touching "Erase everything" will permanently erase all the content of the memory card.*

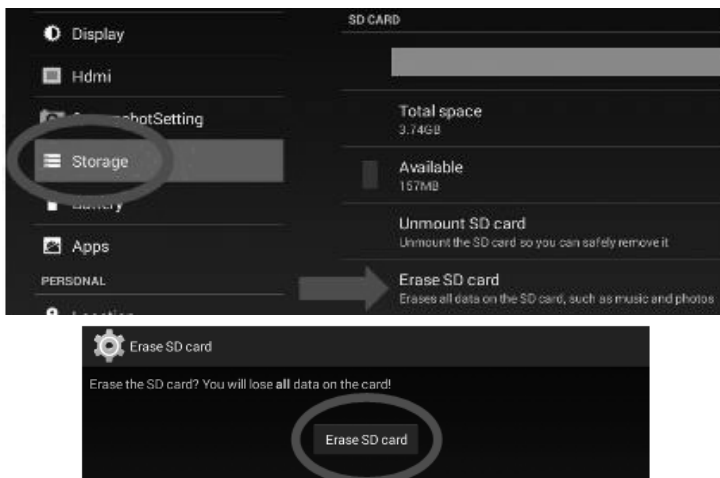

Using the Mini-HDMI Port

- Your **Little Scholar** is equipped with a mini-HDMI port that allows you to connect a mini-HDMI cable (not included) to an external audio/video source such as a TV.

- Plug the connector of a mini-HDMI cable into the mini-HDMI port located on the right side of your **Little Scholar**. Connect the other end of the cable to your external device.
- When your **Little Scholar** is on and the mini-HDMI cord is connected to both your **Little Scholar** and your external device, images and sounds play directly through the external device. The screen will remain functional, so you can pause your audio/video file by pressing on your **Little Scholar** screen. *Audio/video files will not play with sound if your connected device does not have speakers.* Once you disconnect the mini-HDMI cable, images and sounds automatically return to your **Little Scholar**.

Using the USB Port

- Insert a micro USB plug into the micro USB port of your **Little Scholar**. Make sure the pins (on longer side) are facing up. *Note: Make sure to insert the plug with the longer side facing up in order to avoid damage to the micro USB plug and/or your **Little Scholar** micro USB port.*

PARENT CONTROL CENTER INSTRUCTIONS

Accessing the Parent Control Center



- Touch the lock icon in the upper right corner of the home screen to enter the Parent Control Center.
- Enter your Parent Password. *NOTE: When you first access the Parent Control Center, use the default password **123**. You must reset your parent password to ensure that your child cannot access parent-only functions of the **Little Scholar**, including the internet browser. Please reset your Parent Password by touching the "Reset Password" icon.*
- To avoid unintended use of the Parent Control Center by your child, always be sure to exit the Parent Control Center after use by pressing the "Home" button . *NOTE: Failure to exit the Parent Control Center after use may allow your child to access certain features not otherwise available to your child, including the full internet browser.*

Parent Settings

- Touch the lock icon in the upper right corner of the home screen and enter your Parent Password (see the "Parent Control Center" section above).
- Touch the "Settings" icon.
- Using the menu on the left side of the screen, you may modify the settings for your **Little Scholar**, including the following:

<i>WIRELESS & NETWORKS</i>	
Wi-Fi	To set up a Wi-Fi network.
Bluetooth®	To configure a Bluetooth® connection
Data usage	To check and modify the data usage of your Little Scholar .
More...	To modify the advanced network settings.
<i>DEVICE</i>	
Sound	To adjust the volume and the notification sounds.
Display	To adjust the brightness and the display options.
HDMI	To modify the HDMI connection settings.
Screenshot settings	To access the screenshot settings (take pictures of your Little Scholar screen with a single tap).
Storage	To access the settings of the micro SD card and the memory information of your Little Scholar .
Battery	To check the battery information.
Apps	To manage or uninstall the applications on your Little Scholar .
<i>PERSONAL</i>	
Security	To set the security options, including passwords for your Little Scholar .
Language & input	To set the regional options including the language of the operating system and the keyboard.
<i>SYSTEM</i>	
Date & time	To set up the date and time on your Little Scholar .
Accessibility	To configure the accessibility tools aimed at people with special needs.
About tablet	To view information about your Little Scholar .

School Zone Market

- The School Zone Market is an app store exclusive to **Little Scholar**. There you can find a variety of additional apps from School Zone, as well as School Zone approved educational apps, music, videos, and books from other companies.
- To access the School Zone Market, touch the "Store" icon in the Parent Control Center.

Apps

- Touching the "All Apps" icon in the Parent Control Center will display all apps loaded on the **Little Scholar**, including apps to which your child does not have access.
- Touching the "Manage Apps" icon will allow you to select which apps your child will be able to access. *NOTE: When an app is selected in the Manage Apps program, your child will be able to access that app freely from the **Little Scholar** home screen. The app will not be password protected in any way. This includes the internet browser, as discussed in detail in the "Internet Browser" section of this manual.*
- Explorer App - You can use the Explorer application to navigate through your files. You may access the selected file directly. You may also scroll through your image files, browse your photos, or navigate any of your content.
- Gallery App - You can use the Gallery application to browse your pictures. Images imported to your **Little Scholar** via USB or memory card are automatically added to the Gallery.

Internet Browser



- Your **Little Scholar** comes with a full, unrestricted internet browser. This browser is only available through the password-protected "All Apps" section of your **Little Scholar**. *NOTE: If you provide your Parent Password to your child or if you select "Browser" in the "Manage Apps" section, your child will be able to access all internet websites while Wi-Fi is enabled.*
- School Zone is not responsible for your child's access to any content accessed using the internet browser or otherwise. In the event that a child uses the internet browser, parents should carefully monitor their child's use of the internet browser.

LEGAL NOTICES

License Agreement

USER UNDERSTANDS AND AGREES THAT USE OF THIS PRODUCT CONSTITUTES ACCEPTANCE OF SCHOOL ZONE'S END LICENSE AGREEMENT APPLICABLE TO THIS PRODUCT, WHICH IS AVAILABLE ON SCHOOL ZONE'S WEBSITE: www.schoolzone.com.

Disclaimers and Limitation of Liability

School Zone takes steps to avoid collecting any personal information from children and such personal information, including photographs, artwork, and voice recordings, is stored locally on the device and is not transferred to School Zone. School Zone does not knowingly collect, use, or disclose personal information from children without prior parental consent, except as permitted by law. School Zone is not responsible for the collection of children's personal information by third parties that may occur while a child is using the **Little Scholar**.

School Zone and its suppliers assume no responsibility for any damage or loss, including but not limited to loss or claims by third parties, resulting from or in connection with the **Little Scholar**, the adapter, the software loaded on or available for use on the **Little Scholar**, this manual or any other items provided to you as part of or in connection with this product, or resulting from or in connection with the use of any of the foregoing. School Zone expressly disclaims any responsibility for any damage or loss caused by deletion or other loss of data for whatever reason.



Limited Warranty

This product is covered by School Zone's 90-day standard limited warranty. For any claim under the limited warranty or after-sale service, please contact your distributor and present a valid proof of purchase. The limited warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposing to heat and humidity, etc.). A broken screen as well as any damage caused by using an adapter other than the one provided is not covered by the limited warranty. *NOTE: Changes or modifications to this unit not expressly approved by School Zone will invalidate this warranty.* EXCEPT AS EXPRESSLY STATED IN THIS SECTION, THIS PRODUCT IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Copyright Notice



School Zone[®] is a registered trademark of School Zone Publishing Company.

Little Scholar[®] is a registered trademark of School Zone Publishing Company.

Android[™] is a trademark of Google, Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

©2014 Bluetooth SIG, Inc. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lexibook[®] and/or School Zone is under license. Other trademarks and trade names are those of their respective owners.

Additional Legal Terms

Additional legal terms that may apply to your purchase and use of your **Little Scholar**, including but not limited to terms regarding end user licenses and privacy, may be accessed online at School Zone's website: www.schoolzone.com.





FCC & IC Notice

Note : Cet appareil est conforme à la Partie 15 des règlements de la FCC et aux normes RSS de l'Industrie du Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer des interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent provoquer un fonctionnement indésirable.

Le fabricant n'est pas responsable des toutes interférences radio ou télévision causées par des modifications non autorisées apportées à cet appareil. De telles modifications peuvent empêcher l'utilisateur d'utiliser l'appareil.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie II) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et

ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Antenna Type	MaX Gain(dBi)
IFA antenna	0





NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- 
- 
- 
- 

Technical Specifications

MFC181

Screen Size:	8-inch
Screen:	TFT active matrix LCD multi-touch capacitive screen
Screen Resolution:	1024 x 768 pixels
OS:	Google Android™ 4.2.2
CPU:	1.2 GHz dual-core ARM Cortex-A9
GPU:	PowerVR SGX540
Storage:	8GB – Micro SD cards compatible up to 32GB
RAM:	1024MB DDR3
Camera:	300KP front / 2MP back
Wi-Fi:	802.11 b/g/n (built-in)
Audio:	Built-in mono speaker
Connectors:	1 micro USB 2.0 port, 1 Micro SD card slot, 1 headphone jack, 1 DC port, 1 mini-HDMI port, Bluetooth® 3.0
Battery:	Lithium battery (included) – 5000mAh, 3.7V
Adapter:	Input: 100V – 240V ~ 50 / 60Hz 0.4A Output: 5V 2A
Battery life:	7 hours (average)
Dimensions:	221 x 155 x 12 mm
Weight:	470 g
Language:	English