


Typo


Shower Speaker

Instruction Manual.

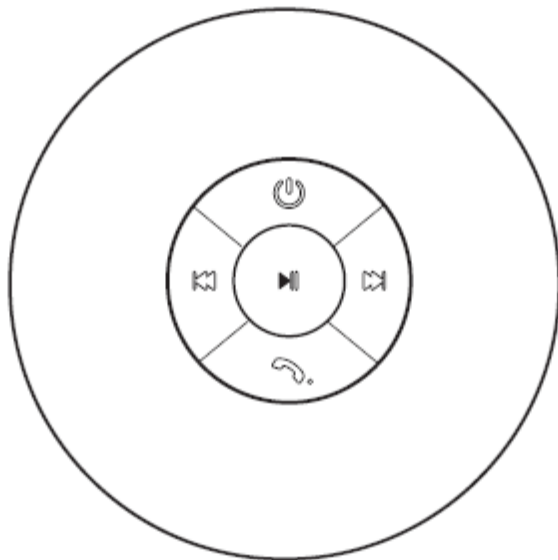

Product Overview

Diagram

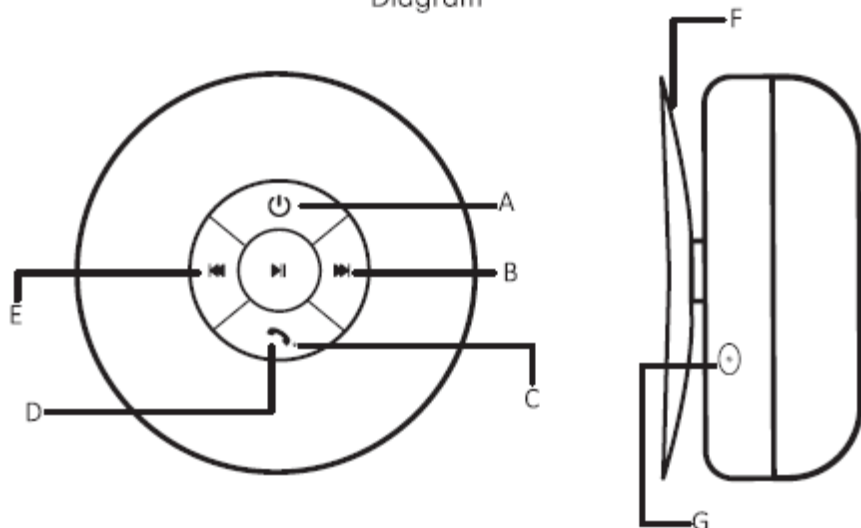

- A) On / Off button
- B) Forward (short Press) / Volume up (long press)
- C) Built in mic
- D) Pick up / End call
- E) Rewind (short press) / Volume down (long press)
- F) Detachable suction cup
- G) Input: DC 5V

Safety Instructions

- 1) Keep the device away from heat, direct sunlight and sharp edges.
- 2) Do not insert any metal objects into the device. Risk of short circuit

Tips

- Press Phone button (See 'D' on diagram) twice quickly to redial the last phone number
- Keep this instruction manual for future use
 - Charge the device fully before use

Instructions for use

Charging Your Speaker

- Insert the pin end of the charging cable into the charging socket (See 'G' on diagram) on the Shower Speaker.
- Plug USB end of charging cable into a USB computer port or USB plug/adaptor.
- The LED indicator will turn red when the battery is being charged.
- When the battery is fully charged, the red LED indicator will turn off.

Pairing Your Shower Speaker

- Turn your Shower Speaker on by pressing and holding down the on/off button (See 'A' on diagram) until the blue LED

indicator lights up and the tone sounds. This will activate the Shower Speakers pairing mode.

- Turn on the device you will be playing music from and enable the Wireless function.
- Search for wireless devices. TYPOSHOWERSPEAKER will appear.
- Pair your device with TYPOSHOWERSPEAKER. If a password is required, type '0000' into your device. The Shower Speaker will now be ready to use.
- Once the Shower Speaker is paired to your device, the next time you switch on your Shower Speaker it will automatically connect to your device (as long as your wireless function is turned on).

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
 - 2) This device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product Disposal

Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and batteries, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. By disposing of batteries and electrical waste correctly, you will help to conserve natural resources and improve standards of environmental protection.

