USER MANUAL



WIRELESS EARBUDS

Before using this product, please read these instructions carefully and keep them.

FCC ID:2ADR3EA173

WELCOME

Thank you for choosing RIVERSONG Product, Our wireless earphones come with light weight and fashionable design, along with on-the-go controls for your music and calling experience.

WIRELESS TECHNOLOGY

With the latest BT 5.3 wireless technology, you can enjoy hassle free music without any interruption and you don't have to face wire tangling issues.

Wireless connection allows you to enjoy your music experience or calls without holding your mobile phone but the maximum distance between them shall be within 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.

CONNECT YOUR DEVICE

- Please keep your earbuds near your phone within 1m. Open the charging box and the headset will automatically turn on, you can hear "Poweron", in 2
- seconds. It is search-pairing mode • Turn on your mobile Bluetooth function, and search Bluetooth name "RS Air X26", click Bluetooth name
- · Upon successful pairing, you'll hear a "connected" sound from the earbuds and the light will turn off.

OPERATING GUIDE

"RS Air X26" to connect.

In below instruction, Touch button refers to the multi-function button (please refer to FUNCTION KEY DESCRIPTION)

Open the charging box, the headset will automatically turn on, put it in the charging box and close the charging box cover to shut down.

- Play/Pause: Tap on once on the MFB (L/R) or putting on Last song: Short press three times on multi-function
- button (L/R) Next song: Short press twice on multi-function button
- Answer phone call: Short press once on the MFB button
- End phone call: Short press once on the MFB button
- Reject phone call: Long press on the MFB button for 3 seconds
- •Al voice assitant: Long press on the MFB button for 3 seconds

FUNCTION KEY DESCRIPTION

- 1 Multi-function Button
- 2. Microphone
- 3. Indicator Light 4. Type-C Charging Port



Multi-function

Indicator Liaht

Charging Port

CHARGING THE EARPHONES

1.Use the Type-C charging port to charge your Box. 2.It should take 2 hours to get fully charged.

2. It performs best after being fully charged. Please use DC-5V power to charge it.

Cautions: Please note that the maximum voltage cannot exceed DC-5V.

THE EARPHONES LED INDICATOR GUIDE

Low power: a vocal message reminds "Battery low" and the blue light is flashing. Charging: the blue light is on. Fully charged: the light turns off.

THE CHARGING BOX DISPLAY GUIDE

Low power: green light is flashing Charaina: The orange indicator blinks. If the orange indicators are steady on, the battery is fully charaed.

RECONNECTION

- 1. The earphones will reconnect with your mobile phone automatically.
- 2. If it doesnt, please find previous paired Bluetooth name to click, it will be connected.

ECCardon.

Anythanges or monifications not expressly approved by the party responsible for compliance maclaimed the user's authorize troperate the equipment.

his representative dipart for the RC Roles Operations subject to the following permitted there β) this dence norms, carried and dimensionine, and β) has dence must arrept any n. of centerowies, including interference that mandate or rested queations

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class 0 digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protecfor against harry's limerferance in a multiprobalization between a quipment generates, uses and can radiate radio frequency energy and. If not installed and used in accordance with the instruction ors, may asses harmfull rienterance to radio communications. However, there is no guarantee $\dot{ au}$. at interference will not occur in a particular installation. If this equipment does cause harmful into artisance to radio or tale, blon reception, which can be determined by turning the equipment of the and on, the user is encouraged to by to correct the interference by one or more of the following : PREJUNE

- Reprient or relocate the repelling antenna.
- —Increase the separation between the equipment and repetier.

- Should be engined who are determined maximum from the position the prospect of 000000

- Bursul, the materior an experience radio/19 technic an furt du-

EC Kan a multiposa o 5 a central.

his company concles with Est sand or expose lines with this concern of the entire cont.

Why can't I find the earphones model on my phone? It might be because the earphones are power off; or the wireless connection function of your mobile phone encounters some issues.

1. Press on "MF"button: when battery case fully charged, indicator light turns green.

2. Take out earbuds from the charging case, fast tap "ME" button for 6 times to reset. You will hear a "Di" sound when it reset succeed.

Insert the earbuds into the charging case and close it, Then, open the charging case again to enter Bluetooth pairing mode

When the earphones are under pairing status, the wireless connection pairing with your mobile phone should be done within 5 minutes, otherwise your earphones will automatically power off.

Why the earphones cannot be linked with my mobile phone using the wireless connection function?

It might be because the wireless connection function on your device is not turned on; your earphones are connected to another device; or the earphones are still in pairing mode.

1. Please check if the wireless connection function on your device is turned on

- 2. Please check and confirm your earphones are not connected to another device.
- 3. Please check if your earphones are in pairing mode Why can't I hear any sound from my earphones?

It might be because the earphones' volume is down to minimum: the earphones are not well connected with your phone; or your earphones are not within the wireless

- connection working range. 1. Adjust volume on your phone.
- 2. Proceed to connection process again.
- 3. Keep your earphones within 10 meters from your mobile phone to respect the wireless connection working range

NOTE

When your earphones and mobile phone are in pairing connection process, please do not do any other operations with those devices.

When charging, why does the orange light not lightning up?

It might be because you did not use your earphones for a lona time.

Charge your earphones for 30 minutes until the orange

Overcharging or placing the earphones under high temperature atmosphere will cut down the battery capacity and lifetime

Why the earphones call quality is not good?

It might be because the mobile network is not good enough; or the earphones are not in the wireless connection working range.

- 1. Confirm whether the mobile network in strong enough.
- 2. Please confirm that the earphones are within the effective working distance of 10 meters from your mobile phone, also check if no major obstacle is causing interference to connection.

When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons?

It might be because the mobile phone doesn't support the AVRCP (Audio/Video Remote Control Profile) protocol

This feature requires the mobile device to be paired with the earphones to support the AVRCP (Audio/Video Remote Control Profile) protocol.

SPECIFICATION

Product Name: WIRELESS EARBUDS Model: EA173 Bluetooth version: V5.3

 
Connection distance: 10m Frequency response: 20Hz-20KHz Speaker size: Ø13mm

Impedance: 32Ω±15% Input voltage: 5V=300mA

Gross weight: ~125g

Earbuds battery: 30mAh Charaina battery: 300mAh Playback time: ~5h(volume at 70%)

Charging port: Type-C Net weight: ~36g



Plaza Phase 1, Futian District, Shenzhen, Guangdong Official website: www.riversongtech.com

RIVERSONG TECHNOLOGY CO., LTD.

