

KARAOKE MACHINE

MODEL: AP-G552

Technical Support and E-Warranty Certificate www.vevor.com/support





KARAOKE MACHINE

MODEL: AP-G552



This is the original instruction, please read all manual instructions carefully before operating.VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

I. Features

- 1. Ultra-large magnetic circuit high-sensitivity speaker with hig penetrating power,low-frequency shock and perfect medium-/high-frequency representation.
- 2. The latest decoding chips supporting stably playback of MP3 in up to 32GB USB/TF card.
- 3. FM radio reception high-quality digital radio with automatic channel search and storage of up to 30 channels.
- 4. 3. 5mm AUX audio input for each connection to a wide range of sound sources.
- 5. Built-in high-capacity battery for consecutive playback of up to 2 hours.
- 6. Connect the microphone, adjustable reverberation, voice and Karaoke function to present outstanding performance.
- 7. Battery with built-in recharging protection to present a long and stable service life.
- 8. Built-in low battery and full recharging indication. Human-oriented use.
- 9. With handle design for best choice of mobile speaker.
- 10. Microphone input recording to act as your personal business assistant.
- 11. Support Bluetooth and TWS function.

II. Recording

Recording via External Microphone:

Connect a storage device (USB/TF card) and short press RECORD key to start recording for a time depending on the storage capacity. During recording, tune the "-ECHO+" knob to the minimum. It is noticeable that the microphone should be located a proper distance away from the speaker to prevent any howl-round or noise.


Notes: This product starts recording from the time as displayed on the LED screen.

III. The bluetooth pairing operation and related parameters:

1.Power: switch the power to ON, press the key "MODE" to enter the mode of Bluetooth, the display screen will show "BLUE".

2.Switch on the Bluetooth function of Mobile phone and searching , while the Mobile phone shows "**AP-G552**", click the connect directly . mobile phone connection do not need password , if need password , please input"0000" to go on pairing . After success pairing , the speaker will send out a voice of prompt . it is success pairing between mobile phone and Bluetooth speaker.

3.Play the music of your mobile bphone directly and will give out beautiful voice from speaker.

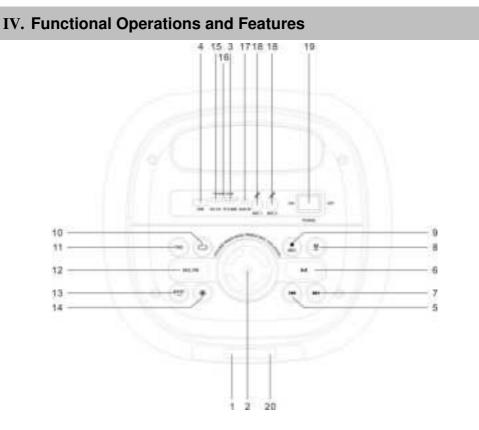

1. LED Screen.

2. VOLUME PRESS BASS/TREBLE/MIC.VOL/ECHO: By default the master volume adjustment, short press once for bass adjustment, short press twice for high pitch adjustment.short press three times for microphone volume adjustment, short press four times for microphone reverb adjustment, adjust each time for four seconds without operation automatically jump back to the master volume adjustment, in each mode, adjust the knob to control the volume.

3. TF Port: Read audio files in MP3 format in TF card in capacity up to 32G (FAT32).

4. USB Port: Read audio files in MP3 format in USB storage device in capacity up to 32G (FAT32).

5. It in the play status of USB/TF Card/Bluetooth, short press it to select the previous song. In FM receiving status, short press it to select the previous channel after a full station search has been executed.

6. **II** /SCAN: In USB/TF card/Bluetooth reading status, short press it to play/pause. In FM receiving status, long press it to execute a full search (it is recommended to execute at least one full search before using radio receiving function. All founded stations will be saved even in power-off). In AUX input / FM radio status, short press it to toggle between mute and normal volume.

7. **I**: In USB/TF card/Bluetooth reading status, short press it to go to the next song. In FM receiving status, short press it to select the next channel after a full station search has been executed.

8. MODE/SHIFT: Short press it to toggle between USB/TF/AUX/Bluetooth/FM modes. long press it to toggle between recording folder and MP3 folder.

9. Recording/DEL: Short press it to enable recording. During recording, reverberation should be tuned to the minimum. Long press it to delete a recording file. Recording in Microphone mode is available.

10. REPEAT: In USB/TF card reading status, Short press it to select one of

four playback sequencing modes (All - play all tracks in sequence; RAND - play in random; ONE - repeat one track; FOL - repeat all tracks in a folder).

11. TWS: TWS interconnection mode: open the two machines that need interconnection at the same time, and switch to bluetooth mode at the same time, Pair one of them with the mobile phone's bluetooth to play music. Short press the TWS button on the machines to connect with another machines. After successful connection, synchronous music will be played. Short press the TWS button on the machines to exit the interconnection mode.

12. MIC PRIORITY: Connect the microphone, short press the key, into the microphone priority mode.

13. BASS1.2.3: Short press to switch between indoor and bass boost and outdoor modes.

14. 🗮: Short press it is LED light mode button.

15. DC 5V INPUT: DC 5V recharging port.

16. Recharging indicator light: When recharger is connected, the red light turns on. When the device is fully recharged, the light turns off.

17. AUX IN: External sound source input port (plug-and-play).

- 18. Microphone input: Microphone input jack.
- 19. Power: Power switch.
- 20. Remote Control Receiver.

V. Operation Instructions on Remote Control

- 1. Power Button: Short press it to enter standby mode; short press it again to resume. If no device is connected, the system goes to " BT ".
- X: In USB/TF/AUX/Bluetooth/FM mode, short press it to mute the device.

- 3. BASS1.2.3: Same functions as "BASS1.2.3" on the master device.
- 4. MODE: Same functions as "MODE" on the master device.
- 5. BASS-: Bass volume down control button.
- 6. BASS+: Bass volume elevated control button.
- 7. TWS: In bluetooth mode, Short press the TWS button to enter bluetooth interconnection mode.
- 8. The short press it is LED light mode button.
- 9. VOL+: Master volume elevated control button.
- 10. VOL-: Master volume down control button.
- 11. If : Functions as " If " on the master device.
- 12. ►II : Functions as " ►II " on the master device.
- 13. ► I : Functions as " ► I " on the master device.
- 14. Numeric Keys 0~9: In USB/TF card reading status, to play Track 12, just input numbers "1" and "2", and in 2 seconds the system will go to Track 12 and start playback. Any input of number larger than number of the total available tracks is invalid. In FM status, to listen to channel 107.5MHZ, just input "1075".

CAUTION:

Please Be sure to charge while music distorted.



Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX



E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate www.vevor.com/support

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to

operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio

or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure cond ition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference.

(2)This device must accept any interference received, including interference that may cause undesired operation.