

# **USER'S MANUAL**

**ISP-5900**

**FLEX**

## **TABLE OF CONTENT**

1. Control Button Illustration
2. List of Features and Specifications
3. LCD Reference Guide
4. Power On
5. Power Off
6. Service Area Indicator
7. Message Indicator
8. Reading Messages

9. Deleting Messages
10. Message Lock and Release Function
11. Selecting the Incoming Message Alert
12. Setting the Date and Time
13. Setting the Alarm
14. Low Battery Indicator
15. Care and Maintenance
16. Patent Information
17. Warranty Information
18. One Year Full Warranty Terms and Conditions

#### 1. Control Buttons Illustration

 


 
- . MENU BUTTON ( Function Key )
- . SELECT BUTTON
- . LCD ( Flex Pager Display Window

## 2. Features and Specification

- 1) Paging Bit Per Second : 1600bps, 3200bps, 6400bps
- 2) Store Up to 16 Messages
- 3) Lock Up to 12 Messages
- 4) AGC Function
- 5) Unread Message Indicator
- 6) Message Delete Function
- 7) Duplicate Message Indicator
- 8) Date and Time Display Function
- 9) Alarm Function
- 10) Beep and Melody Function
- 11) Vibrate Function
- 12) Low Battery Indicator
- 13) Service Area Indicator
- 14) Backlight Function
- 15) Lamp
- 16) Care and Maintenance Instruction
- 17) Regulatory Agency Compliance
- 18) One Year Full Warranty Terms and Conditions


## 3. LCD Reference Guide

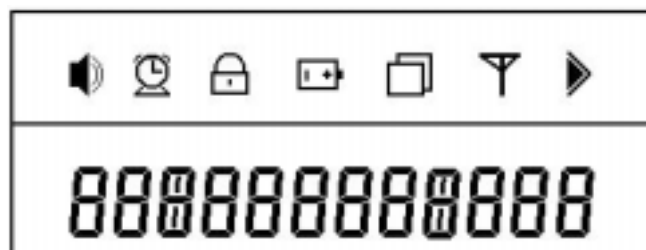

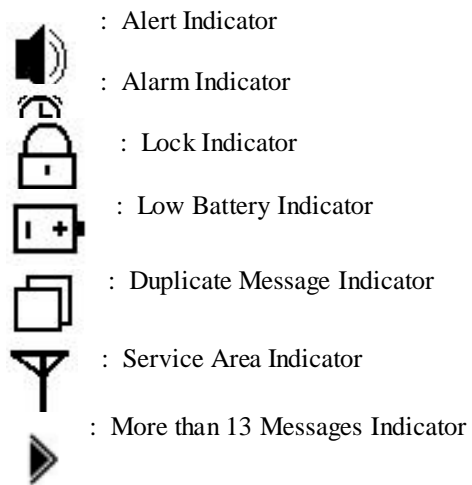


#### 4. Turning Your Pager On

 While your pager is in the Off Mode, press and hold any button for at least three (3) seconds then release. You will hear an alert tone, then the pager will vibrate. Now your pager is ON.

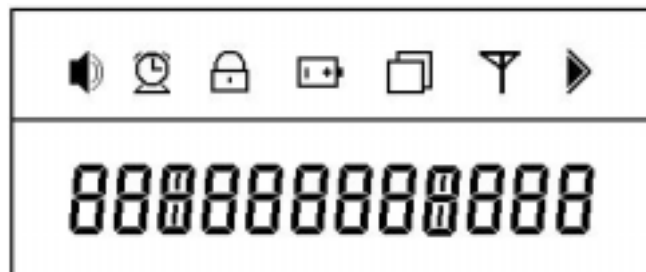


LCD Display

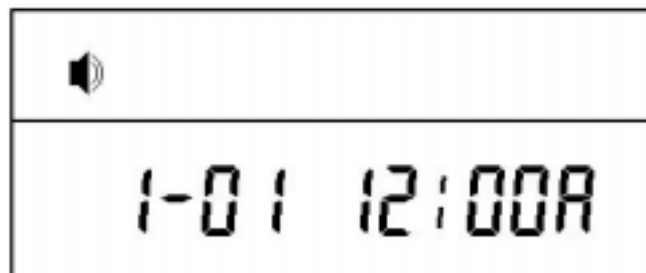 


Initial Display When Turned ON

 Stand By Mode

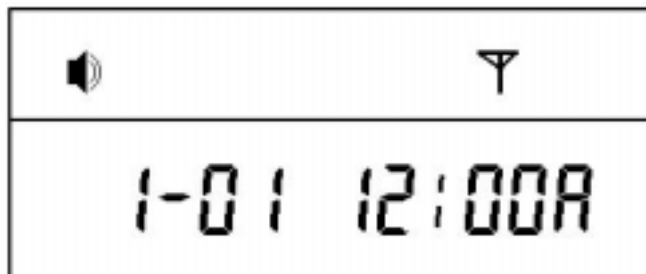


### 5. Turning Your Pager Off

 
While in the Stand By Mode, press the Menu button three (3) times until LCD displays, "POWER OFF ?"  
Press the Select button to say "yes."

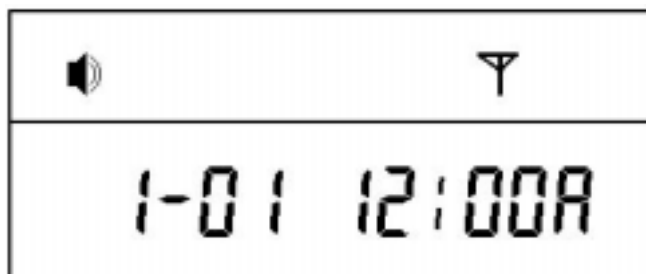

 Stand By Mode  
Press the Menu button 3 times

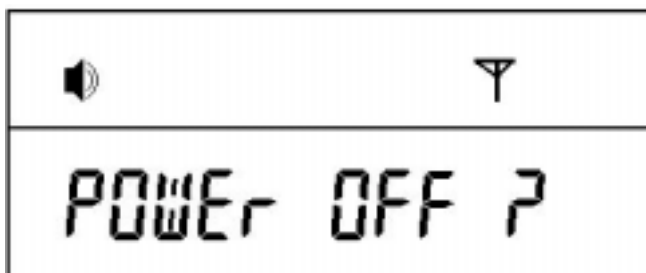


Press the Select Button

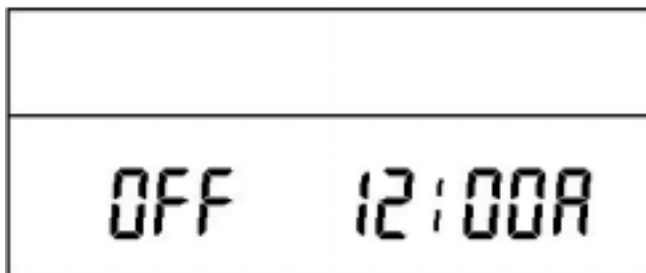 

Off Mode


## 6 Finding the Service Area

 While in the Stand By Mode, if the Service Indicator is displayed, then you are in the service area. You will be able to receive messages.

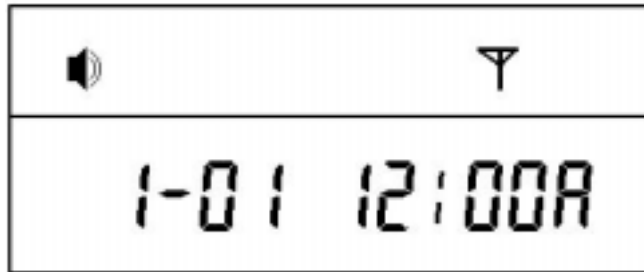

Service Area

 
However, if LCD display does not show the Service Indicator, the pager is unable to receive any messages.

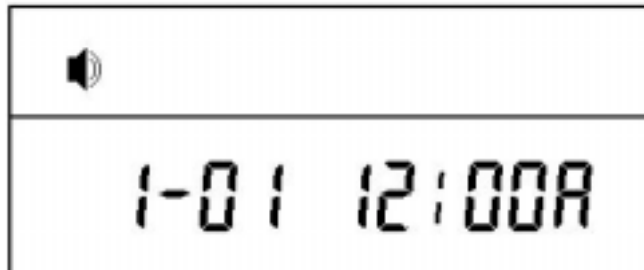


Service Area is out of reach

## 7. Message Indicator

When a new message is received, your pager will either alert or vibrate for 8 seconds ( and the backlight will go on. ) On the LCD, the Message Indicator will appear. You can push any button to stop the pager from continuing to alert or vibrate.

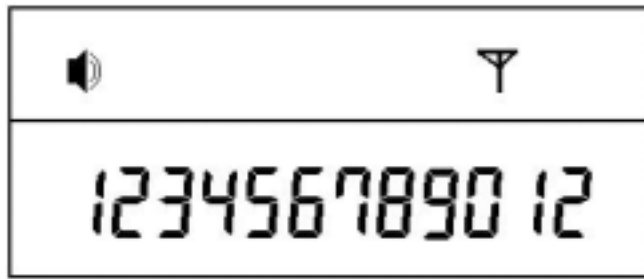


Message Indicator

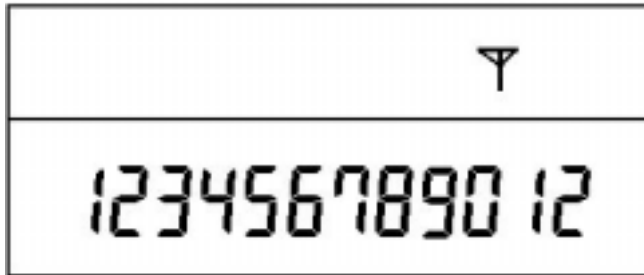


Sample Message

When a new message is received, a number will show up to indicate how many messages you have. This number contains all unread messages and periodically message alert will sound.

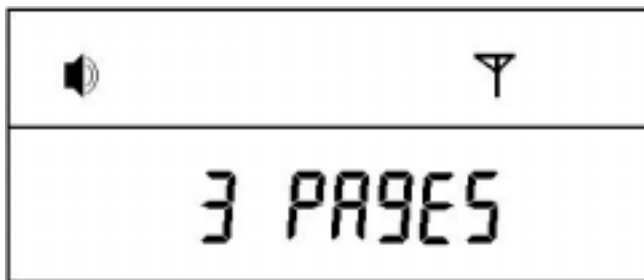

Three Unread Messages

When a Duplicate Message is detected, the Duplicate Message Indicator will appear.

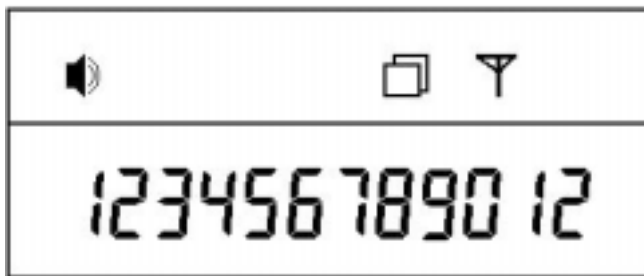


Duplicate Message Indicator


## 8. Reading Messages

From Stand By Mode, if the message is new, the following symbol is displayed, [ ]. The number inside the brackets indicate how many new messages you have received.


If no button is pressed for the first 16 seconds, the pager will automatically store the message.

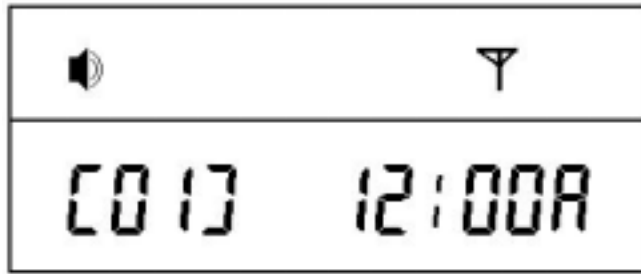


New Message  
("[01]" indicates quantity of new messages)  
Press the Select Button

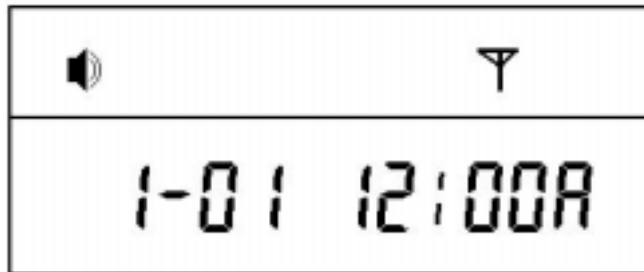

Stored Message  
(Displays the time and date when the message was first received)  
Press the Select Button to Read

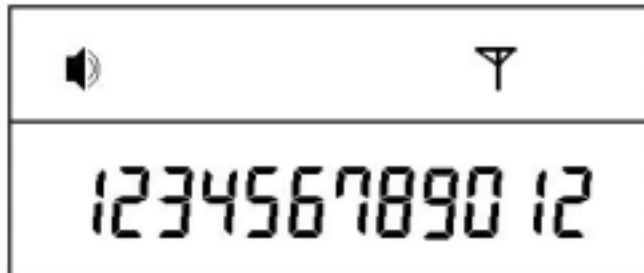


If no message was left,

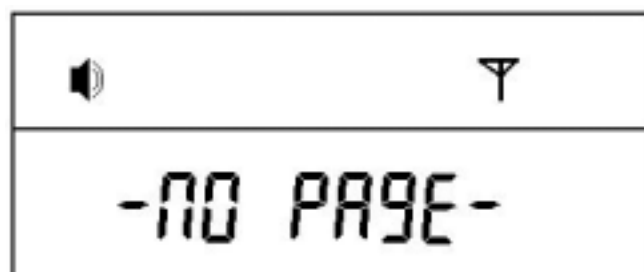


"NO Page" will be displayed

 If the message is longer than 13 characters, the More than 13 Characters Indicator will show.



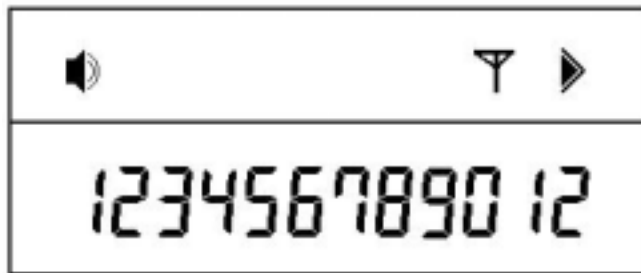

 
The Right Arrow indicates additional characters  
Press the Select Button

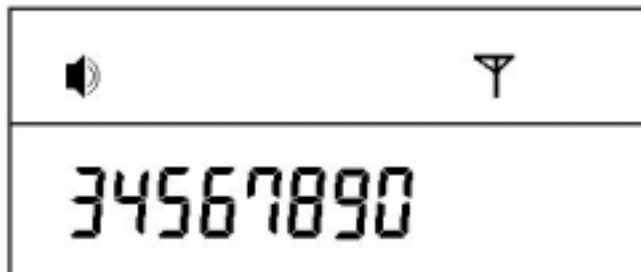


The Rest of your message is displayed

## 9. Deleting Messages

 
You can delete all your messages at once.

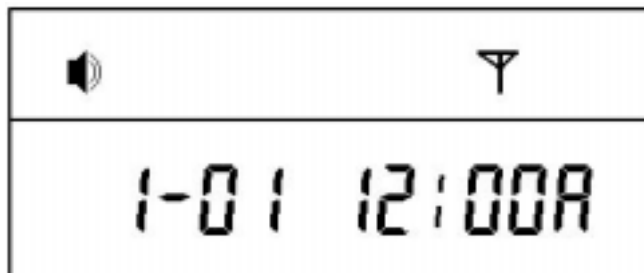

 Stand By Mode  
press the Menu button 4 times

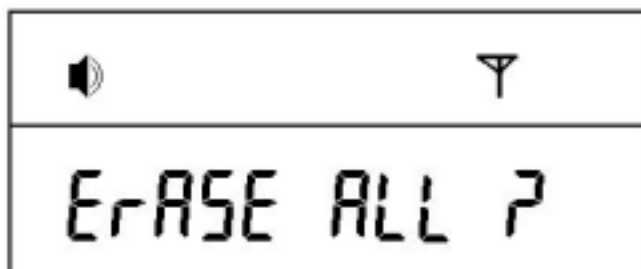

press the Select button

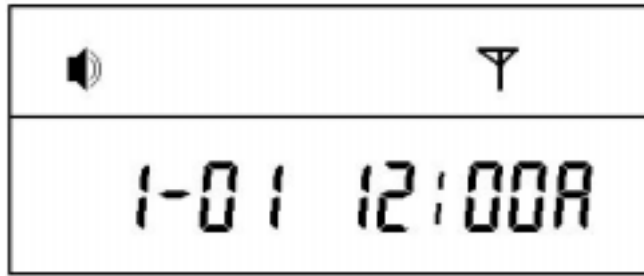 

Stand By Mode

After all messages have been deleted, the pager will go back to Stand By Mode. However, locked messages are still stored.


## 10. Locking and Unlocking Your Messages

 Up to 10 Stored Messages can be locked. Until a Locked Message is Unlocked, it remains in locked position. See important note at the bottom of this section for the exception to the rule.


To lock a message, you need to display the message you want to lock. When the battery has been completely discharged and you replace the battery locked messages will also obliterated. If you want to lock the message press menu button.

The locked message will turn to unlock and if it was in unlocked message, it will turn to lock mode. If you press select button you can obtain a mode you desire.

If you press menu button, the display shows erase and if you press select button, the message goes off.

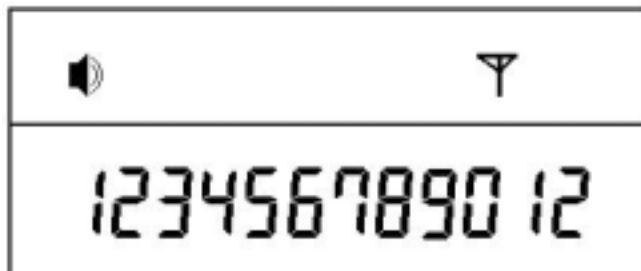

 
Select the message you want to Lock  
While holding down the Select button, press Menu button

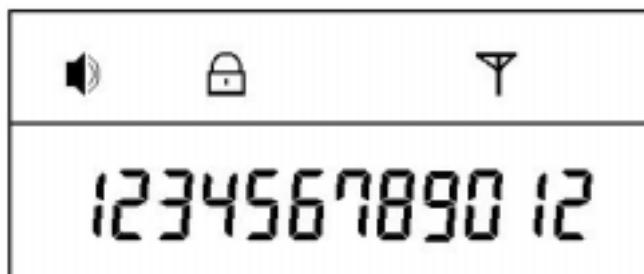

Locked Message

To Unlock a message, press and hold Select button, then press the Menu button.

 If all 10 messages have been locked and you try to lock another message, the following message will be displayed on your pager.

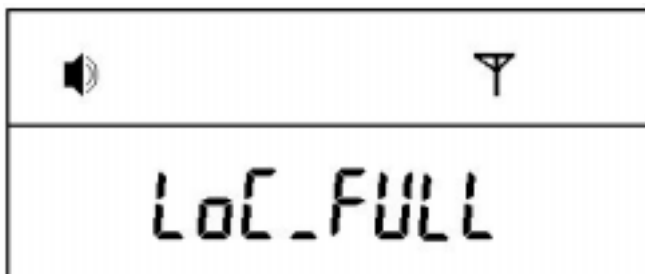


You must unlock at least one message before you can lock an additional message.


Important Note: You can still lose locked message if the battery drops too low. Your pager will display, "BATT LOW". Try to replace the battery as soon as possible. This will prevent you from losing an important message. See section 14 for more information.

#### 11. Selecting Incoming Message Alert Tone or Vibration

 
In the Initial Setting, the Alert Tone is set. However, you may change from Alert to Vibration Mode.

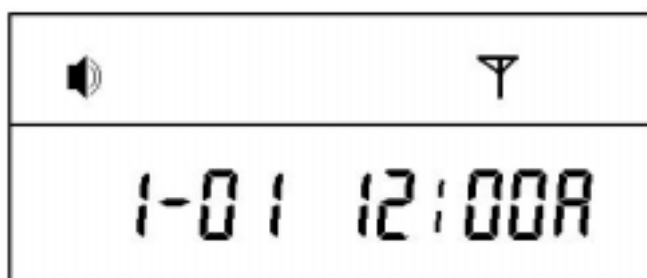

 Initial Setting (Alert Mode)  
press Menu button

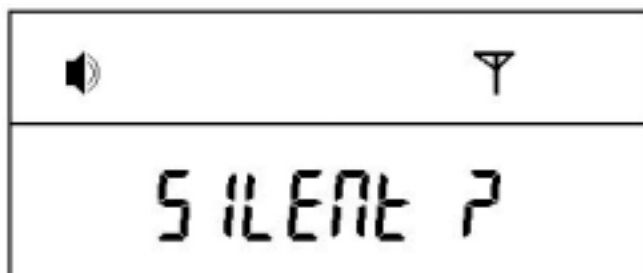


press Select button

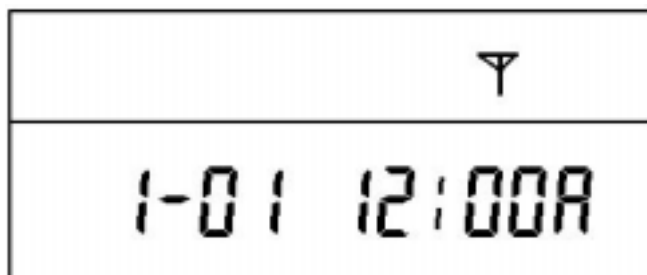 

Vibration Mode

 From Stand By mode, you can switch from Vibration to Alert Mode by pressing the Menu button, then the Select button. Everytime you switch from Vibration to Alert Mode, the Tone numbers, 1-9, will blink and you can choose the tone or melody you want by pressing the Select button.

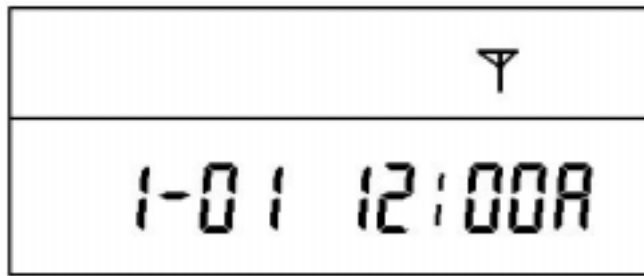

Vibration Mode

press Menu button



press Select button



press Select button



press Select button

 
.  
. .  
. .  
. .

press Select button



press Menu button


(You can select anyone of the 9 tones)

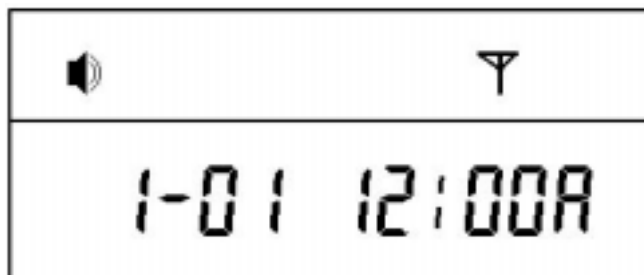

Alert Mode


## 12. Setting the Time

 From Stand By Mode, press the Menu button 5 times.

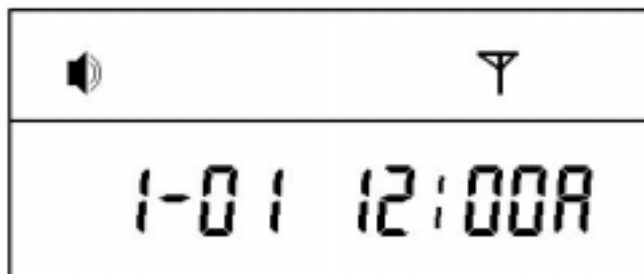


Stand By Mode

 press the Menu button 5 times

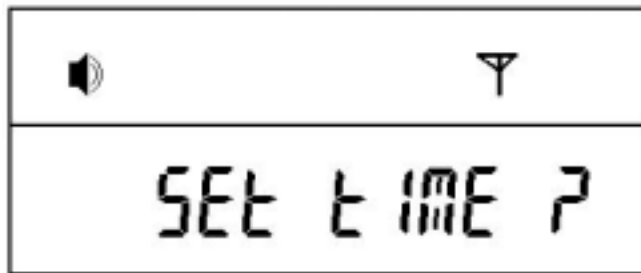


press the Select button

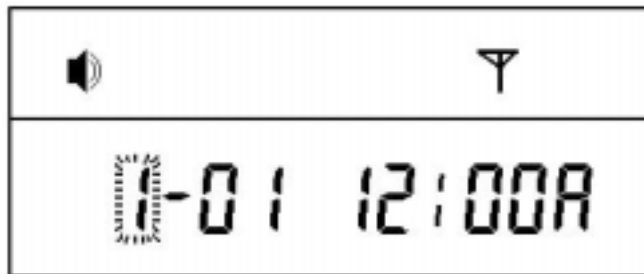 

When you see the month indicator blinking, press the Select button to set desired month. Press the Menu button to move the indicator in sequence of year, month, day, hour, minutes and when the time is set in AM/PM  
Then press Menu button to set the date and time you have selected.

### 13. Setting the Alarm

 
#### 1) Setting Alarm Time

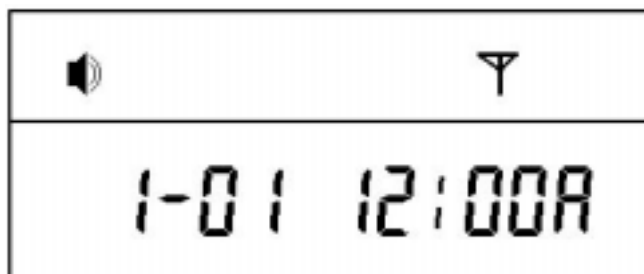

Stand By Mode  
press the Menu button 2 times



 press the Select button

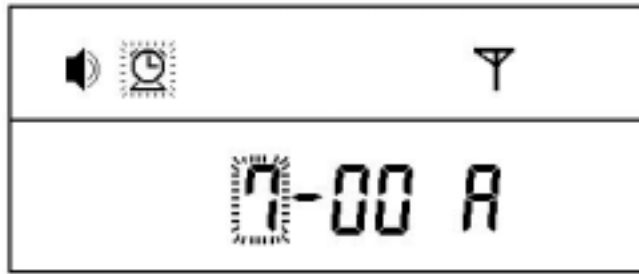


The Alarm symbol will blink.

You can change the hour by pressing Select button.

You can move from hour, minutes, and AM/PM by pressing Menu button.

 
If the desired time is set, you can press the Menu button once more to set the Alarm.

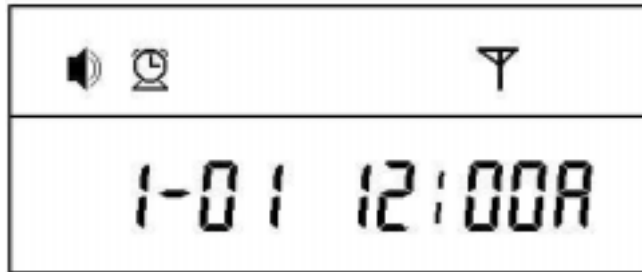


the Alarm is turned On

The alarm will go off at designated time and when it does, you will see the flashing Alarm Indicator and hear the alert tone for the duration of 30 seconds. You can turn off the Alert Tone and the Blinking by pressing either the Select or Menu button.


## 2) Cancelling the Alarm

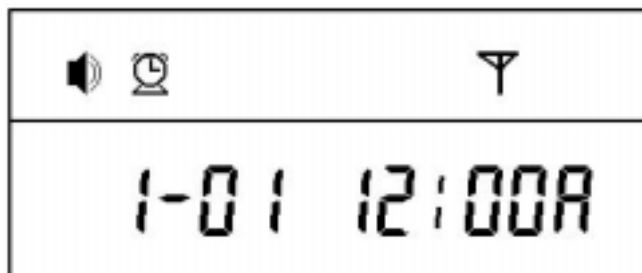 

press the Menu button 2 Times

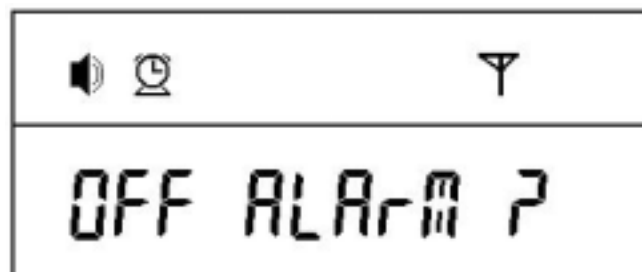 

press the Select button

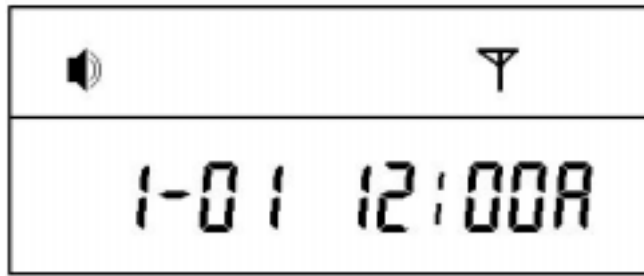 

the Alarm is turned Off

#### 14. Low Battery Indicator

When the battery become low, Regularly the pager will signal an alert sound for 8 seconds and the LCD will display, "BATT LOW". Then, you will see blinking battery symbol. You can stop the alert sound by pressing the Select or Menu button.



8 seconds later



Until the battery is replaced, you will continue to see the blinking battery symbol.

#### 15. Lamp

When you press select button or menu button for over 2 seconds lamp will light then go off with returning to Initial display.



## 16. Care and Maintenance Instruction

The Exo Cyber pager is a durable and reliable product that can give years of dependable service; however, it is an electronic product. Water moisture, excessive heat, and extreme shock may damage the pager. Do not expose your pager to these conditions. Use only a 1.5V AAA battery.

If repair is required, contact the vendor from whom you have purchased the pager.

For questions pertaining to the functions and use of your Exo Cyber pagers, please call ISE USA, Inc. at 213-351-1592. For questions pertaining to your paging service, contact your paging service provider.

## 17. Regulatory Agency Compliance

The Exo Cyber pager complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

## 18. One Year Full Warranty Terms and Conditions

ISE USA, operating out of 3250 Wilshire Blvd. Suite# 702 Los Angeles, CA 90010, warrants Exo Cyber pagers against defects in material and workmanship under normal use and service for the period one year from the invoice date. In the unlikely event that a component should fail during its warranty period due to a defect in material or workmanship, Caravan will replace the entire pager with equal or greater valued item.

### Warranty Exclusions:

This limited warranty does not cover the repair of cracked, scratched, broken or modified plastics, or any other cosmetic damage. This warranty does not apply to repairs or replacements necessitated by any cause beyond the control of the seller. This includes, but is not limited to: malfunction defects or failures, which in the opinion of the seller, are caused by or are results of unauthorized service or replacement parts, and improper maintenance, operation accidents, modification or repair by the user, abuse, misuse, neglect and accidents, fire and rain or other acts of God. Normal wear and tear including, without limitation, is not covered under the warranty.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**MODEL:ISP-5900F**  
**FCC ID:O2MISP5900F**  
**ISE TELECOM**