 
 
 
 
 
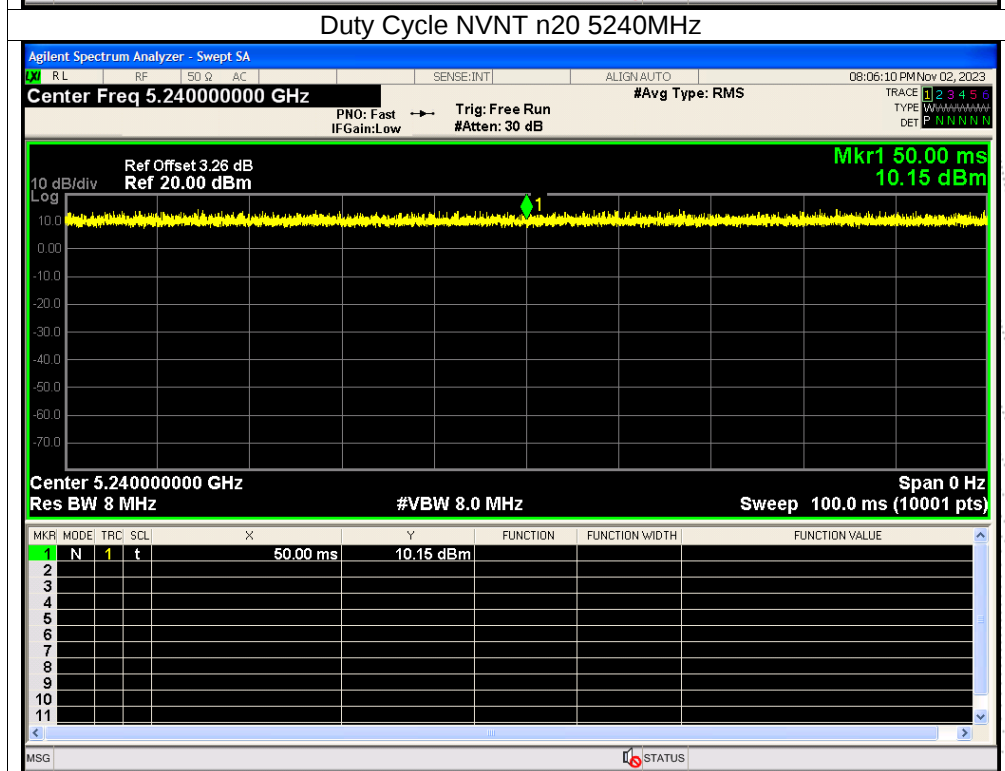 
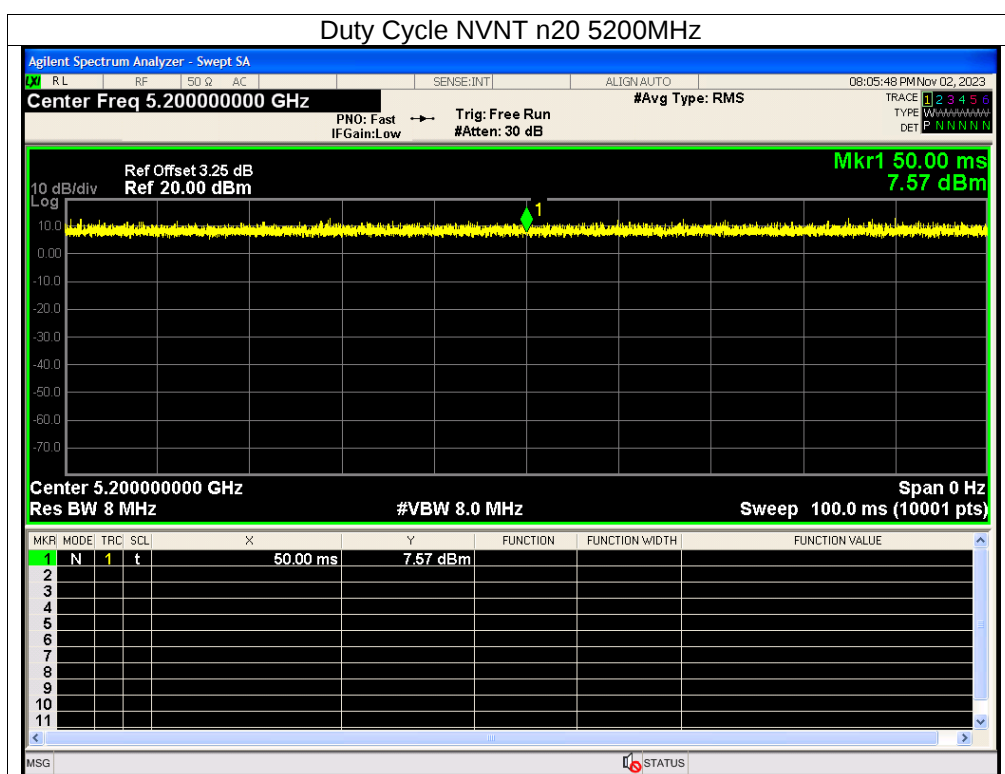 
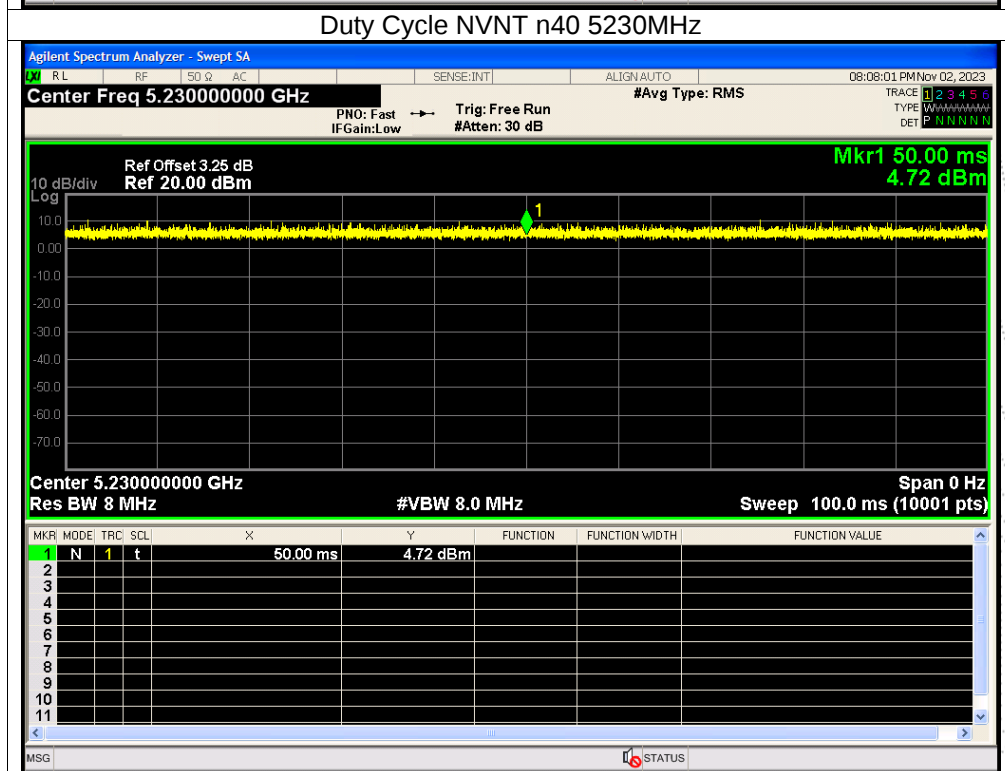 
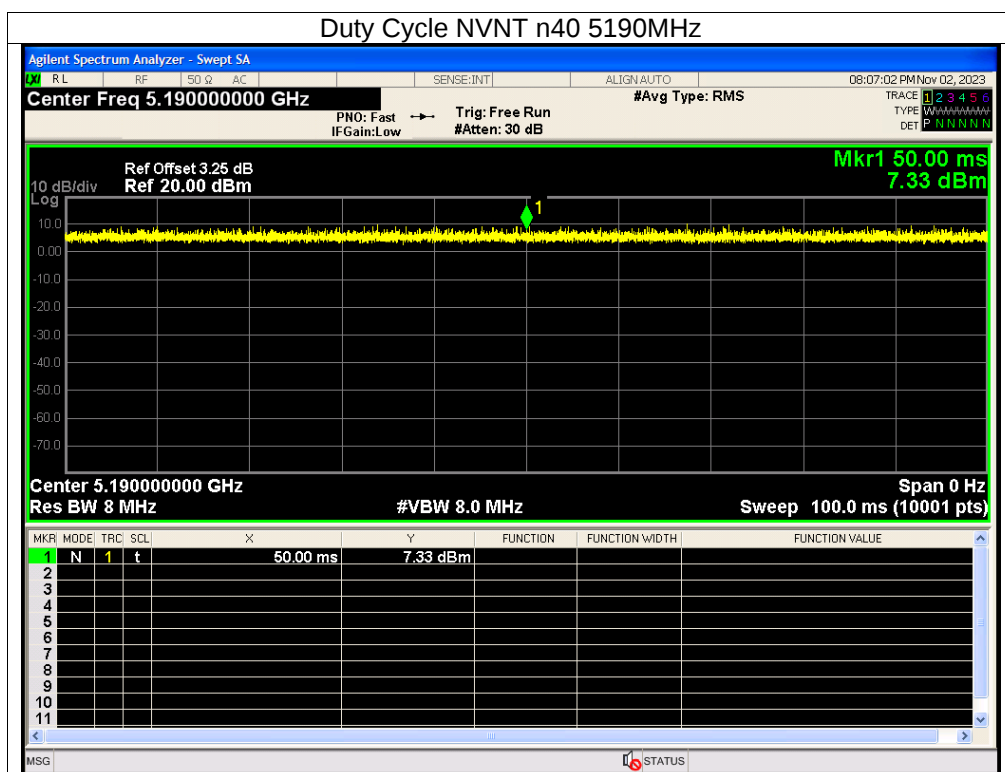 
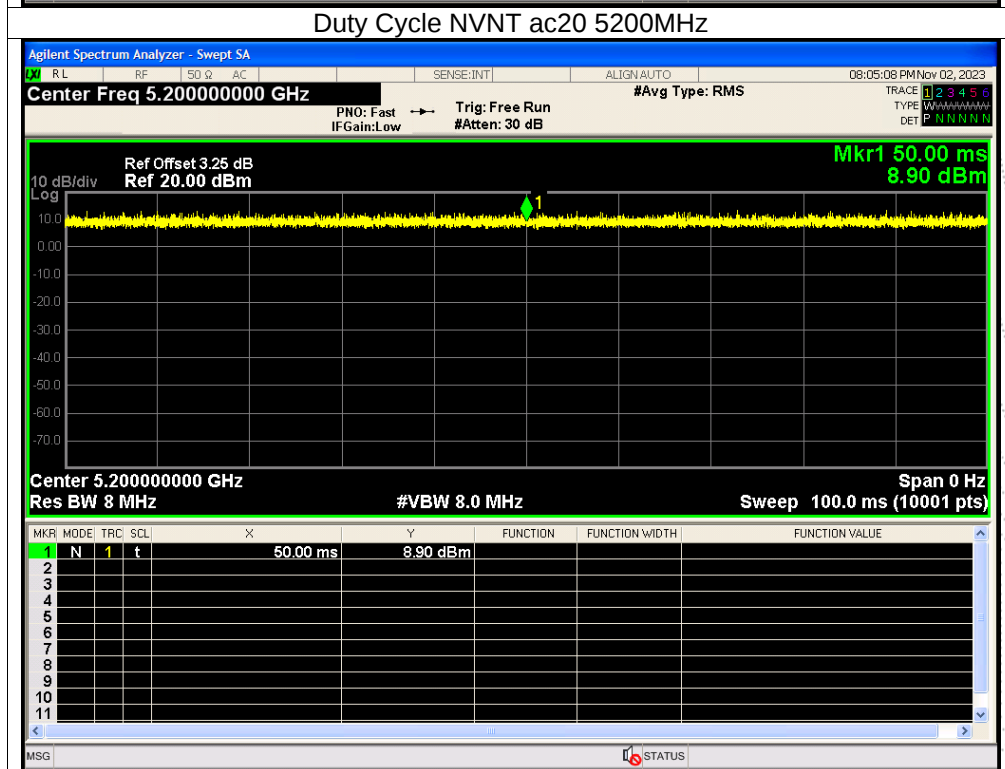 


 
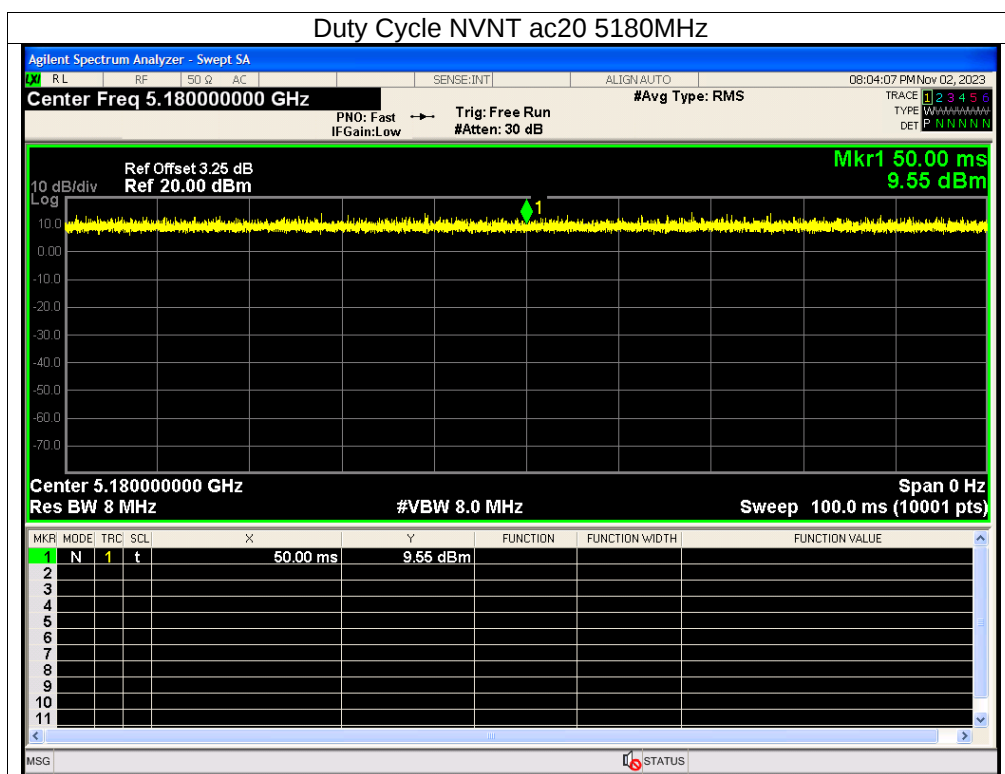 


 
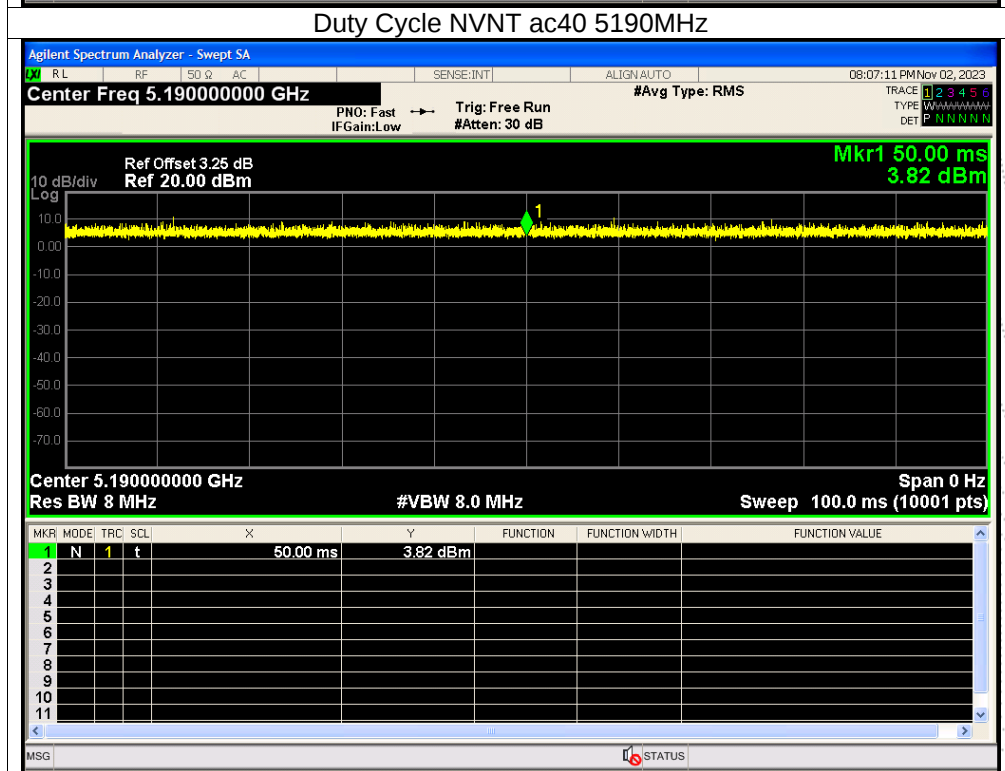 


 
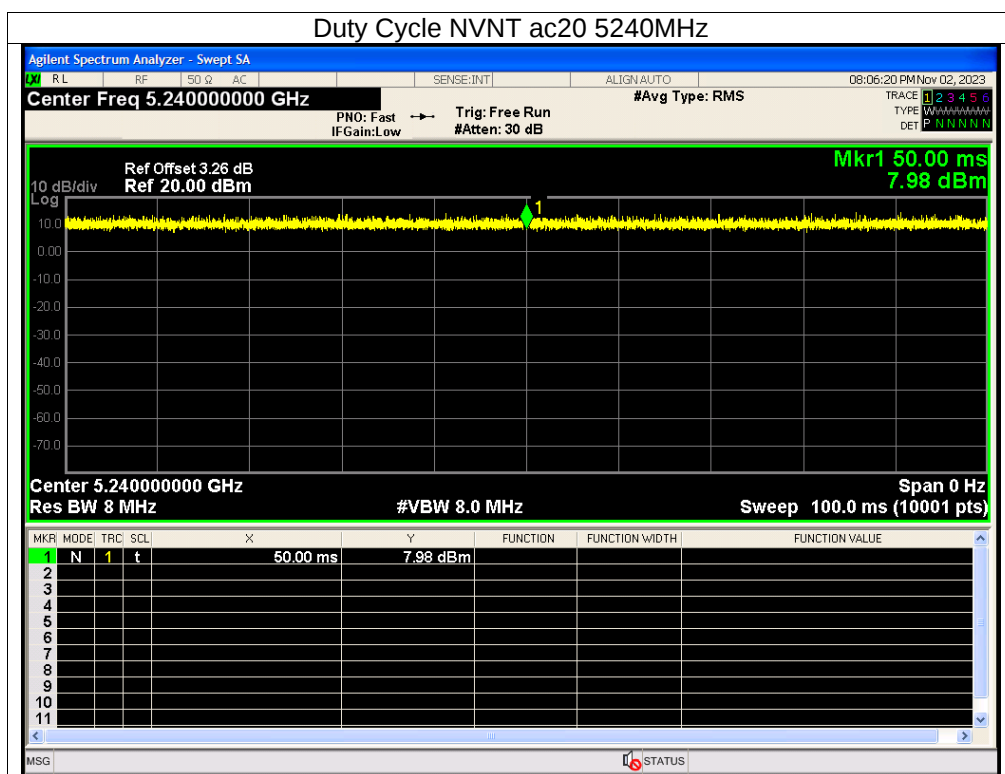 


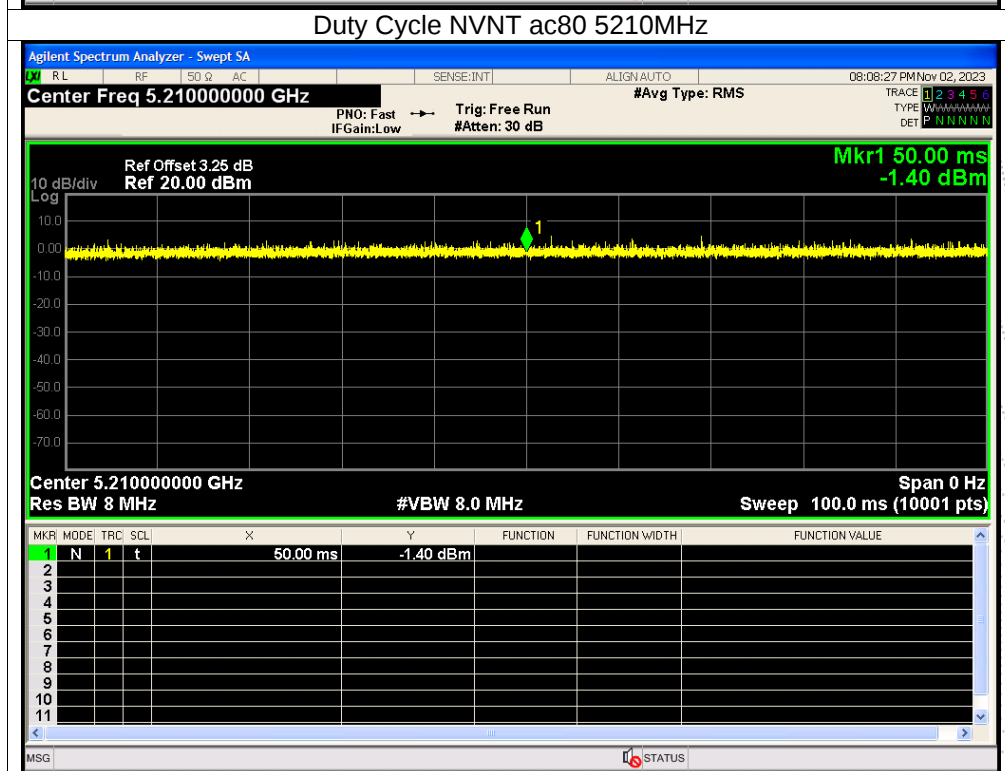

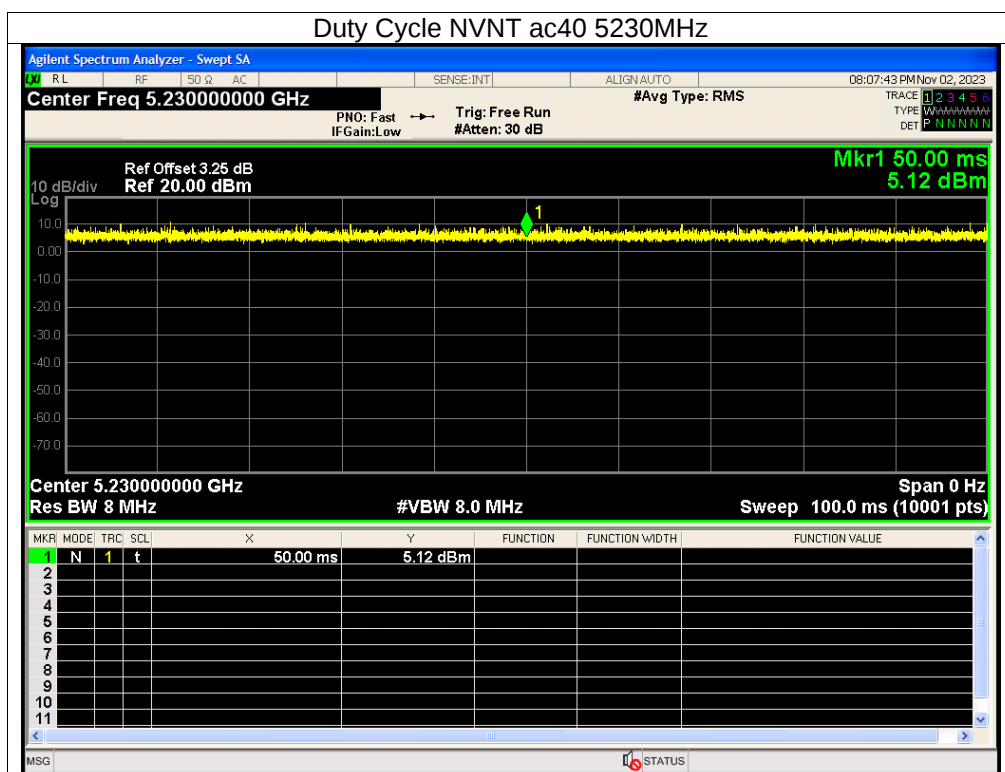


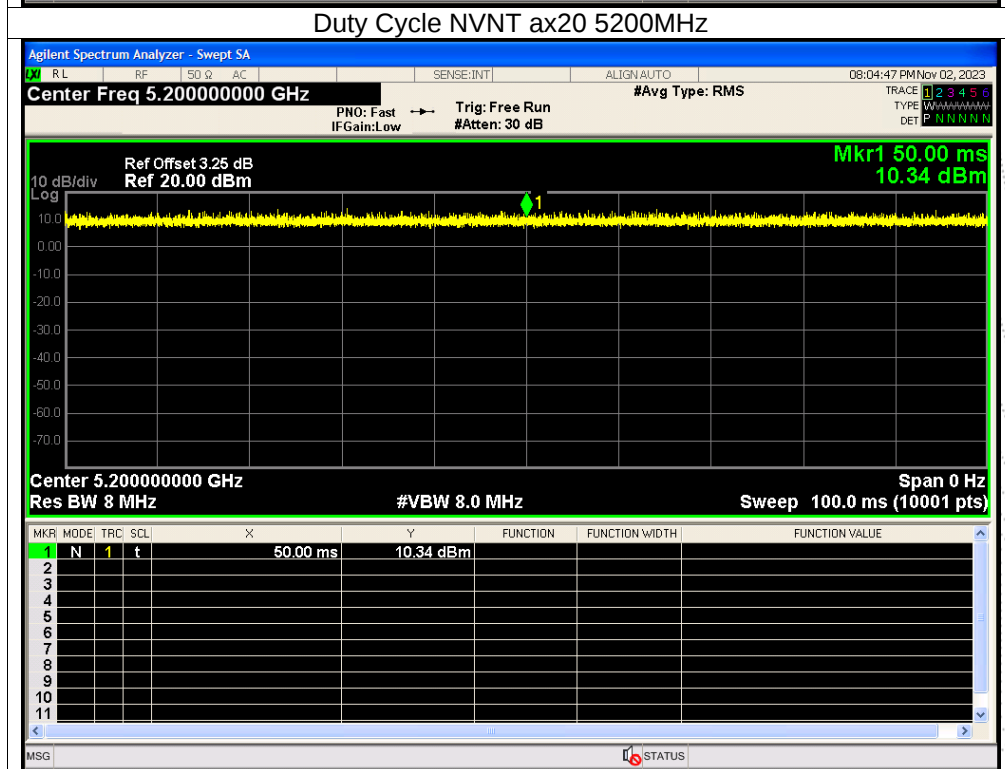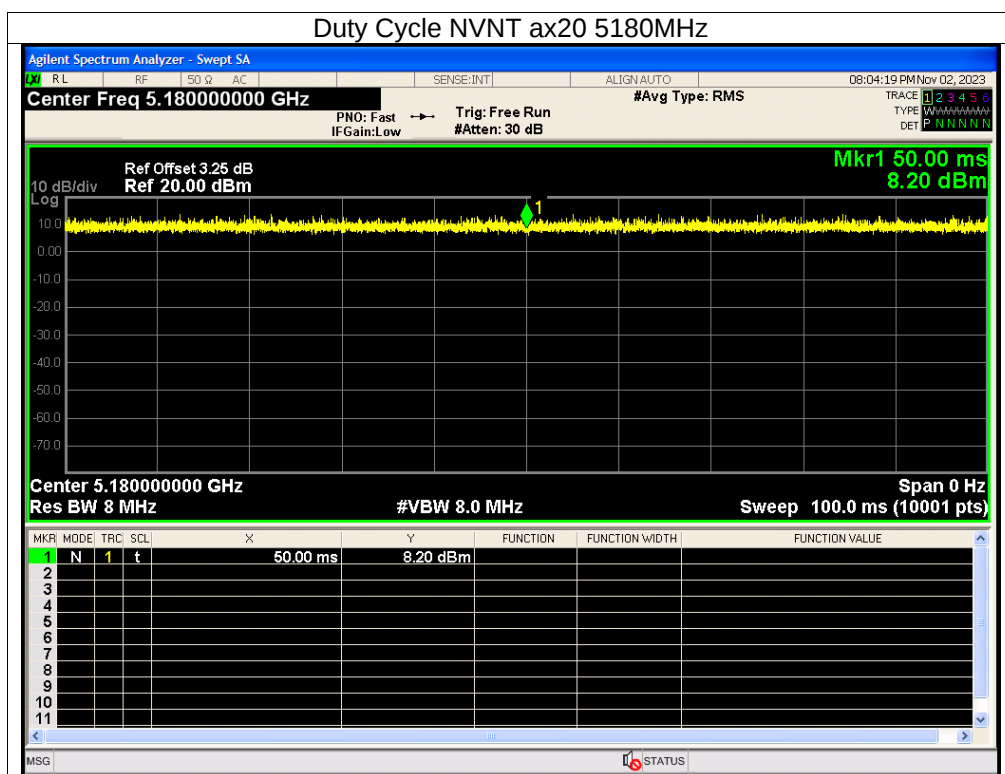


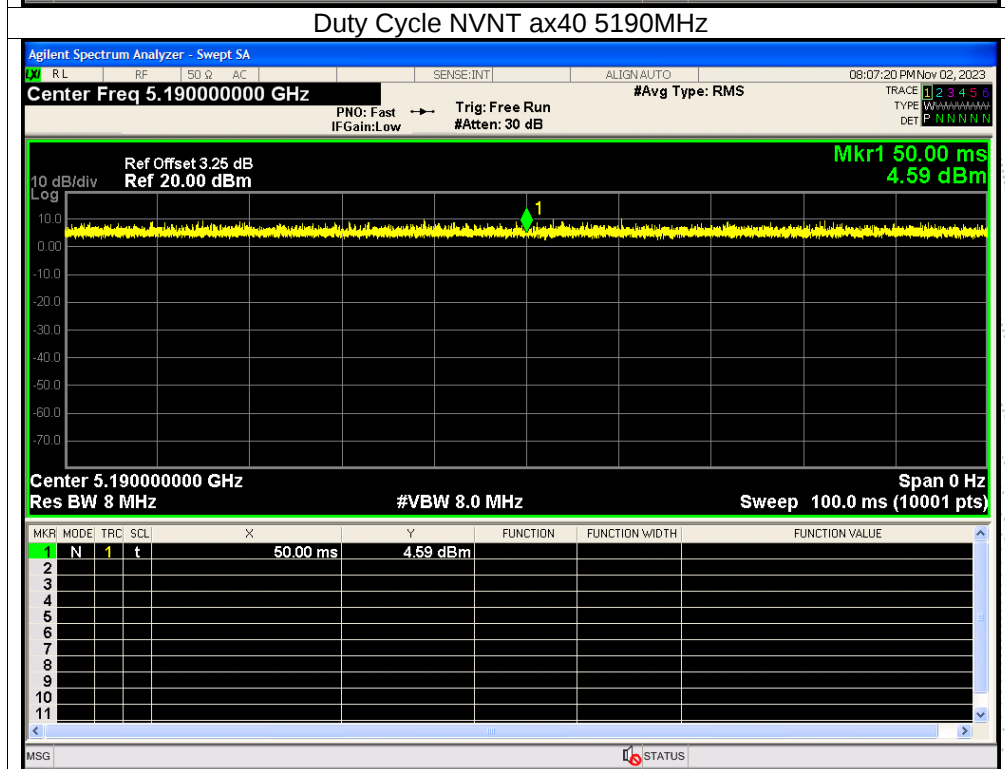
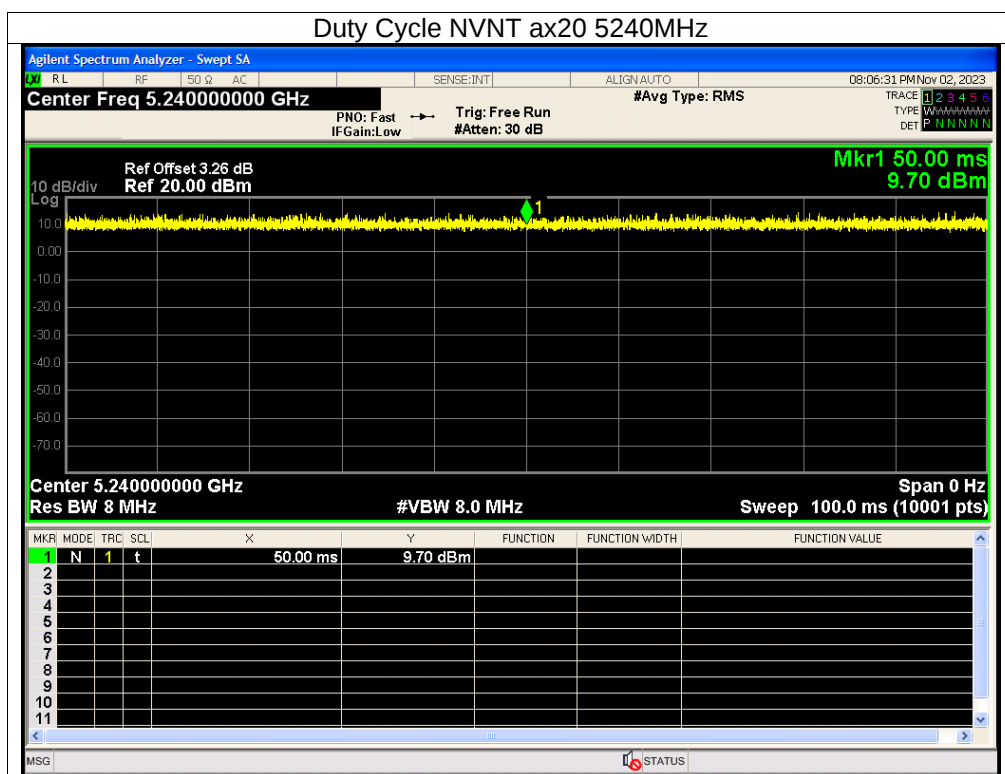


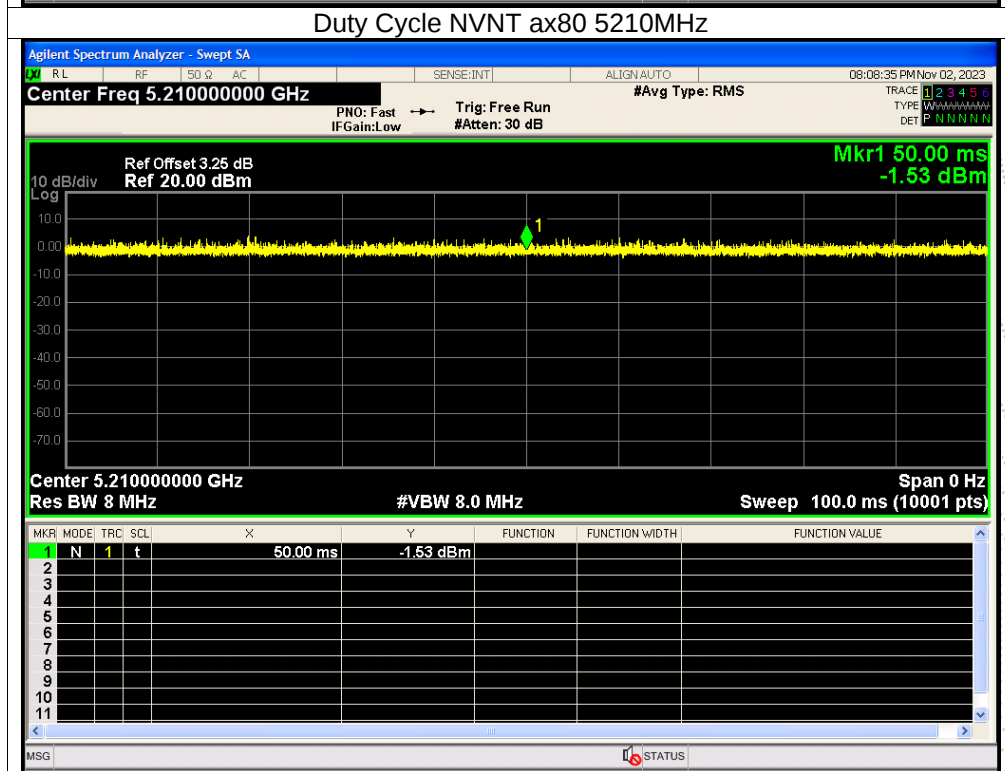
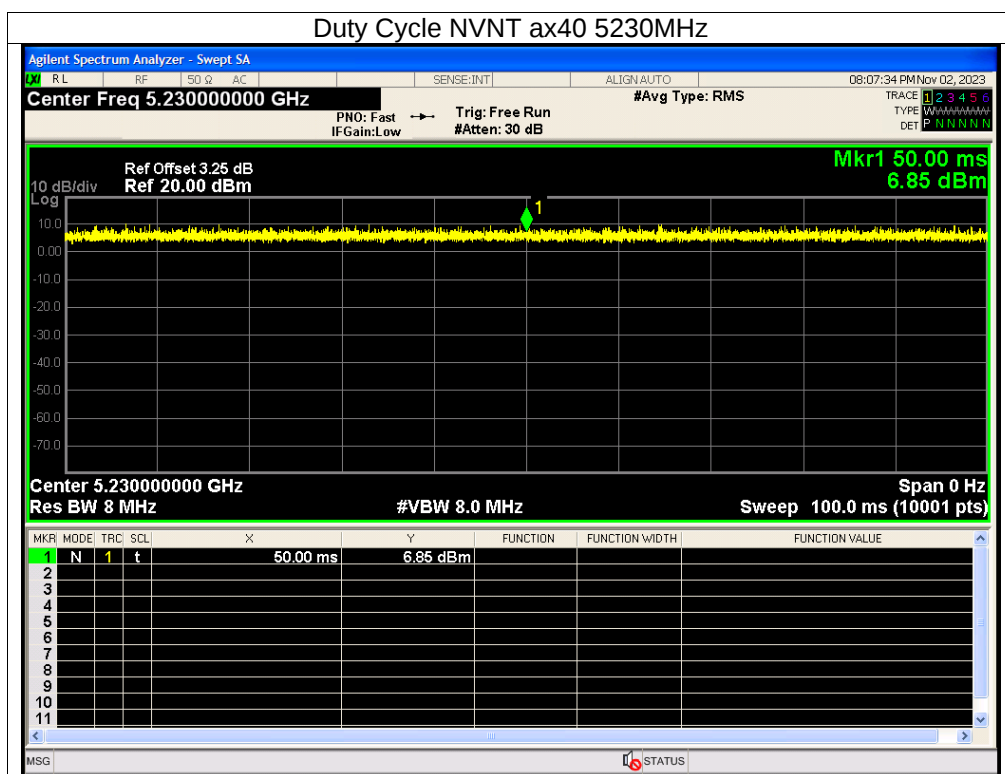




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	AntB	100	0	0
NVNT	a	5200	AntB	100	0	0
NVNT	a	5240	AntB	100	0	0
NVNT	n20	5180	AntB	100	0	0
NVNT	n20	5200	AntB	100	0	0
NVNT	n20	5240	AntB	100	0	0
NVNT	n40	5190	AntB	100	0	0
NVNT	n40	5230	AntB	100	0	0
NVNT	ac20	5180	AntB	100	0	0
NVNT	ac20	5200	AntB	100	0	0
NVNT	ac20	5240	AntB	100	0	0
NVNT	ac40	5190	AntB	100	0	0
NVNT	ac40	5230	AntB	100	0	0
NVNT	ac80	5210	AntB	100	0	0
NVNT	ax20	5180	AntB	100	0	0
NVNT	ax20	5200	AntB	100	0	0
NVNT	ax20	5240	AntB	100	0	0
NVNT	ax40	5190	AntB	100	0	0
NVNT	ax40	5230	AntB	100	0	0
NVNT	ax80	5210	AntB	100	0	0


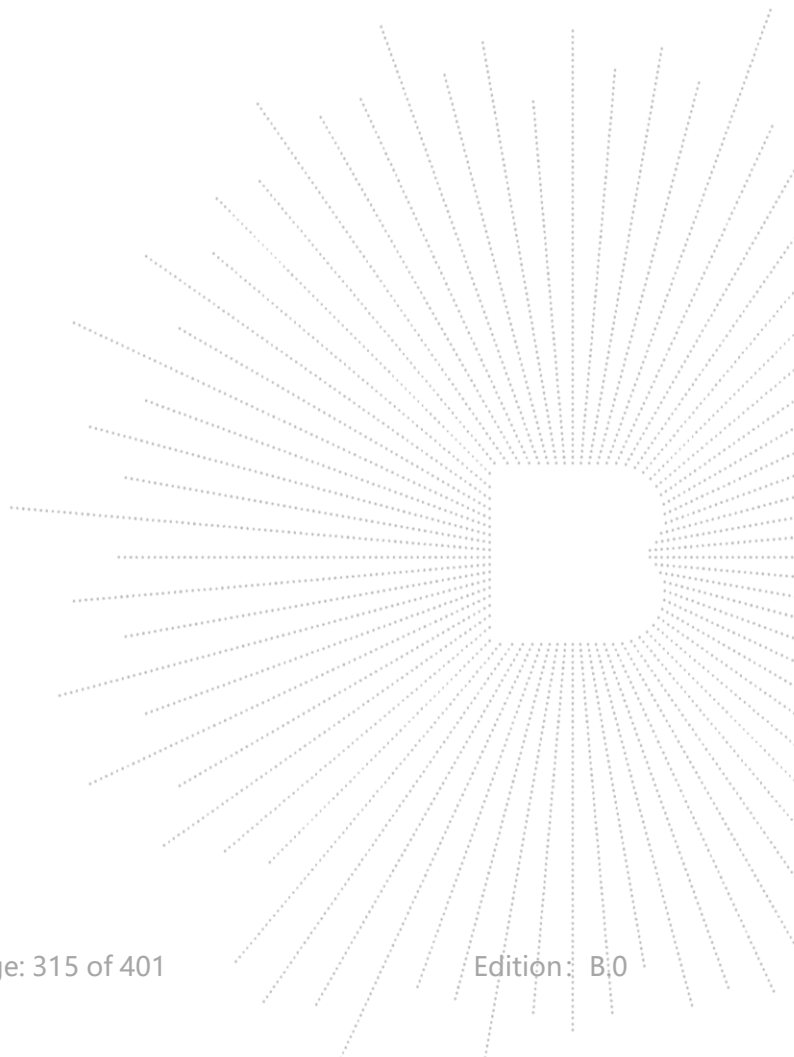 



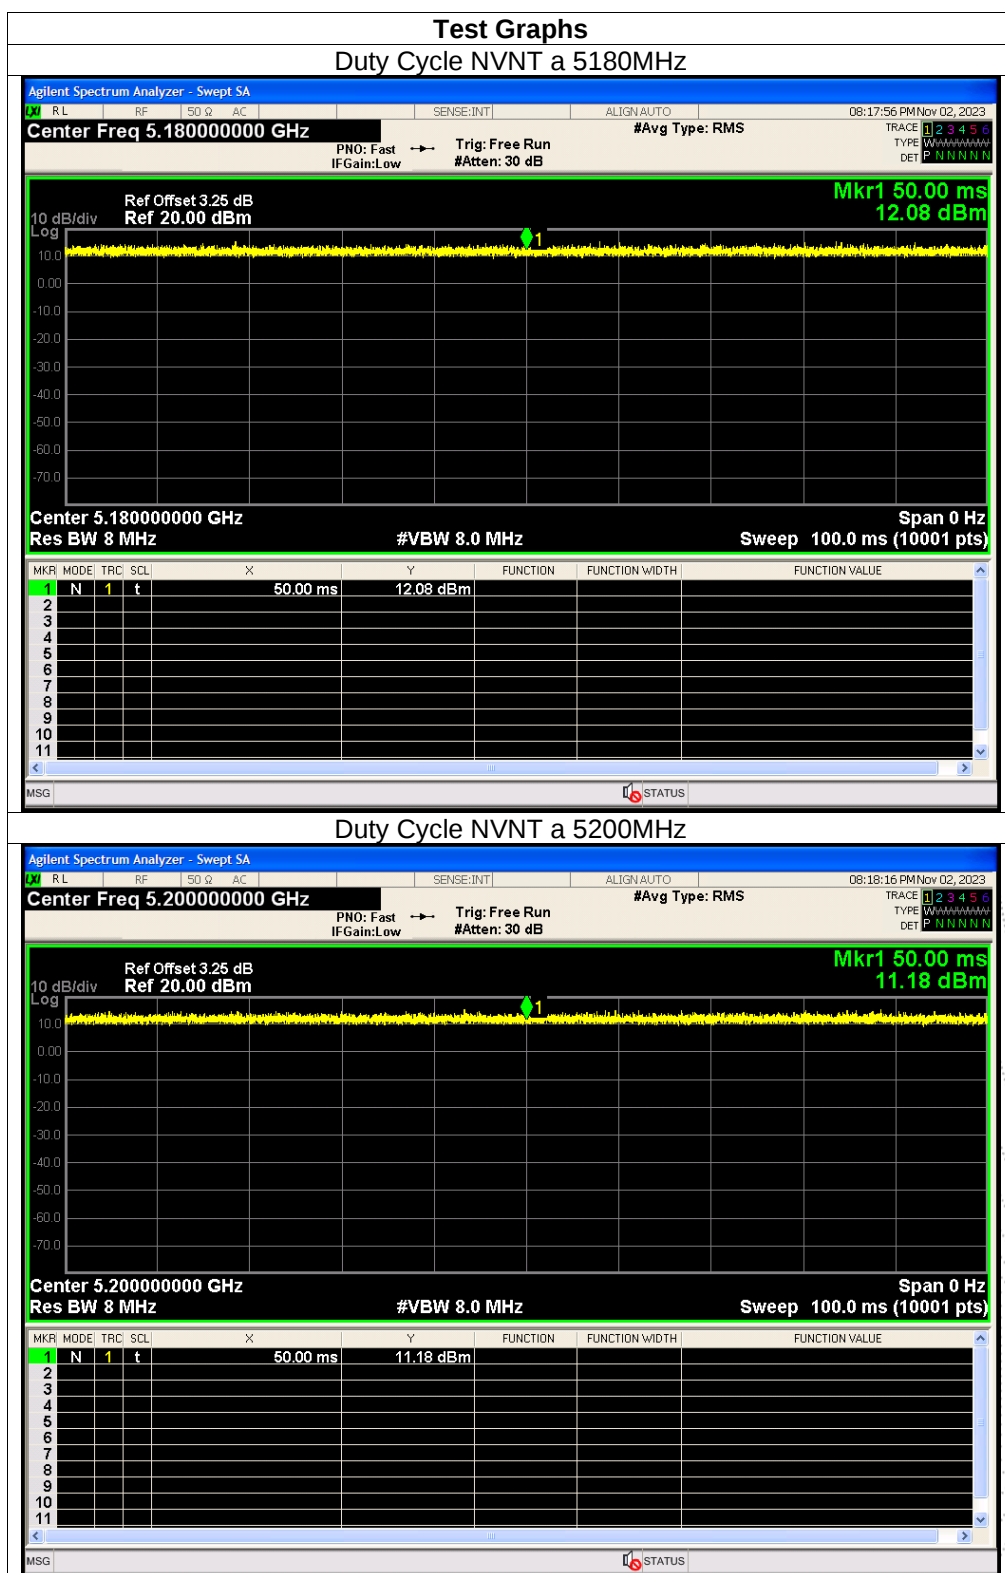 


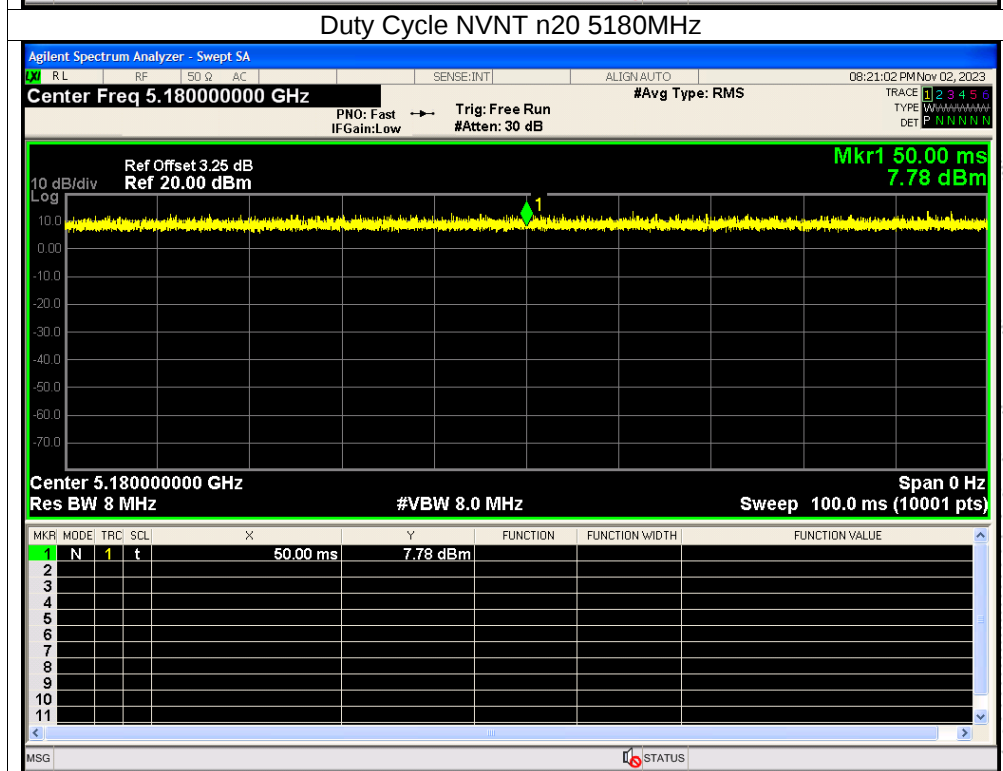 
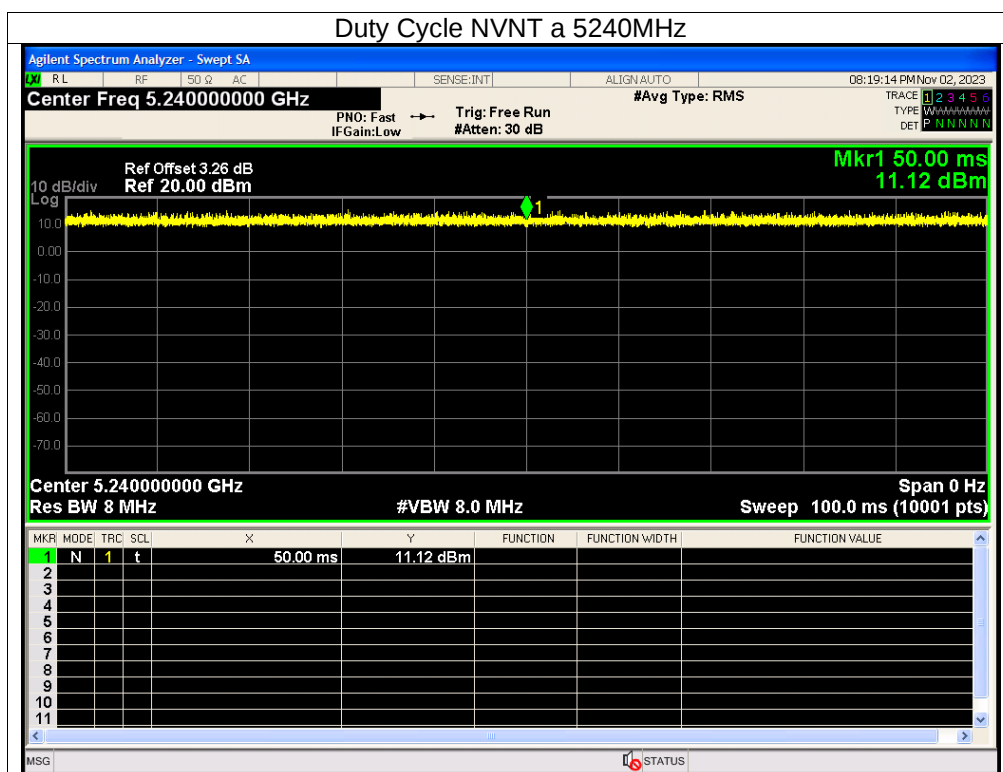 


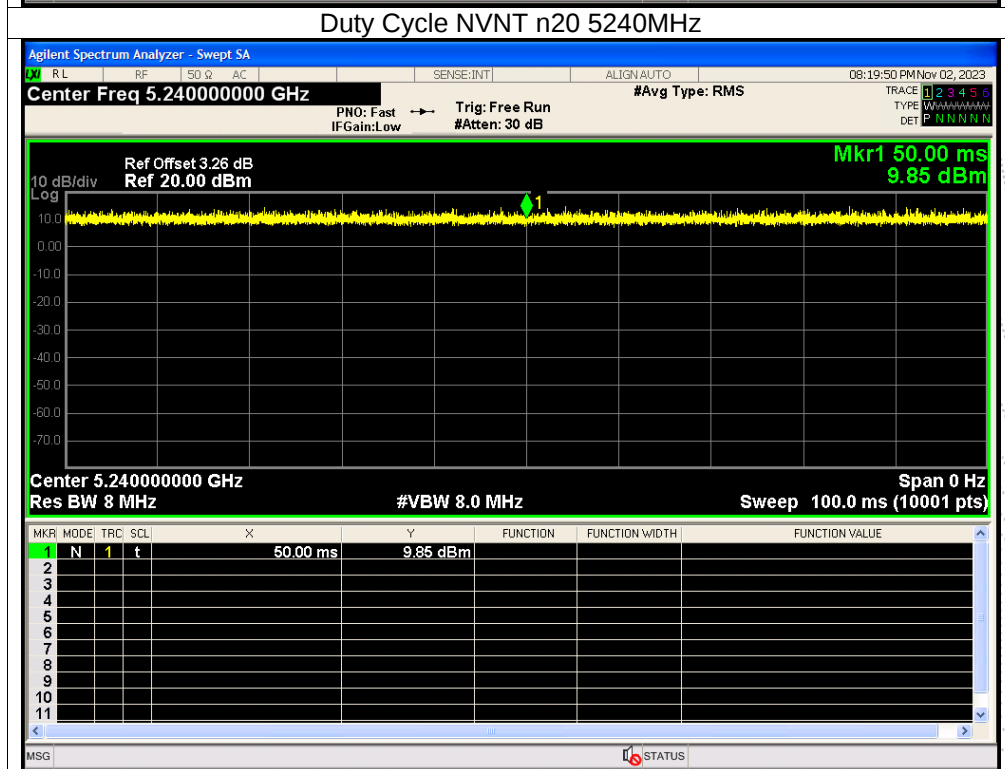 
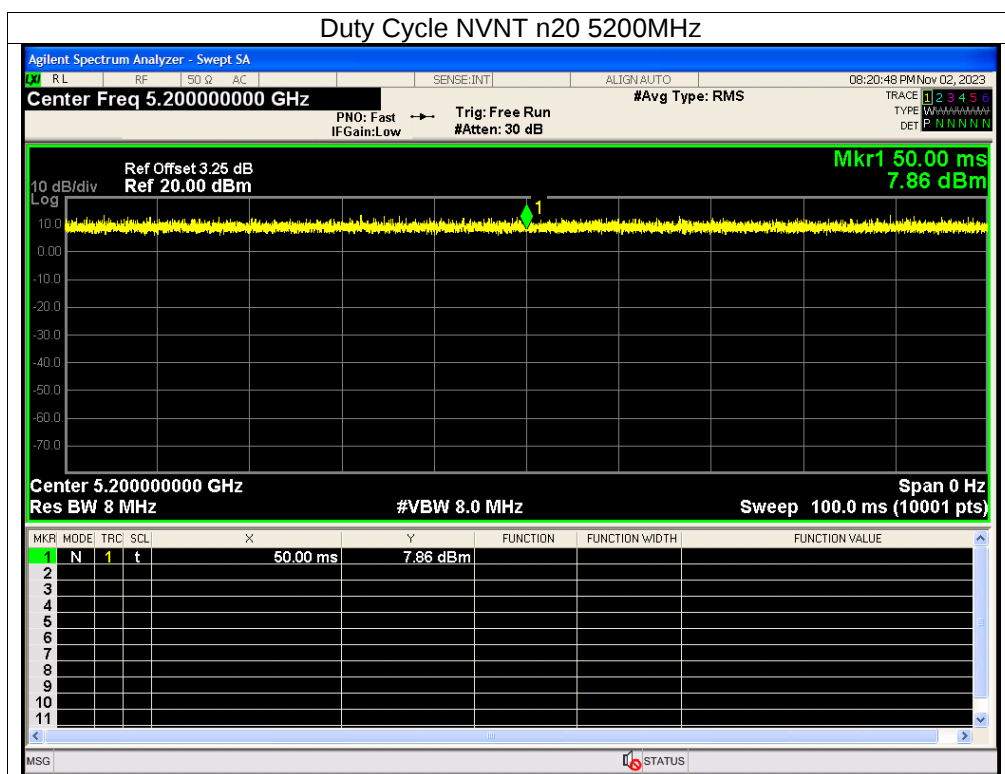 


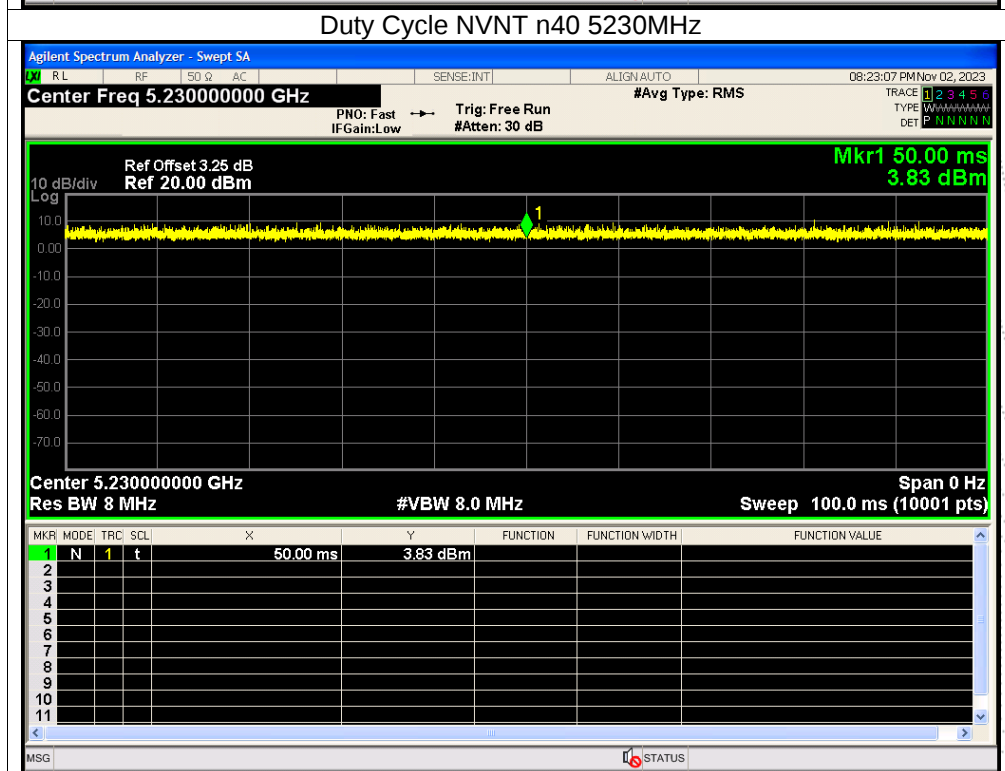           
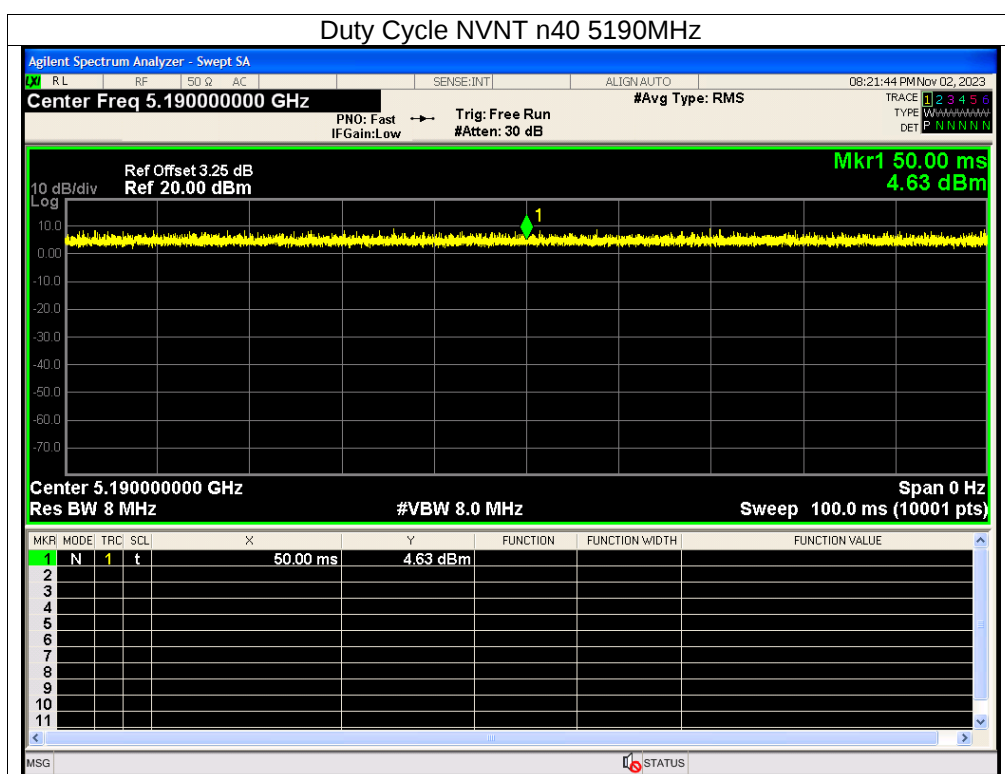 


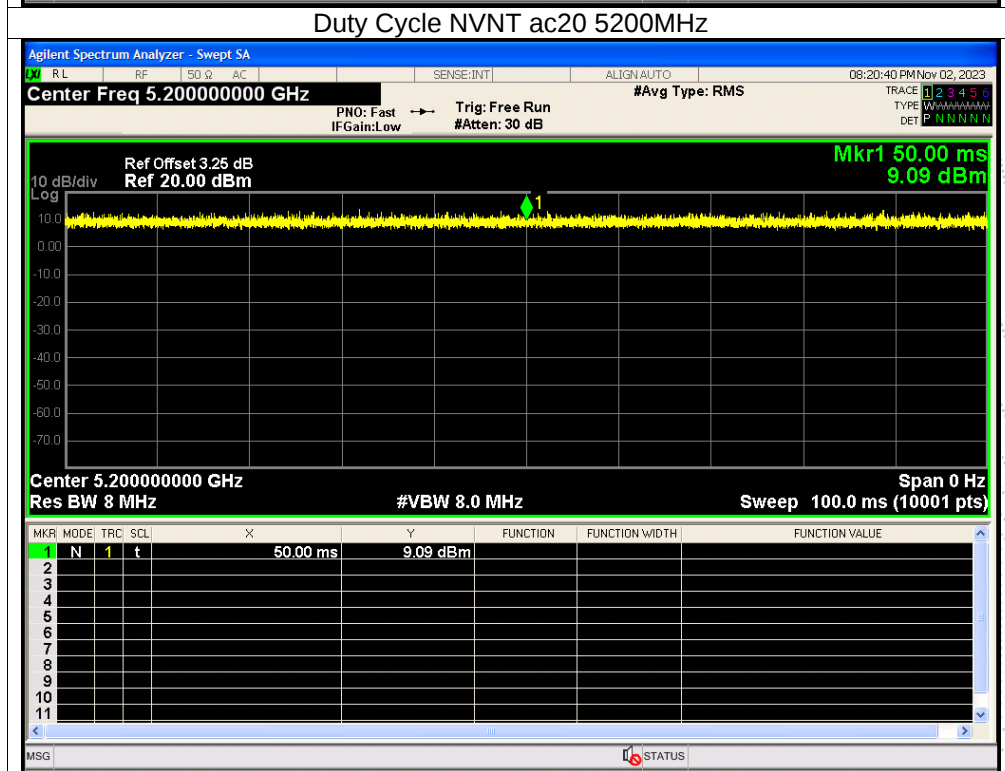 
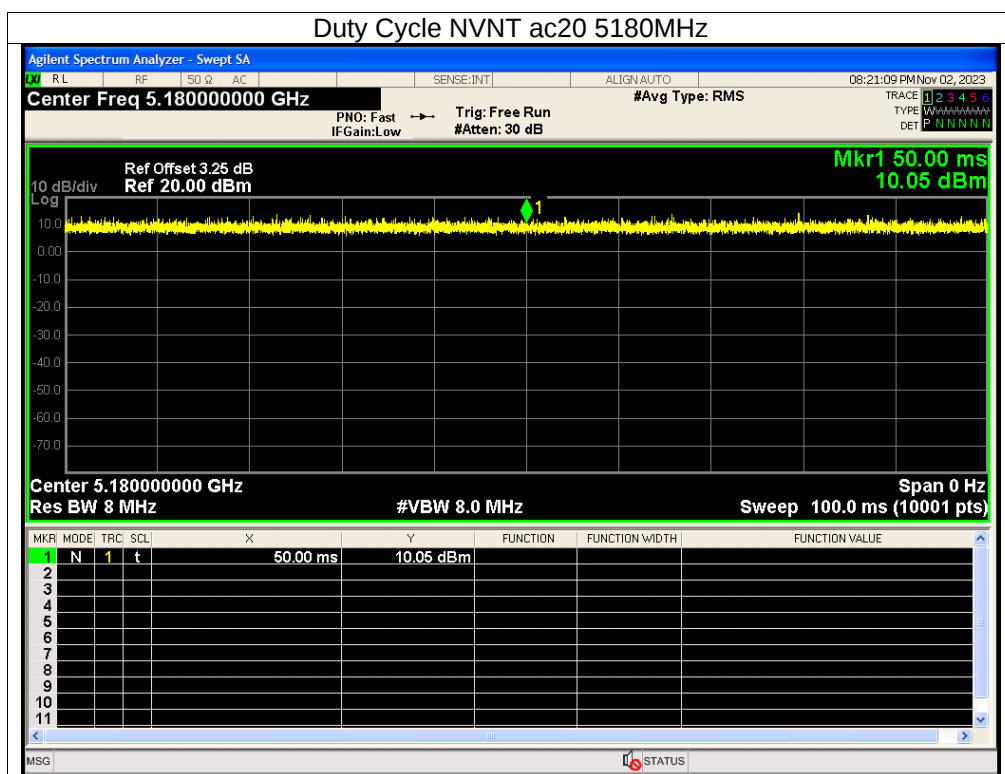 


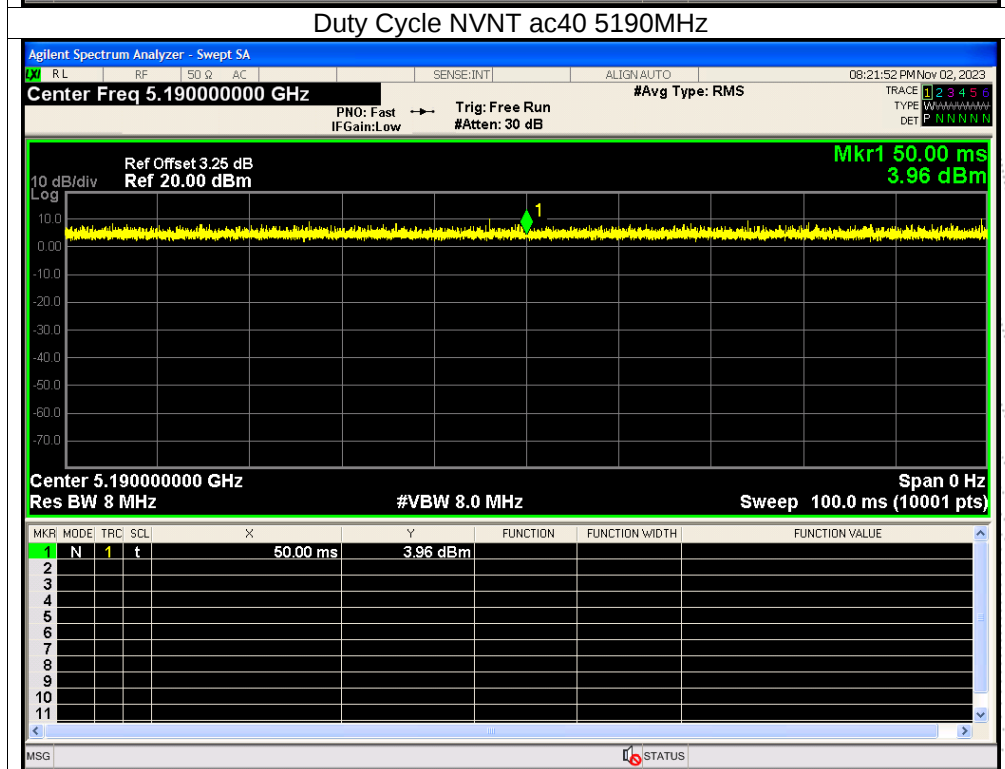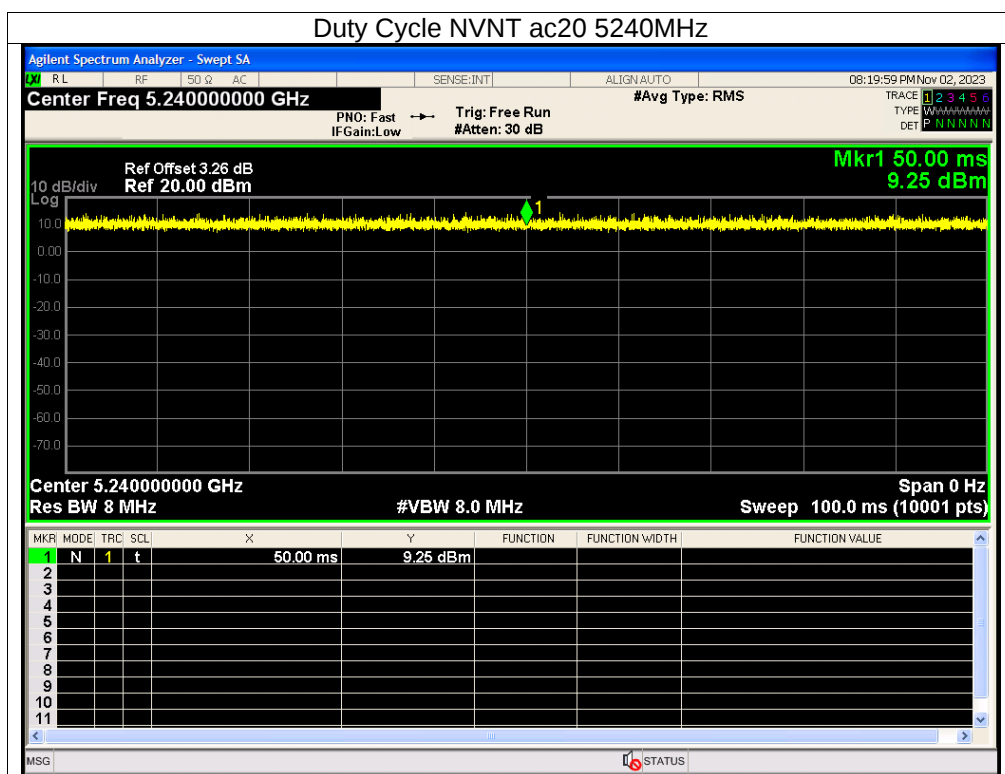

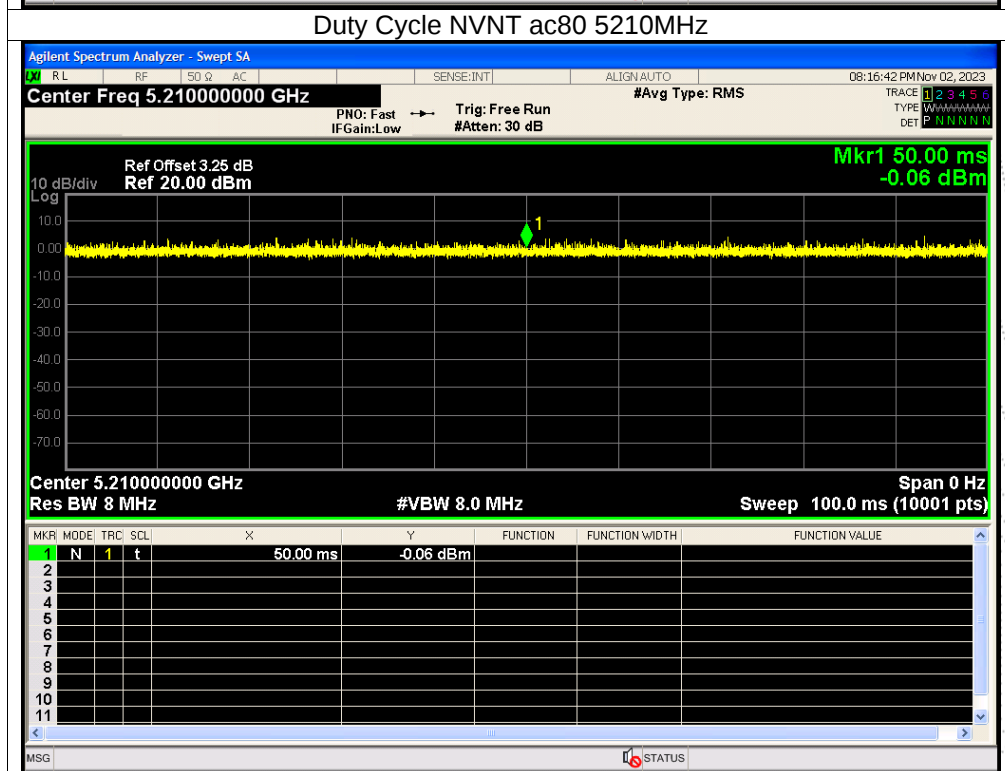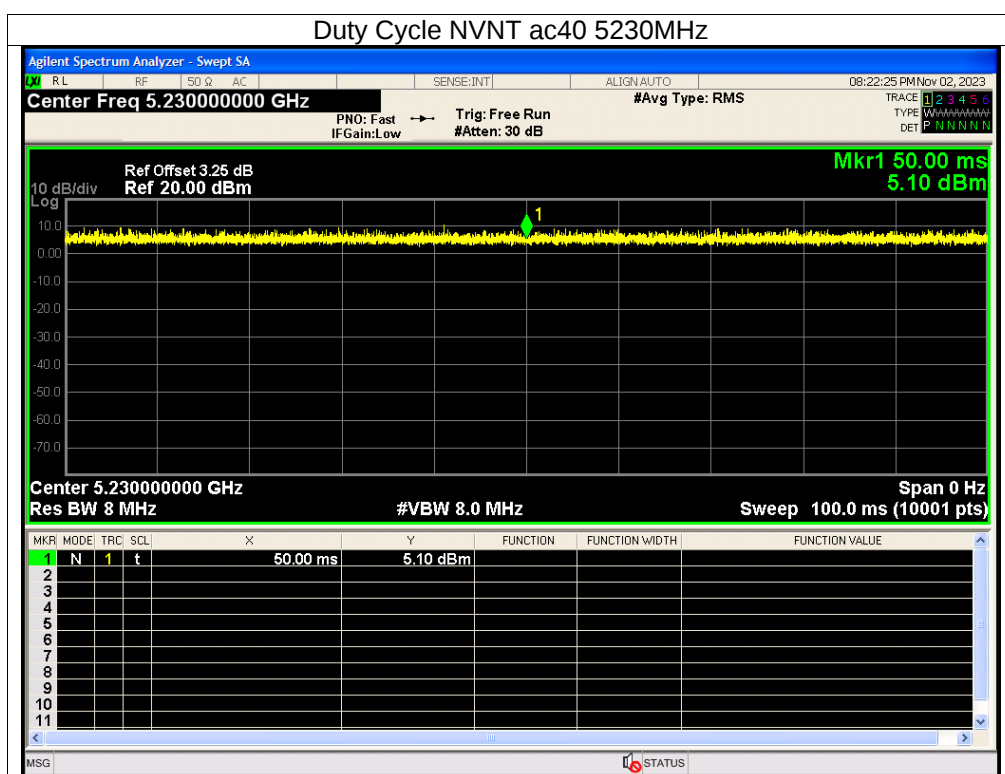


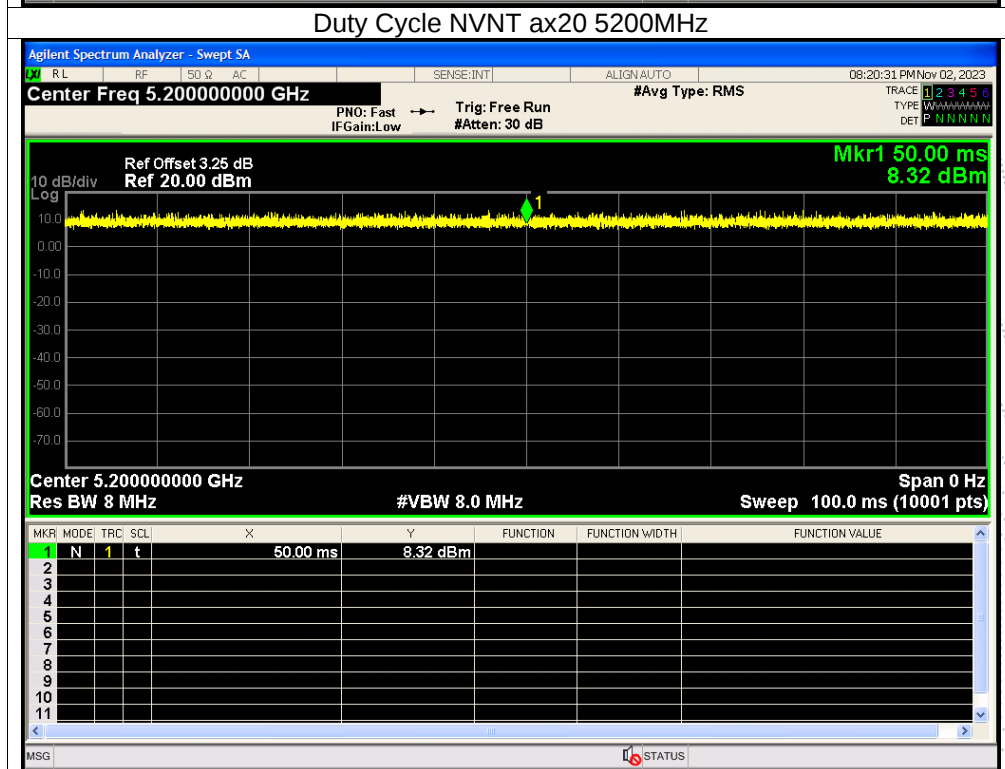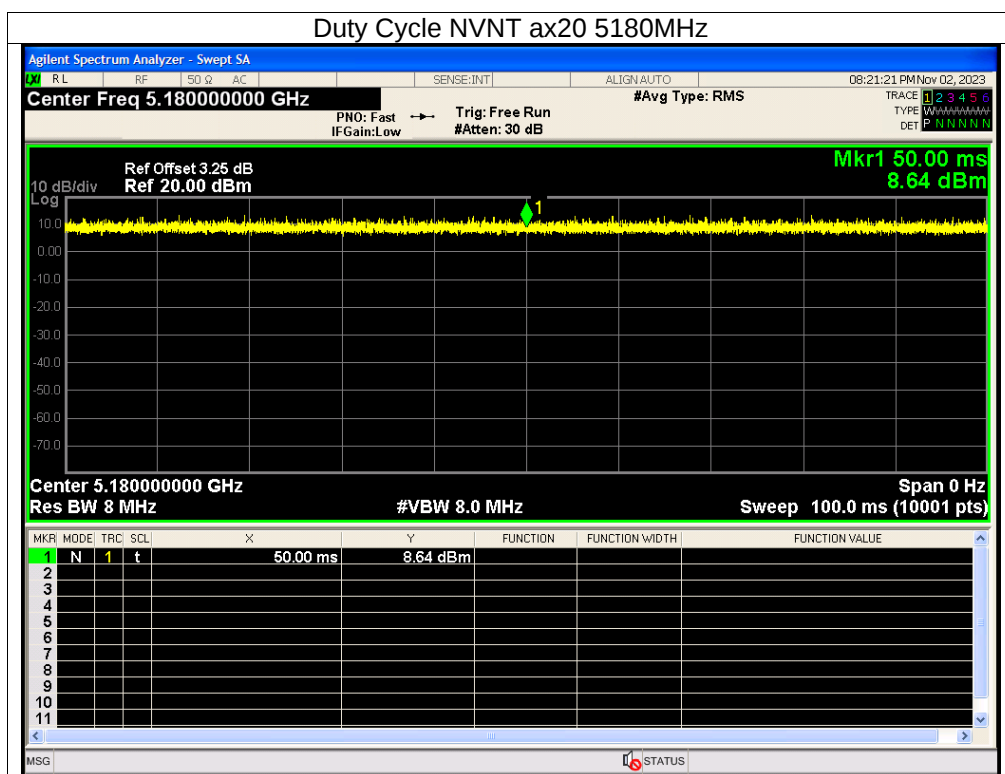


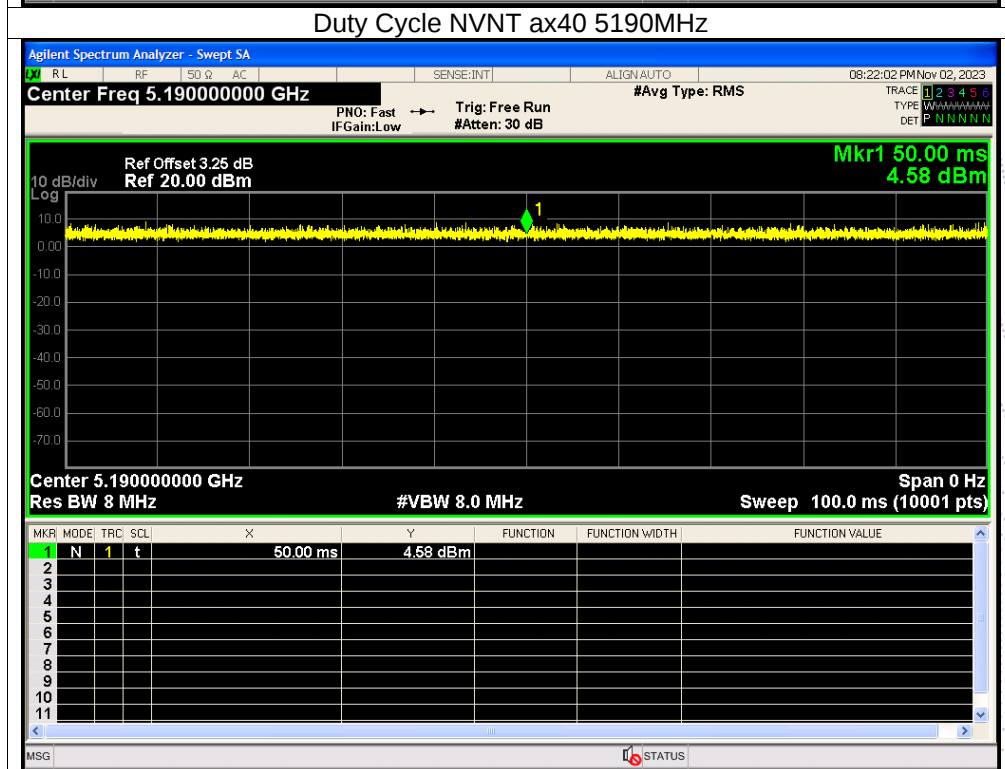
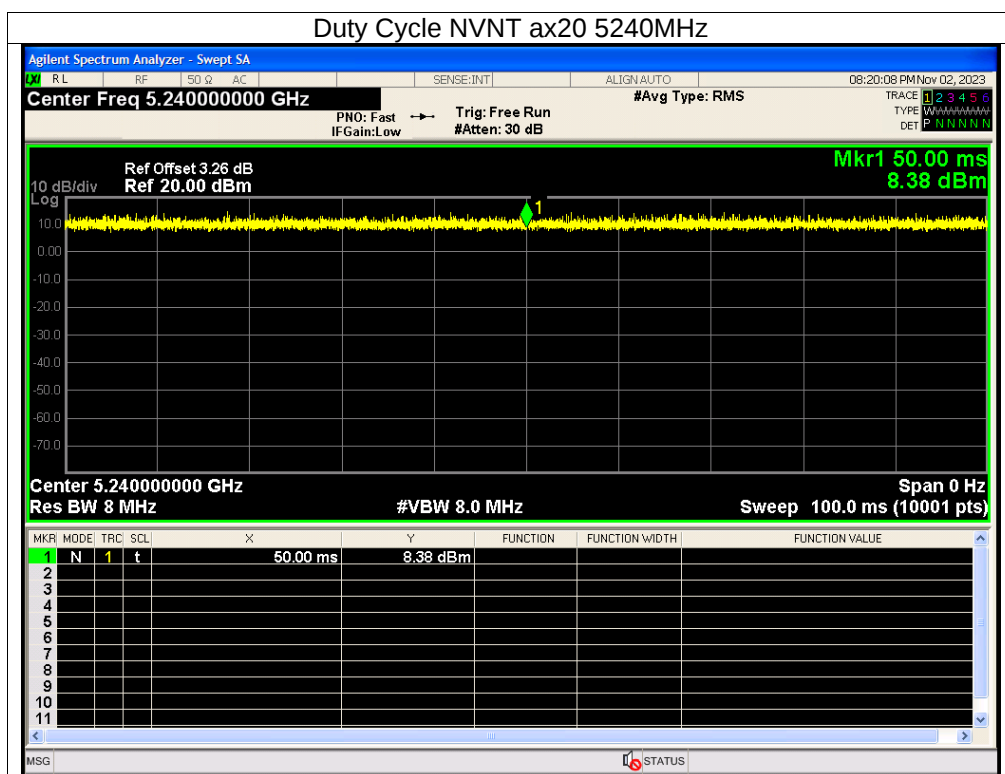


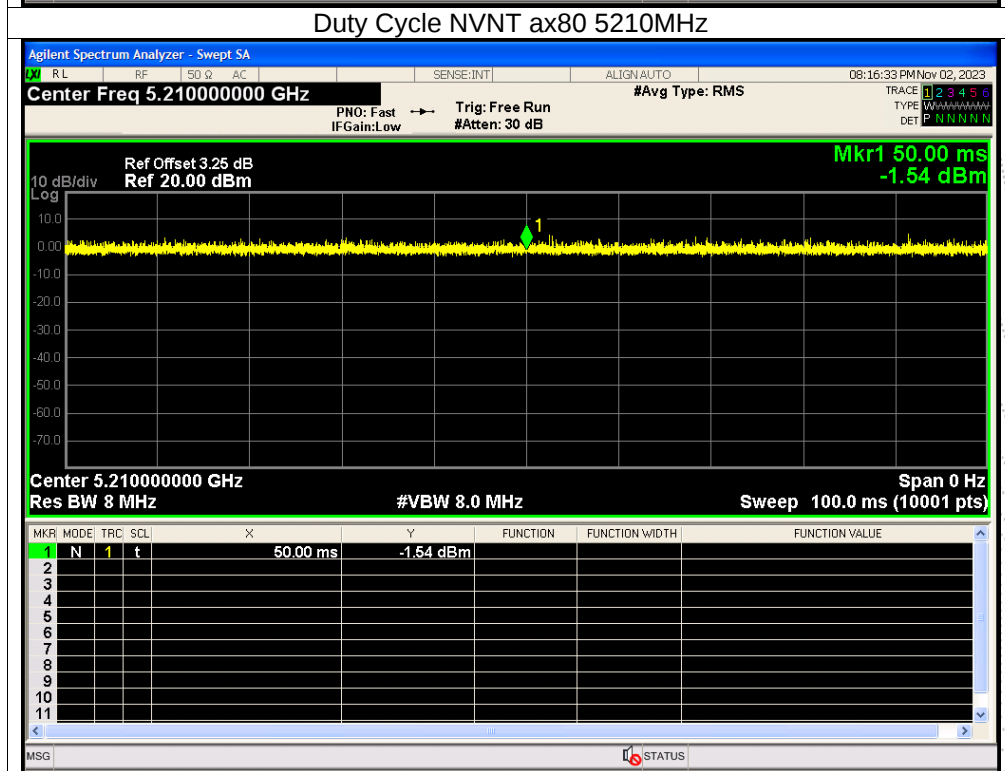
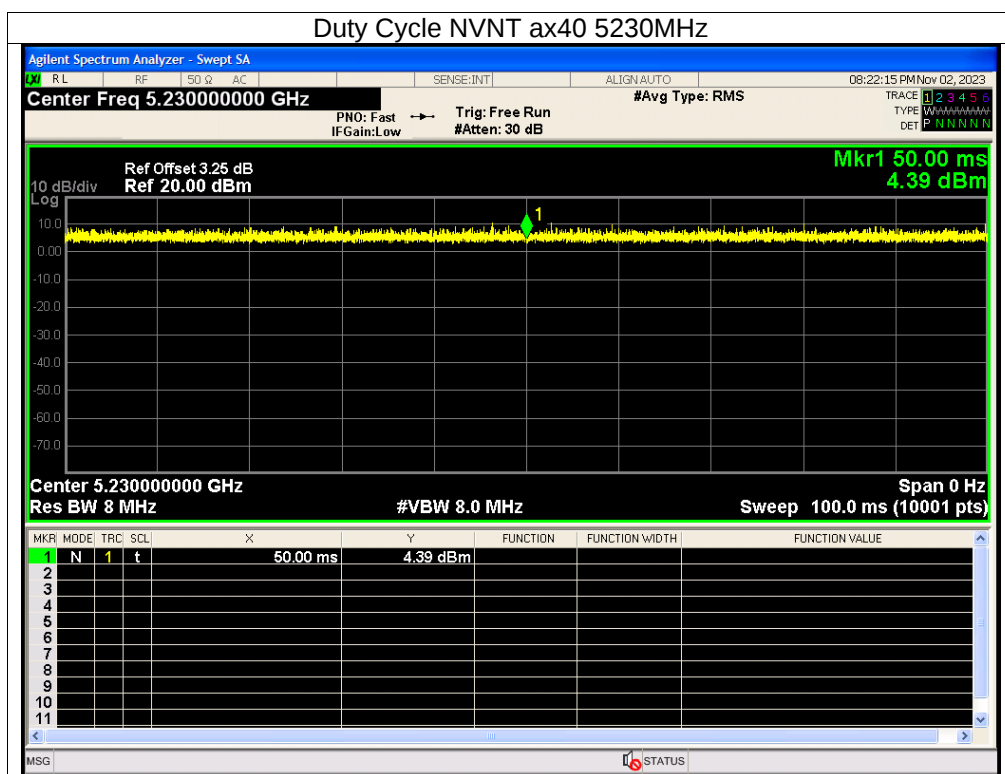




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	AntA	100	0	0
NVNT	a	5280	AntA	100	0	0
NVNT	a	5320	AntA	100	0	0
NVNT	n20	5260	AntA	100	0	0
NVNT	n20	5280	AntA	100	0	0
NVNT	n20	5320	AntA	100	0	0
NVNT	n40	5270	AntA	100	0	0
NVNT	n40	5310	AntA	100	0	0
NVNT	ac20	5260	AntA	100	0	0
NVNT	ac20	5280	AntA	100	0	0
NVNT	ac20	5320	AntA	100	0	0
NVNT	ac40	5270	AntA	100	0	0
NVNT	ac40	5310	AntA	100	0	0
NVNT	ac80	5290	AntA	100	0	0
NVNT	ax20	5260	AntA	100	0	0
NVNT	ax20	5280	AntA	100	0	0
NVNT	ax20	5320	AntA	100	0	0
NVNT	ax40	5270	AntA	100	0	0
NVNT	ax40	5310	AntA	100	0	0
NVNT	ax80	5290	AntA	100	0	0


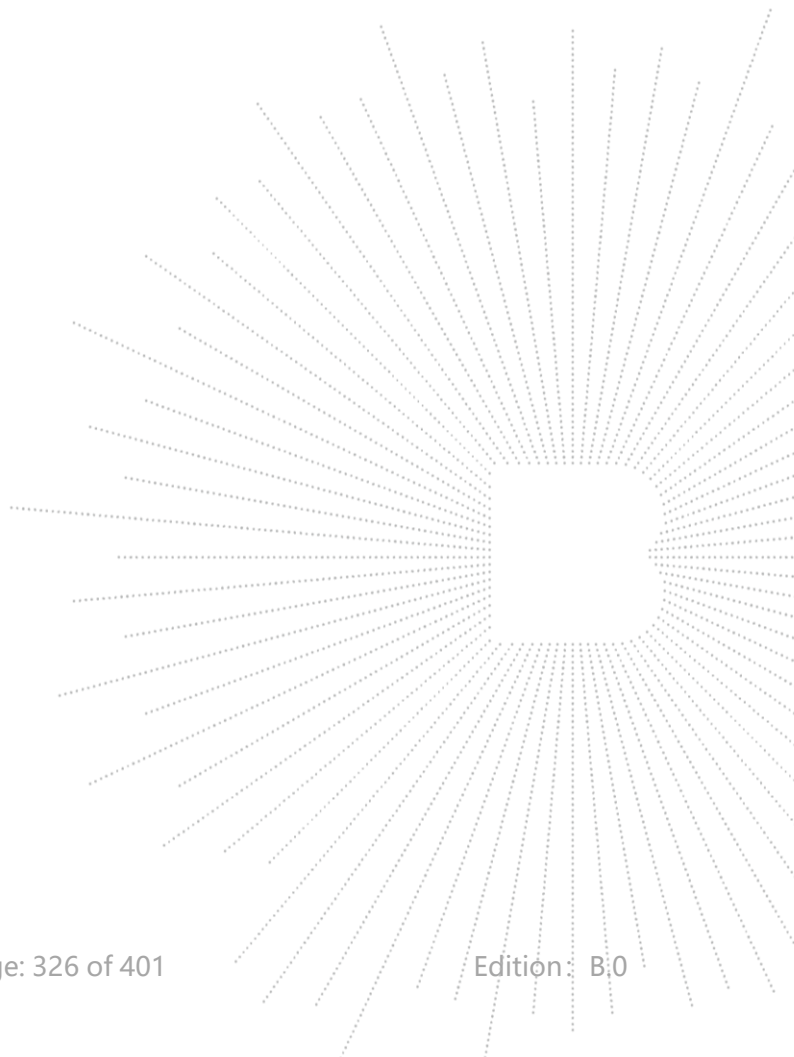 



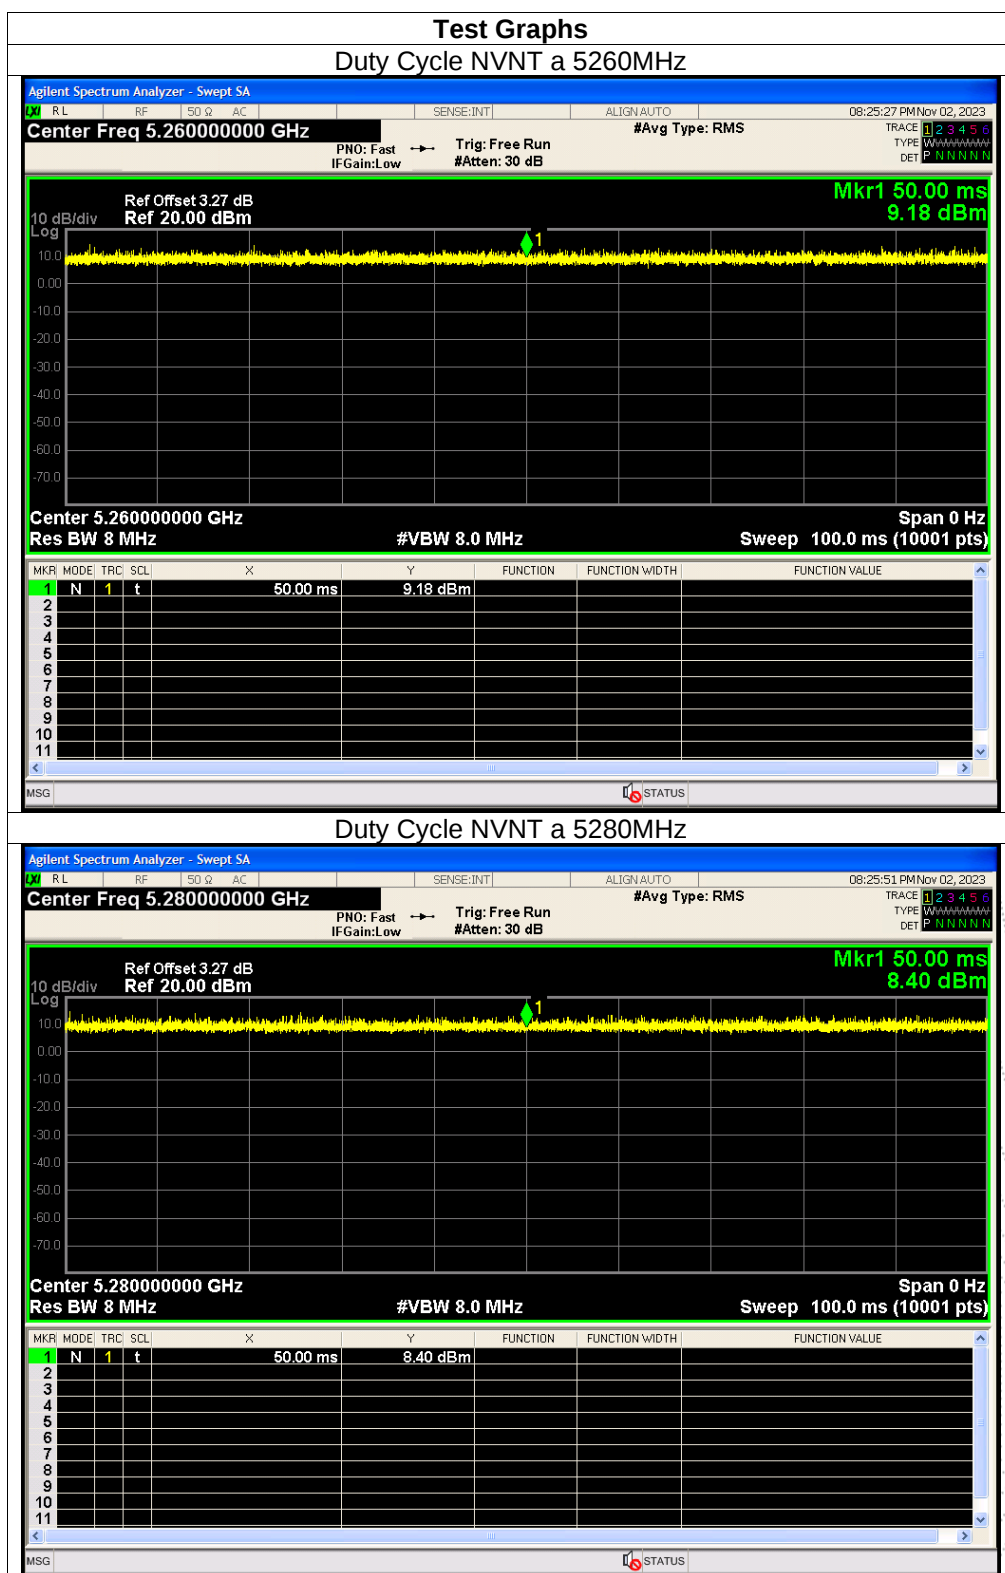 


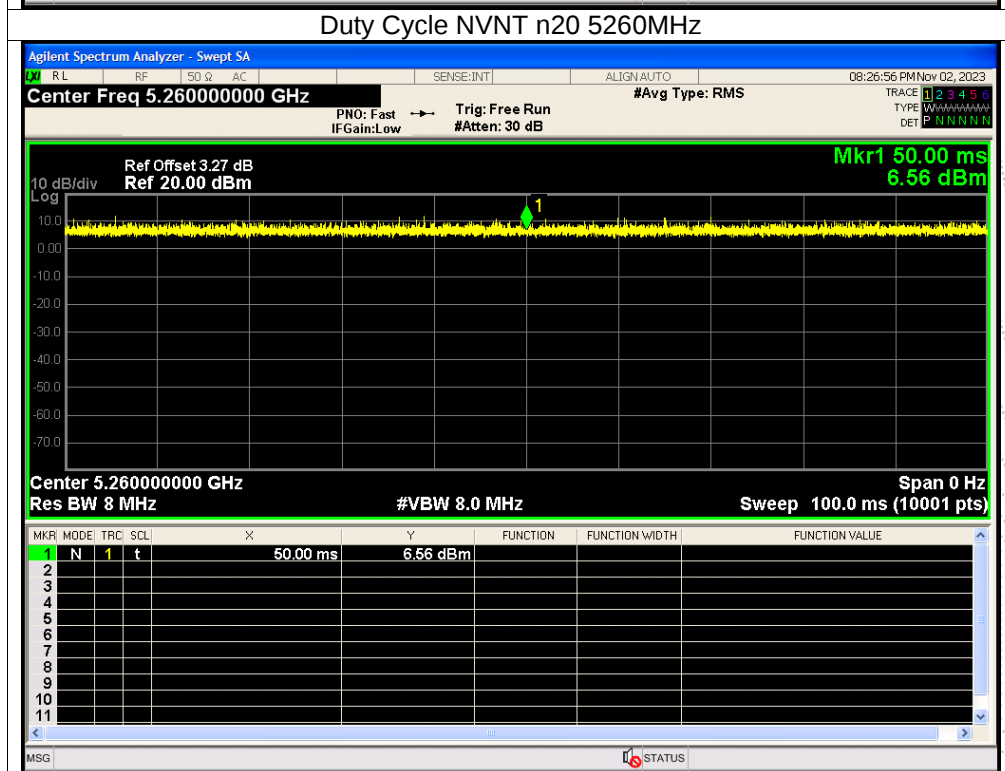 
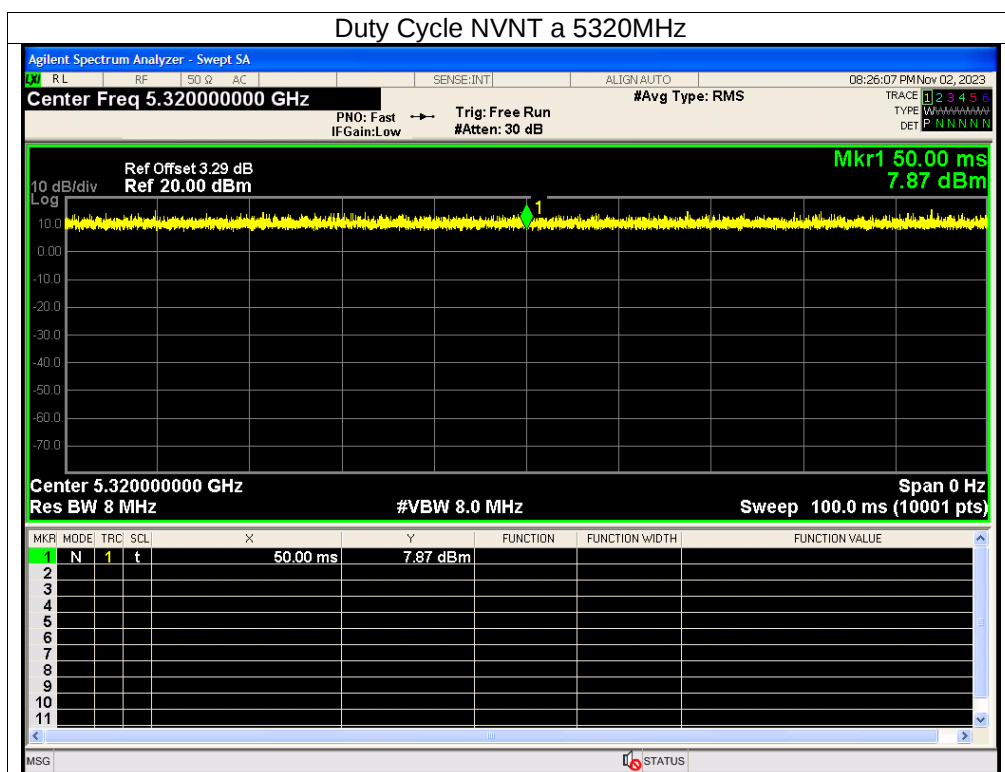 


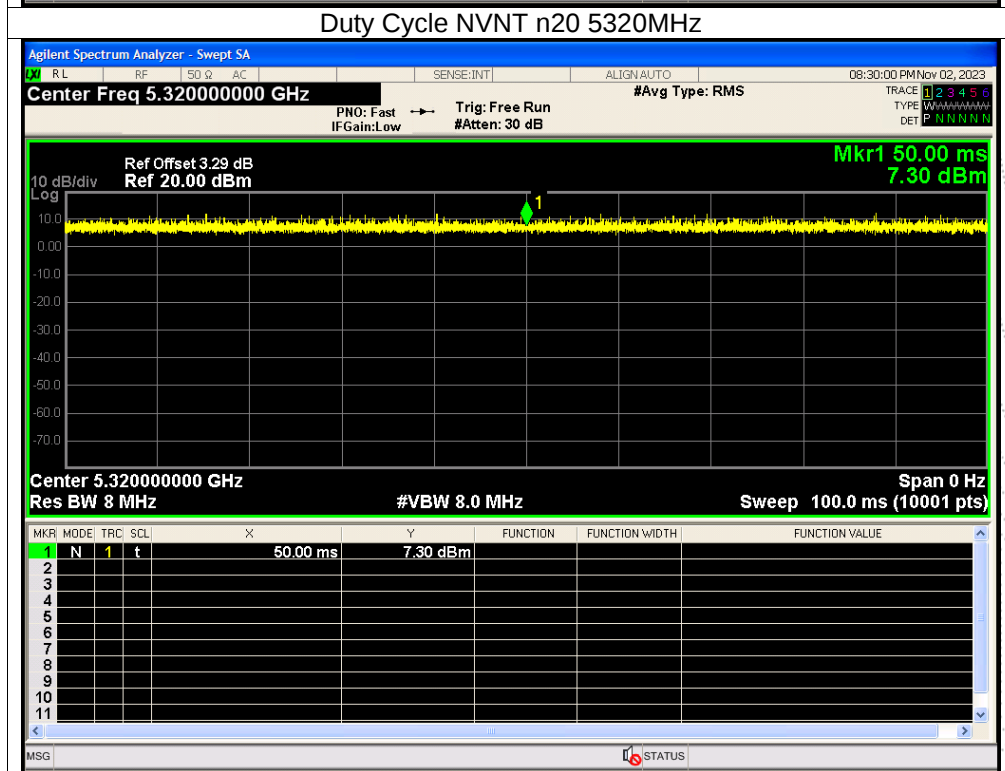 
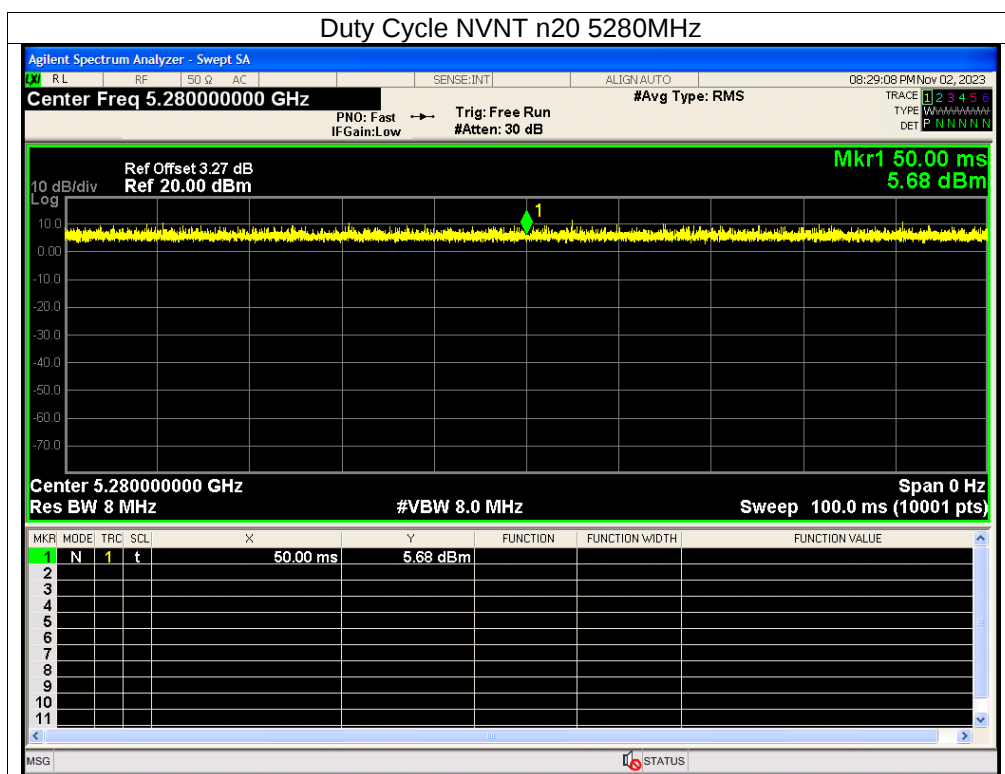 


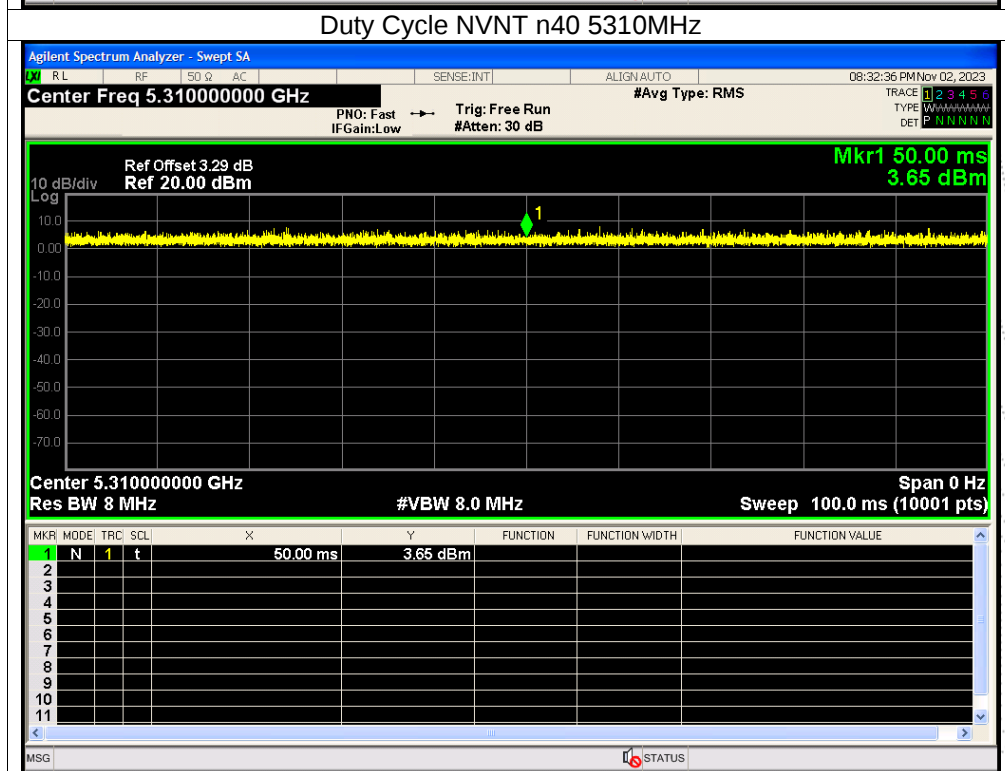           
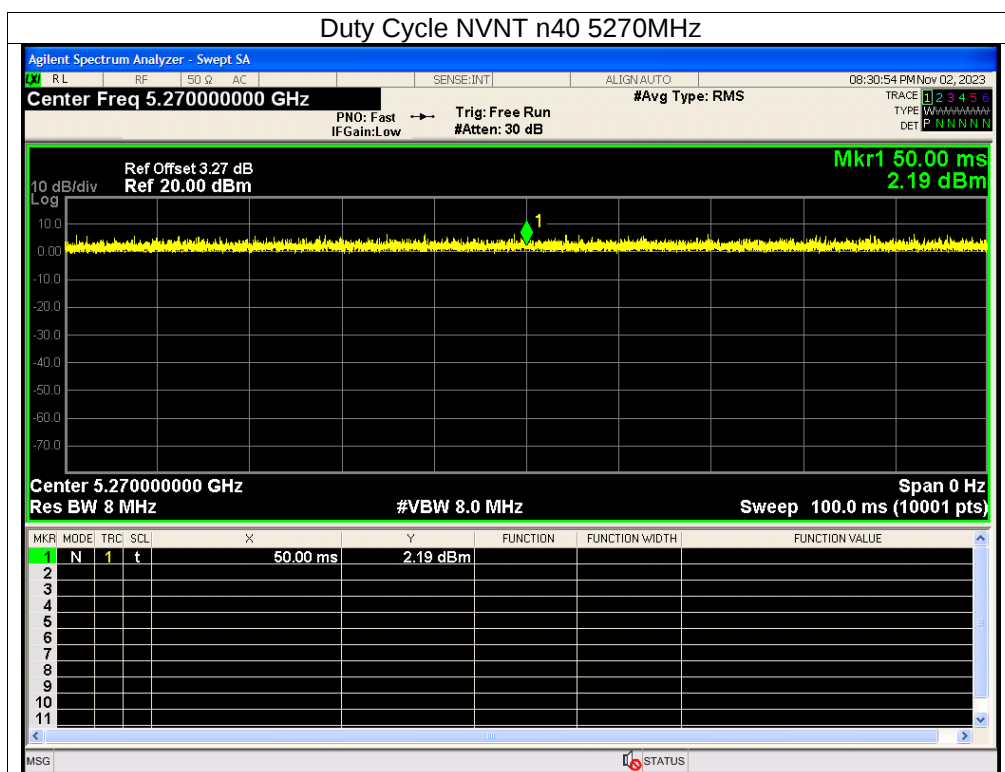 


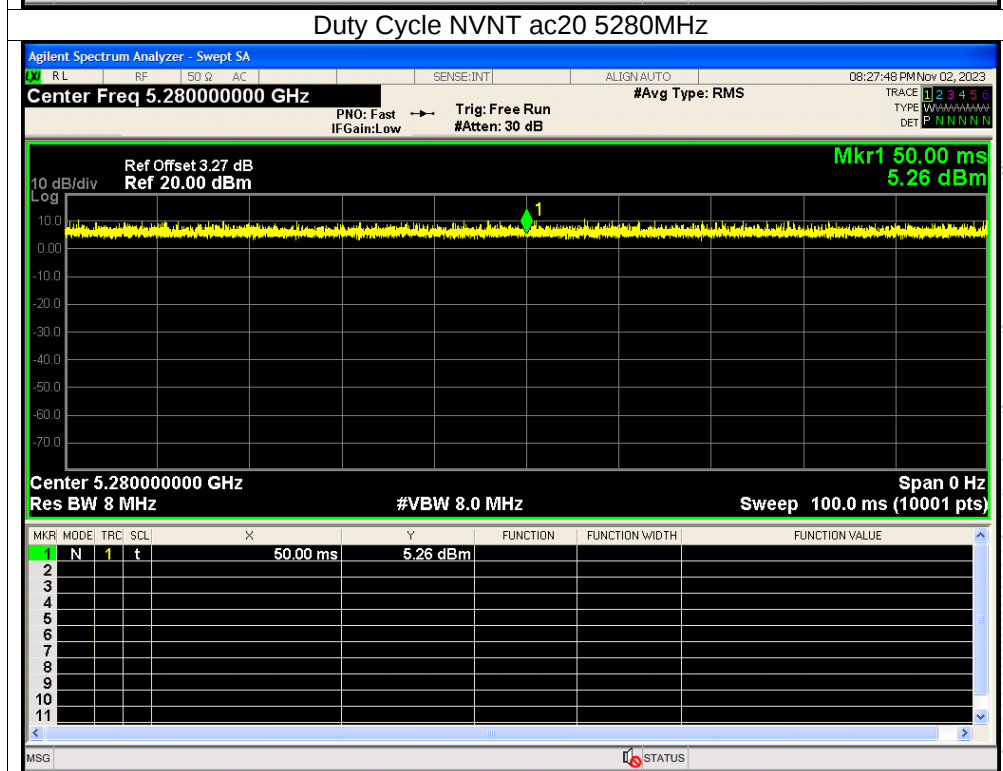 
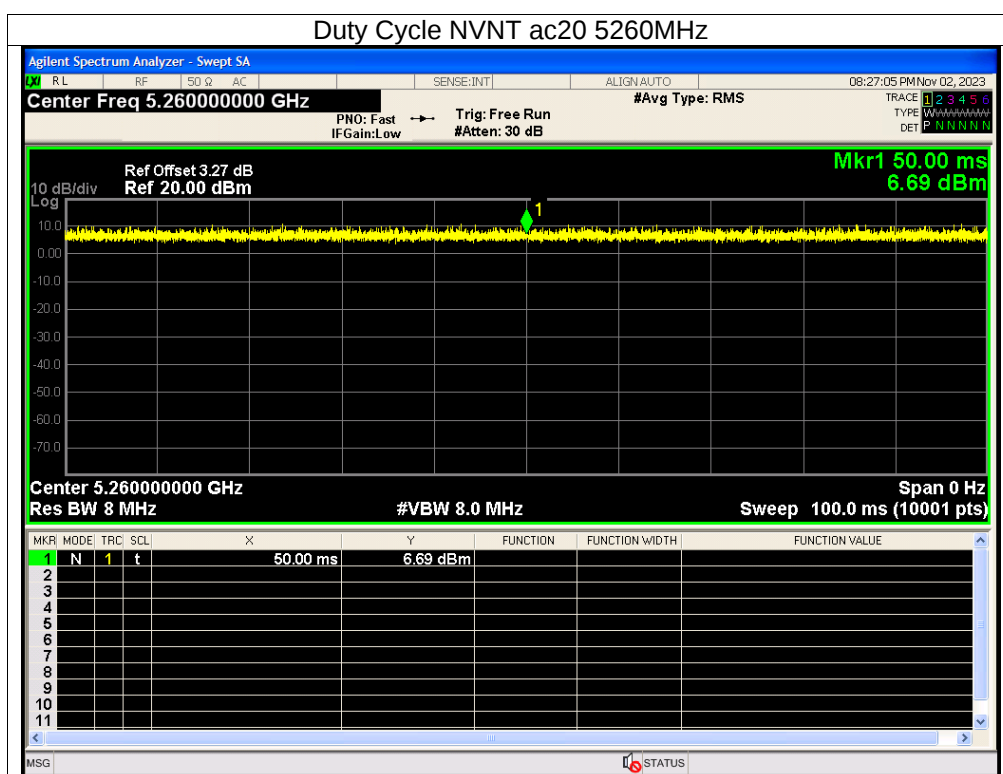 


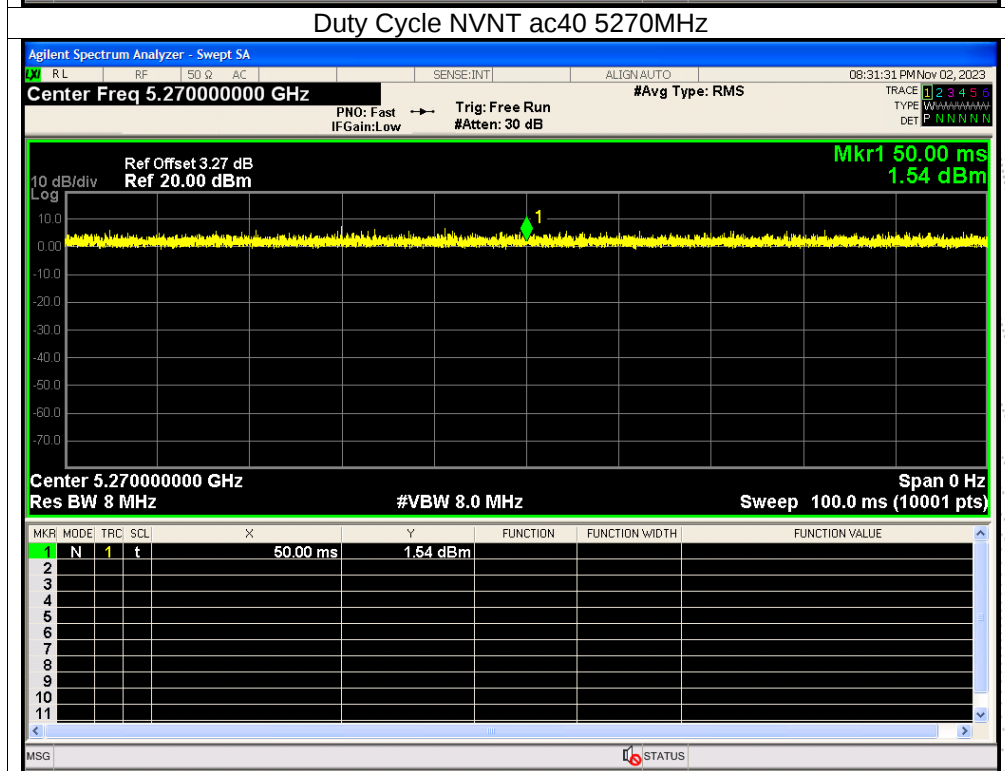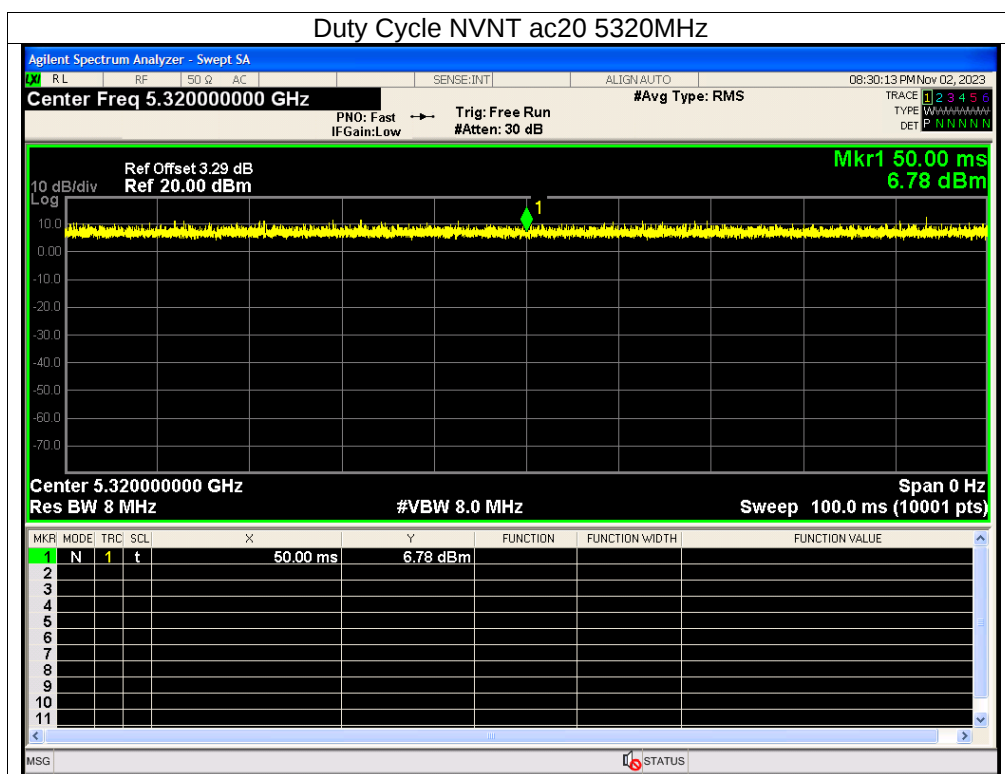

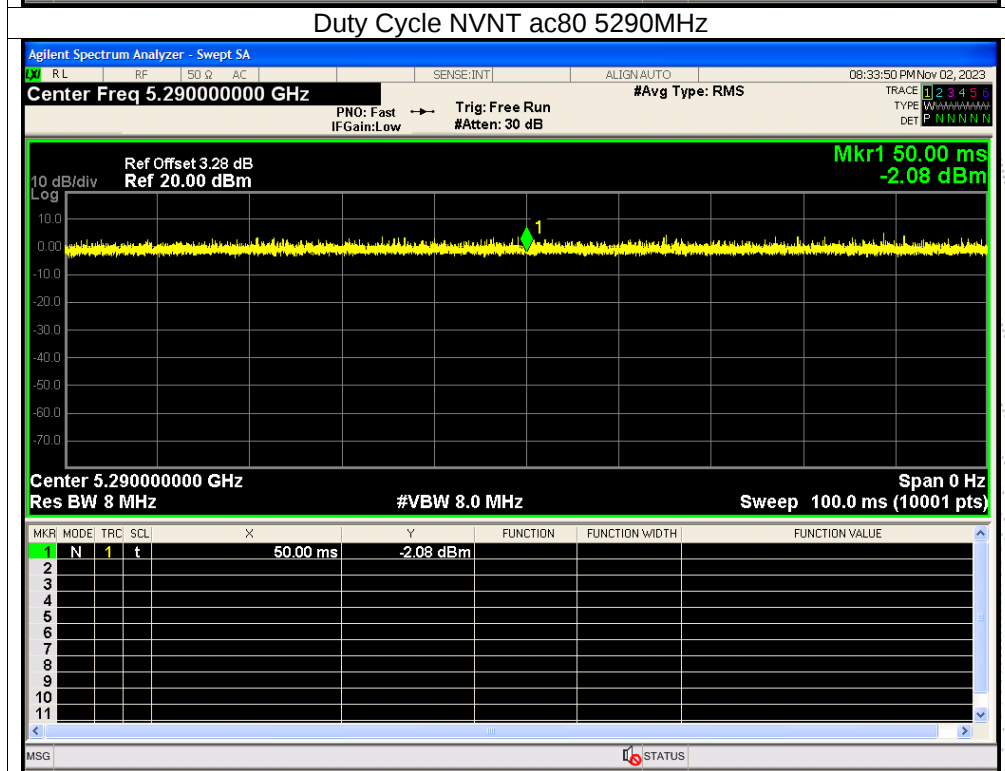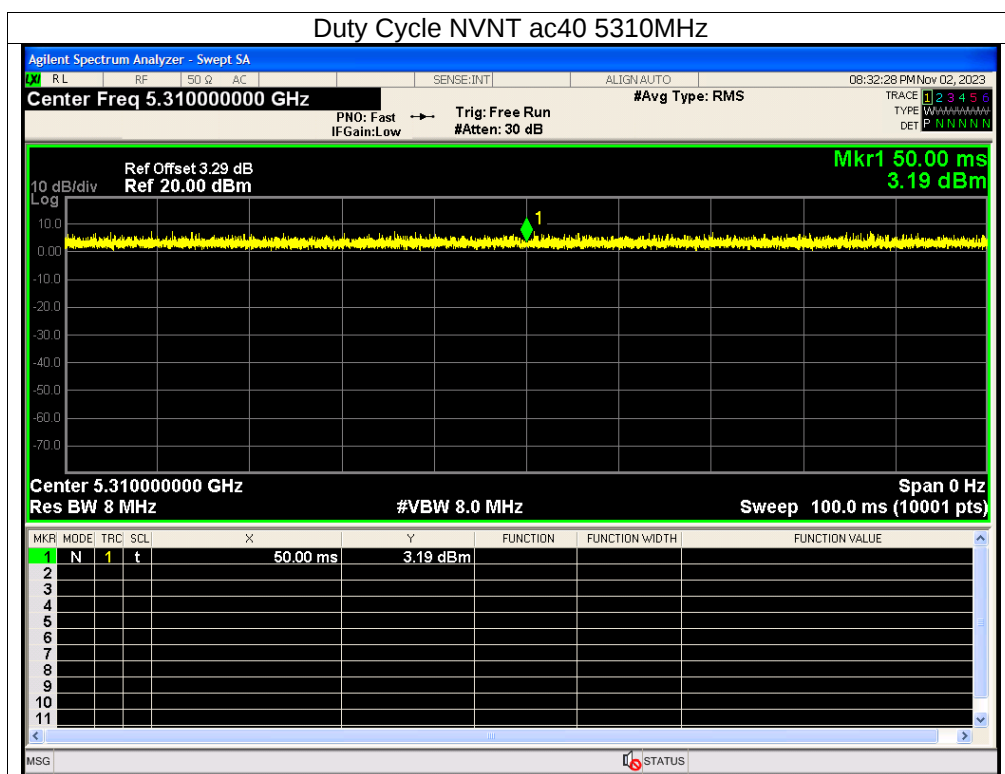


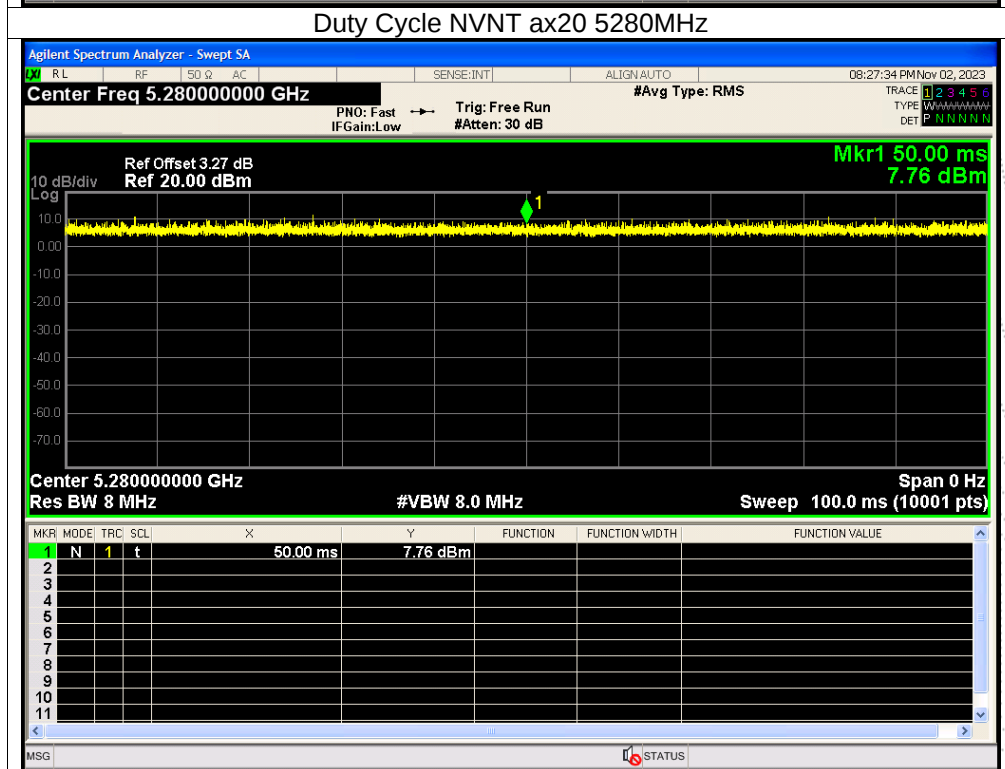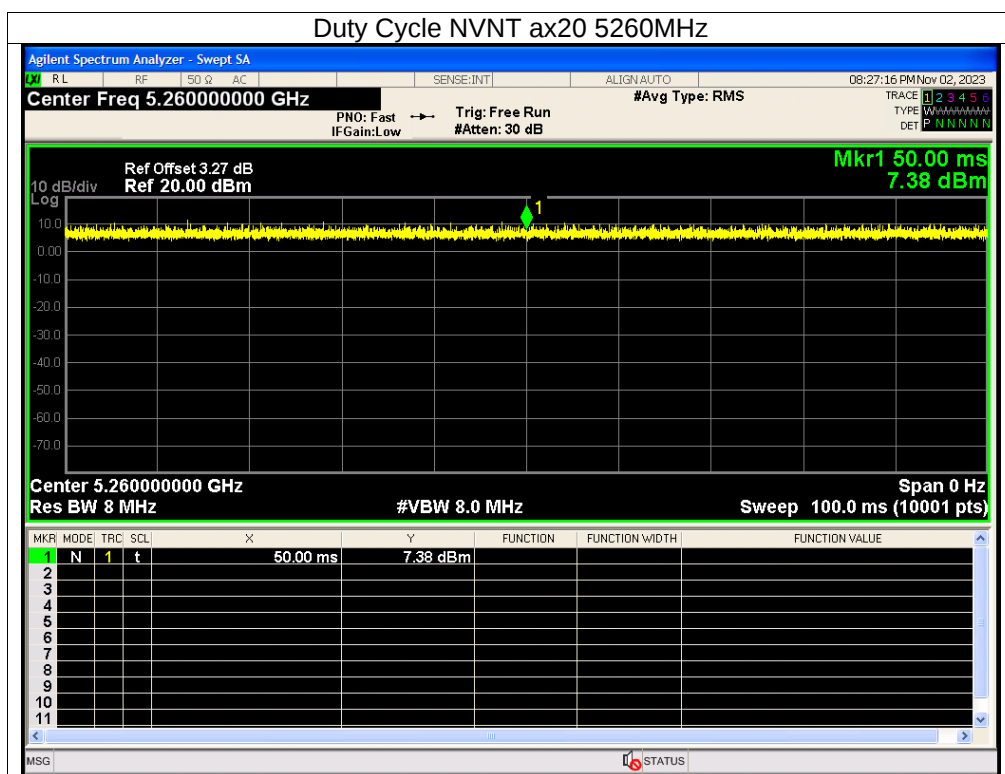


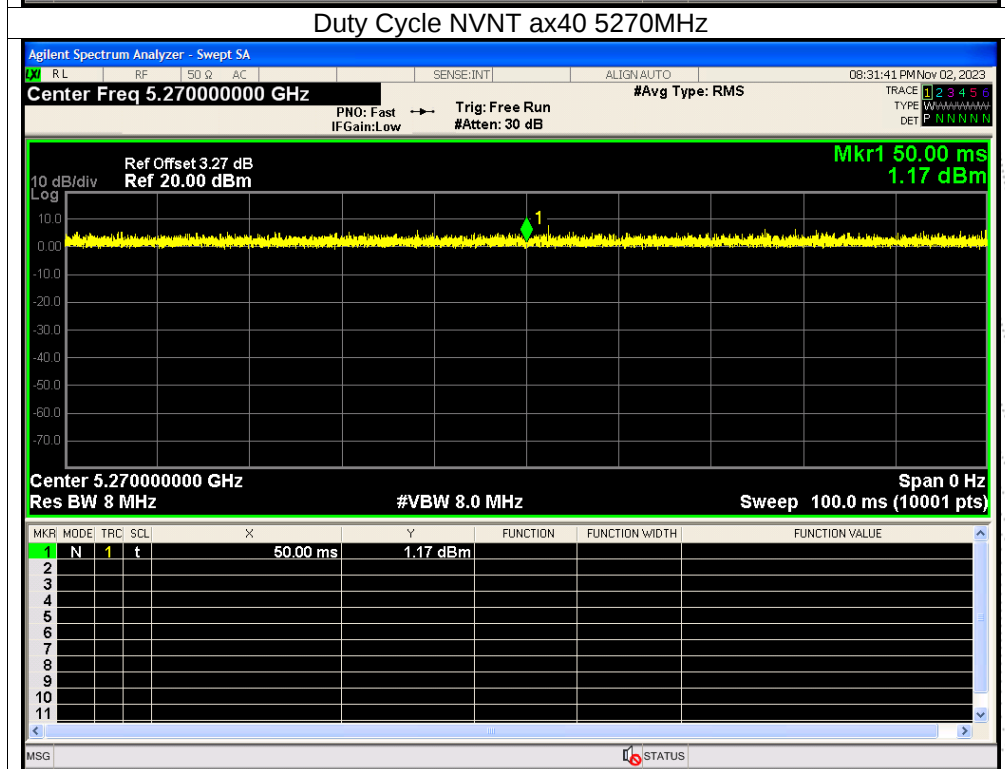
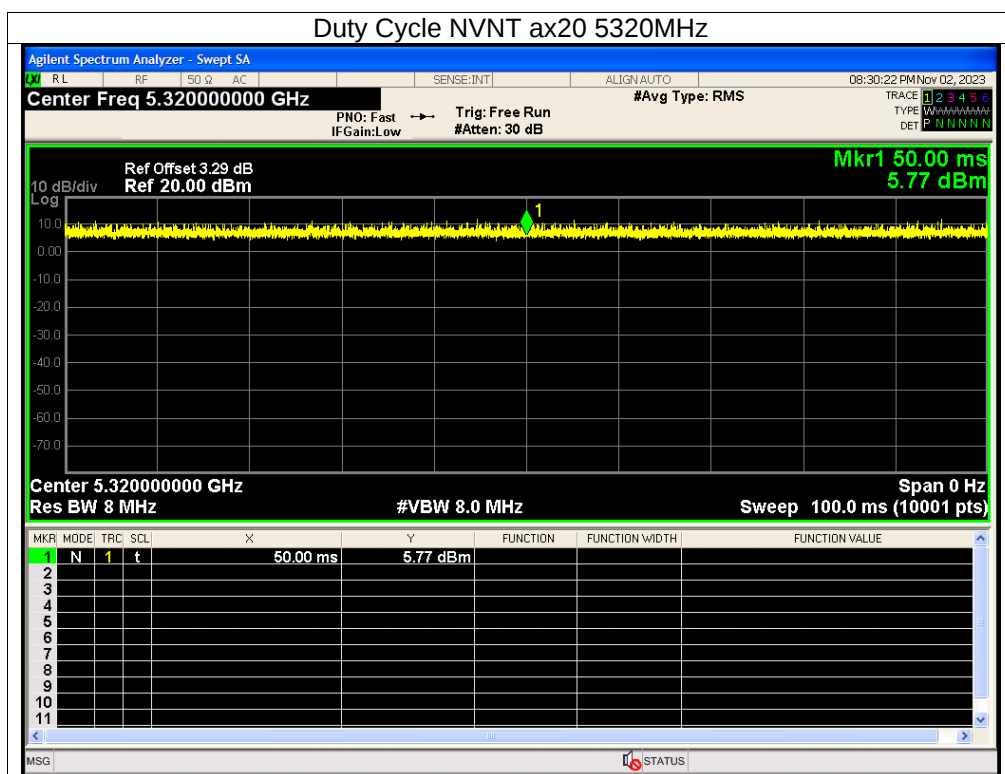


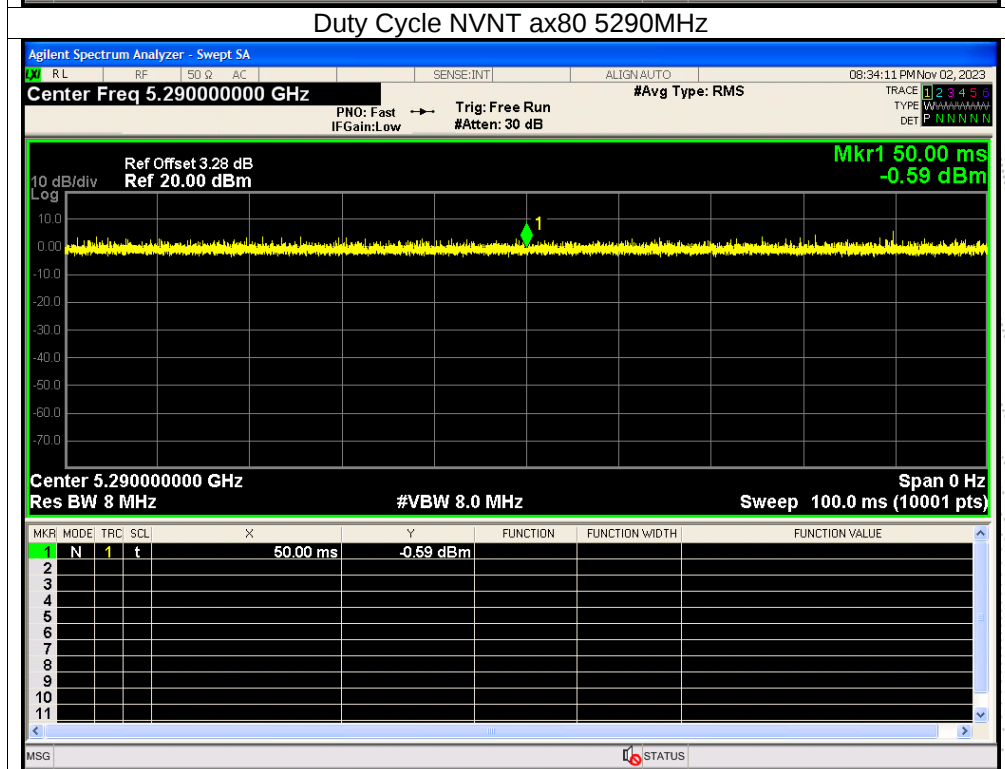
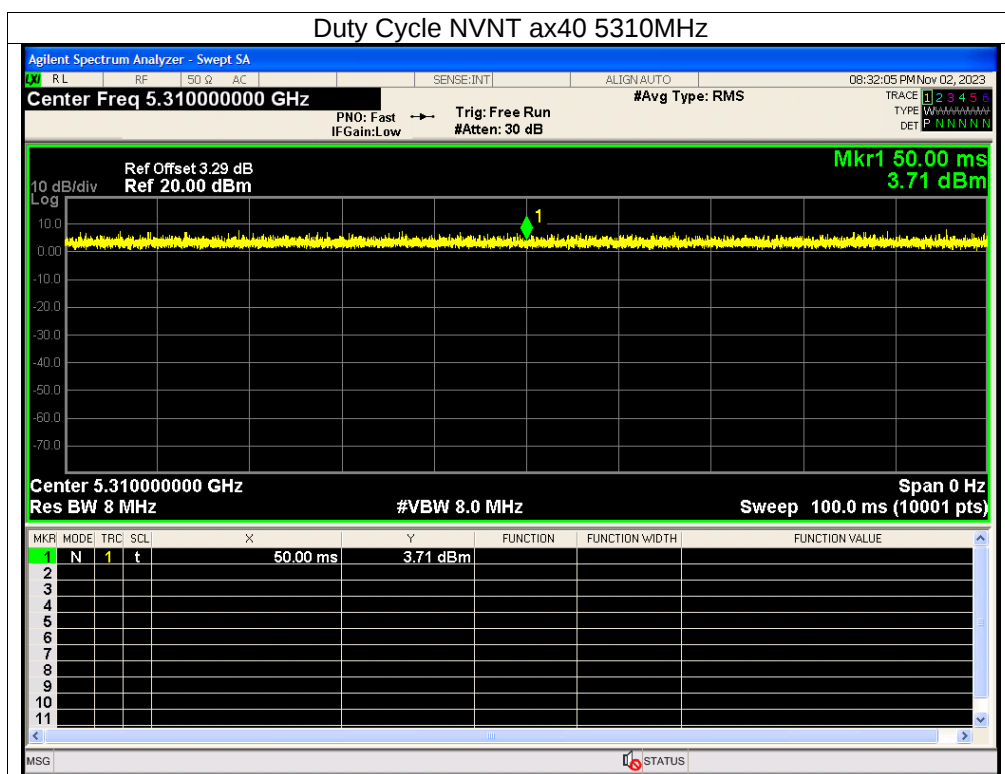




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	AntB	100	0	0
NVNT	a	5280	AntB	100	0	0
NVNT	a	5320	AntB	100	0	0
NVNT	n20	5260	AntB	100	0	0
NVNT	n20	5280	AntB	100	0	0
NVNT	n20	5320	AntB	100	0	0
NVNT	n40	5270	AntB	100	0	0
NVNT	n40	5310	AntB	100	0	0
NVNT	ac20	5260	AntB	100	0	0
NVNT	ac20	5280	AntB	100	0	0
NVNT	ac20	5320	AntB	100	0	0
NVNT	ac40	5270	AntB	100	0	0
NVNT	ac40	5310	AntB	100	0	0
NVNT	ac80	5290	AntB	100	0	0
NVNT	ax20	5260	AntB	100	0	0
NVNT	ax20	5280	AntB	100	0	0
NVNT	ax20	5320	AntB	100	0	0
NVNT	ax40	5270	AntB	100	0	0
NVNT	ax40	5310	AntB	100	0	0
NVNT	ax80	5290	AntB	100	0	0


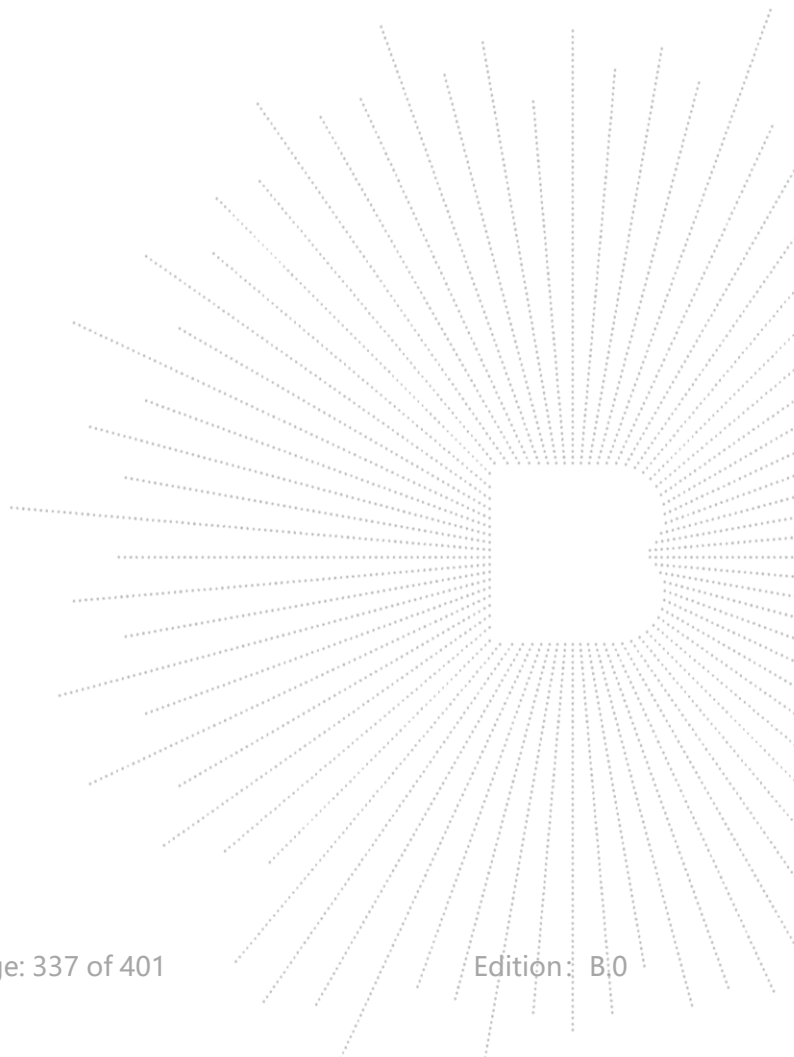 



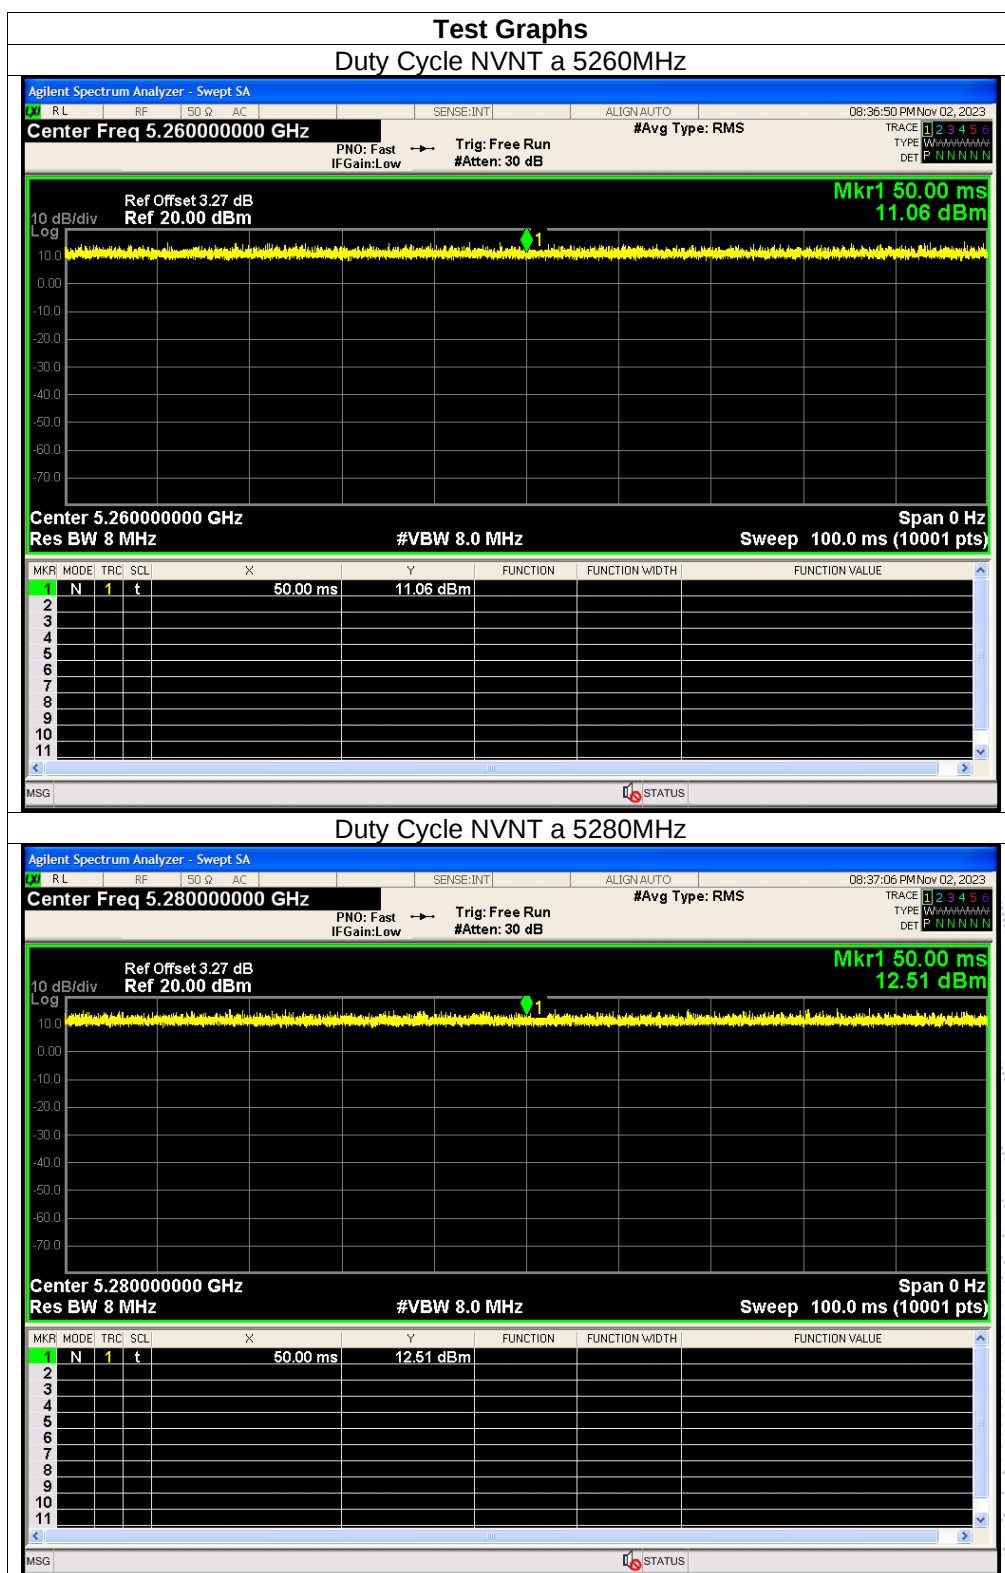 


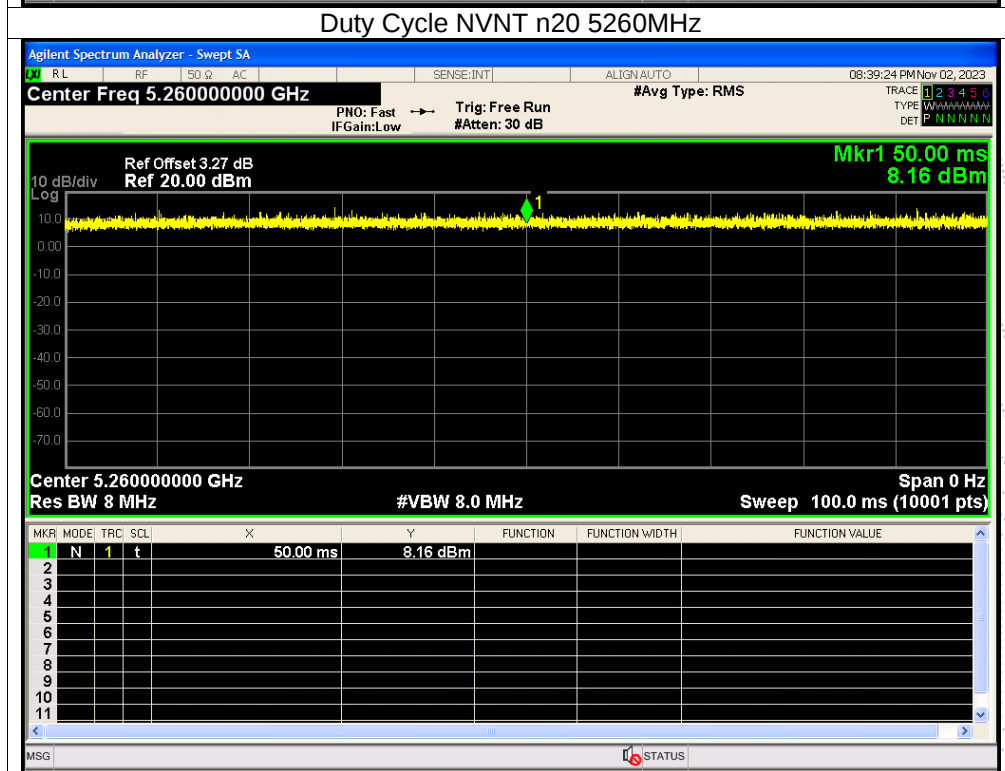 
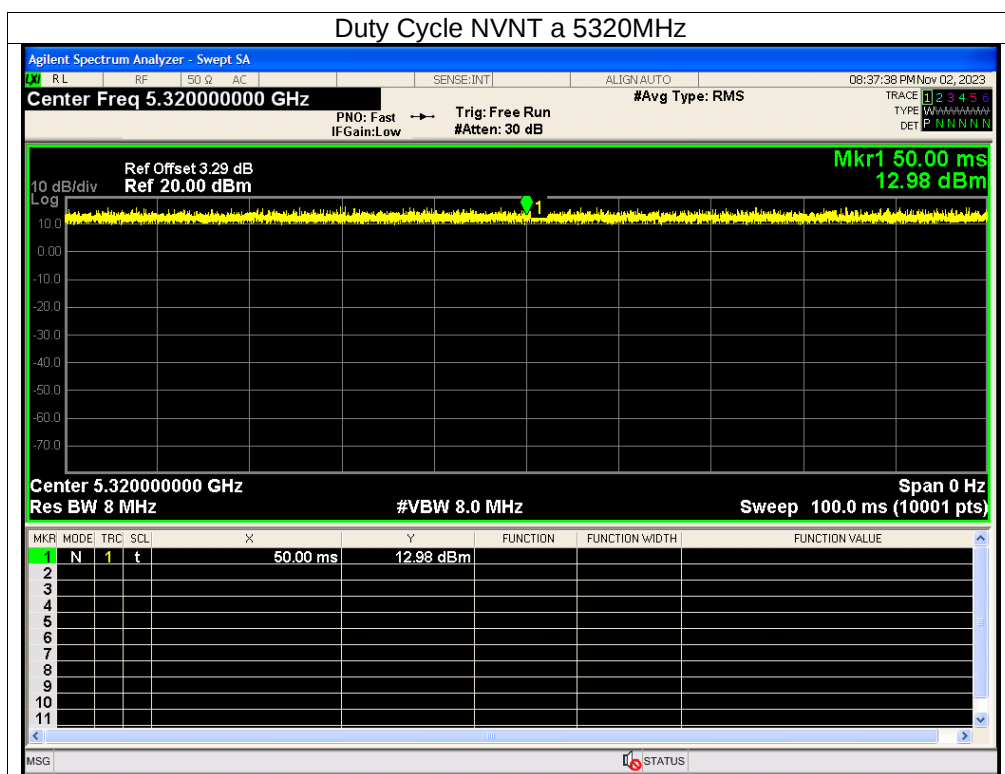 


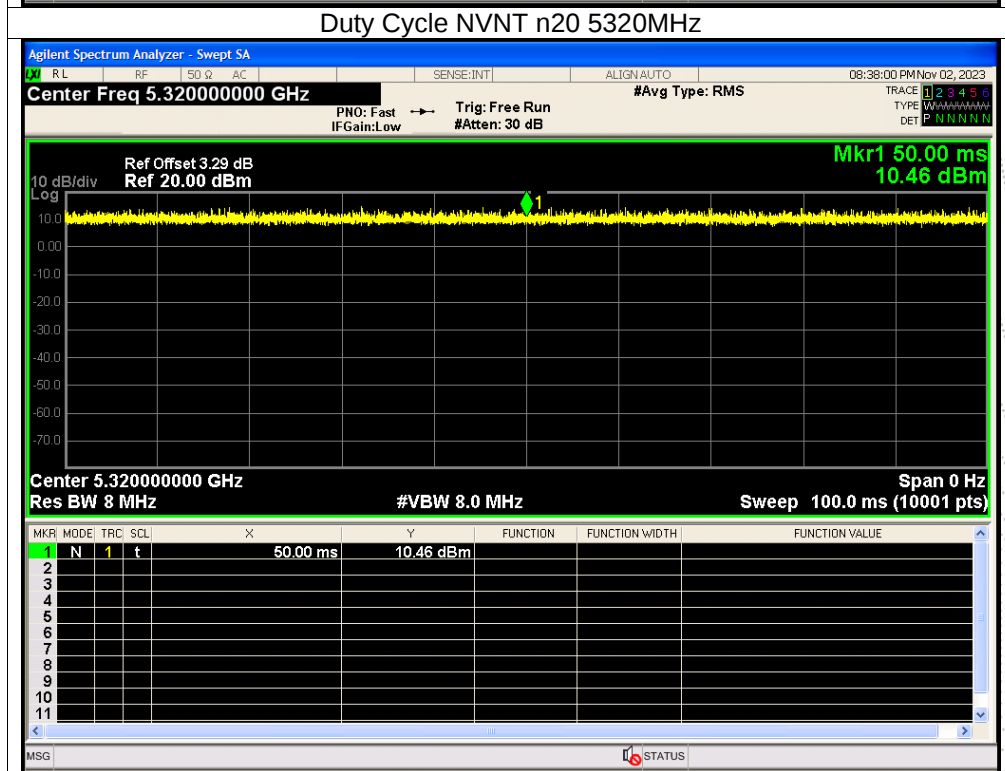 
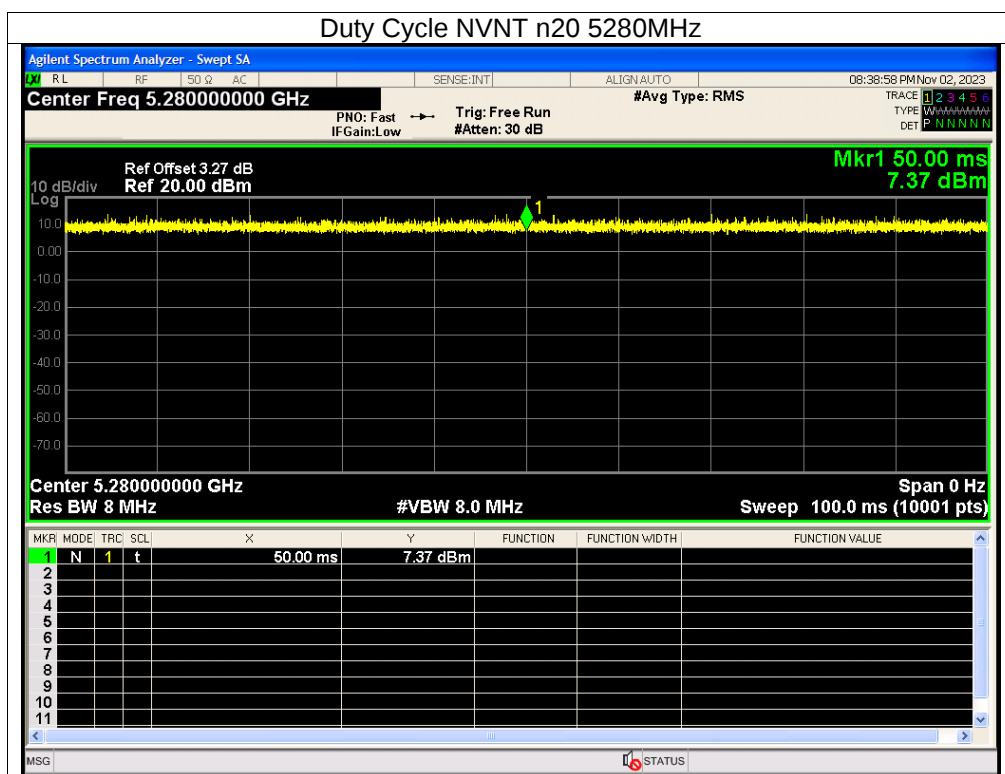 


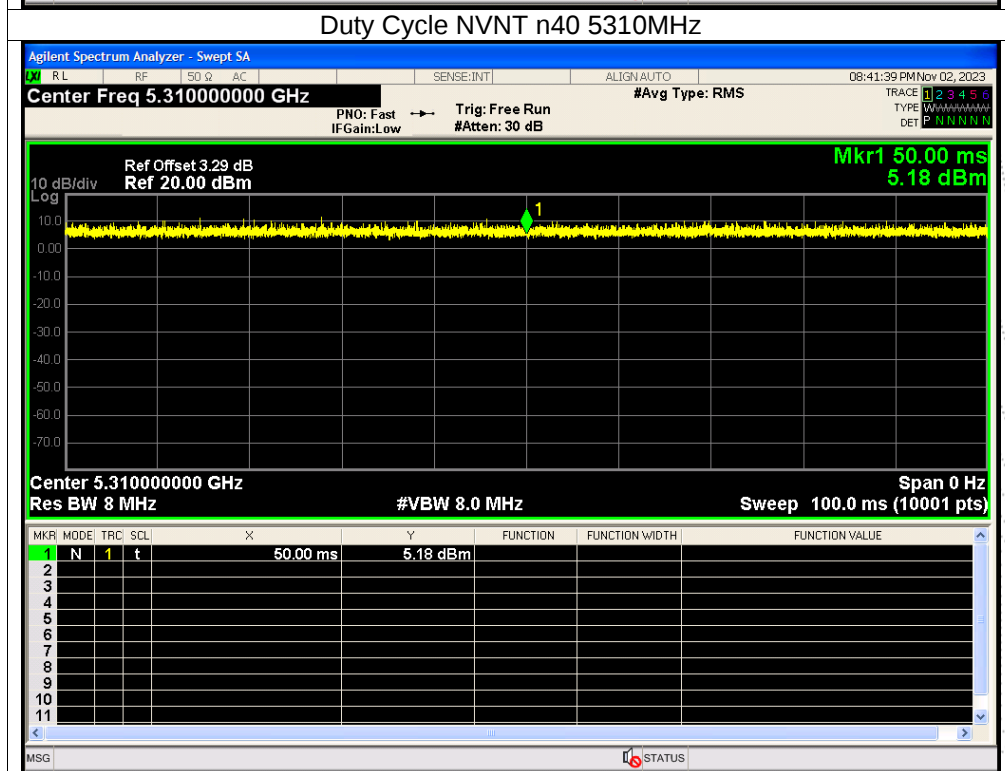           
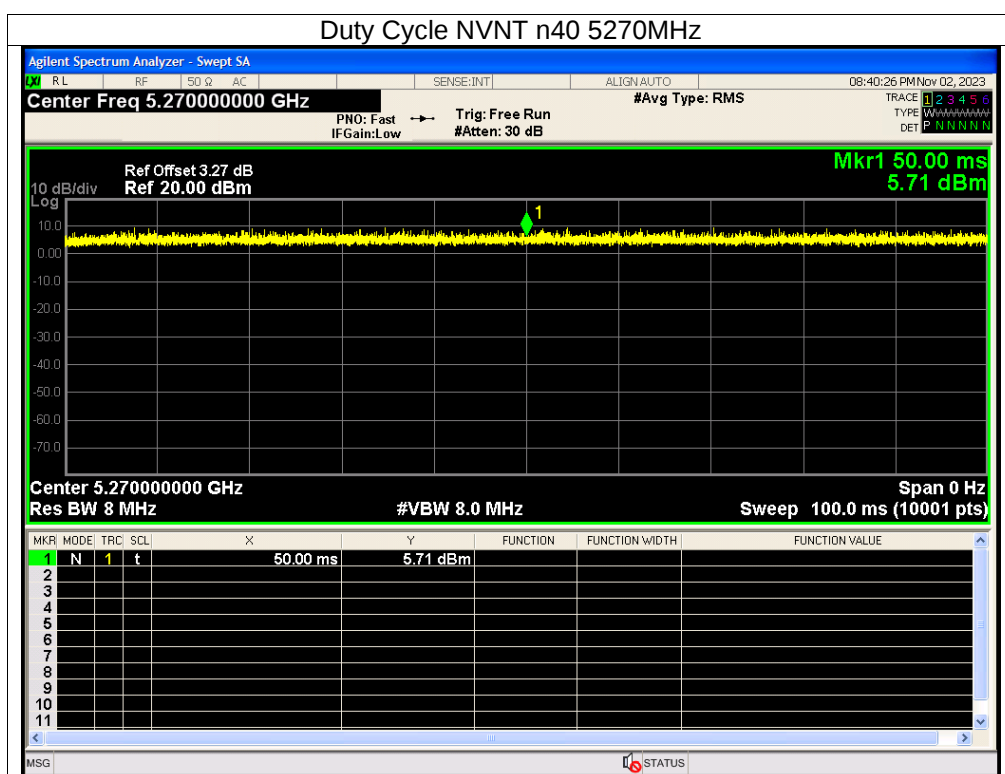 


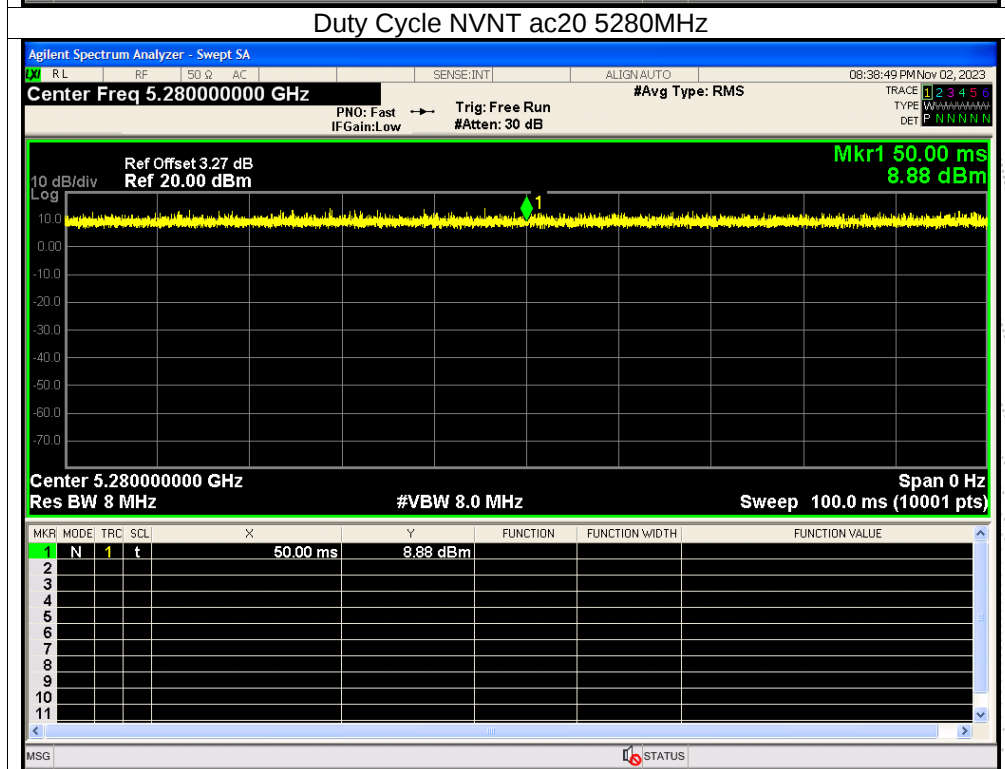 
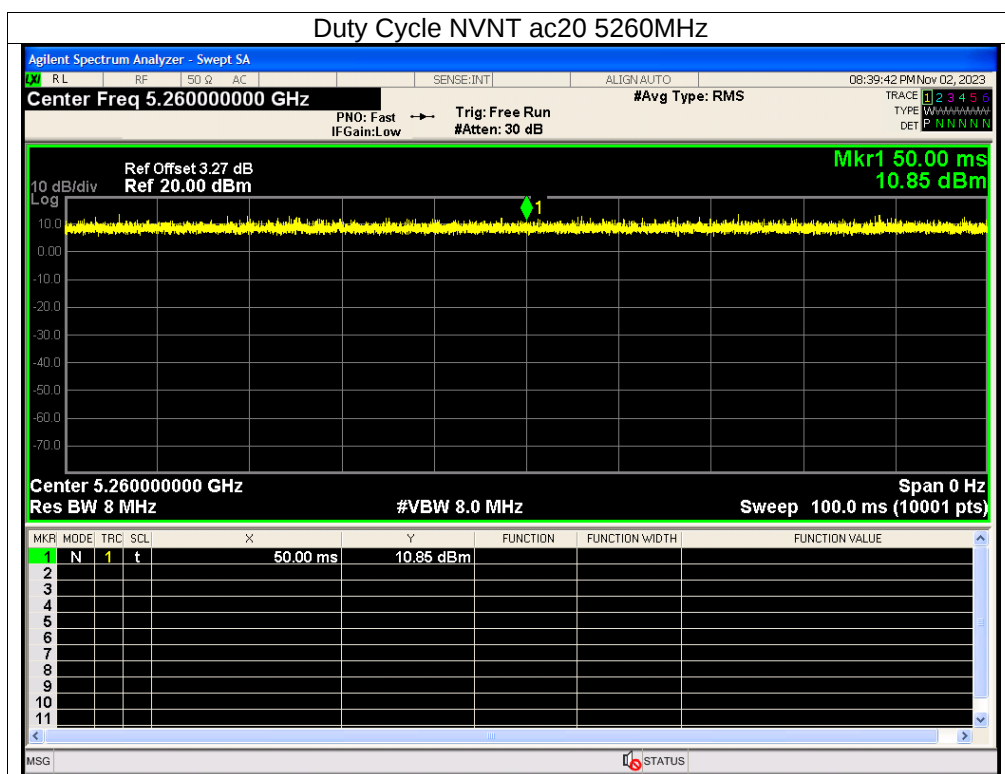 


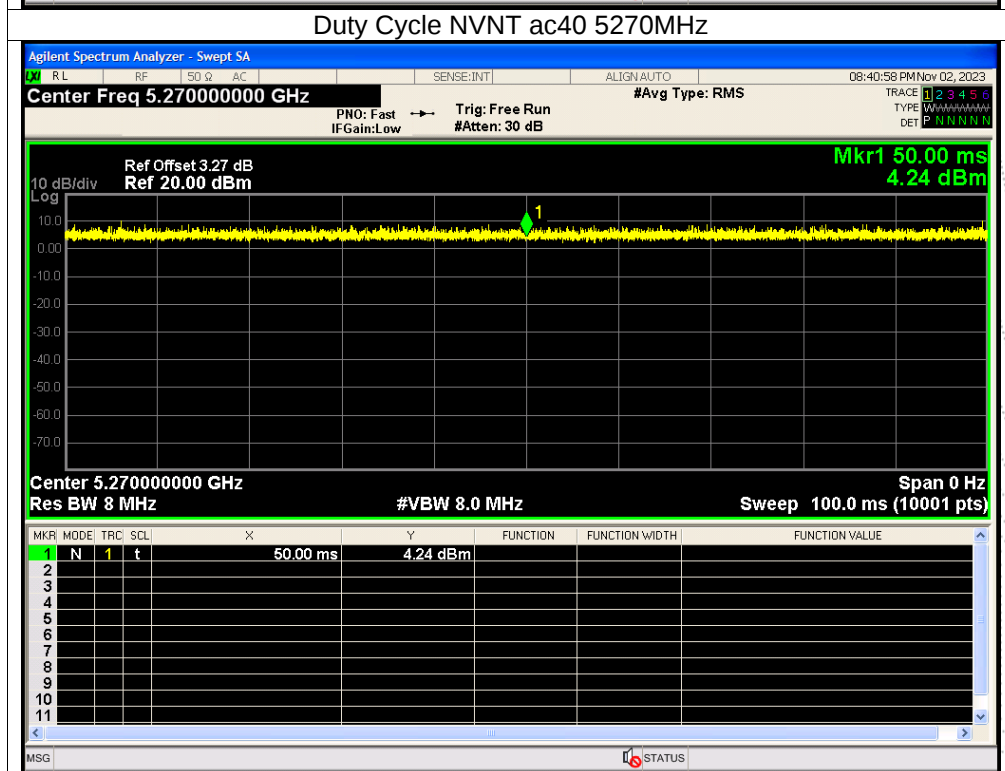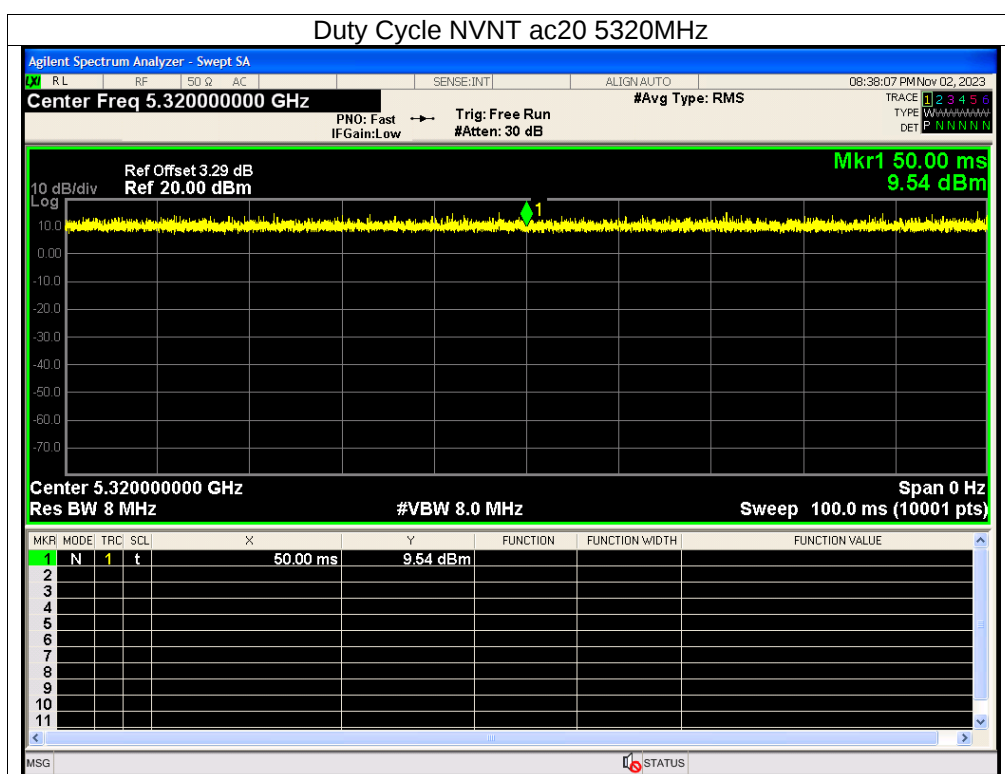

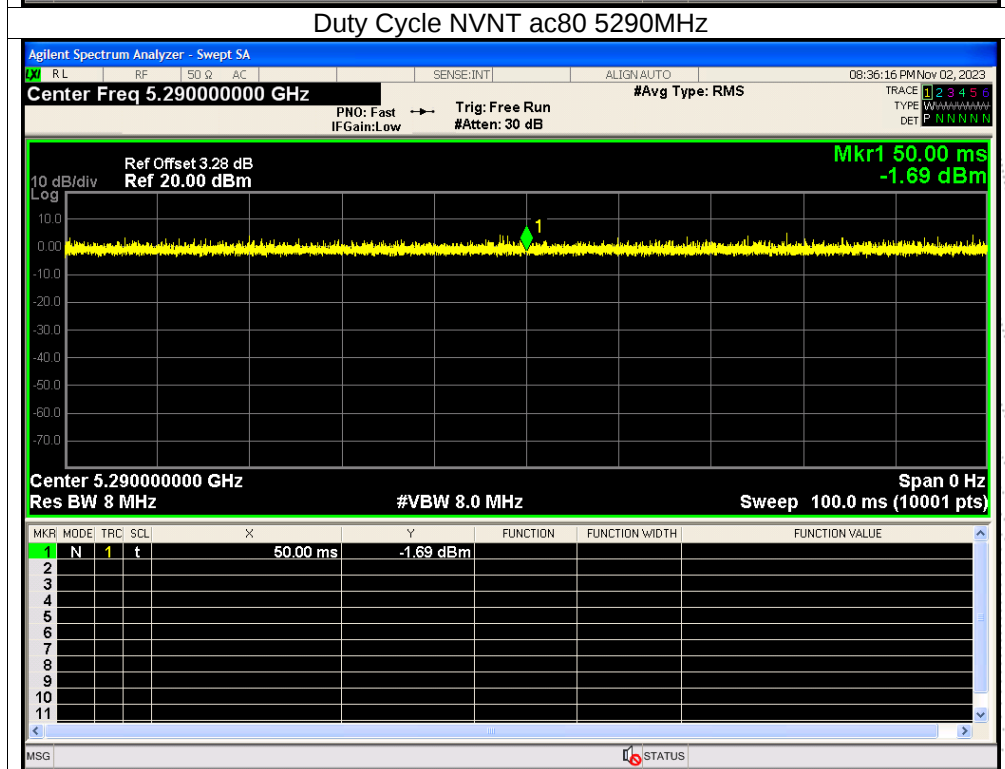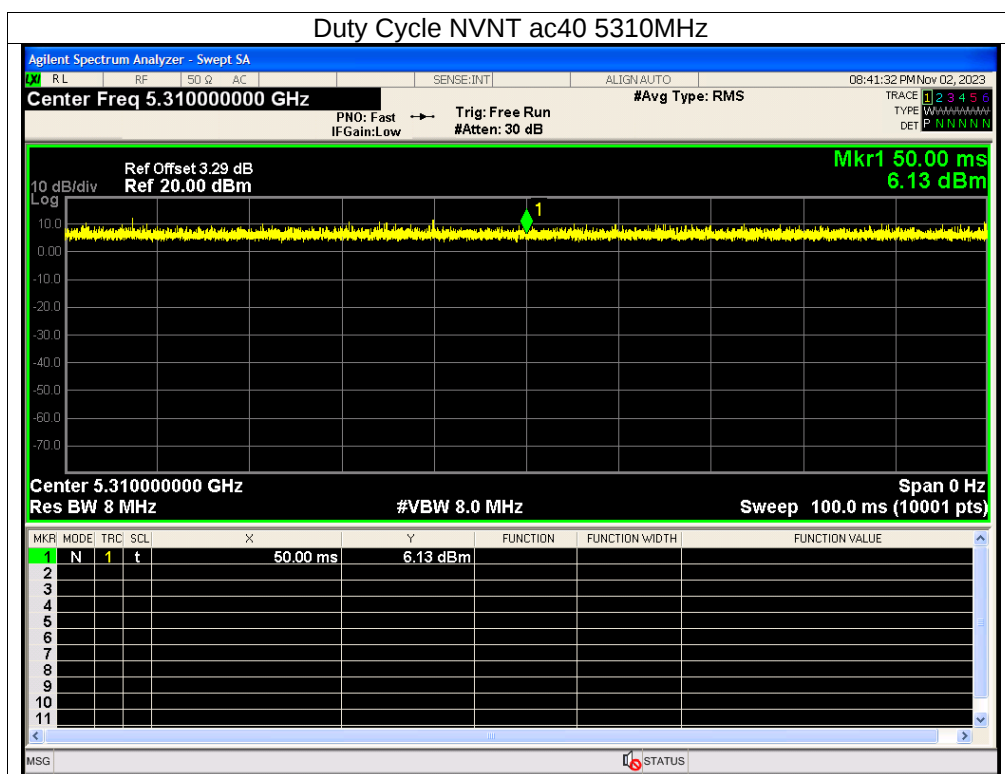

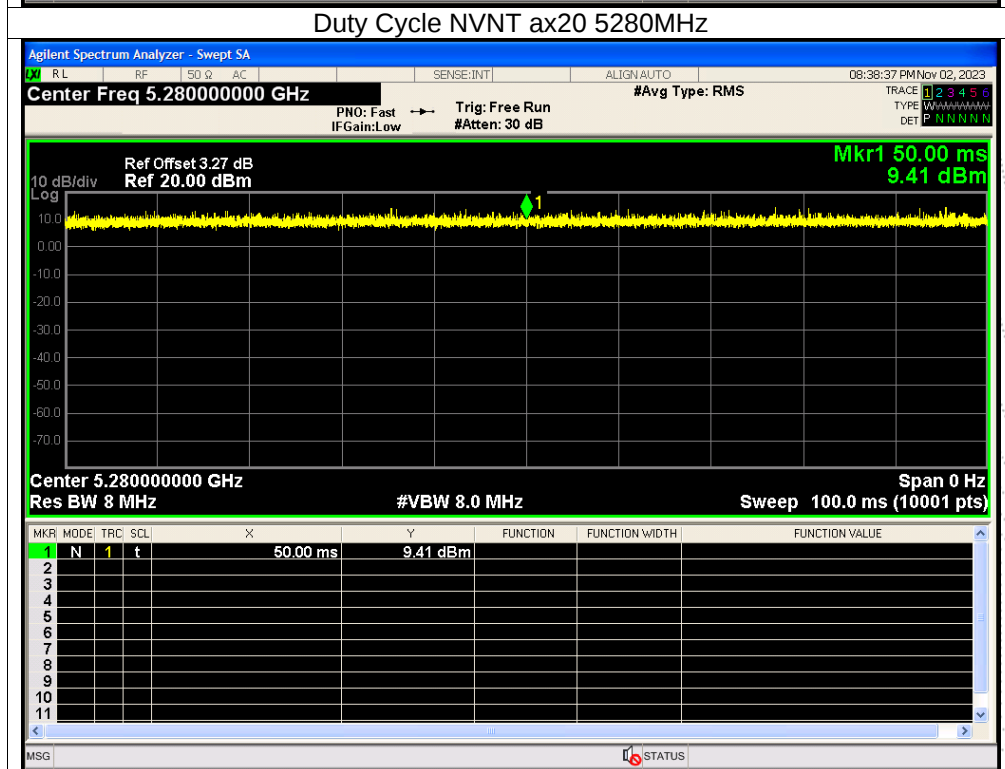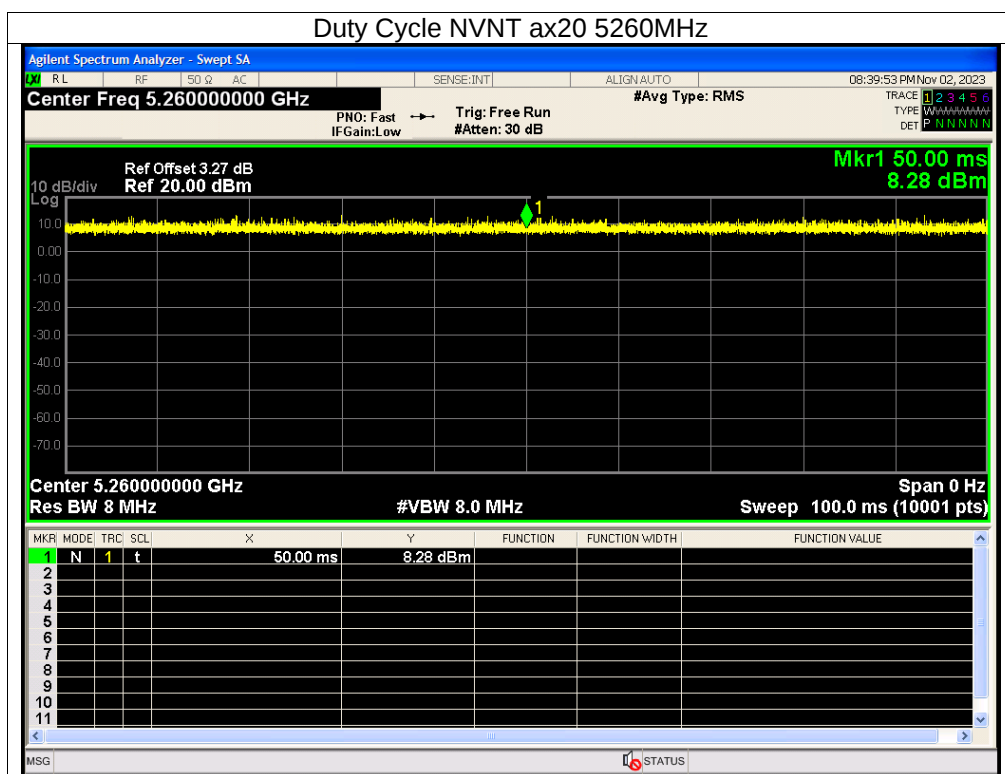

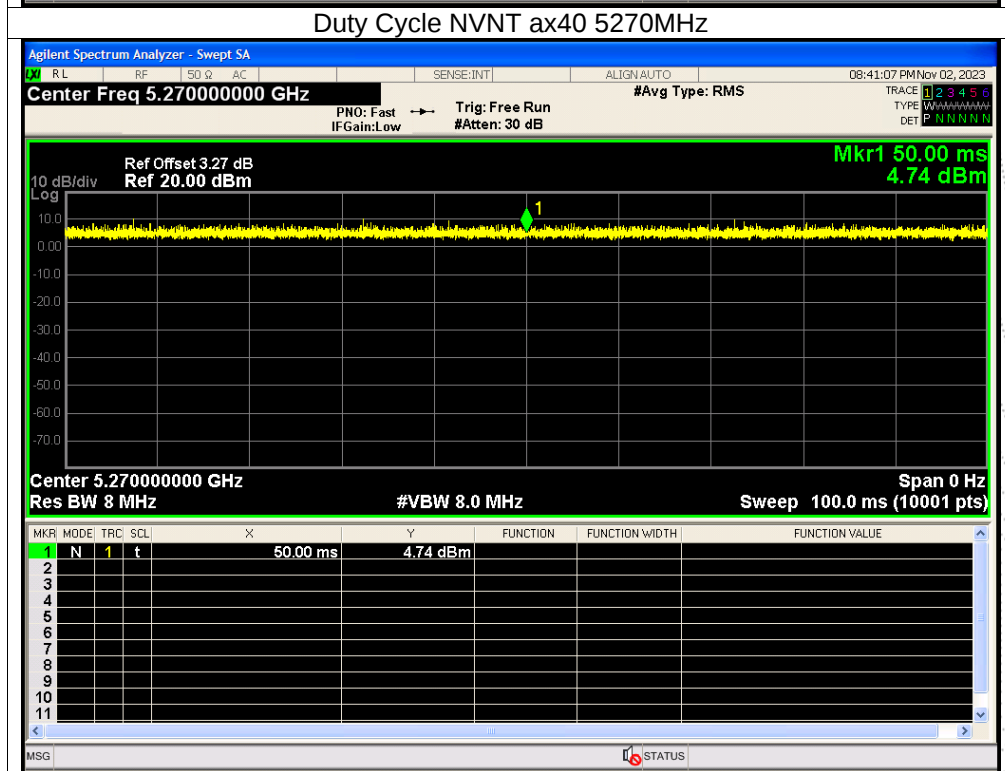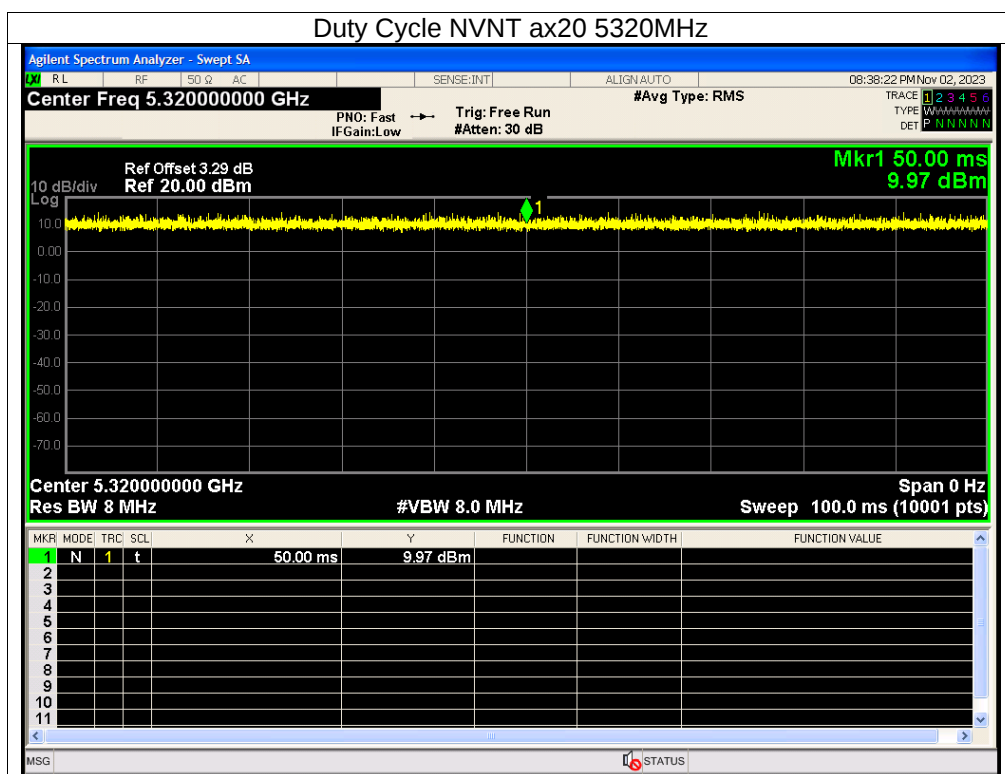

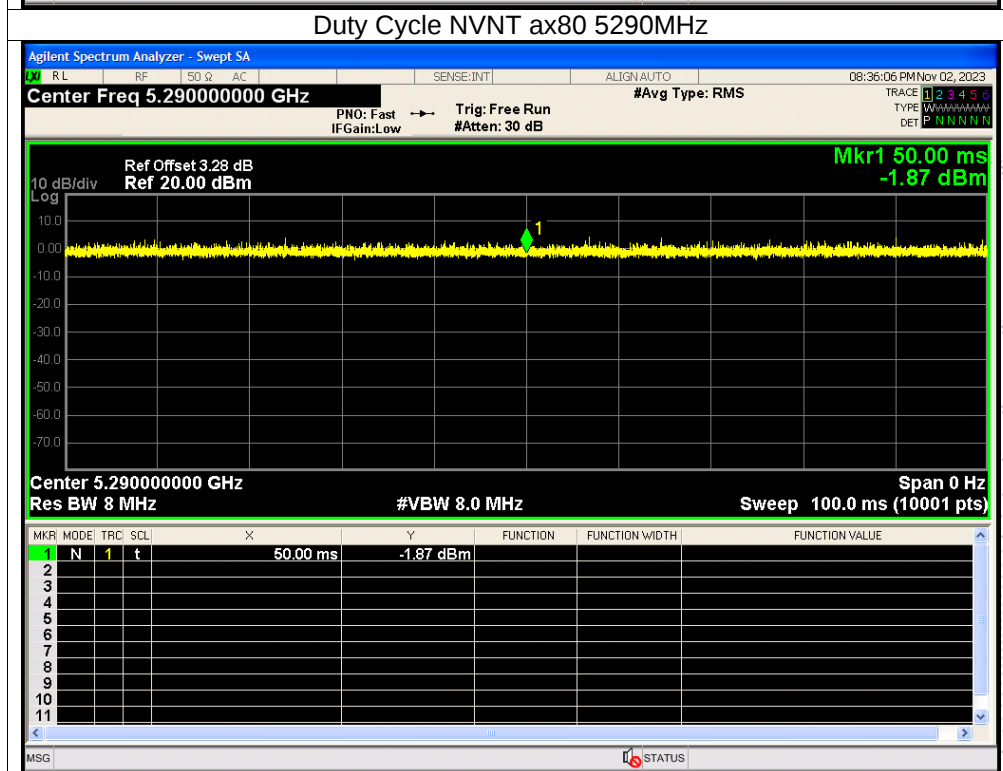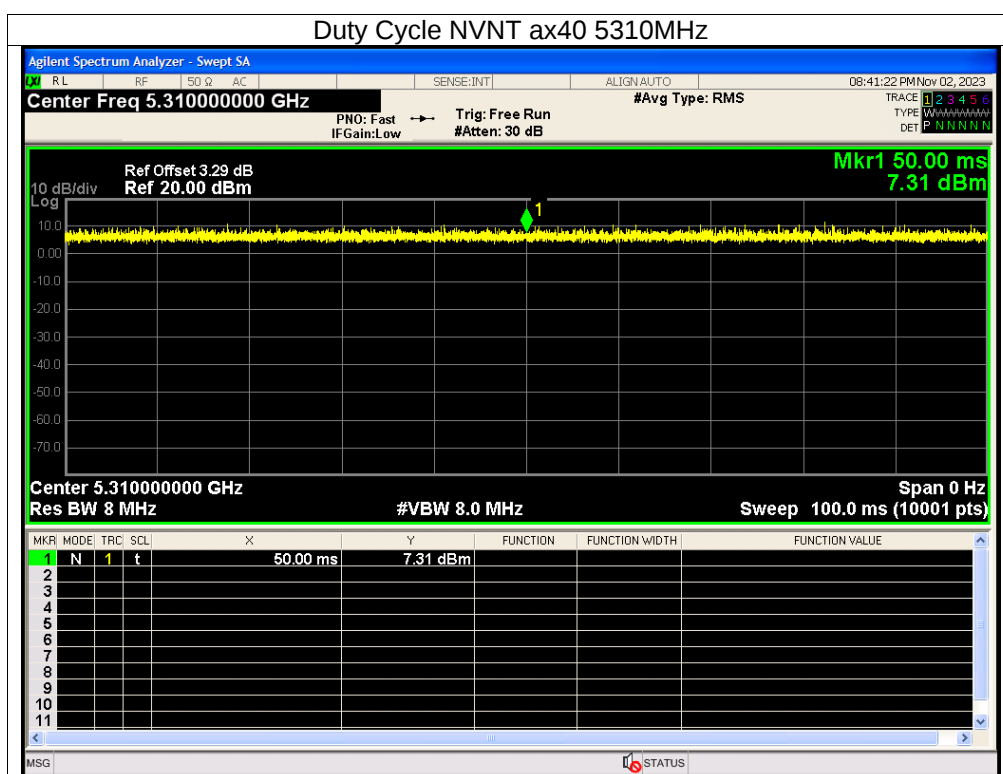

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	AntA	100	0	0
NVNT	a	5580	AntA	100	0	0
NVNT	a	5700	AntA	100	0	0
NVNT	n20	5500	AntA	100	0	0
NVNT	n20	5580	AntA	100	0	0
NVNT	n20	5700	AntA	100	0	0
NVNT	n40	5510	AntA	100	0	0
NVNT	n40	5550	AntA	100	0	0
NVNT	n40	5670	AntA	100	0	0
NVNT	ac20	5500	AntA	100	0	0
NVNT	ac20	5580	AntA	100	0	0
NVNT	ac20	5700	AntA	100	0	0
NVNT	ac40	5510	AntA	100	0	0
NVNT	ac40	5550	AntA	100	0	0
NVNT	ac40	5670	AntA	100	0	0
NVNT	ac80	5530	AntA	100	0	0
NVNT	ax20	5500	AntA	100	0	0
NVNT	ax20	5580	AntA	100	0	0
NVNT	ax20	5700	AntA	100	0	0
NVNT	ax40	5510	AntA	100	0	0
NVNT	ax40	5550	AntA	100	0	0
NVNT	ax40	5670	AntA	100	0	0
NVNT	ax80	5530	AntA	100	0	0

