Odyssey Bluetooth® Headphones

100252-001B





- LED Indicator Light
 Volume Up / Next Track Button
 Power/Multirunction Button
 Volume Down / Previous Track Button
 Micro USB Charging Port
 Smm AUX Port
 Mic

Bluetooth specifications: Bluetooth® version 5.0 Support profile: A2DP,AVRCP,HFP,HID,AVCTP,AVDTP,SPI Transmission distance: up to 10m (This may vary based on environmental factors or the type of Bluetooth® device being

Built-in battery: 350 mAh Lithium Battery USB Recharge voltage: 3,7V Frequency Response: 20hz-20Khz Sensitivity: 100dB ± 3

PACKING LIST

- Bluetooth® Headphones
- USB Charging Cable
 3.5mm AUX cable
- Storage Pouch
 User Manual Gift Box

The Bluetooth remains OF

BLUETOOTH® OPERATION

- Please ensure that the Bluetooth function has been turned. on in the settings of your Bluetooth enabled device,
- Turn the headphones on by pressing the power/multifunction button until the LED indicator kight begins to flash. The LED indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode.
- 3. "GEMLINE HP" will appear on the Bluetooth device list, select "GEMLINE HP" to establish pairing.
- 4. When you want to play audio from another Bluetooth device, disconnect the headphones from the original device and follow steps 1-3 to re-pair the headphones with a new Bluetooth enabled device.

BUTTON CONTROL

- Power On/Off: Press and hold the power/multifunction button for approximately 4 seconds. Play/Pause: Press the power/multifunction button once to

- Volume Up/Next Track: Press " \ " button once to increase
- volume, press and hold for next track.

 Volume Down/Previous Track: Press "▽" button once to decrease volume, press and hold for previous track,

- decrease volume, press and hold for previous track, Hands-free Phone Use: Press the power/multifunction button once to answer an incoming call. While on a call, press the power/multifunction button once to end the call. Reject a call: Press and hold the power/multifunction button to reject a call.

AUX PLAYBACK OPERATION

- Connect the headphones to a smartphone, audio device, or laptop with the 3.5mm AUX cable (included).
- The next/previous song button can only be adjusted on the device that is connected through the 3.5mm AUX cable.

1 2 3 4 前陸

CHARGING THE HEADPHONES

charging The headerholes

1. When the battery is low, please charge via the included USB cable. The charging time is approximately 2-3 hours, and provides up to 15-16 hours of continuous operation.

(BC)

The LED indicator light will be red during charging and will turn off once it is fully charged. When the battery is low, the LED indicator light will flash red.

WARNING

- WANNING

 1. Do not disassemble, repair, or modify the headphones,
 2. Do not place product in or neer fire to avoid danger, as it
 2. Do not place product in or neer fire to avoid danger, as it
 3. Avoid storage at extreme temporatures, this can shorten the
 battery life and may affect the headphones.
 4. Keep the headphones of y and do not store the headphones
 in damp areas to avoid damage to the headphones.
 5. Avoid dropping the headphones as it may cause damage the

- product.

- KIND REMINDER

 1. To prolong the headphones life span and to avoid hearing damage, please do not laten to music under high volume for long periods of time.

 2. When an error occurs with eadphones, please turn off the headphones and restart it to troubleshoot.

 3. When the headphone power is low, the Bluetooth range may be affected. Please charge the headphone to avoid
- disruptions during use.

PROBLEM	TROUBLESHOOTING METHOD
Unable to pair the headphones with a mobile device	Inspect whether the headphones are searching is a Bluetoth enabled device to connect to. If not, restart the headphones, 2, Difficulty in searching and connecting to a desire device can be affected if multiple devices are equipped, turned on, and in range for Bluetoth connectivity. Please turn off or disable the Bluetoo function on the other devices. 3. The power of the battery is insufficient, pleases

TROUBLESHOOTING METHOD PROBLEM Inspect the distance between the headphones and Bluetooth enabled device, it may exceed the fuelooth transmission range. Inspect if there is an obstacle between the eadphones and the Bluetooth enabled device. The power of the battery is insufficient, please either the headphones. ime to time Inspect the volume of the connected headphones Bluetooth enabled device and adjust the volume The sound is low or The power of the battery is insufficient. please arge the headphones.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc, and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective

The power of the battery is insufficient, please recharge the headphones.
 Restart the headphones.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the foll owing two conditions: (1)this device may not cause interference, and(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables auxappareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes ;(1) l'appareil ne doit pas produire de brouillage, et(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillag est susceptible d'en compromettre lefonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide of the PCC Nation. These finits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

Changes or modifications not expressly approved by the party creatings of modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure
- requirement. The device can be used in portable exposure condition without restriction.

5 8 封底 6 7

76.2mm