中文

使用说明书 **M97**

产品结构图 耳机指示灯 功能键(触摸) 充电仓显示屏 像佩戴耳夹一样将夹耳式耳机央在耳廊上。 佩戴好后调整耳机的位置直至调整到音效

最为清晰的位置。

产品操作介绍

功能	操作	指示灯	提示音
配对名	M97		
开机	耳机在充电仓内情况下,取出耳机自动开机/耳机关机状态下,长按触摸键3秒即开机	红蓝灯交替闪	Power on/开机
关机	耳机放入充电仓内即自动关机/耳机开机状态下 ,长按触摸键5秒即关机	红灯长亮1秒后灭灯	Power off/关机
左右耳机配对	左右耳机开机后自动进入配对模式	左右耳配对成功后,主耳蓝 红灯交替闪烁,副耳灯光熄 灭	Connected/连接成功 配对中/Pairing
切换中英文 提示音	未连接智能设备情况下,连击任意左/右耳触摸 键2次,进行语言切换。出厂默认英文	/	English/中文
智能设备连接	当双耳配对成功后,自动进入待连接状态, 此时打开智能设备的蓝牙列表搜索点击 "M97"进行连接,耳机与智能设备连接 成功后,有提示音,且耳机指示灯熄灭	左右耳灯光熄灭	Connected /连接成功
切换音乐/ 游戏模式	耳机与设备连接的状态下连击左/右耳触接键 4次,进行模式切换,出厂默认音乐模式。	/	音乐/游戏模式 MUSIC/GAME MODE
播放/暂停	音乐播放器启动后,双击左/右耳机触摸键	/	/
上一曲	音乐播放器启动后,连击左耳机触摸键三次	/	/
下一曲	音乐播放器启动后,连击右耳机触摸键三次	/	/
增加音量	音乐播放器启动后,单击右耳机触摸键	/	最大音量提示(咚)
减小音量	音乐播放器启动后,单击左耳机触摸键	/	/
语音助手	耳机与手机连接状态下,长按L/R耳机触 摸键2秒即可唤醒语音助手	/	叮咚
接听来电	亲电状态下,双击左/右耳机触摸键	/	手机铃声提示音
拒接来电	来申状态下、长按左/右互机触模键2秒	/	/

简单故障排查

原因	解决方法
耳机电量不足	对耳机进行充电
耳机电量不足	对耳机进行充电
耳机没有放好	调整耳机放置的位置
耳机电量不足	对耳机进行充电
音量太大或者环境太嘈杂	调节音量或更换环境
外界干扰严重或距离手机太远	更换地点或靠近手机
耳机佩戴不正确或音量太小	调节耳机佩带或音量大小
外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机
	耳机电量不足 耳机电量不足 耳机没有放好 耳机电量不足 音量太大或者环境太嘈杂 外界干扰产重或距离手机太远 耳机偶能不正确或音量太小

安全指引

- 1.初次使用本产品前,请先充满电再使用。
- 2.产品不是玩具, 12岁以下儿童须在成年人监护下使用。
- 3.请使用通过正规厂家安全认证的5V/1A充电器,避免支持高电压的快充充电器对产品造成
- 4.请在安全的环境下充电,在给充电仓充电时,电量充满后请尽快将充电线拔出,避免长时 间充电对电池造成损坏。充电仓的充电方式为Type-C接口。
- 5.本产品内置不可拆卸的可重复充电电池,重复对耳机进行充电和放电将会随时间推移而导
- 致电池性能下降,这对于所有可以重复充电电池来说均属于正常现象。 6.本产品带有理电池,如长时间未使用,请至少一个月充电一次。
- 7.因个体差异原因,如佩戴时感到皮肤不适,请停止佩戴并咨询医生。
- 8.在蓝牙连接本产品使用时,请将耳机声音调至合适音量大小,以免长期在大音量状态下对
- 9.如果您在从事需要集中注意力的活动时使用本产品,应注意您自身和他人的安全,例如驾 车或骑自行车时,在道路、施工现场、铁路上或徒步行走时。您应取下耳机或调整音量以确 保可以听到周围的声音,包括警报和警告信号。
- 10.请遵守所在地区或国家的相关规定,驾车时按照要求使用本产品。
- 11.本产品含有磁性材料,使用或安放产品时,请远离具有强磁场或强电场的电器,如微波

PACHOS.
13.有明文规定禁止使用无线设备的场所,请勿使用本产品,否则会干扰其它电子设备或导致 其它危险。
14.靠近医疗及工业设备或登飞机之前,请咨询当地工作人员能否使用。
15.对本产品清洁和维护前,请停止使用本产品,关闭所有应用,并断开与其它设备的所有连
接或线缆。
16 请根据本地法令。正确外置度套电子产品。不可将电子电气设备、部件、电池与其它生活

6.请根据本地法令,正确处置废弃电子产品,不可将电子电气设备、部件、电池与其它生活 垃圾一起丢弃。

12.建议在温度-0°C~45°C的环境中使用本产品。当环境温度低于 +5°C时,电池性能会受到

警告

- 1 请遵循本说明书的内容讲行使用。避免产品因错误操作损坏
- 2.本产品请远离儿童、火源、热源、冷冻源、水源及化学品。
- 3.请勿长时间使用大音量收听,以免对听力造成不良影响。
- 4.请勿将产品及附件浸入任何液体或用水冲洗产品,否则导致火灾或触电危险。 5.请勿将产品放置在太阳晒射或者温度高的地方。高温会缩短电子部件的使用寿命、损坏电
- 池、使某些塑料部件变形。 6.请勿将本产品放在尘土多、温度和湿度过高或过低的地方保存。
- 7.请勿将磁条卡(例如银行卡、公交卡等)长期接触本产品,否则可能导致磁条卡被磁场损
- 8.请勿在本产品上施加较大的压力,或拆卸、摔打、震动本产品,以防产品损坏
- 9.请勿在靠近热源处使用本产品,如散热器、热风调节器、炉灶或其他产生热量的仪器 10.请勿堵塞本产品的开口处,如充电口、指示灯、麦克风等。
- 1.请勿在暴雨天气下使用设备,雷暴可能导致设备出现故障,增大电击的风险。
- 2.请避免本产品及其配件雨淋或受潮,且激烈运动或出汗较多时使用本产品,防止液体渗 透到产品内部损坏本产品。
- 13.产品属于内置聚合物理电池,不可更换,请勿丢弃或置以火中,以免爆炸、起火等危险
- 14.如因消费者违反上述警示而不恰当使用所造成的人身及财产损害将自行承担一切后果本 公司将不产生任何法律责任。



产地:中国•广东

英语

INSTRUCTION MANUAL

Product structure diagram

包装清单

耳机x2pcs

充电仓x1pcs

说明书x1pcs


Packing list

Headphones x2pcs

Charging case x1pcs Type-C charging cable x1pcs

Instruction manual x1pcs

Type-C充电线 x1pcs

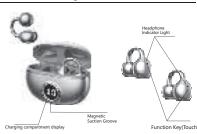

Place the clip-on earbuds on the ear porch as if you were wearing ear clips. After putting it on, adjust the position of the earbuds until they adjust to the sound

Introduction to product operation

function	operate	Light	Tone
Pair name	M97		
Boot	Headphones in the case of charging bin, take out the headphones automatically boot/headphones off state, Long Touch Key 3 seconds to boot	The blue light is on	Power on/开机
Shutdown	Put the earphone into the charging bin and shut down automatically. Press the touch button for 5 seconds to shut down the earphone	The red light stays on for 1 second and then turns off	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	After the left and right ear ears are successfully paired, the blue and red lights of the main ear will flash alternately, and the light of the secondary ear will be extinguished	Connected/Pairing successfully
Toggle the Chinese and English prompt tones	Without connecting the smart device, double-click any left/right ear touch key 2 times, language switch. Factory default English	/	English/中文
Smart device connectivity	When the ears are successfully paired, it will automatically enter the state to be connected, at this time, open the Bluetooth let of the smart device to search and click "M97" to connect, after the earboad ser successfully connected to the smart device, there will be a prompt tone, and the headset indicator will go of the headset indicator will go of the smart search and the headset indicator will go of the smart search s	The lights in the left and right ears are turned off	Connected /连接成功
Toggle Music/ Game mode	When the headset is connected to the device, press the left/right ear touch button 4 times to switch the mode.	/	音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click the left/right earphone touch button	/	/
Previous song	After the music player starts, click the left Earphone Touch Button three times	/	/
Next song	After the music player starts, double-click the right earphone touch button three times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume indicator (knock)
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	When the headset is connected to the phone, press the L/R earphone touch button for 2 seconds to wake up the assistant	/	Ding Dong

Answer an incoming call state, double-click the left/right earphone touch button Ringtone of your phone Reject an incoming call Press the left/right earphone touch button for 2 seconds While on the phone, double-click the When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to the ear Powered off The red light flashes every 5 seconds Ding Dong Up to the ear roweres un: Outside the effective connection range, or manually disconnect the Bluetooth main ear flashed alternately, and the secondary ear light went out /断开连接 After powering on or disconnecting, the earbuds will automatically reconnect to the last connected smart device within the effective distance The lights go out ne earphone is put back into the charging bin and automatically shuts down and begins to parge. The red light of the earphone is always on, and the light goes out when it is fully charged The headphone is put into the charging bin, the charging bin immediately charges the headphone and activates the screen to show the current charge and the charging status of the headphone. The charging When the battery is too low, charge the battery with a power adapter with a stand output of 5V. The battery screen lights up and flashes to show the current battery. The charging bin is fully charged Charging bin charged screen display always bright number 100

Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened

Headset parameters

挂断电话 通话状态下,双击左/右耳机触摸键 低电量报警 当耳机的电压低于3.3V,会有提示,直至耳 紅灯隔5秒闪一次

充电仓充满电 充电仓充满电后屏幕显示常亮数字 100

耳机参数

2.蓝牙版本:Bluetooth 5.49 3.支持模式:AAC/SBC

6.频响范围:20Hz~20KHz 7.喇叭尺寸:ф10mm 8.喇叭灵敏度:104dB ±3dB

9.喇叭阻抗:160:15%

5 穀波順率:2 402GHz~2 480GHz

4.蓝牙传输距离:10m

自动回连 开机后或断连后,在有效距离内,耳机会自 切回连上一次连接过的智能设备 灯熄灭

断开连接 超出有效连接范围,或手动操作断开智能设 主耳红蓝灯交替闪烁,副耳灯 条签穿连接

耳机充电 耳机放向充电仓内即自动关机并开始充电。耳机红灯常亮。充满电后灯熄灭

充电仓给耳 机充电合中,充电仓给耳机即时充电并激活屏幕显示当前电量和耳机的充电 机充电 或示解余电量计划的发流电压充电台屏幕显示充电效态停止,最后充电仓屏幕 显示解余电量计19时间数次。 充电仓充电 当充电仓电量过低时始充电仓连接上标准输出5V电压的电源适配器进行充电,充电仓屏幕壳起并闪烁显示当前电量。

备注: 当蓝牙耳机连接智能设备,切换游戏模式时,耳机的使用时长和连接距离会有缩短

10.喇叭额定功率:8mW

12.元电包电池各量. 3.79/20 13.充电接口:USB Type-C 14.耳机使用时间:≈6-8小时

18.关机待机时间:≈3000小时

15.耳机单次充电时间:≈1.5小时 16.充电仓充电时间:≈1.5小时 17.充电仓给耳机充电次数:约2次

11.耳机电池容量:3.7V/30mAh (聚合物电池)

2. 充电仓电池容量: 3.7V/200mAh (聚合物电池)

- 1. Product name: M97 10. Hom rated power:8mW
- . Bluetooth version : Bluetooth 5.49
- 3. Support mode :AAC/SBC 12. Charging bin battery capacity: 3.7V/200mAh (polymer battery)
- Carrier frequency :2 402GHz~2 480GHz 14 Headset use time :=6-8 hour
- Frequency response range :20Hz~20KHz 15. Earphone single charging time :=1.5 hours
- 7 Horn size: Ф10mm 3. Horn sensitivity :104dB ±3dB
- 9 Horn impedance :160 ±15%
- 16 Charging time: #15 hours 18 Shutdown standby time := 3000 hours

Simple troubleshooting

fault	cause	Resolution	
Doesn't turn on	The headphones are low on battery	Charge the headphones	
The headphones flash red	The headphones are low on battery	Charge the headphones	
Charging is silent	The headphones were not put away	Adjust the position where the headphones are placed	
Automatic power off	The headphones are low on battery	Charge the headphones	
The headphones have an echo	The volume is too loud or the environment is too noisy	Adjust the volume or change the environment	
There is a murmur from the headphones	Serious external interference or too far away from the phone	Change the location or be close to your phone	
The other party's voice is quiet	The headphones are worn incorrectly or the volume is too low	Adjust the headset wear or volume	
The signal is intermittent	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone	

Safety guidelines

- Before using this product for the first time, please fully charge it before using it.
 The product is not a toy, and children under the age of 12 must be used under the pervision of an adult.
 Please use a 5V/1A charger that has passed the safety certification of a regular anufacturer to avoid damage to the product caused by a fast charging charger that supports
- manufacturer to avoid admage to the product caused by a last charging charger that supports.

 4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable as soon as possible after the power is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
- ype-C interrace. i. This product has a built-in non-removable rechargeable battery, and repeated charging and
- 5. This pargind cft has a built-in non-reviouble free/respirable battery, and repeated charging and so that part of the carbuds will be about the sound to the carbud will be normal for a flore that performance over time, which is normal for point creates with shateries.
 In print a clarable shateries with shateries, the shateries of th
- 7. If you feel skin discomfort when wearing it due to individual differences, please stop wearing it and crossila decide.
 wearing it and crossila decide.
 wearing the controlled controlled controlled to the controlled sites, allowers, or walking, You should remove your headplonest or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.

10. Please follow the relevant regulations of your region or country and use this product as required when driving.

11. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when

with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product in an environment with a temperature of -07C-45°C.
When the ambient temperature is below +5°C, battery performance is limited.
13. Do not use this product in a places where it is expressly prohibited to use wireless of the product of the product

warn

1. Please follow the content of this manual to avoid damage to the product due to incorrect

- operation.

 2. Keep this product away from children, fire, heat, refrigeration, water and chemicals.

 3. Do not listen at a loud volume for a long time to avoid adverse effects on hearing.

 4. Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
- 5. Do not place the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic components, damage batteries, and deform
- certain plastic parts.

 6. Do not store this product in a place with a lot of dust, too high or too low temperature nd humidity. . Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this
- oduct for a long time, otherwise it may cause the magnetic stripe card to be damaged by e magnetic field. 8. Do not apply greater pressure to this product, or disassemble, beat, or shake this product o prevent damage to the product . Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or
- other instruments that generate heat 10. Do not block the openings of this product, such as charging ports, indicator lights,

- 10. Do not block the openings of this product, such as charging ports, indicator ignts, incirciphone, etc., device in citalistoriny weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
 12. Plesse avoid using this product when this product and its accessories are exposed to rain or mosture, and when you exercise vigorously or sweat a lot, to prevent liquid from penetrating into the product and damaging this product which cannot be replaced, pleased on not discard or put fit in the fire to avoid explosion, fire and other dangers.
 14. If the consumer violates the above warning and inappropriate use, the personal and property damage will be borne by the company, and the company will not incur any legal responsibility.



产地:中国•广东

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.