


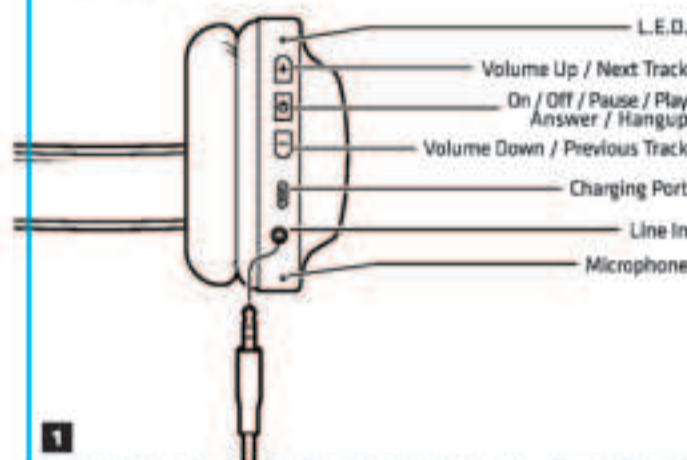

REVERB BT BLUETOOTH HEADPHONE

FUNCTIONS

	LONG PRESS	Power On/Off
	SHORT PRESS	Play/Pause/Answer/Hang Up
	SHORT PRESS	Next Track
	SHORT PRESS	Previous Track
	LONG PRESS	Volume Up
	LONG PRESS	Volume Down



HANDY L.E.D. INDICATORS

Red/Blue	Pairing Mode / Disconnected
Flashing Blue	Bluetooth is on and connected
Solid Red	Battery is charging
Off	Battery is fully charged

TROUBLESHOOTING

PRODUCT DOES NOT TURN ON:
1 - Hold down power button for 3-5 seconds until LED turns on
2 - Make sure battery is charged. Charge battery for at least 30 minutes and power on again

YOUR BLUETOOTH DEVICE IS UNABLE TO SEARCH FOR/LOCATE/PAIR WITH WICKED AUDIO BLUETOOTH PRODUCT:
1 - Be sure your Bluetooth device has Bluetooth capabilities turned on/activated
2 - Be sure your Wicked Audio product is in pairing mode (LED will be flashing Red AND Blue)
3 - Delete/Forget/Unpair the Wicked Audio product from your Bluetooth list on your device or other nearby devices and search again
4 - If still unable to search for/locate/pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again

FIRST TIME USE

- 1 - Make sure that the Wicked Audio Reverb BT is charged, your device turned on, with the Bluetooth feature enabled.
- 2 - Turn on the Reverb BT and the LED will flash red and blue.
- 3 - Your device should detect "Wicked Reverb."
- 4 - Select "Wicked Reverb" to pair and once successfully paired, the LED will slowly flash blue.

LINE IN MODE

When you'd like to use the Reverb BT as normal wired headphones (no Bluetooth), plug the aux cord into the "line-in" port. This is handy for listening to movies on the plane, if you don't want to drain the battery, or if the battery is dead.

HELPFUL TIPS

- 1 - When the line-in port is being used, the button functions cannot be used. Return your product to Wireless mode to be able to use the full range of features.
- 2 - When the line-in port is being used, the Reverb BT will automatically shut down the Bluetooth capabilities if they are not already turned off.

DISCONNECTED AFTER YOUR BLUETOOTH DEVICE SUCCESSFULLY CONNECTED/PAIRED WITH YOUR WICKED AUDIO PRODUCT:

- 1 - The Bluetooth signal has been blocked with an obstruction/exceeded Bluetooth range between your Bluetooth device and the Wicked Audio product
- 2 - Check to see if the battery is at low power, charge if needed

UNABLE TO CONNECT/PAIR YOUR DESIRED BLUETOOTH DEVICE WITH YOUR WICKED AUDIO PRODUCT AFTER CONNECTING YOUR WICKED AUDIO PRODUCT WITH MULTIPLE BLUETOOTH DEVICES:

- 1 - Your Wicked Audio product will attempt to connect/pair with last Bluetooth device it paired with
- 2 - Turn off Bluetooth capabilities on other Bluetooth devices in your vicinity that were recently paired to your Wicked Audio product. This will allow your desired Bluetooth product to connect with your Wicked Audio product.
- 3 - If still unable to pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again.

NO SOUND WHEN TALKING WITH SOMEONE ON THE PHONE USING MIC ON WICKED AUDIO PRODUCT

- 1 - Make sure the Wicked Audio product is successfully paired with your Bluetooth device
- 2 - Increase the volume of your Bluetooth device and/or Wicked Audio product

NO SOUND WHEN PLAYING MUSIC

- 1 - Increase the volume of your Bluetooth device and/or Wicked Audio product
- 2 - Make sure the Wicked Audio is successfully paired with your Bluetooth device

UNABLE TO CHARGE

- 1 - Wicked Audio product will have a solid Red LED when charging and the LED will turn solid blue when fully charged.
- 2 - Make sure the USB cable is connecting well with charger and the micro USB cable is connecting well with your Bluetooth device

PRECAUTIONS
LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.
Over exposure to excessive sound levels can damage your ears, resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.
SAFE USE & HAZARD WARNINGS
90 dB SPL at 8 hours, 85 dB SPL at 4 hours, 80 dB SPL at 2 hours, 70 dB SPL at 1 hour, 60 dB SPL at 30 min, 50 dB SPL at 15 min, 100 dB SPL. Avoid as damage may occur

LIMITATION OF LIABILITY Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction. In no event, under any circumstance of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio products, even if the Wicked Audio product has been advised of the possibility of such damages that you may encounter. Without limiting the foregoing, you acknowledge and agree that Wicked Audio has no liability for any damages or destruction to the computer/electronic devices or other personal property that are contained in mobile or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence or otherwise), the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.

The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Wicked Audio Inc. is under license. Other trademarks and trade names are those of their respective owners.

LIMITED ONE YEAR WARRANTY
Keep your receipt to obtain warranty service.
Go to www.wickedaudio.com for more details.

MODEL: R1-REVERB-BT5000

Developed in Utah, U.S.A.
Made in China

