
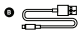



What's in the Box?



1




2




3

A. Dozy Alarm Bot
B. 1 USB-C* Charging Cable
C. 1 User Manual


Device Overview

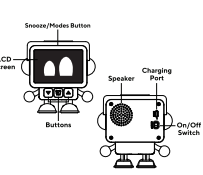


Button Functions




Up Button
Press to turn up the volume.
Press and hold to play next song.



Clock Button
Press to set up an alarm.
Press and hold to set up time.
(ALARM ENABLED) Press to disable alarm.




Down Button
Press to turn down the volume.
Press and hold to play previous song.




Snooze/Modes Button
(Alarm ENABLED) Press to snooze for 10 minutes.
(Alarm DISABLED) Press to make Dozy dance.
Press and hold to select between Bluetooth*, Mode / White Noise / Radio Mode.


Dozy Face Status

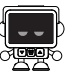


Awake




Dancing




Sleeping



Bluetooth* Setup



White Noise




Radio Mode

Charging Dozy

Plug the included USB-C** cable into Dozy's charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately 3 hours to fully charge the battery.


Note: We recommend using a USB wall adapter with a 5V output.

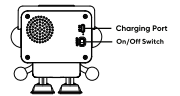




Charging Port
On/Off Switch


Once your device is fully charged, use the switch on the back to turn on Dozy.

Clock Setup

1. Press and hold the  **Clock** button to set up the clock's time.




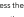
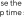

2. Use the  **Up/Down** buttons to adjust the time.
Press the  **clock** button to confirm your selection.


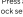
Note: Press and hold the  **Clock** button if you wish to exit clock setup.

Sleep Time Setup

Set a sleep time for Dozy, and the bot will enter sleep mode at that time.




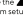
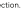
1. Press the  **Clock** button to set up sleep time.
2. Use the  **Up/Down** buttons to navigate through sleep time setup.
Press the  **clock** button to confirm your selection.

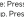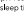Note: Press the  **clock** button again to enter alarm setup. Press and hold the  **clock** button if you wish to exit sleep time setup and return to Dozy's main screen.


Wake Time (Alarm) Setup

After setting up Dozy's sleep time, you will be able to set your alarm. Dozy will wake up with you at this time!



Use the  **Up/Down** buttons to navigate through alarm setup. Press the  **clock** button to confirm your selection.

Press the **Snooze/Modes** button twice to disable/enable scheduled sleep and wake times.

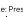
Note: Press and hold the  **clock** button if you wish to exit alarm setup.



Mode Selection

1. Press and hold the **Snooze/Modes** button to access the mode selection screen.

Snooze/Modes Button



2. Press the **▲▼ Up/Down** buttons to select between Bluetooth® Mode / White Noise / Radio Mode.


3. Press the **⌂ Clock** button to confirm your selection.

Note: Press and hold the **⌂ Clock** button if you wish to exit the mode selection screen.

Bluetooth® Mode

Once you've entered Bluetooth® mode:


1. On your smartphone or tablet, search for the Bluetooth® device named **"Dozy Alarmbot"** and tap to connect.
2. A prompt will play once pairing is successful.

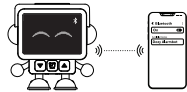

Note: Press and hold the **⌂ Clock** button if you wish to exit Bluetooth® mode.

White Noise

Once you've entered White Noise mode:

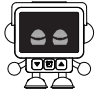


Press the **▲▼ Up/Down** buttons to increase/decrease volume.

Press and hold the **▲▼ Up/Down** buttons to play next/previous white noise sounds.

Note: Press and hold the **⌂ Clock** button if you wish to exit white noise mode.

FM Radio Mode

Once you've entered FM Radio mode:

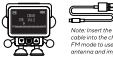

Note: Insert the included USB-C™ cable into the charging port while in FM mode to use it as an external antenna and improve signal.

Press the **⌂ Clock** button once to scan radio stations. Stations with good reception strength will automatically save. Press again to stop on your desired station.

Once scanning is complete, press and hold the **▲▼ Up/Down** buttons to access saved radio stations.

Press the **▲▼ Up/Down** buttons to increase/decrease volume.

Note: Press and hold the **⌂ Clock** button if you wish to exit FM Radio mode.

Specifications

- Bluetooth® wireless technology
- LCD screen
- Wireless alarm clock
- 1200 mAh rechargeable battery
- 5 hours playtime*
- 2.5W RMS
- FM radio
- White noise
- USB Type-C™ charging

*Over 5 hours of playtime per charge based on a 50% volume level

Reset

If Dozy is not operating properly, you may reset it. To do so, press and hold the **Snooze/Modes** button for approximately 10 seconds until Dozy powers off and then powers back on again. Dozy should now operate as usual.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

FCC Warning (Continued)

Interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC ID: 2AVRVDZAL320

Need Help?

Email us at support@dpsaudiovideo.sendesk.com or call us at **1-833-909-2673**.

We are available Monday - Friday, 9am - 5pm PST, except major holidays.

Please email your inquiry prior to calling as this will enable us to better assist you. Make sure to note the model number and a description of your inquiry.

For information on recycling, please visit <https://www.coreinnovationsinc.com/support/>