


说明书 尺寸70x100mm材质100克书写纸 双面四色印刷 风琴折（风琴折）

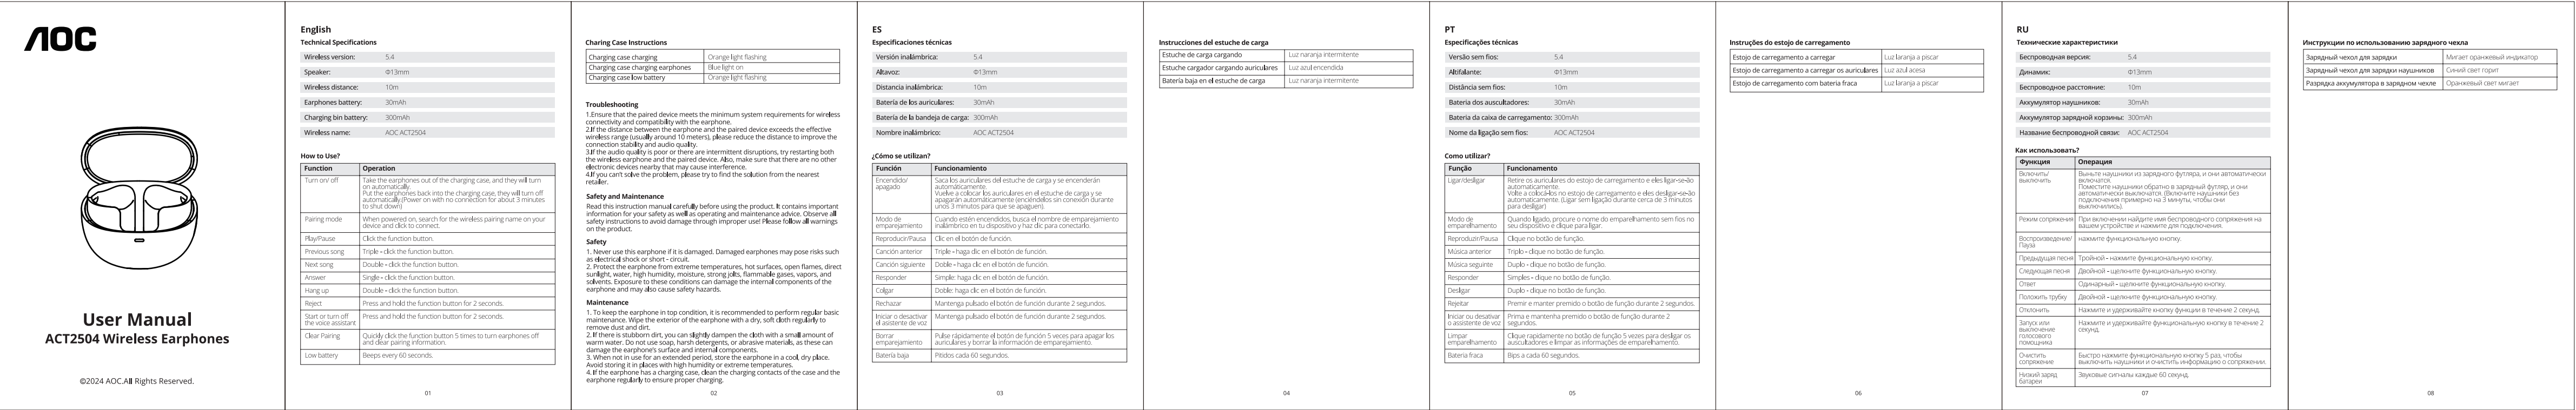

FR

Spécifications techniques

| | |
|--|-------------|
| Version sans fil : | 5.4 |
| Haut-parleur : | Φ13mm |
| Distance sans fil : | 10m |
| Batterie des écouteurs : | 30mAh |
| Batterie de la corbeille de chargement : | 300mAh |
| Nom de la technologie sans fil : | AOC ACT2504 |

Instructions relatives à l'étui de chargement

| | |
|------------------------------------|--------------------------|
| Étui de chargement chargement | Voyant orange clignotant |
| Étui de chargement des écouteurs | Lumière bleue allumée |
| Étui de chargement batterie faible | Lumière orange clignote |

DE

Technische Daten

| | |
|------------------------|-------------|
| Drahtlose Version: | 5.4 |
| Lautsprecher: | Φ13mm |
| Kabellose Entfernung: | 10m |
| Kopfhörer-Akku: | 30mAh |
| Akku der Ladestation: | 300mAh |
| Kabellose Bezeichnung: | AOC ACT2504 |

Anweisungen für das Ladeetui

| | |
|------------------------------|-----------------------------|
| Aufladen des Ladegeräts | Orangefarbenes Licht blinkt |
| Ladekoffer lädt Ohrhörer auf | Blaues Licht an |
| Ladekoffer schwache Batterie | Oranges Licht blinkt |

KR

기술 사양

| | |
|-----------|-------------|
| 무선 버전: | 5.4 |
| 스피커: | Φ13mm |
| 무선 거리: | 10m |
| 이어폰 배터리라: | 30mAh |
| 충전 빈 배터리: | 300mAh |
| 무선 이름: | AOC ACT2504 |

사용 방법

| | |
|------------------------|--|
| 기능 | 작동 |
| 켜기/끄기 | 충전 케이스에서 이어폰을 꺼내면 자동으로 켜지고 이어폰을 다시 충전 케이스에 넣으면 자동으로 꺼집니다. (약 3분 동안 연결되지 않은 상태에서 전원을 끄면 종료됩니다.) |
| 페어링 모드 | 전원이 켜지면 장치에서 무선 페어링 이름을 검색하고 클릭하여 연결합니다. |
| 제명/일시 정지 | 기능 버튼을 클릭합니다. |
| 이전 곡 | 세 번 - 기능 버튼을 클릭합니다. |
| 다음 곡 | 더블 - 기능 버튼을 클릭합니다. |
| 종말 | 상강 -- 기능 버튼을 클릭합니다. |
| 잠기 | 더블 -- 기능 버튼을 클릭합니다. |
| 거부 | 기능 버튼을 2초간 길게 누릅니다. |
| 음질 향상시스템 사운드 보다는 고가 | 기능 버튼을 2초간 길게 누릅니다. |
| 페어링 지우기 | 기능 버튼을 5회 빠르게 클릭하면 이어폰이 꺼지고 페어링 정보가 지워집니다. |
| 배터리 부족 | 60초마다 신호음이 울립니다. |

CN

技术规范

| | |
|--------|-------------|
| 无线版本: | 5.4 |
| 扬声器: | Φ13mm |
| 无线距离: | 10m |
| 耳机电池: | 30mAh |
| 充电仓电池: | 300mAh |
| 无线名称: | AOC ACT2504 |

如何使用?

| | |
|-----------|---|
| 功能 | 操作 |
| 打开/关闭 | 将耳机从充电盒中取出，耳机会自动开启。 将耳机放回充电盒，耳机会自动关闭。(开机无连接约3分钟关机) |
| 配对模式 | 开机后,在设备上搜索无线配对名称并点击连接。 |
| 播放/暂停 | 单击功能按钮。 |
| 上一首歌 | 三击功能按钮。 |
| 下一首歌 | 双击功能按钮。 |
| 接听 | 单击功能按钮。 |
| 挂断 | 双击功能按钮。 |
| 拒接 | 按住功能按钮 2 秒钟。 |
| 启动或关闭语音助手 | 按住功能按钮 2 秒钟。 |
| 清除配对 | 快速点功能按钮 5 次。关闭耳机并清除配对信息。 |
| 低电量 | 每 60 秒发出提示音。 |

充电宝使用说明

| | |
|----------|-------|
| 充电盒充电 | 指示灯闪烁 |
| 充电盒为耳机充电 | 蓝灯亮 |
| 充电盒低电量 | 红灯闪烁 |

产品有害物质名称及含量

为满足中国电子电气产品有害物质限制相关的法律法规和其他要求，联想公司对本产品中有害物质，按部件分类，声明如下：

| 部件名称 Parts | 有害物质 / Hazardous Substance | | | | | | | |
|---------------|----------------------------|-------|-------|-------------|-----------|-------------|--|--|
| | 铅(Pb) | 汞(Hg) | 镉(Cd) | 六价铬(Cr(VI)) | 多溴联苯(PBB) | 多溴二苯醚(PBDE) | | |
| 印刷电路板组件 | ○ | ○ | ○ | X | ○ | ○ | | |
| 塑料部件/外壳 | ○ | ○ | ○ | ○ | ○ | ○ | | |
| 金属部件 | ○ | ○ | ○ | ○ | ○ | ○ | | |
| 线路及接口 | ○ | ○ | ○ | ○ | ○ | ○ | | |

本表格依据SJ/T 11364 的规定编制。
○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。
X 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。

本产品所含有的有害物质都是由于现阶段技术限制而无法提供替代的物质导致的，符合中国《电器电子产品有害物质限制使用管理办法》的要求，且属于欧盟RoHS豁免范围内，在设计产品时已按做了特别考虑，确保外观部件采用无毒无害的环保材料制造，消费者在正常使用情况下不会接触到有害物质，不会对人体造成危害。

⑩ 在中华人民共和国境内销售的电器电子产品上将有“环保使用期”(EUPU)符号，圆圈中的数字代表产品的正常环保使用年限。

Warranty Card

Dear Customer:

Thank you for purchasing the AOC peripheral products. To ensure that you receive reliable after-sales service, please read the following instructions carefully. All products sold by our company are provided with a one-year warranty period (some special countries or regions shall be subject to local laws and regulations), and the warranty period of this product shall be calculated from the date of purchase (subject to the purchase invoice or formal sales certificate). The warranty does not include consequential damages (including but not limited to loss of data or loss of revenue) for damages caused by personal acts such as regular maintenance, installation of software updates or preservation or storage of data.

The following circumstances are not included in the warranty:

- The warranty card or purchase invoice cannot be provided (except those that can prove that the product is within the valid warranty period) or the warranty certificate is changed without authorization.
- The product model and serial number on the warranty card are inconsistent with the physical object.
- The model, serial number or production date code on the product has been changed, deleted or illegible.
- The defect is caused by excessive use beyond the intended use, such as non-stop use in a commercial environment.
- Damage caused by failure to use in accordance with the product instructions.
- Damage caused by the use of pirated software or computer viruses in the course of use.
- Damage by accident, or repaired or modified by unauthorized service agencies or personnel.
- Damage caused by force majeure.
- In the course of use, the product cannot work normally due to the loss of wireless connection caused by accidents, signal interference or other influencing factors.
- Normal wear and tear defects, or natural wear and tear parts.
- The product cannot work normally because it is not used in the country/region where it was originally designed, manufactured or approved for use, which may happen to imported products.

If the function of the AOC product you purchase is abnormal or defective, please contact the seller of the AOC product. The product serial number filled in must be consistent with the actual product. This certificate is the main tool for after-sales service, please keep it properly. If you need technical support, please show this warranty card, and we will provide quality and professional services.

Aftersales e-mail: support@selelchai.com
You can also visit the official website of the designated dealer of the AOC to obtain the drivers and other relevant information required for the product: Official website of the dealer: https://www.selelchai.com

Commodity model:

| | |
|----------------------|--|
| Factory No: | |
| Date of purchase: | |
| Invoice No: | |
| Seal of Distributor: | |

99

10

11

12

13

14

15

16

17



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.