
Wireless Outdoor Speaker

With Carabiner

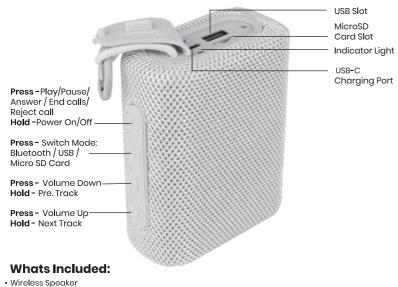

- USB-C to USB-A Charging Cable

Indicator:

- ⊕ Flashing Red Low Battery
- Solid Red Charging
- ® Flashing Blue Pairing Mode/Play Music
- Solid Blue Bluetooth Connected
- Bing Bong Tone Power On
- · Descending Chime Power off
- Double Beeps Ready to Pair
- Electric Tone Paired
- Double Dial Beeps Low Battery
- Double Beeps Followed by a Descending Chime Disconnect

Pairina:

- Power the speaker to on, the indicator on top rapid flashes blue when ready to pair.
- Use Bluetooth settings on your phone to pair with Speaker 03
- Blue light turns solid followed by an electrin tone pairing successful. Note: when the speaker is turned on and not connected to Bluetooth, it will automatically shut

Charging:

- Full charge requires approximately 3 hours.
- Using the USB-C cable provided, plug USB-C end into speaker and USB-A end into a USB power supply of at least DC 5V 0.5A warning: please use UL compliant power supply.
- The indicator light will turn red when charging, the indicator light will turn off when charging is

Troubleshooting:

- If the speaker is not working correctly, hold power on/off for 8 seconds to reset.
- If the speaker won't turn on, recharge the battery and try again.
- If the speaker won't charge, make sure the power supply works, is 5V 0.5A, and not damaged.
- If the speaker makes no sound or does not show as an available device, make sure it is not paired with another device, if so unpair the device and repair the desired device.
- If the micro SD card is not working correctly, be sure format to FAT32 format before use.

Safety:

- The speaker is splash resistant but do not submerge under water.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

FCC ID:2AO23-BTSP11 Model: BTSP11 Input: 5V = 0.5A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to

However, there is no augrantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Necessarian of reduced in the receiving interinity.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an order different from that to which the receiver is connected.

 Consult the declere or an experienced radio/fly technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

gemsfindyours.com 7157 Shady Oak RD. Eden Prairie, MN 55344 Distributed by Chua, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at

