

CQL1586-B Disco Ball Speaker

Instruction Manual (Read before proceeding)

FCC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Charging the Speaker


- Plug the small connector of the included USB charging cable into the USB Charging port on the speaker's control panel. Plug the large connector into the USB port on a computer, a USB charging device, or a 5V USB adapter (not included) and plug into a wall socket.
- The LED indicator will turn RED while charging and turn off when fully charged. When low on power, a tone will be heard, indicating that the speaker should be charged.

CONTROL PANEL

1. [POWER] Switch
2. Charging LED Indicator
3. Micro USB Charging Port
4. LED Indicator

Bluetooth Speaker Operation

- Turn on the unit by pushing the switch to "ON" position. The LED light on top will light on indicate the speaker is in pairing mode and searching for your Bluetooth mobile device.
- Open the Bluetooth function on your device and search the speaker named "TXBTDISKSPK".
- After selecting this speaker, your device will pair without a password. (If required, enter the password "0000" to finalize the pairing). The Blue light will begin to flash slowly after pair is complete.
- Start playing music on your device. Keep your device within 33feet (10 meters) of your speaker.
- Adjust the volume of your device to a comfortable level.
- Control play/pause, volume up/next track and volume down/previous track either on your connected device or by the buttons on the fabric of the speaker.
- Turn off the unit when not in use.

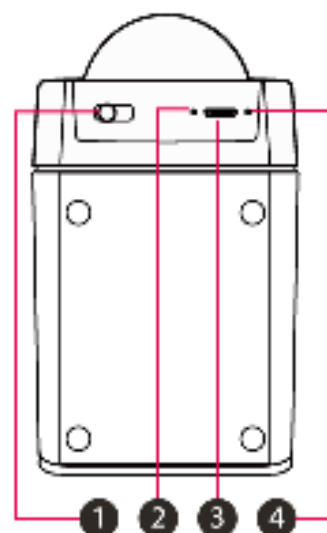

Light Operation

- Push the Off●On button to the “On” position to turn on the unit, the light will light up automatically.
- Play music on your mobile device, the light will dance to the music.
- Turn off the unit, the light will turn off accordingly.

Caution:

- This is not a toy. Please keep away from small children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not over charge the battery.

Warning:

Use only rechargeable batteries model “SURE 230mAh” supplied by Conquer Industry Co., Ltd.

CAUTION:

Risk of explosion if battery is replaced by incorrect type disposed of used batteries according to the instruction.”

- high or low extreme temperatures that a battery can be subjected to during use, storage or transportation;
- low air pressure at high altitude.
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.