



- **Smart Touch Case:** Easy charging and touch controls.
- **Waterproof Design:** Ideal for workouts.
- **Noise-Canceling:** Distraction-free listening.

Specifications

First-Time Connection:

1. Pick up both earbuds, remove their isolation films and push them back in case. Then close the lid to activate them.
2. Pick up them again.
3. On phone, search for Y-TWS31 and tap to connect.

1. Power on earbuds and they will auto become connectable. Connect them to Device A then turn off Bluetooth on Device A.
2. On Device B, search for Y-TWS31 and tap to connect.
3. On Device A, tap Y-TWS31 to finish Multi-Point Connection.

This device complies with Part 15 of the FCC Rules

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to your radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- Ⓜ Pick up both earbuds and keep touching the panels for 3s
- Ⓜ Power-off: Keep touching the panels for 5s
- ☎ Answer/end call: Touch the panels
- Ⓜ Ignore call: Double touch either panel
- ⏮ Playback/pause: Touch either panel
- ⏭ Skip track forward: long press the right panel
- ⏮ Skip track backward: Long press the left panel
- 🗣 Voice assistant: Touch either panel for 3 times

LEDs on Earbuds
The LEDs will glow solid white when the earbuds are charged and the white light will turn off when topped up.

1. Do not expose the product to high temperatures, corrosive or high-pressure environment.
2. Do not attempt to disassemble the Speaker, or to replace any electronic components in it.
3. If the internal devices have fluid leakage, please stop use.

Cleaning Instructions:
Please avoid using abrasive cleaners when cleaning this product.

Heat and Fire Safety:
Keep this product away from heat sources, such as cooking stoves or open flames.

Sunlight Exposure:
Avoid prolonged exposure of this product to direct sunlight.

Safe Disposal:
Never dispose of this product by incineration to prevent the risk of explosion.

Modification Warning:
Do not attempt to disassemble or modify this product, as it contains no user-serviceable components.

