 


NAUTICA

UCCSP02 PORTABLE WIRELESS SPEAKER




Thank you for purchasing an original
Nautica UCCSP02
Portable Wireless Speaker


You are getting a high quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

WHAT'S IN THE BOX

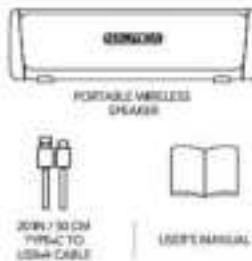

HOW TO USE

 

- M Long Press to change the LED mode/Short Press to Play/Pause/Answer/Hang up
- M Mode switch
- +
- Short Press move to next song, long press volume +
- Short press move to previous song, long press volume -

BLUETOOTH PAIRING

The speaker will automatically be in Bluetooth pairing mode once powered ON. Note that your Nautica Wireless Outdoor Speaker is searching for a Bluetooth device to pair with, locate "NAUTICA SP02" on your device among available Bluetooth connections.

 
HANDS FREE CALLING

Please ensure your mobile phone is paired with device.




CHARGING

For the best experience, it is recommended to charge the unit before first use. Plug the Type-C end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other device made for USB charging. Red LED light and RGB light illuminates indicating that the device is being charged. It needs up to 1 hour to complete charging. Once the speaker is fully charged, red LED light would turn OFF.



STREAM MUSIC FROM MICRO SD CARD OR USB FLASH DRIVE

Insert the Micro SD Card or USB Drive preloaded with songs, into the Micro SD Card Slot or USB Card Slot of the speaker correspondingly. Speaker would automatically start playing songs from the Micro SD Card or USB Drive.

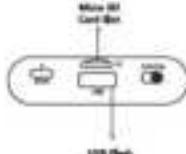

TECHNICAL SPECIFICATIONS

Bluetooth Version	v5.1
Play Time	Up to 5 hours
Charging Time	2 hours
Battery Capacity	800 mAh
Output Power	5W
Input	5V / 1A
Wireless Range	Up to 33 ft / 10 m
Product Dimensions	8.27x2.56x3.15 in / 210x65x80 mm
Product Weight	11.7 oz / 333.2 g
Charging Port	Type-C
Support USB Drive / Micro SD / AUX	
Hands-Free Call	

SAFETY AND MAINTENANCE

Before you use the device, read the following precautions carefully to ensure optimal product performance.

Keep the speaker away from heat sources, direct sunlight, humidity, water and other liquids, dust and lint.

Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, damage the battery, or distort certain plastic parts.

Do not dispose of the unit in fire as it will result in an explosion. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat, such as direct sunlight, fire etc.

Avoid dropping the unit onto the floor. The internal circuit might get damaged. Do not use the speaker if it has been dropped or damaged.

Please do not disassemble, repair, or transform the product. Repairs to electrical equipment should only be performed by a qualified technician. Improper repairs may place the user at serious risk.

Do not insert objects into any of the openings.

Do not use this speaker for any other purpose than intended.

Do not use abrasive cleaning solvents to clean the unit.

Do not expose the unit to contact with sharp objects as this will cause scratches and damage.

WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be honored:
You must have purchased the product from a Nautica or Technofashion authorized dealer.

You must provide proof as to the date of purchase from the Nautica or Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the product's care instructions.

Within 12 months after the purchase, in case of the product is determined to be defective (at the date of original purchase due to improper materials or workmanship), you are entitled to free repair or

exchange of goods. The product should be returned to Technofashion. The warranty does not cover defects caused by third-party modifications, repair, or replacement parts.

Abuse, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

SUPPORT

For any questions, email us at: support@nauticafashion.com

FCC ID: 2ABD0-N002Z

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found complying with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NAUTICA

designed, manufactured, distributed by
TECHNOFASHION

© 2023 Technofashion, Inc. All rights reserved.

Designed in USA. Made in China.

