




Note: Models A2887/88 do not support MSS

A2885, A2886, A2887, A2888
Touch Screen Assembly, Earpiece,
Microphone - Back

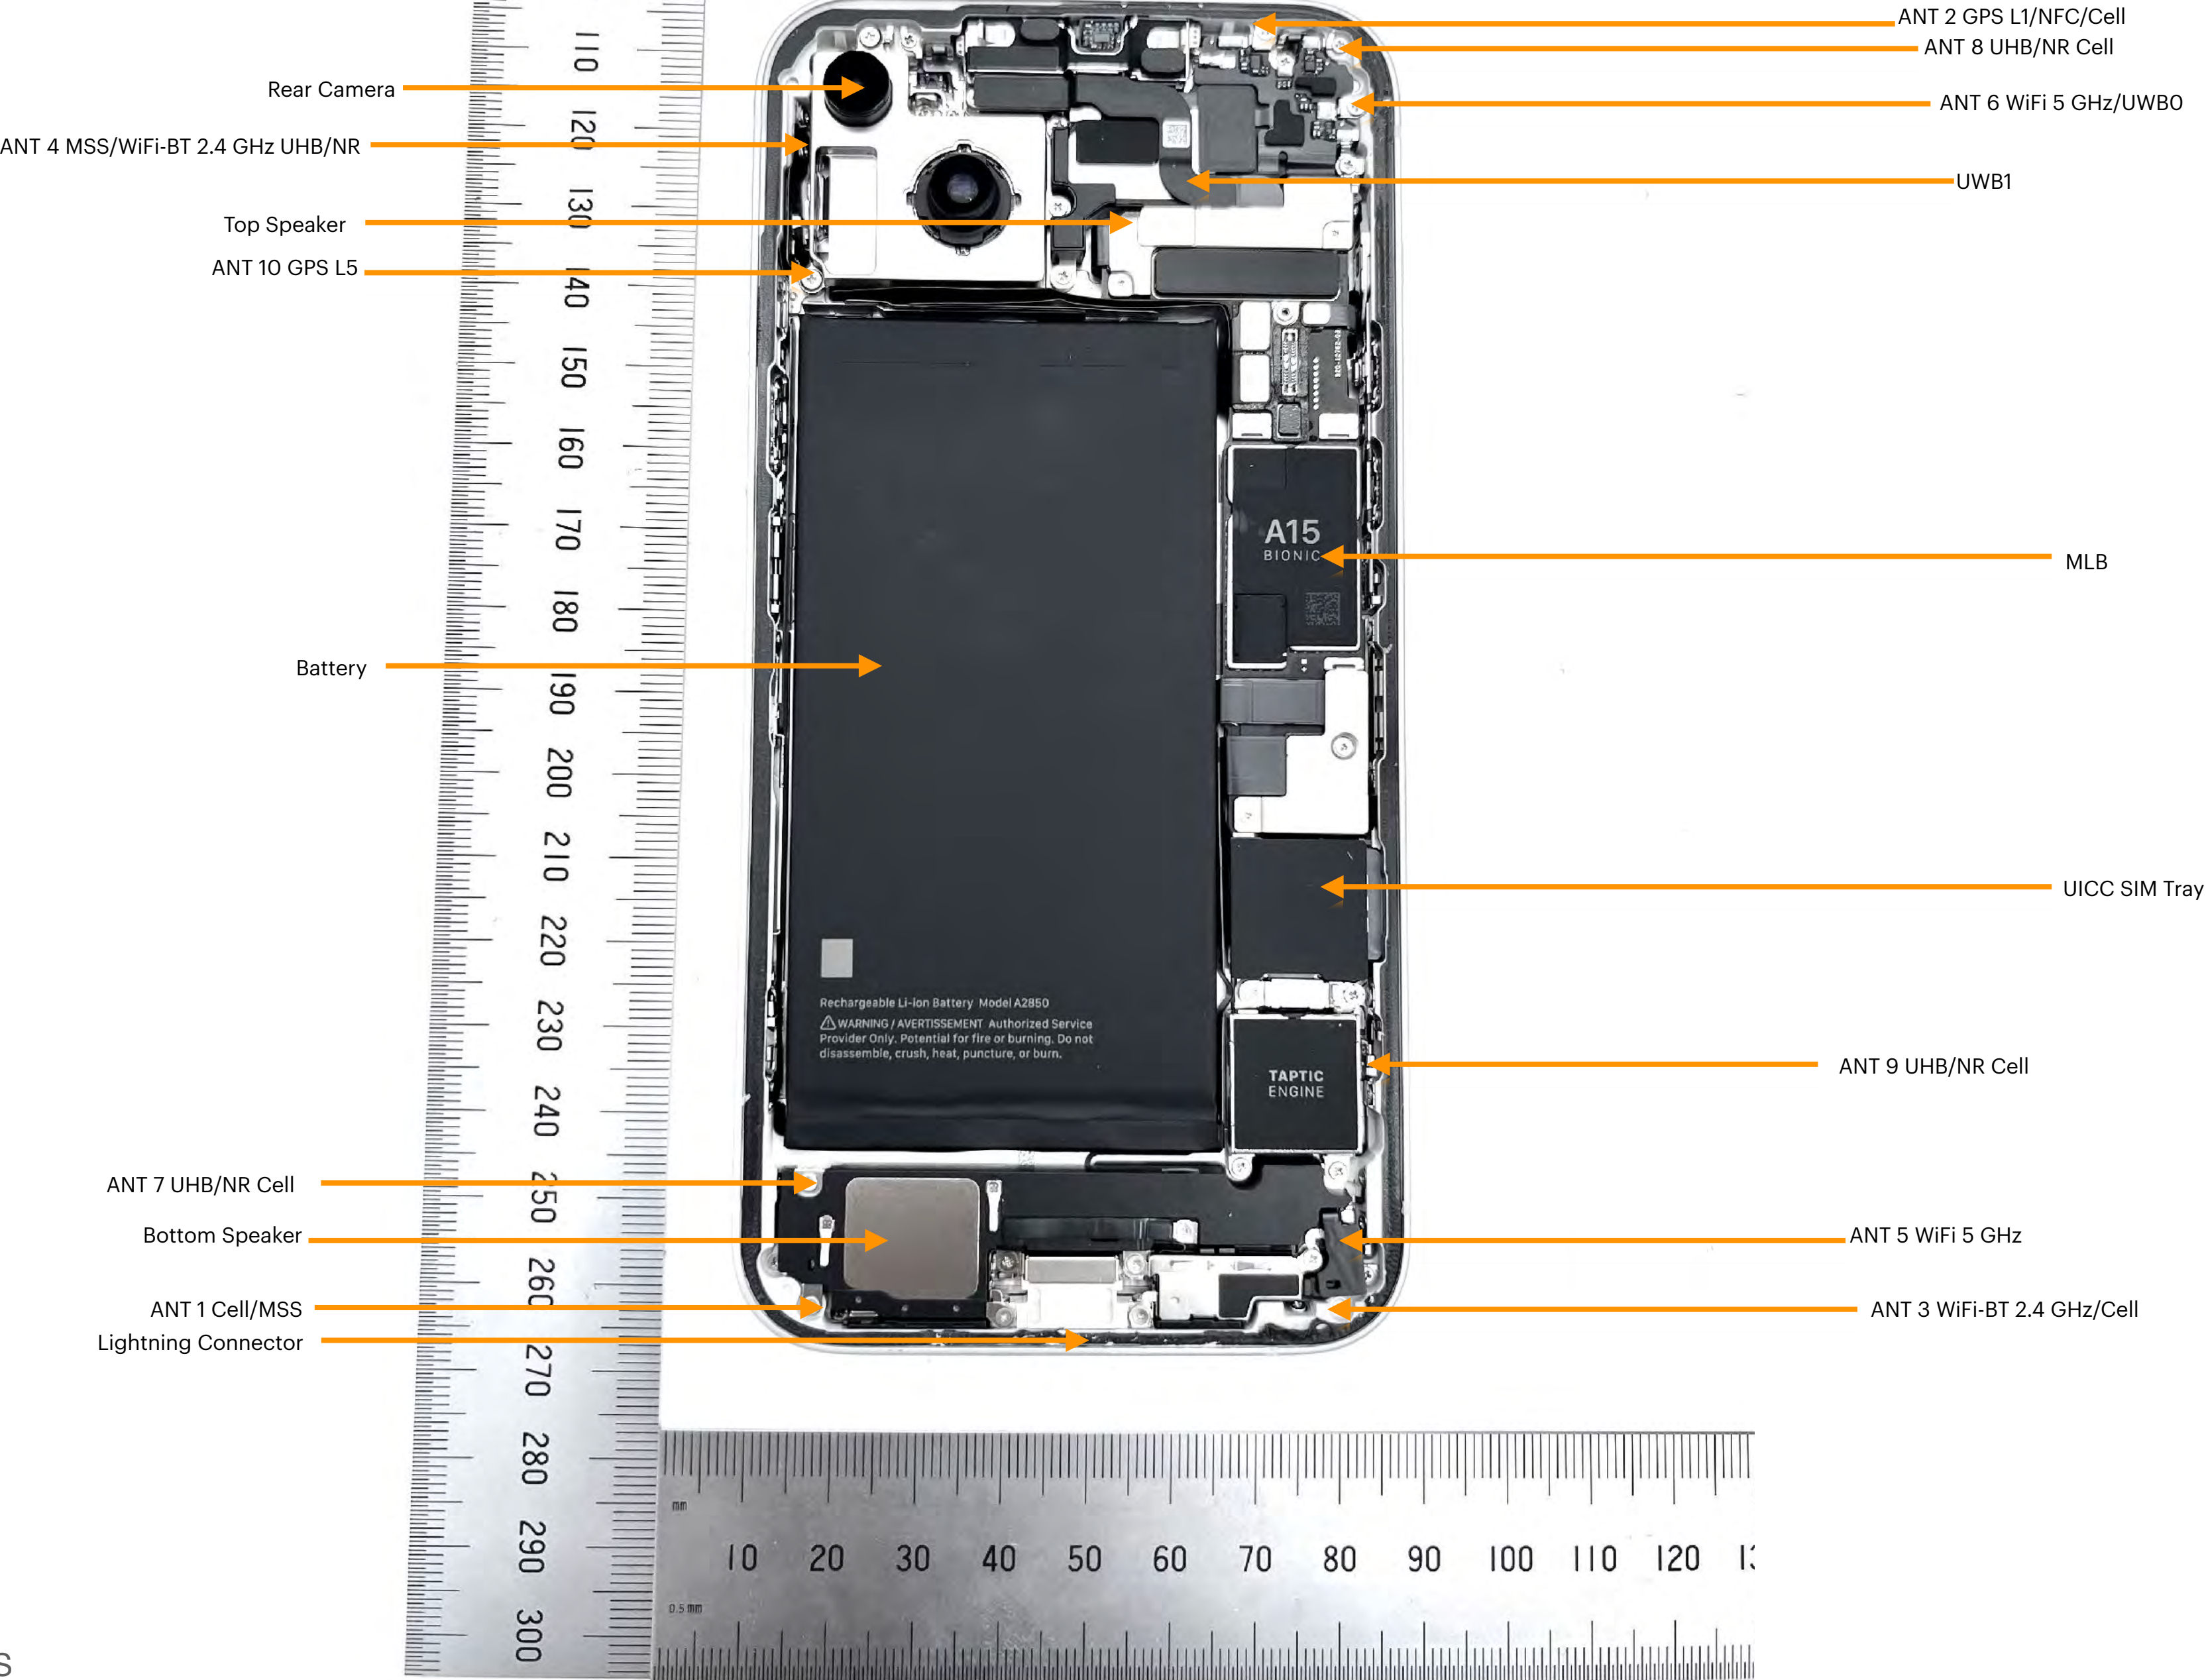

A2885, A2886, A2887, A2888

Back Plate - Front



A2885, A2886, A2887, A2888

Back Plate - Back



A2885, A2886, A2887, A2888


Rear Camera - Front






A2885, A2886, A2887, A2888

Bottom Speaker - Front

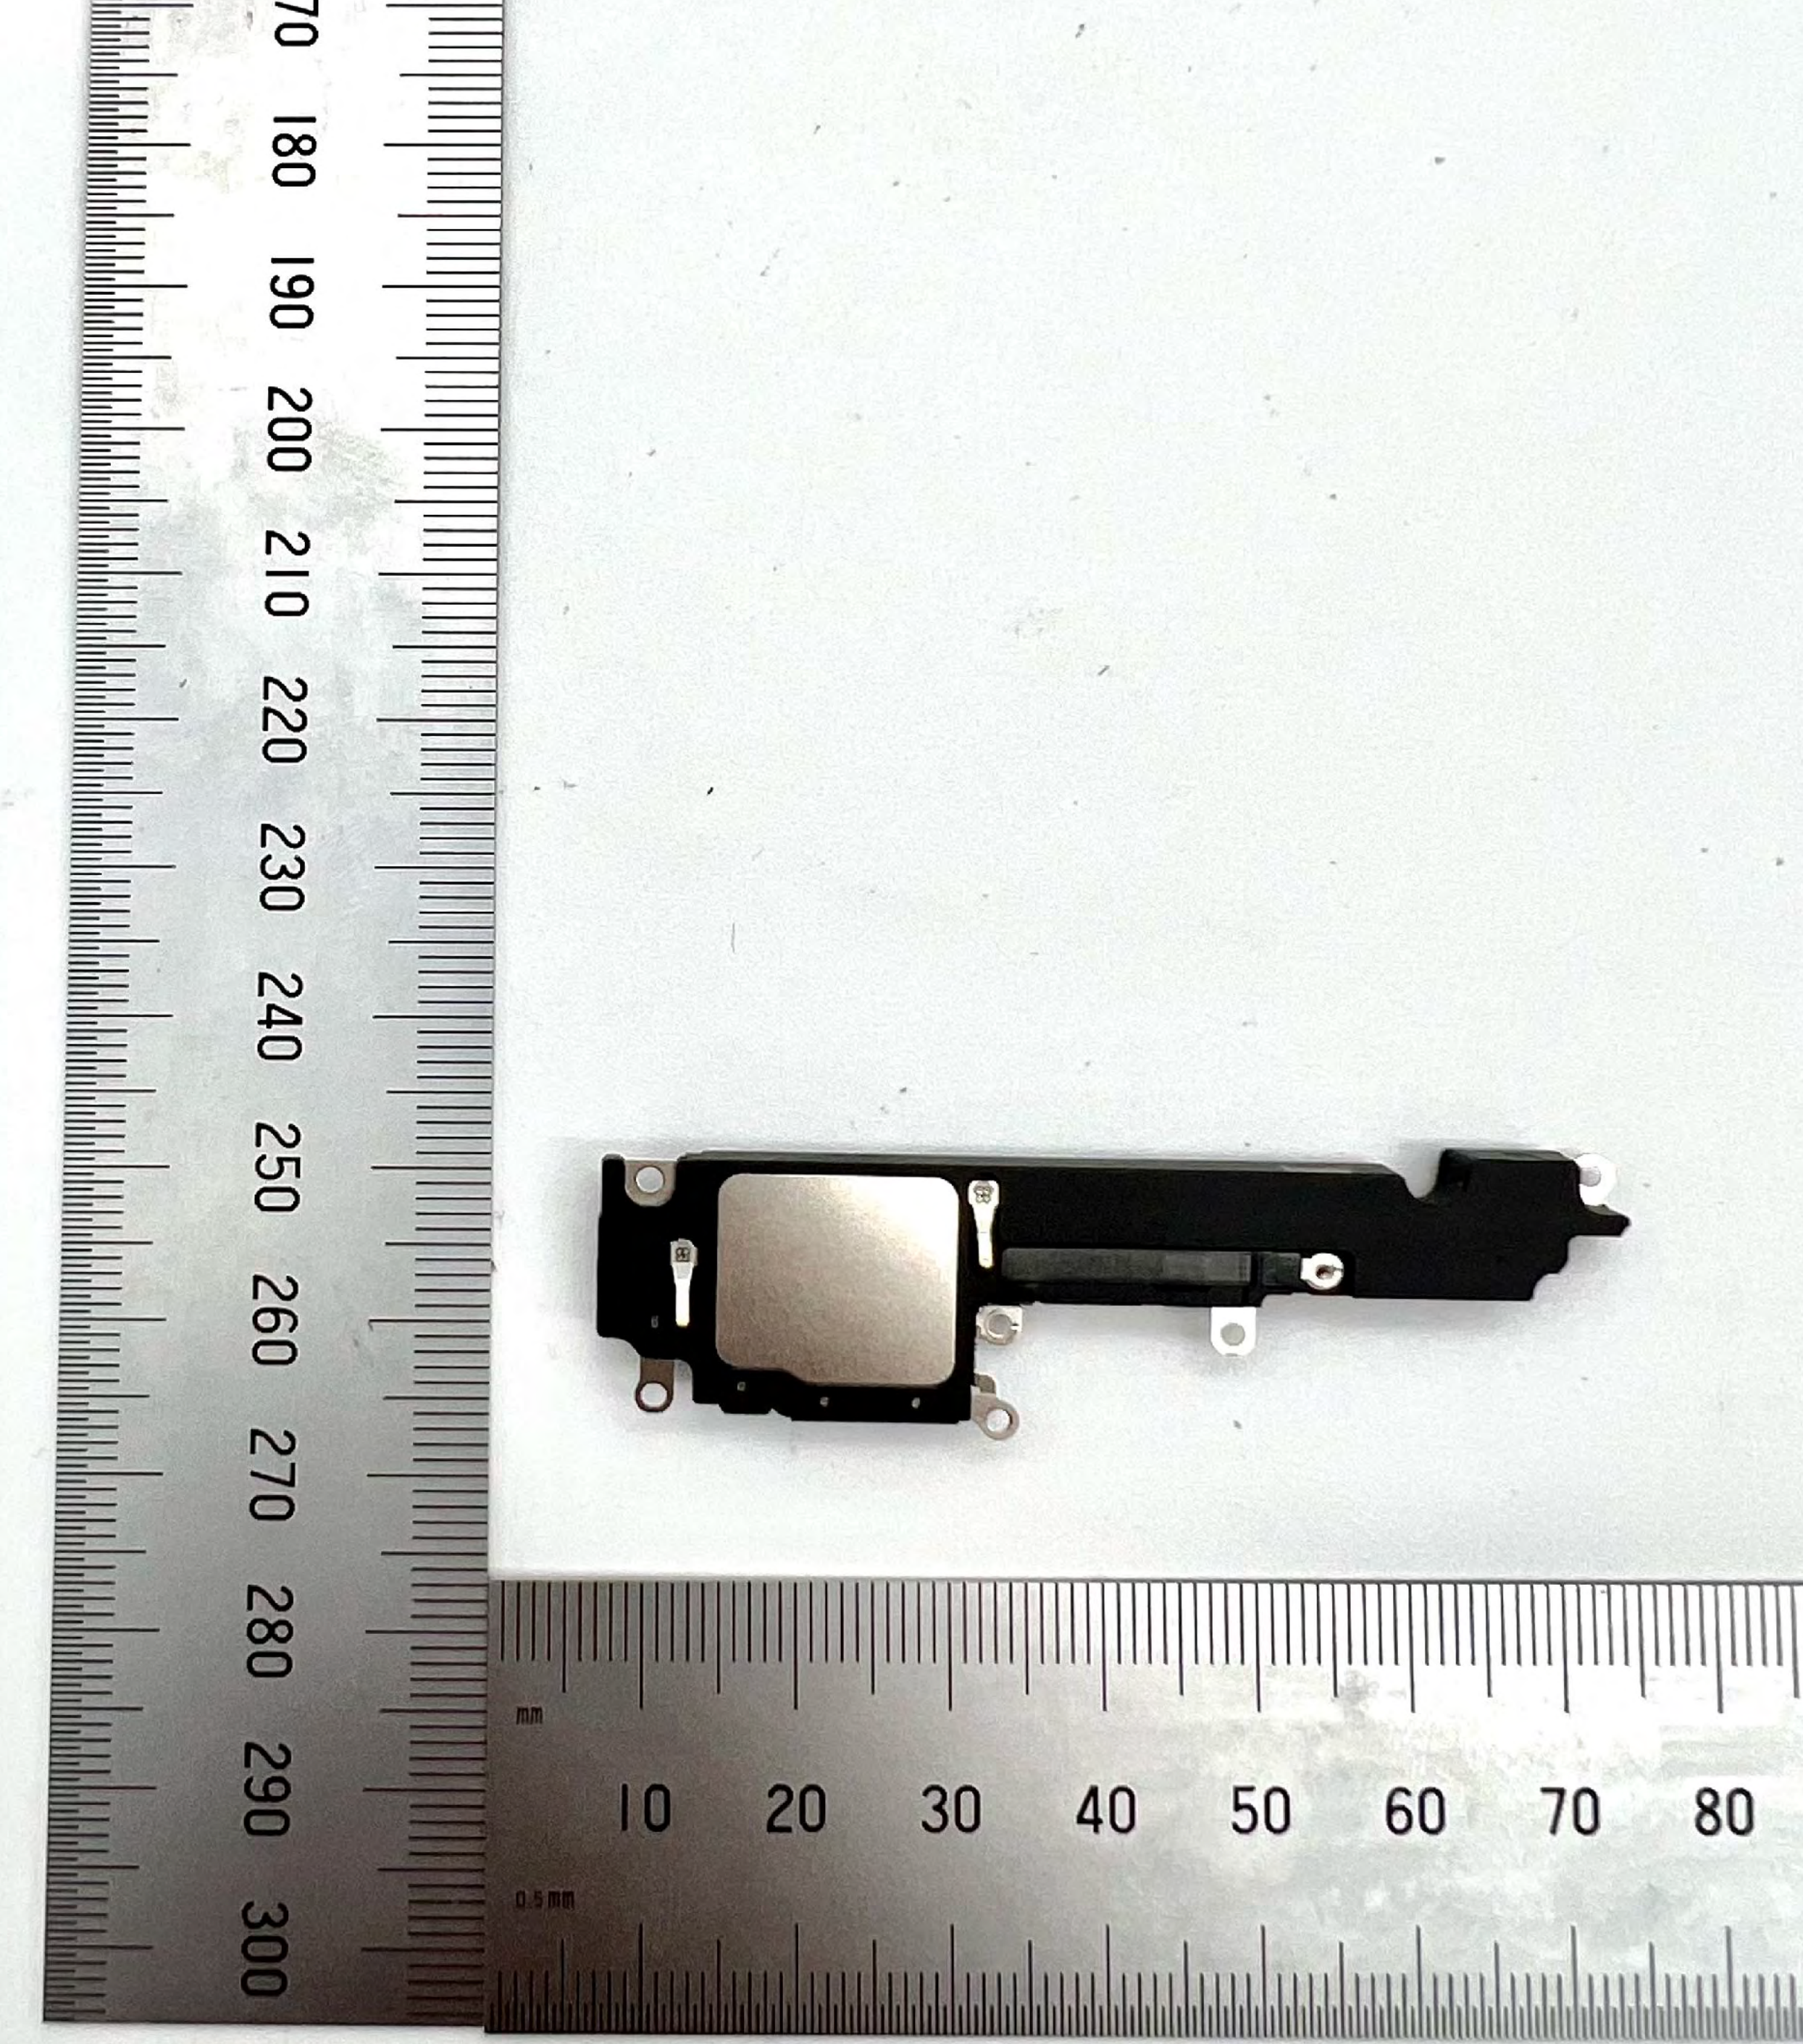


A2885, A2886, A2887, A2888

Bottom Speaker - Back

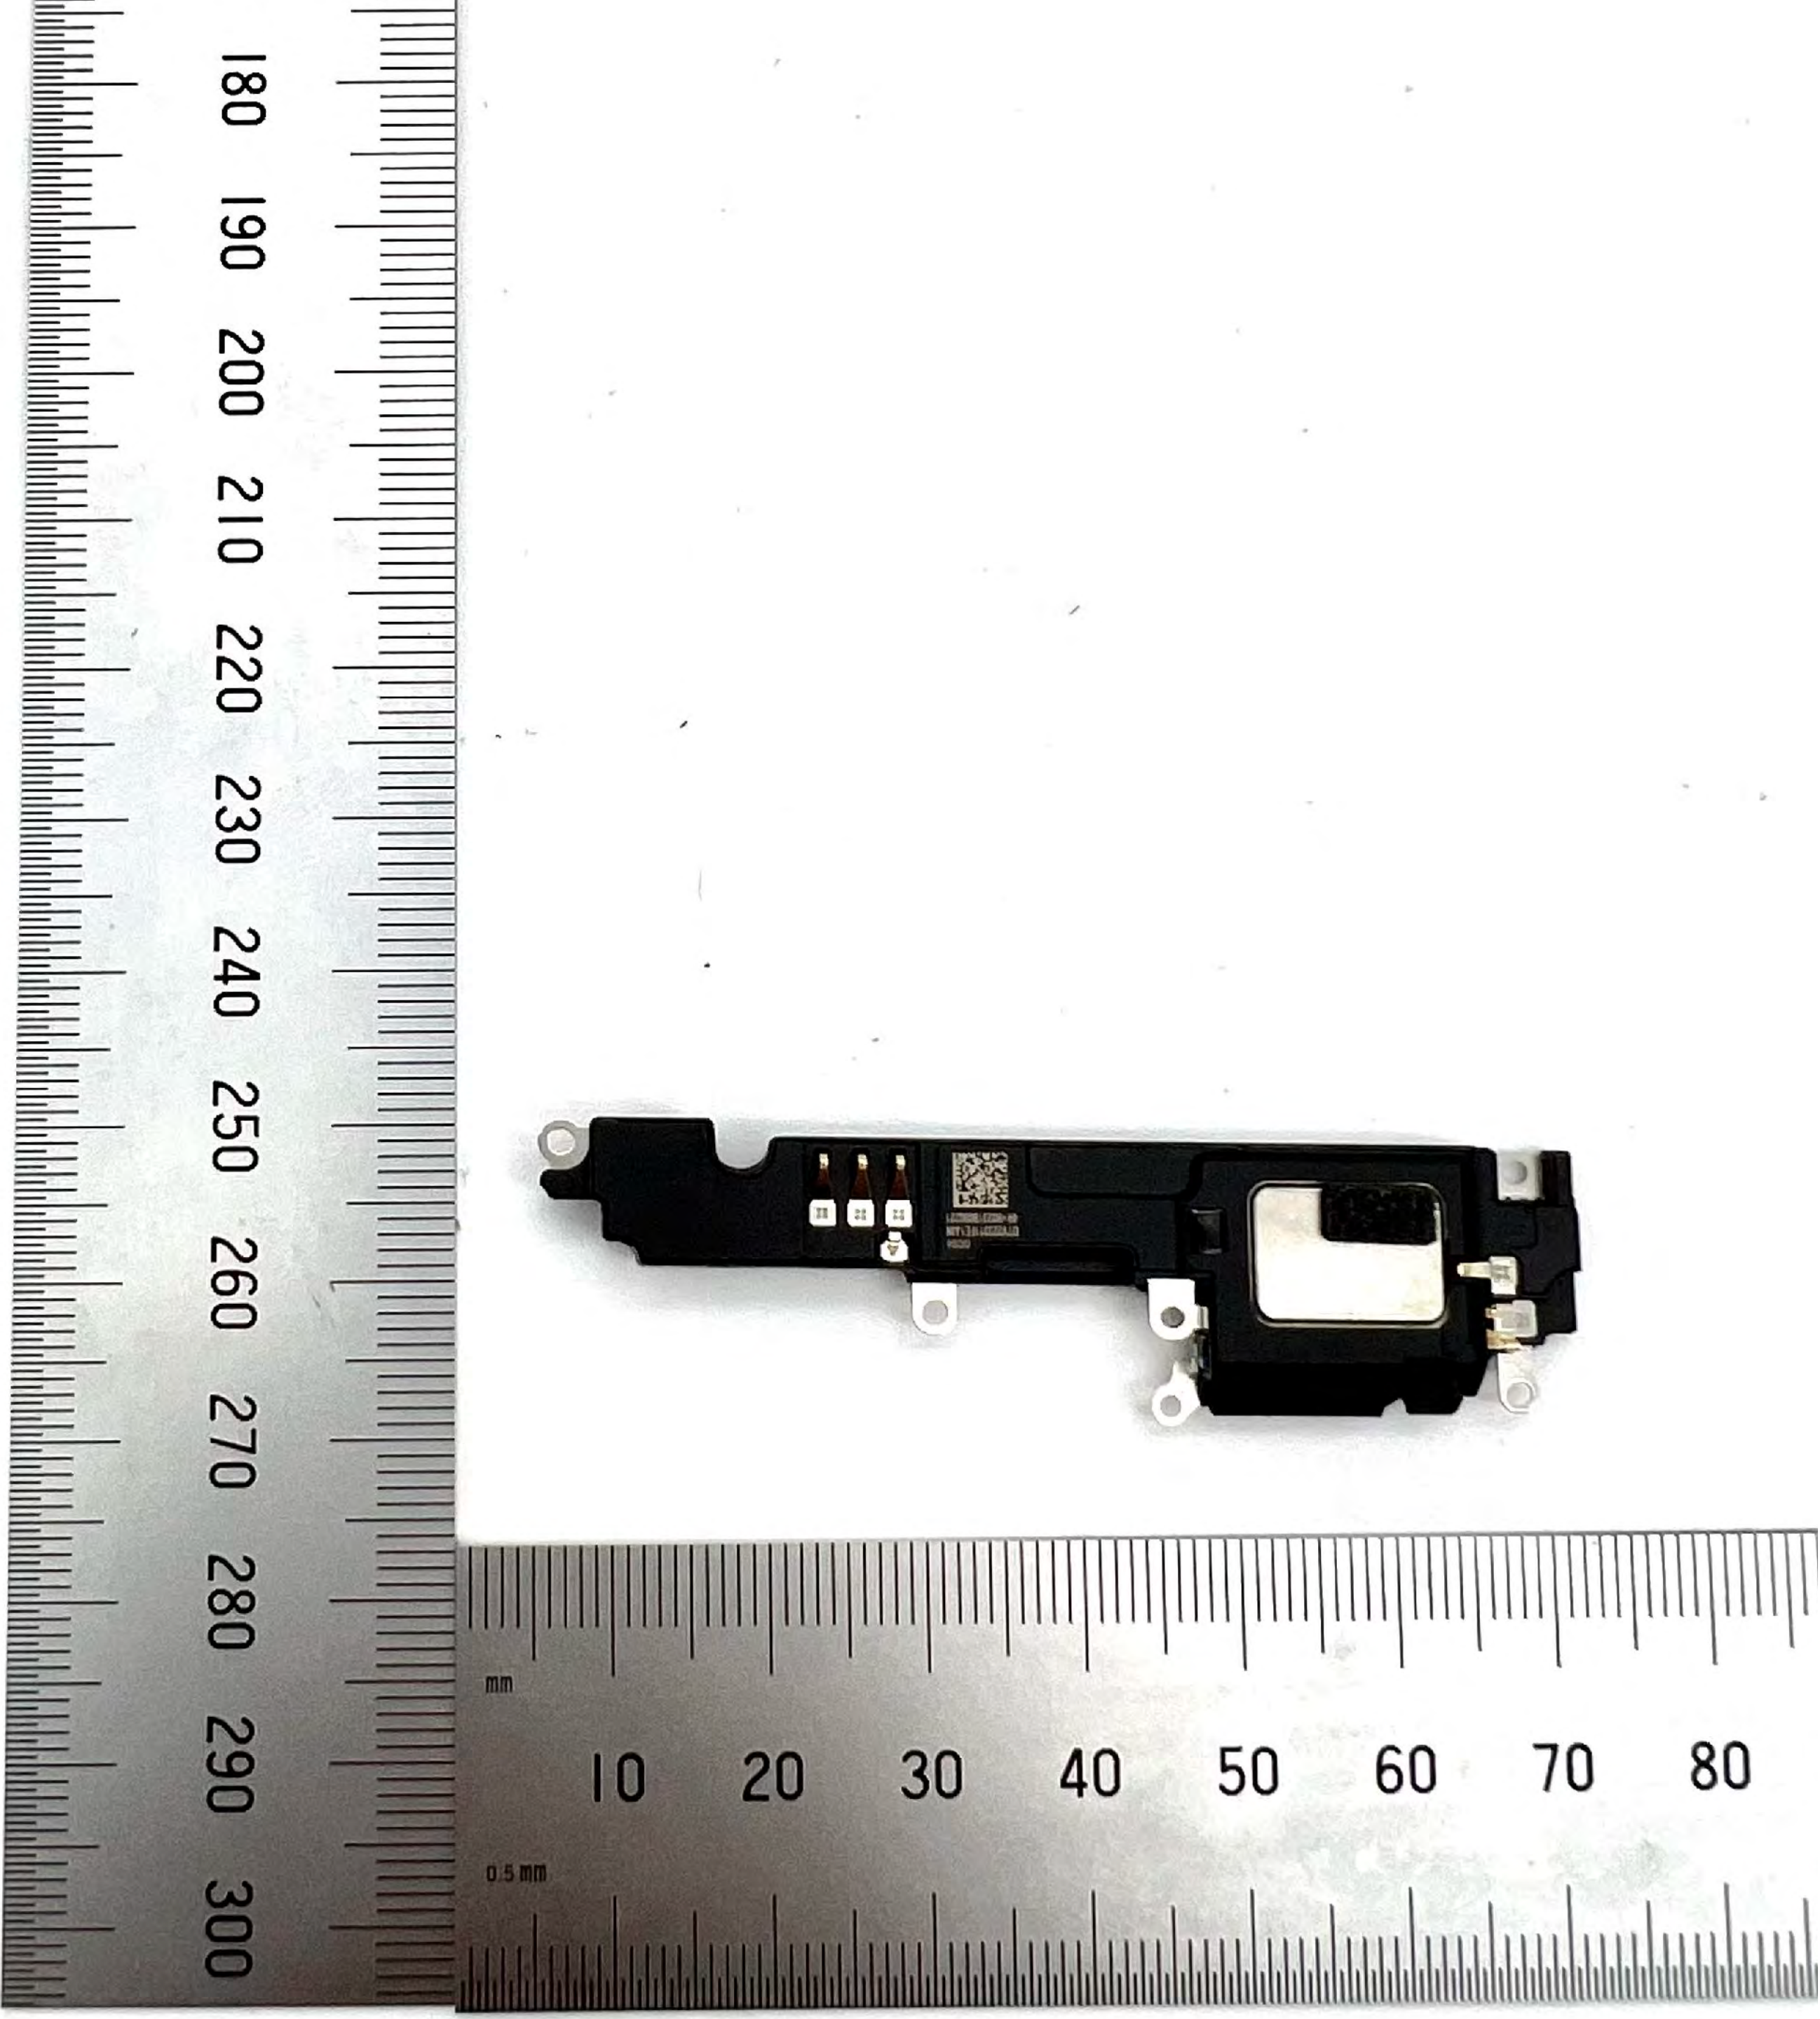

A2885, A2886, A2887, A2888


Flex Assembly with Proximity Sensor,
Microphone and FaceTime Camera - Front

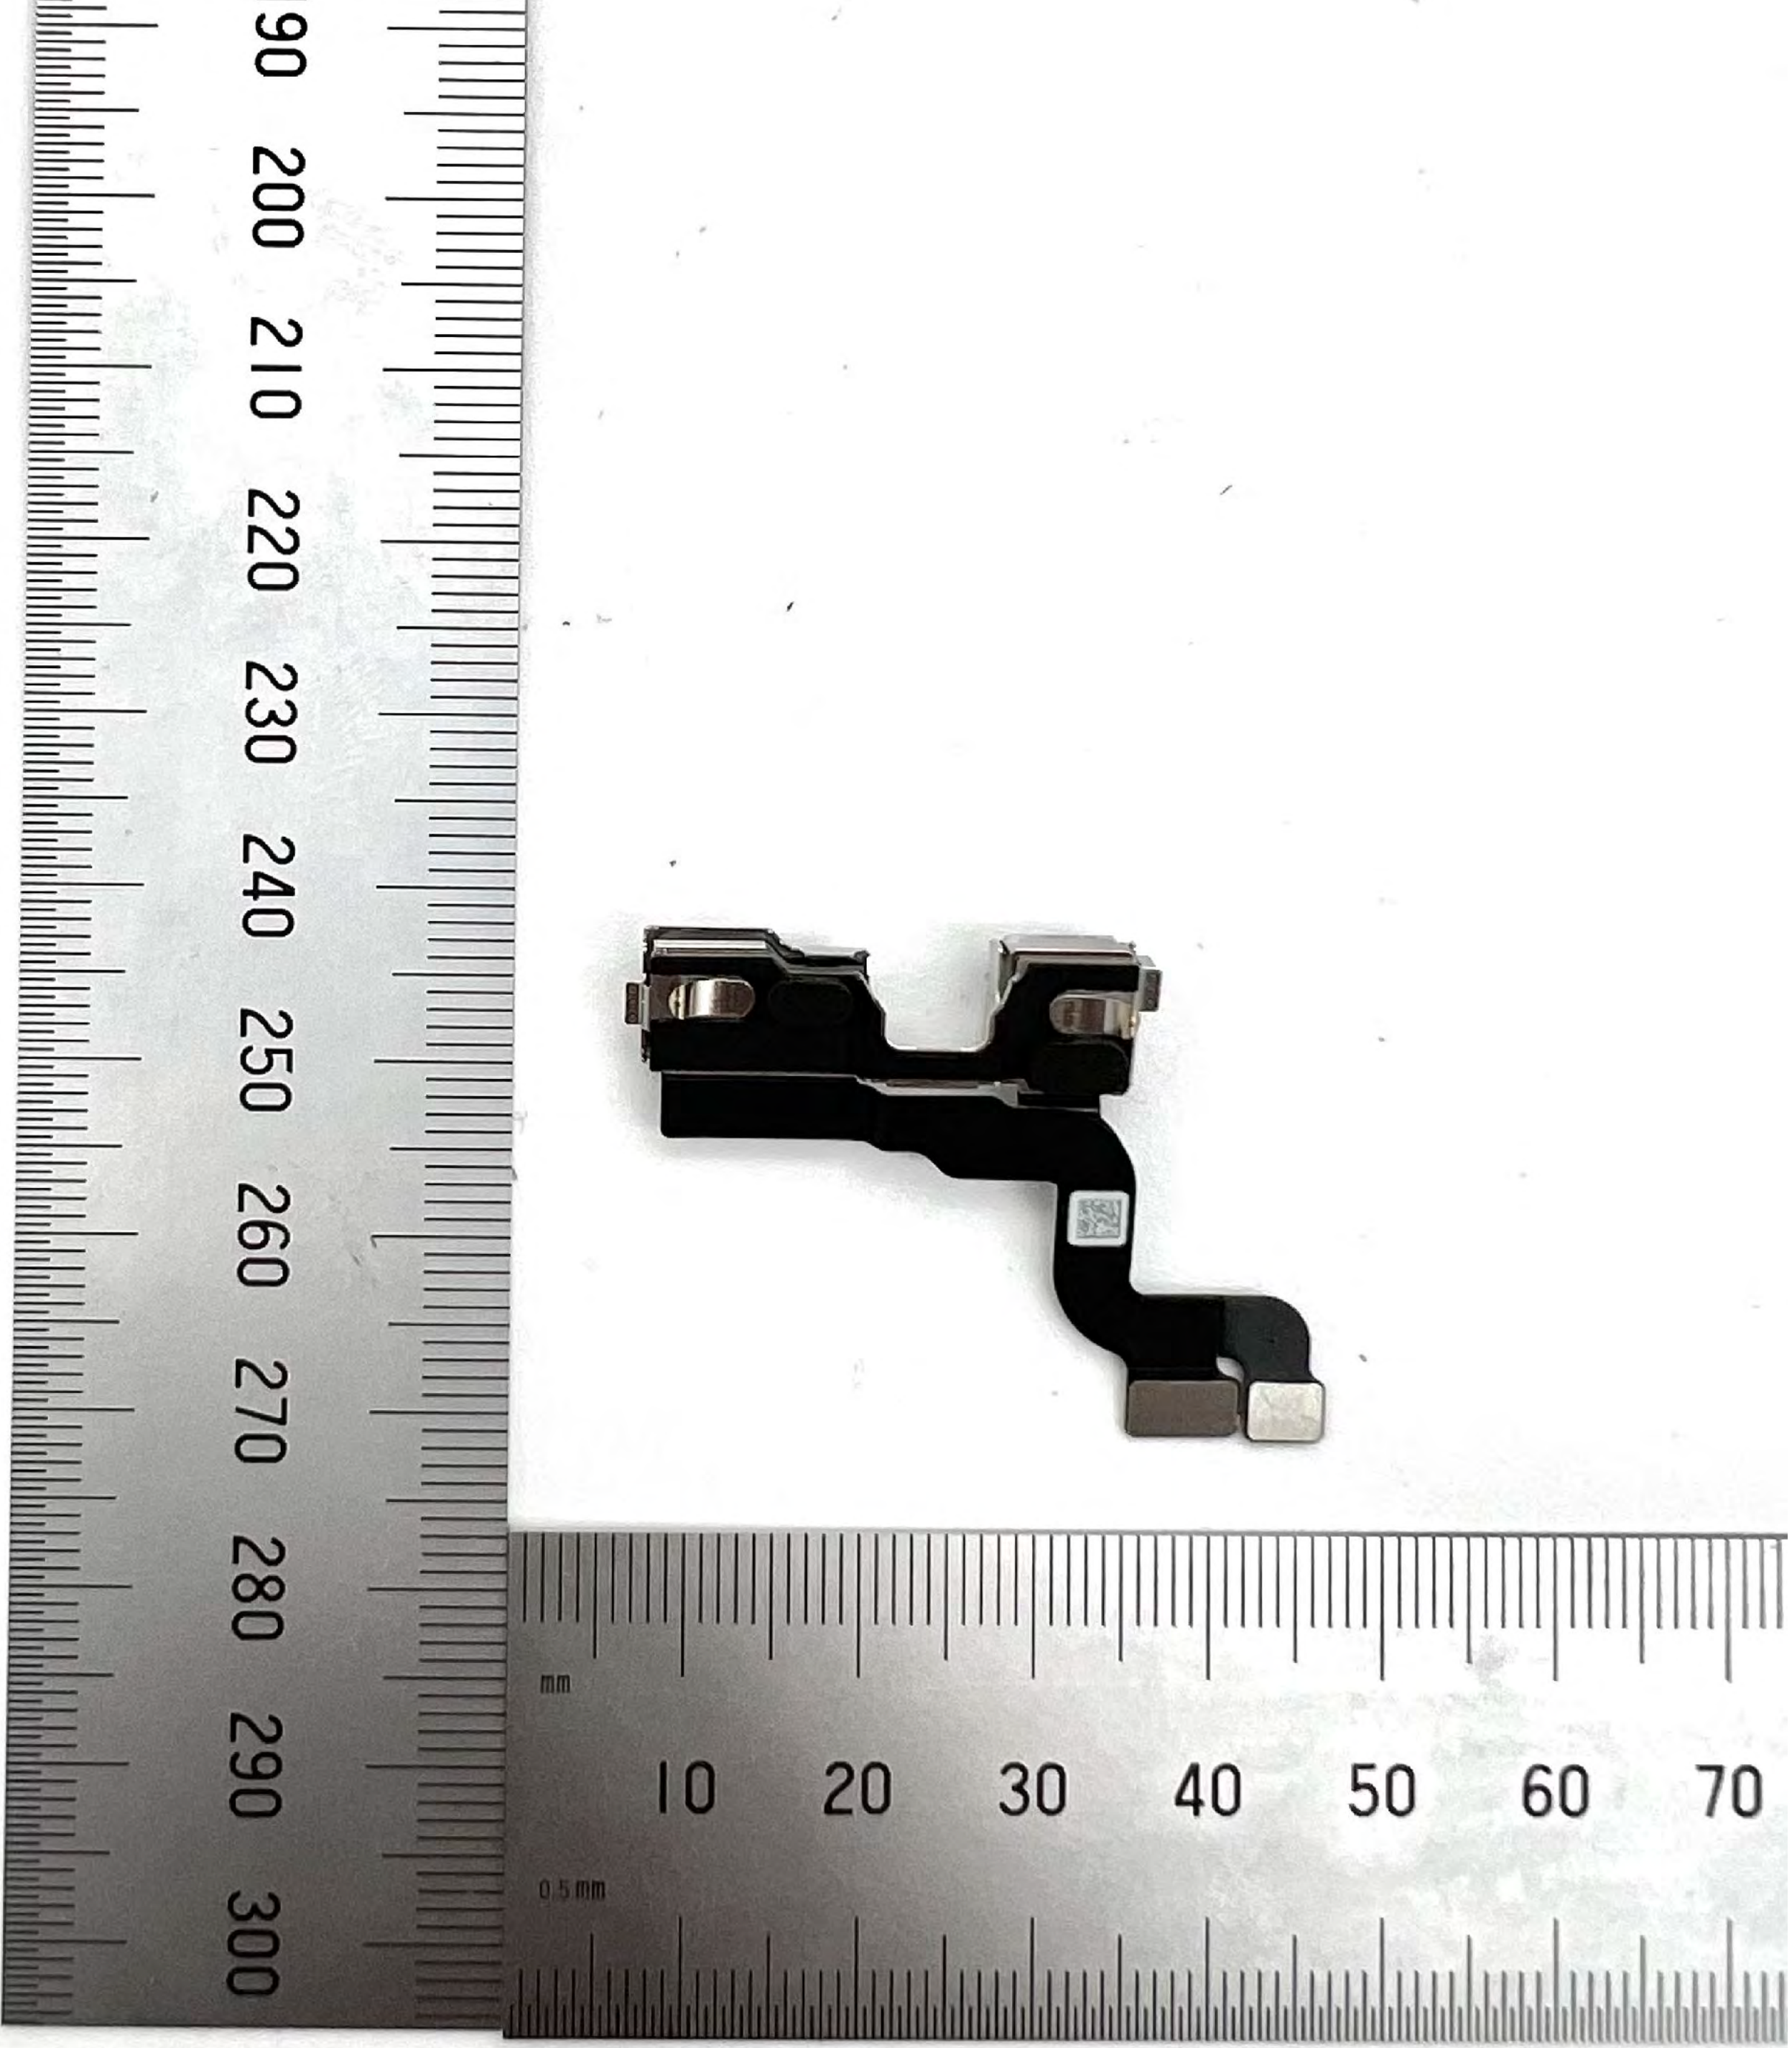


A2885, A2886, A2887, A2888

Flex Assembly with Proximity Sensor,


Microphone and FaceTime Camera - Back

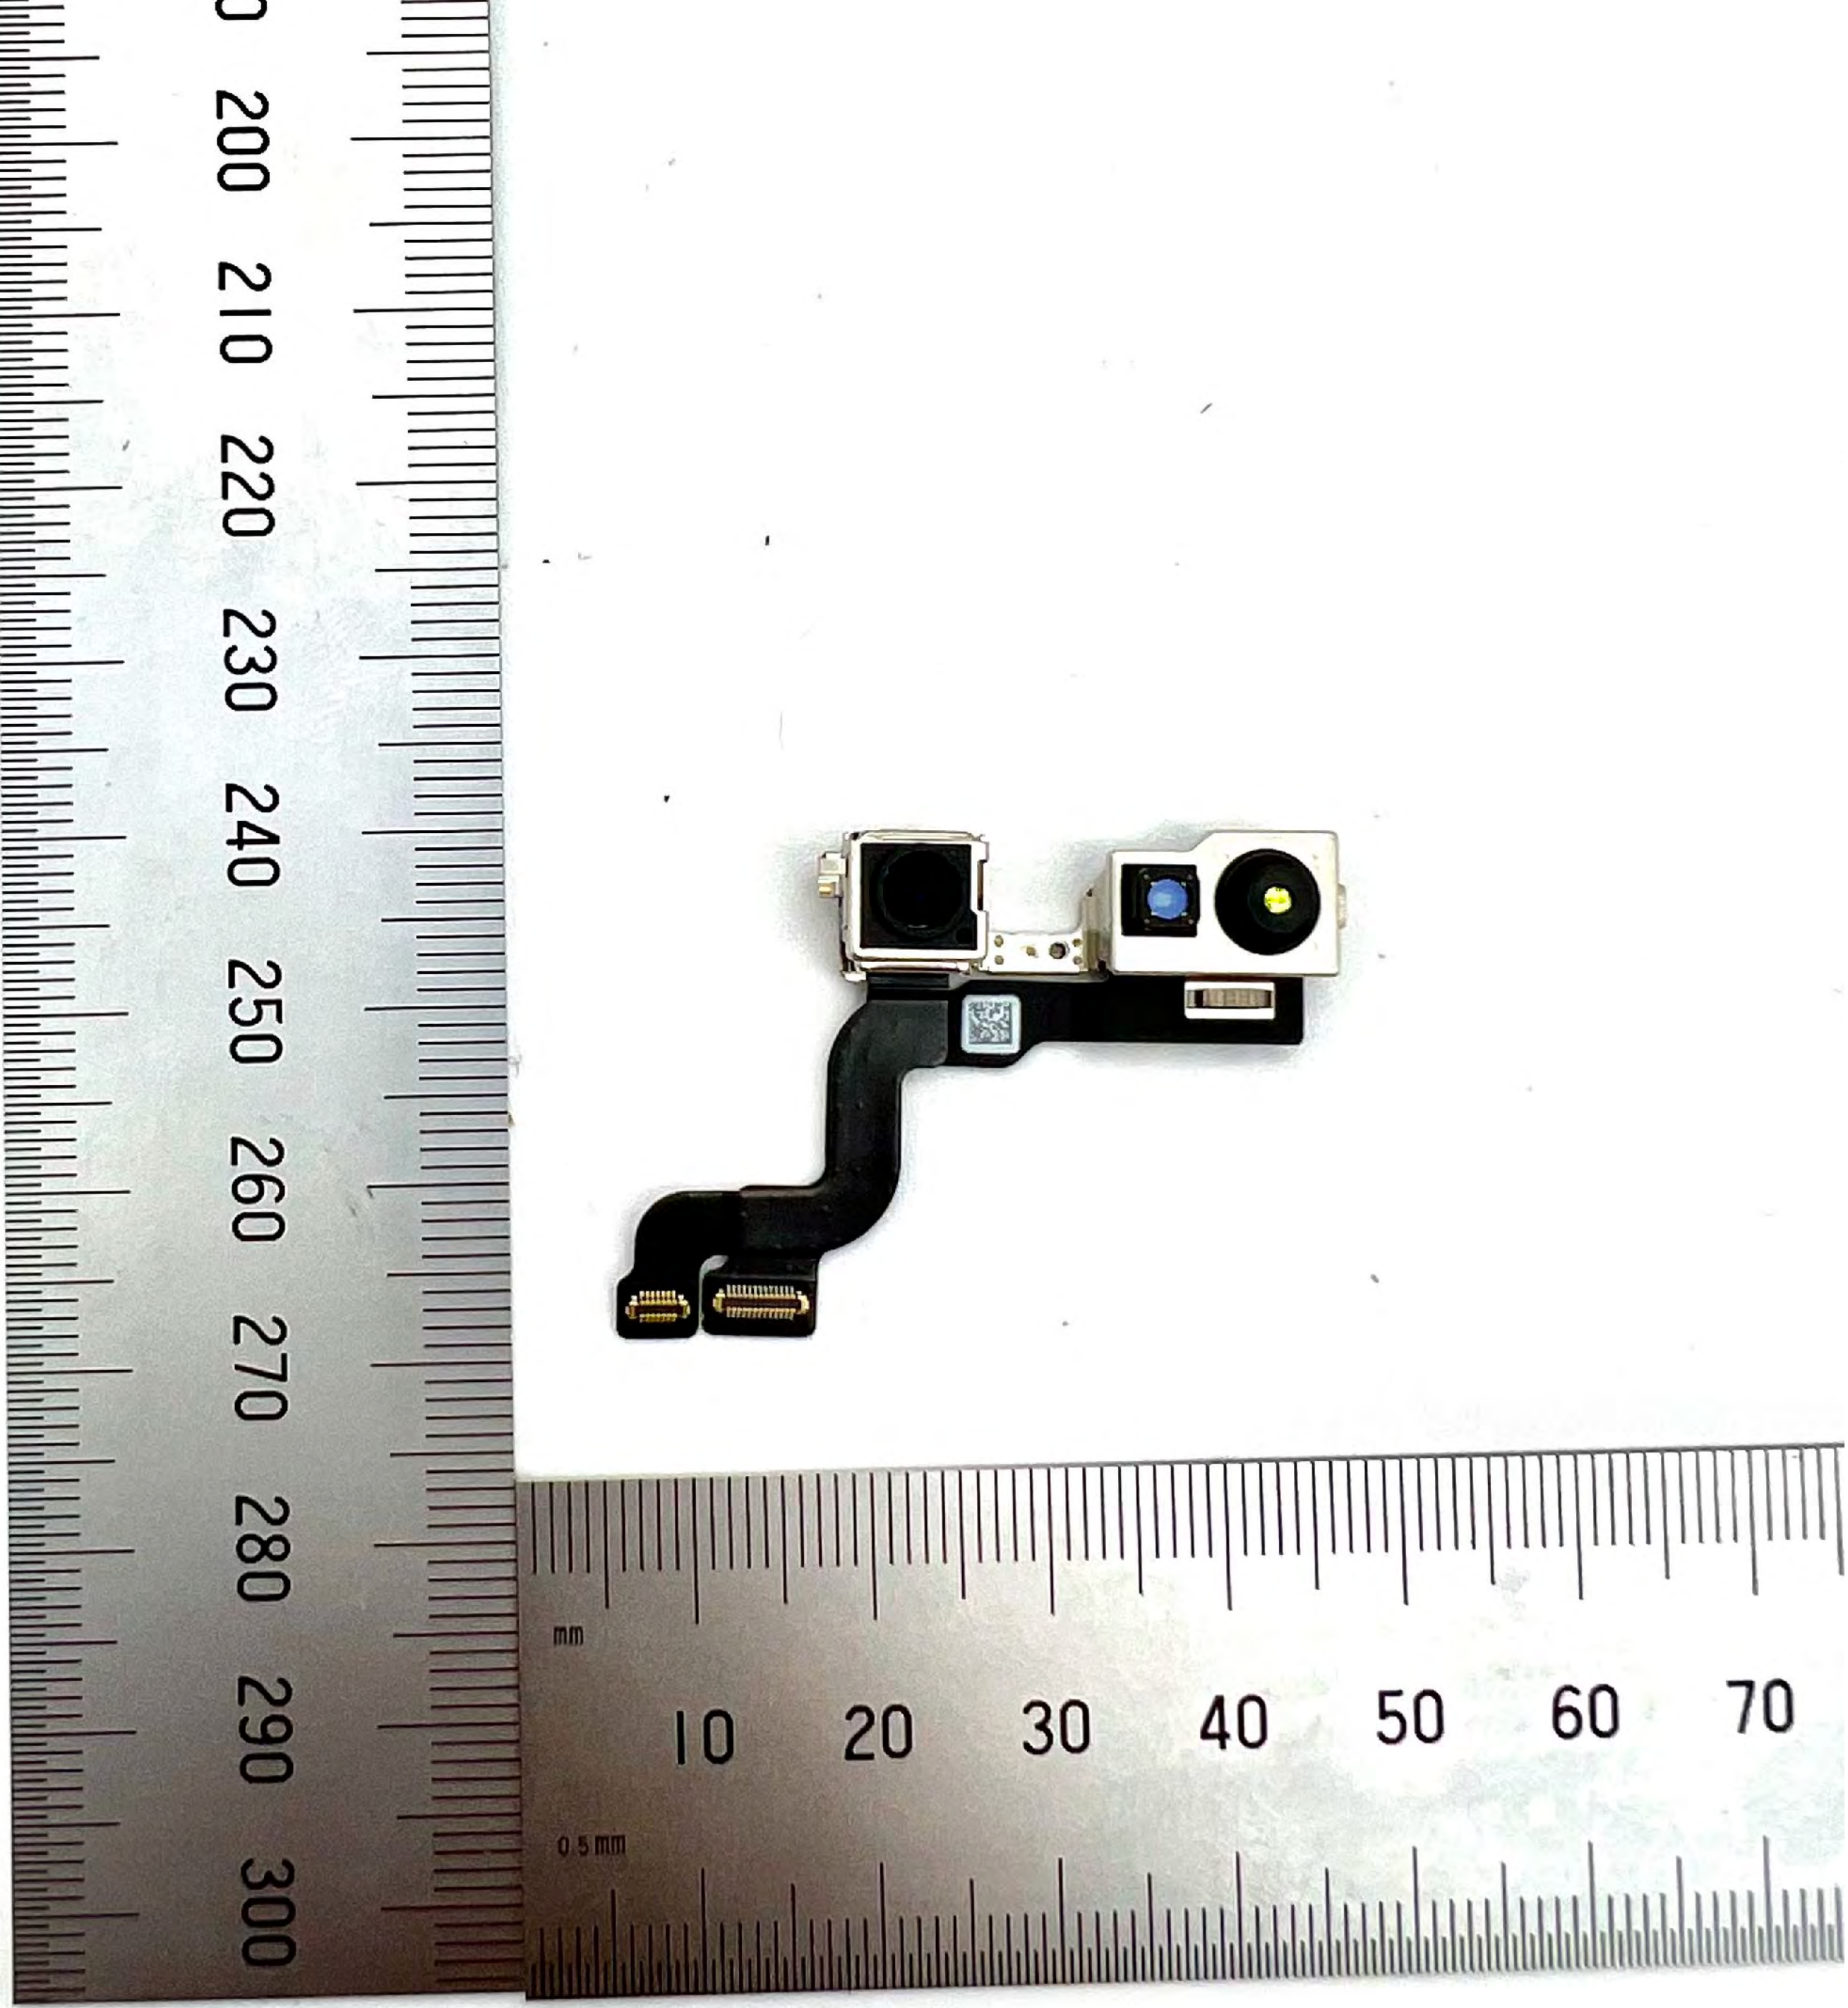


A2885, A2886, A2887, A2888
Top Speaker and Flex Assembly
with ANT2, ANT8, ANT6/
SharedUWB0, UWB1 - Front

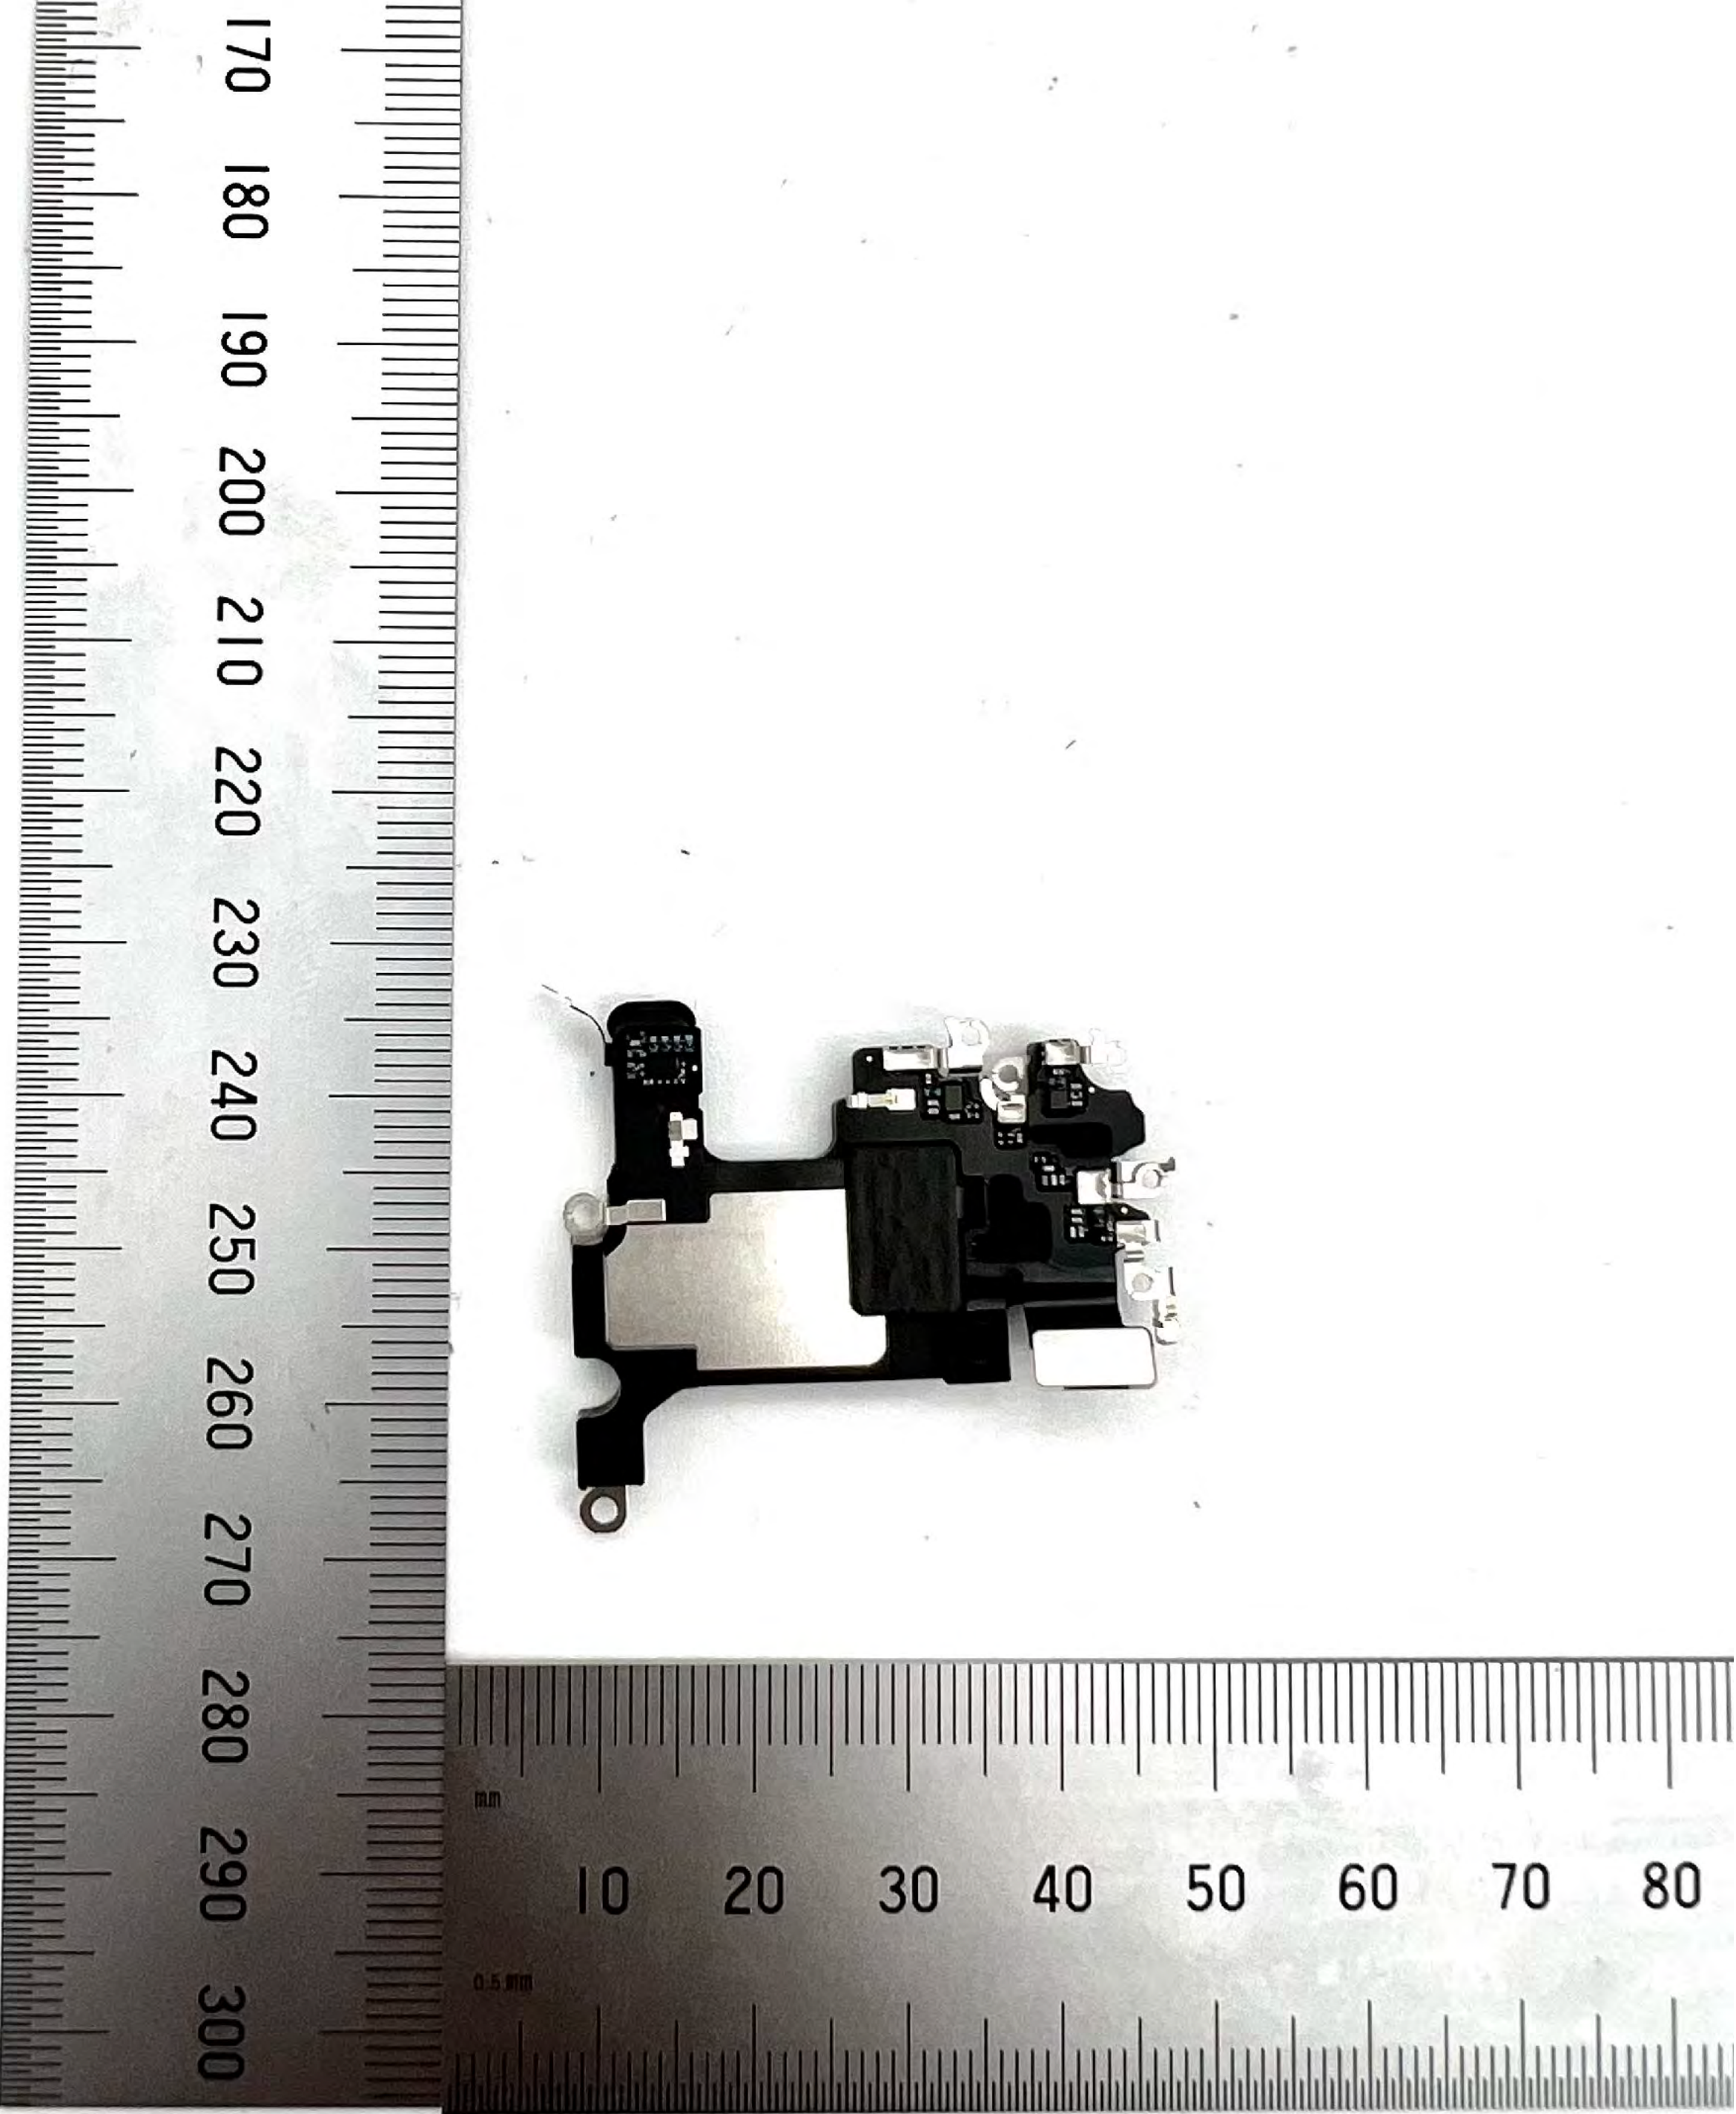


Top Speaker and Flex Assembly with ANT2, ANT8, ANT6/ SharedUWB0, UWB1 - Back

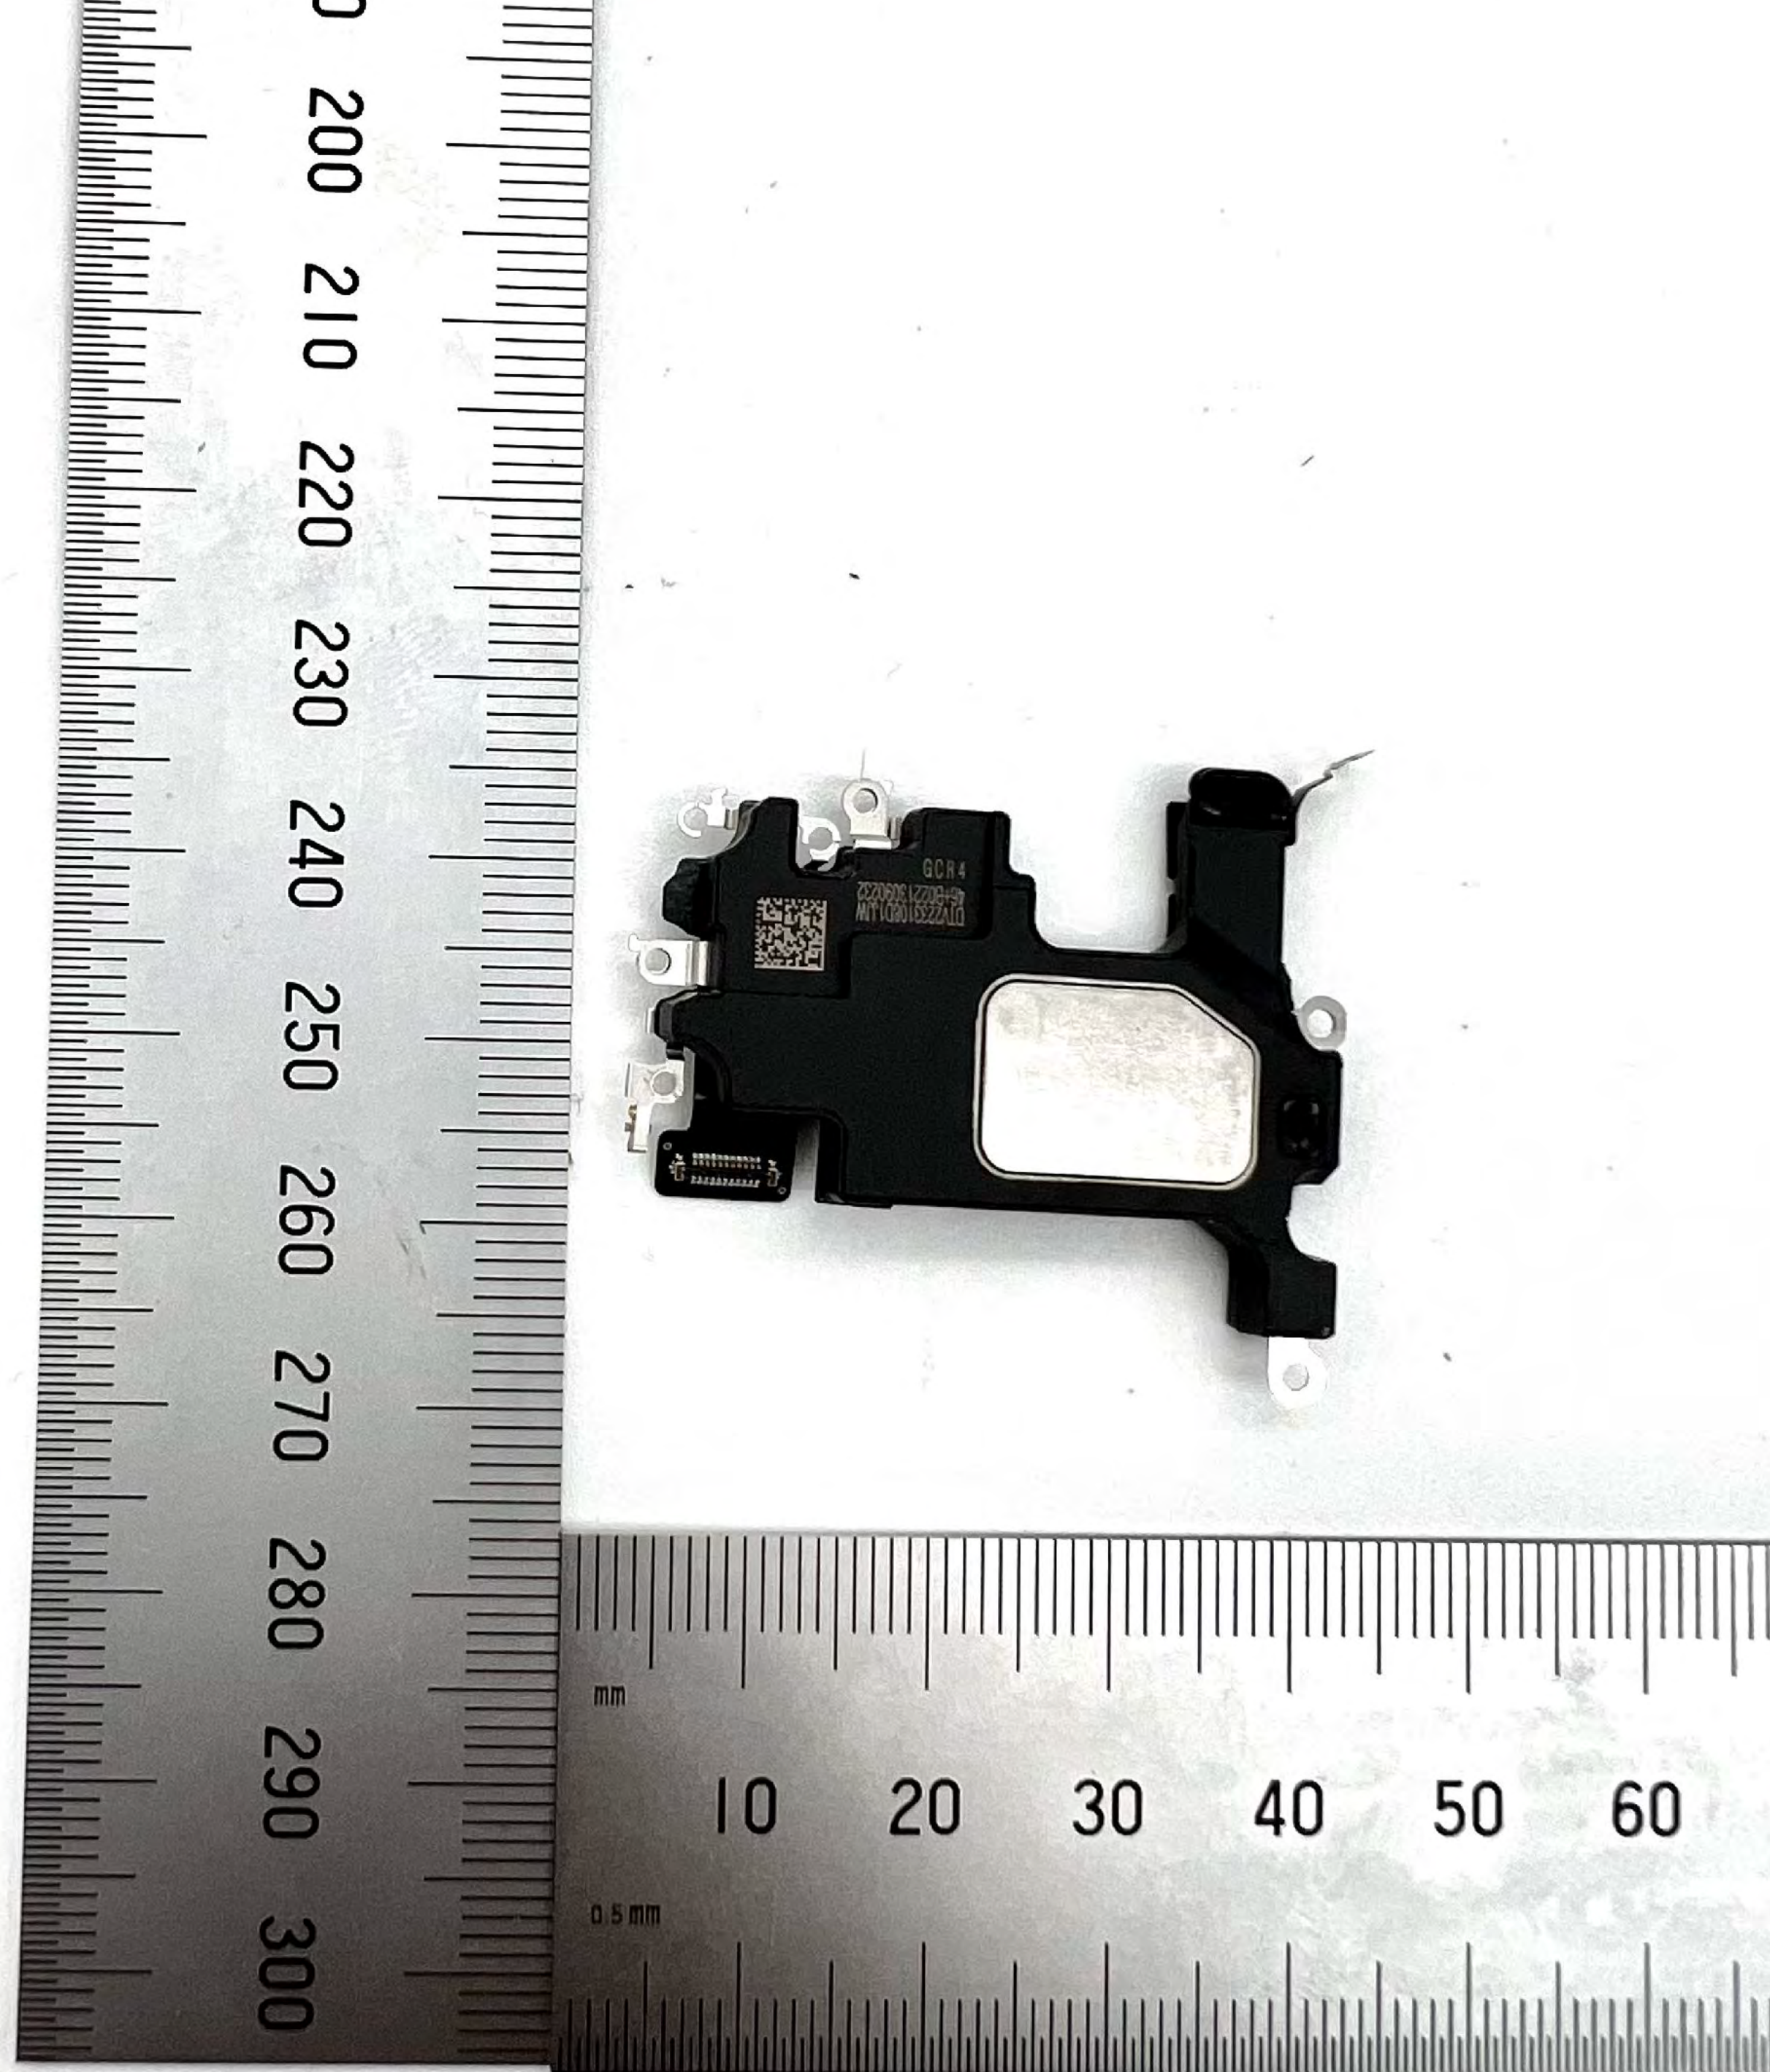

A2885, A2886, A2887, A2888
Flex Assembly with lightning
connector, Microphone, ANT3,
ANT1, ANT 7, ANT 5 and ANT9 -
Front

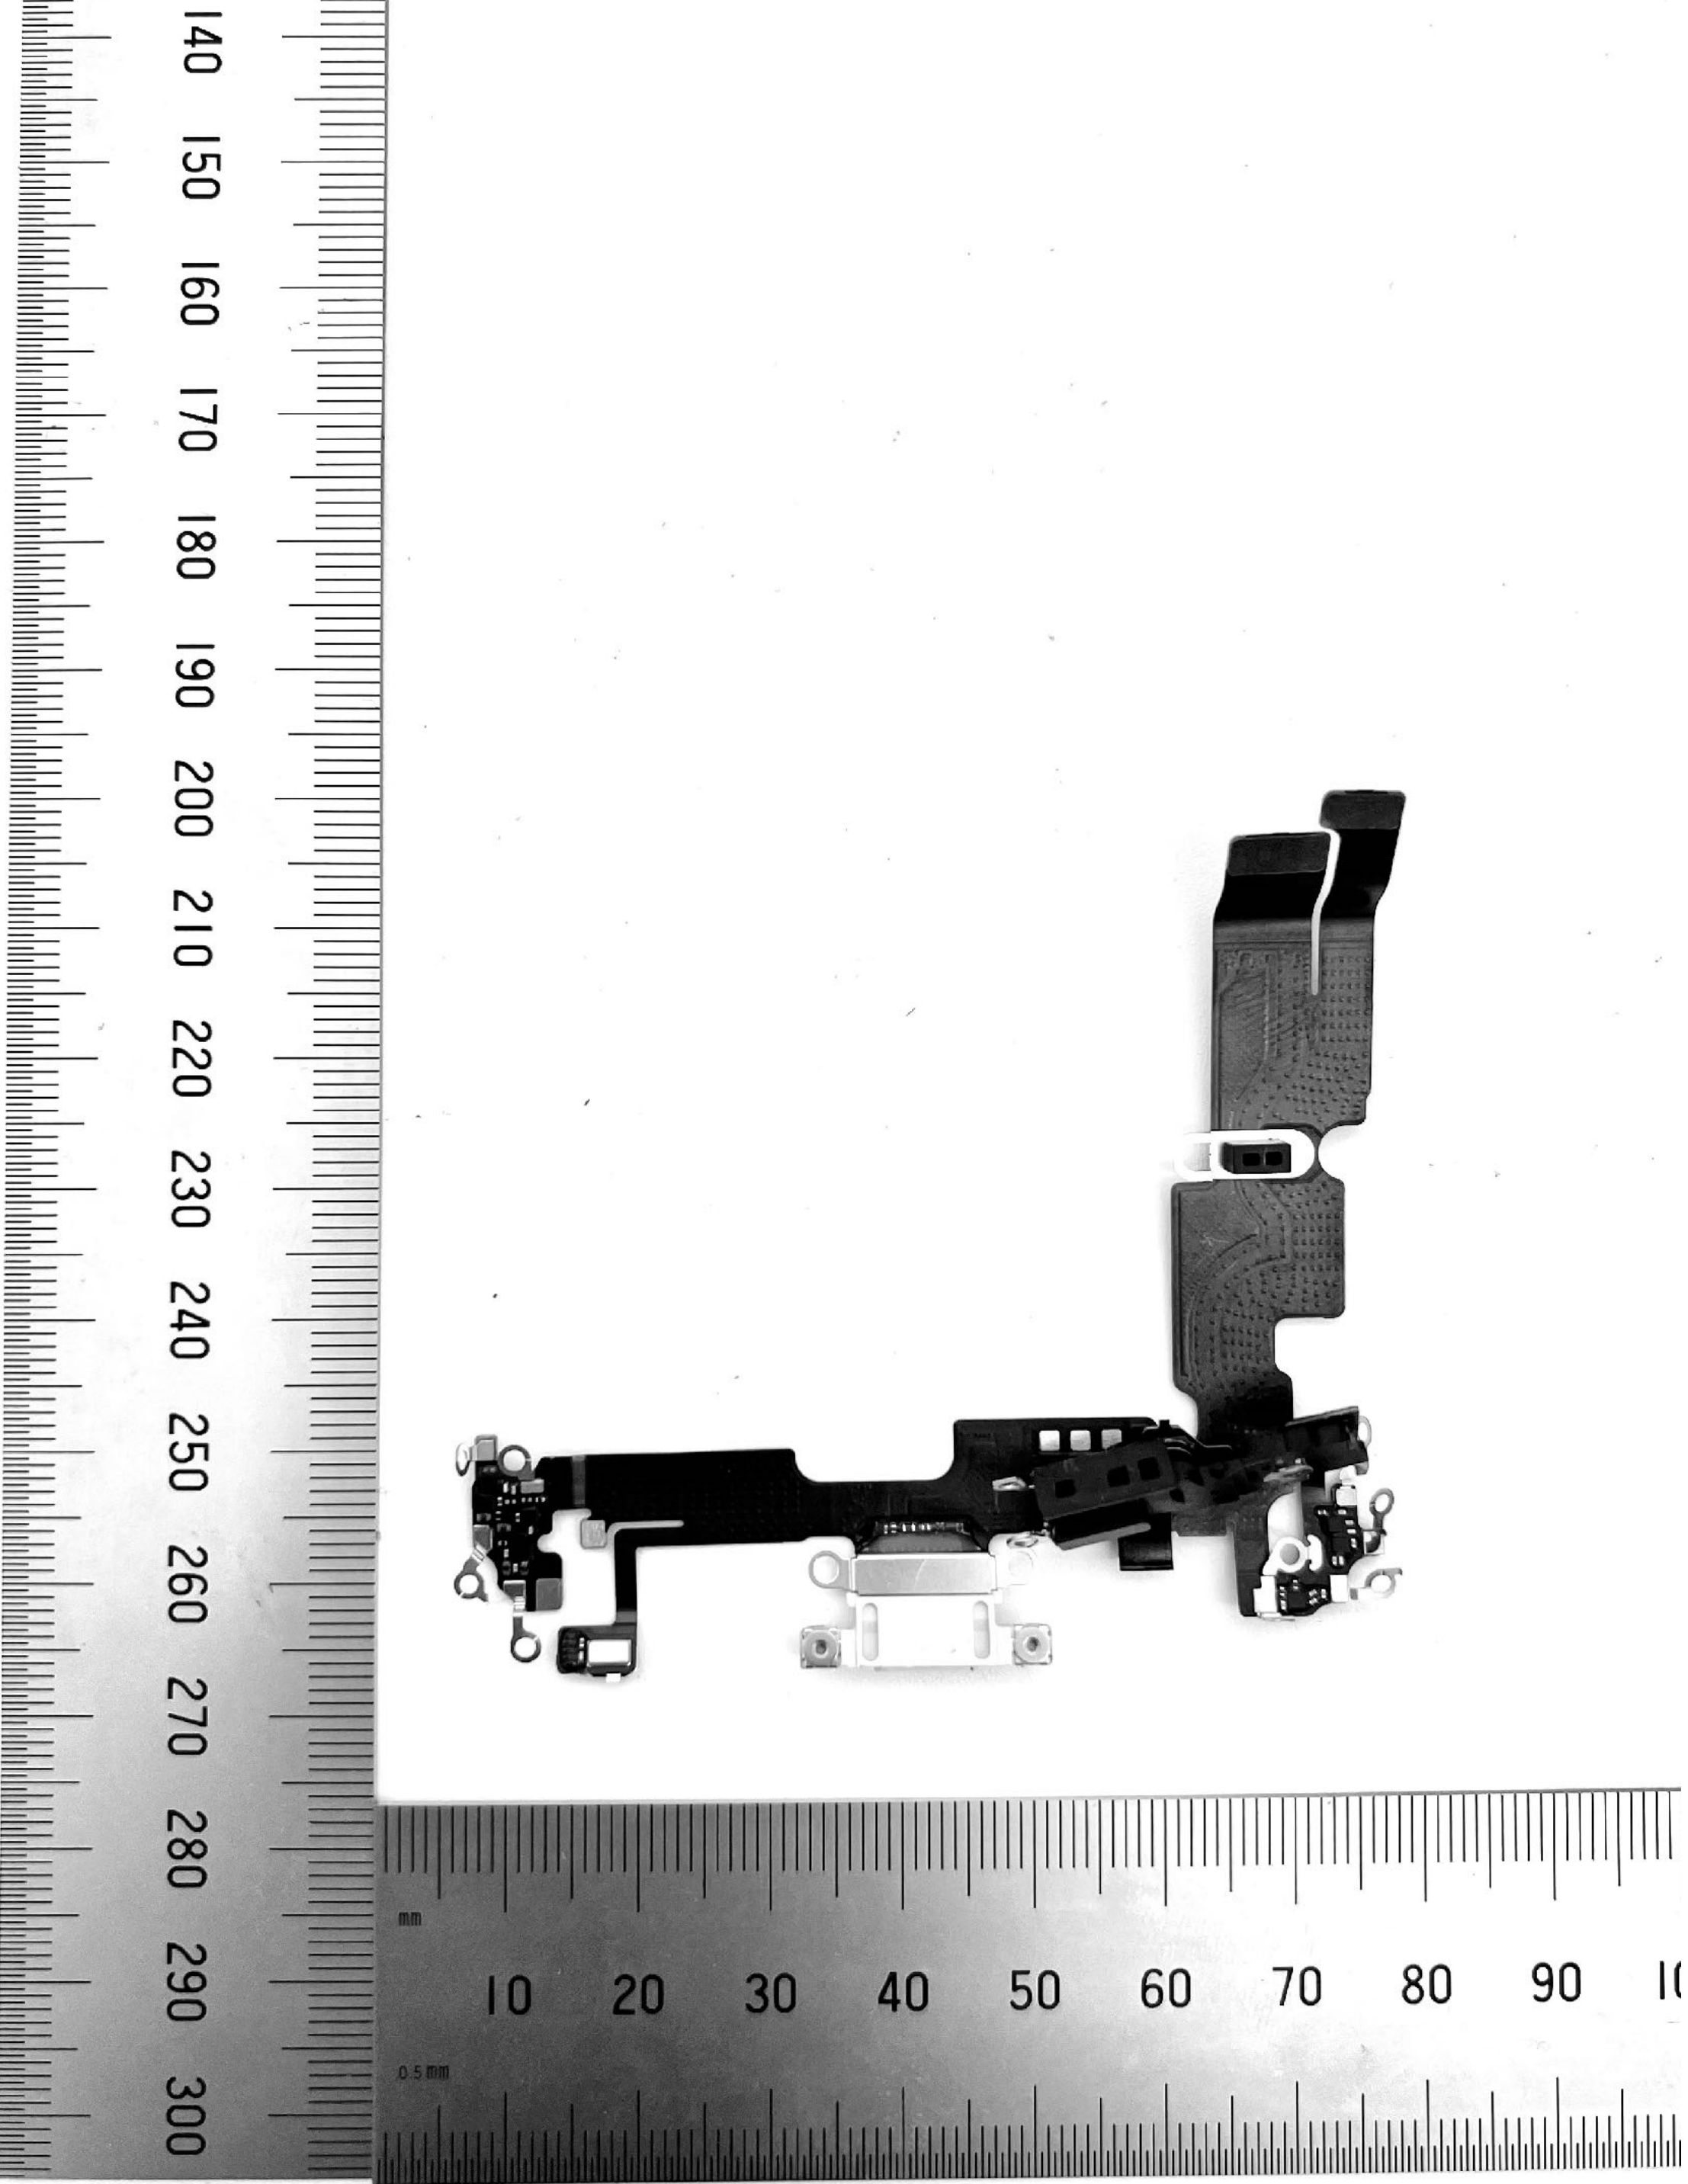

A2885, A2886, A2887, A2888
Flex Assembly with lightning
connector, Microphone, ANT3,
ANT1, ANT 7, ANT 5 and ANT9 -
Back

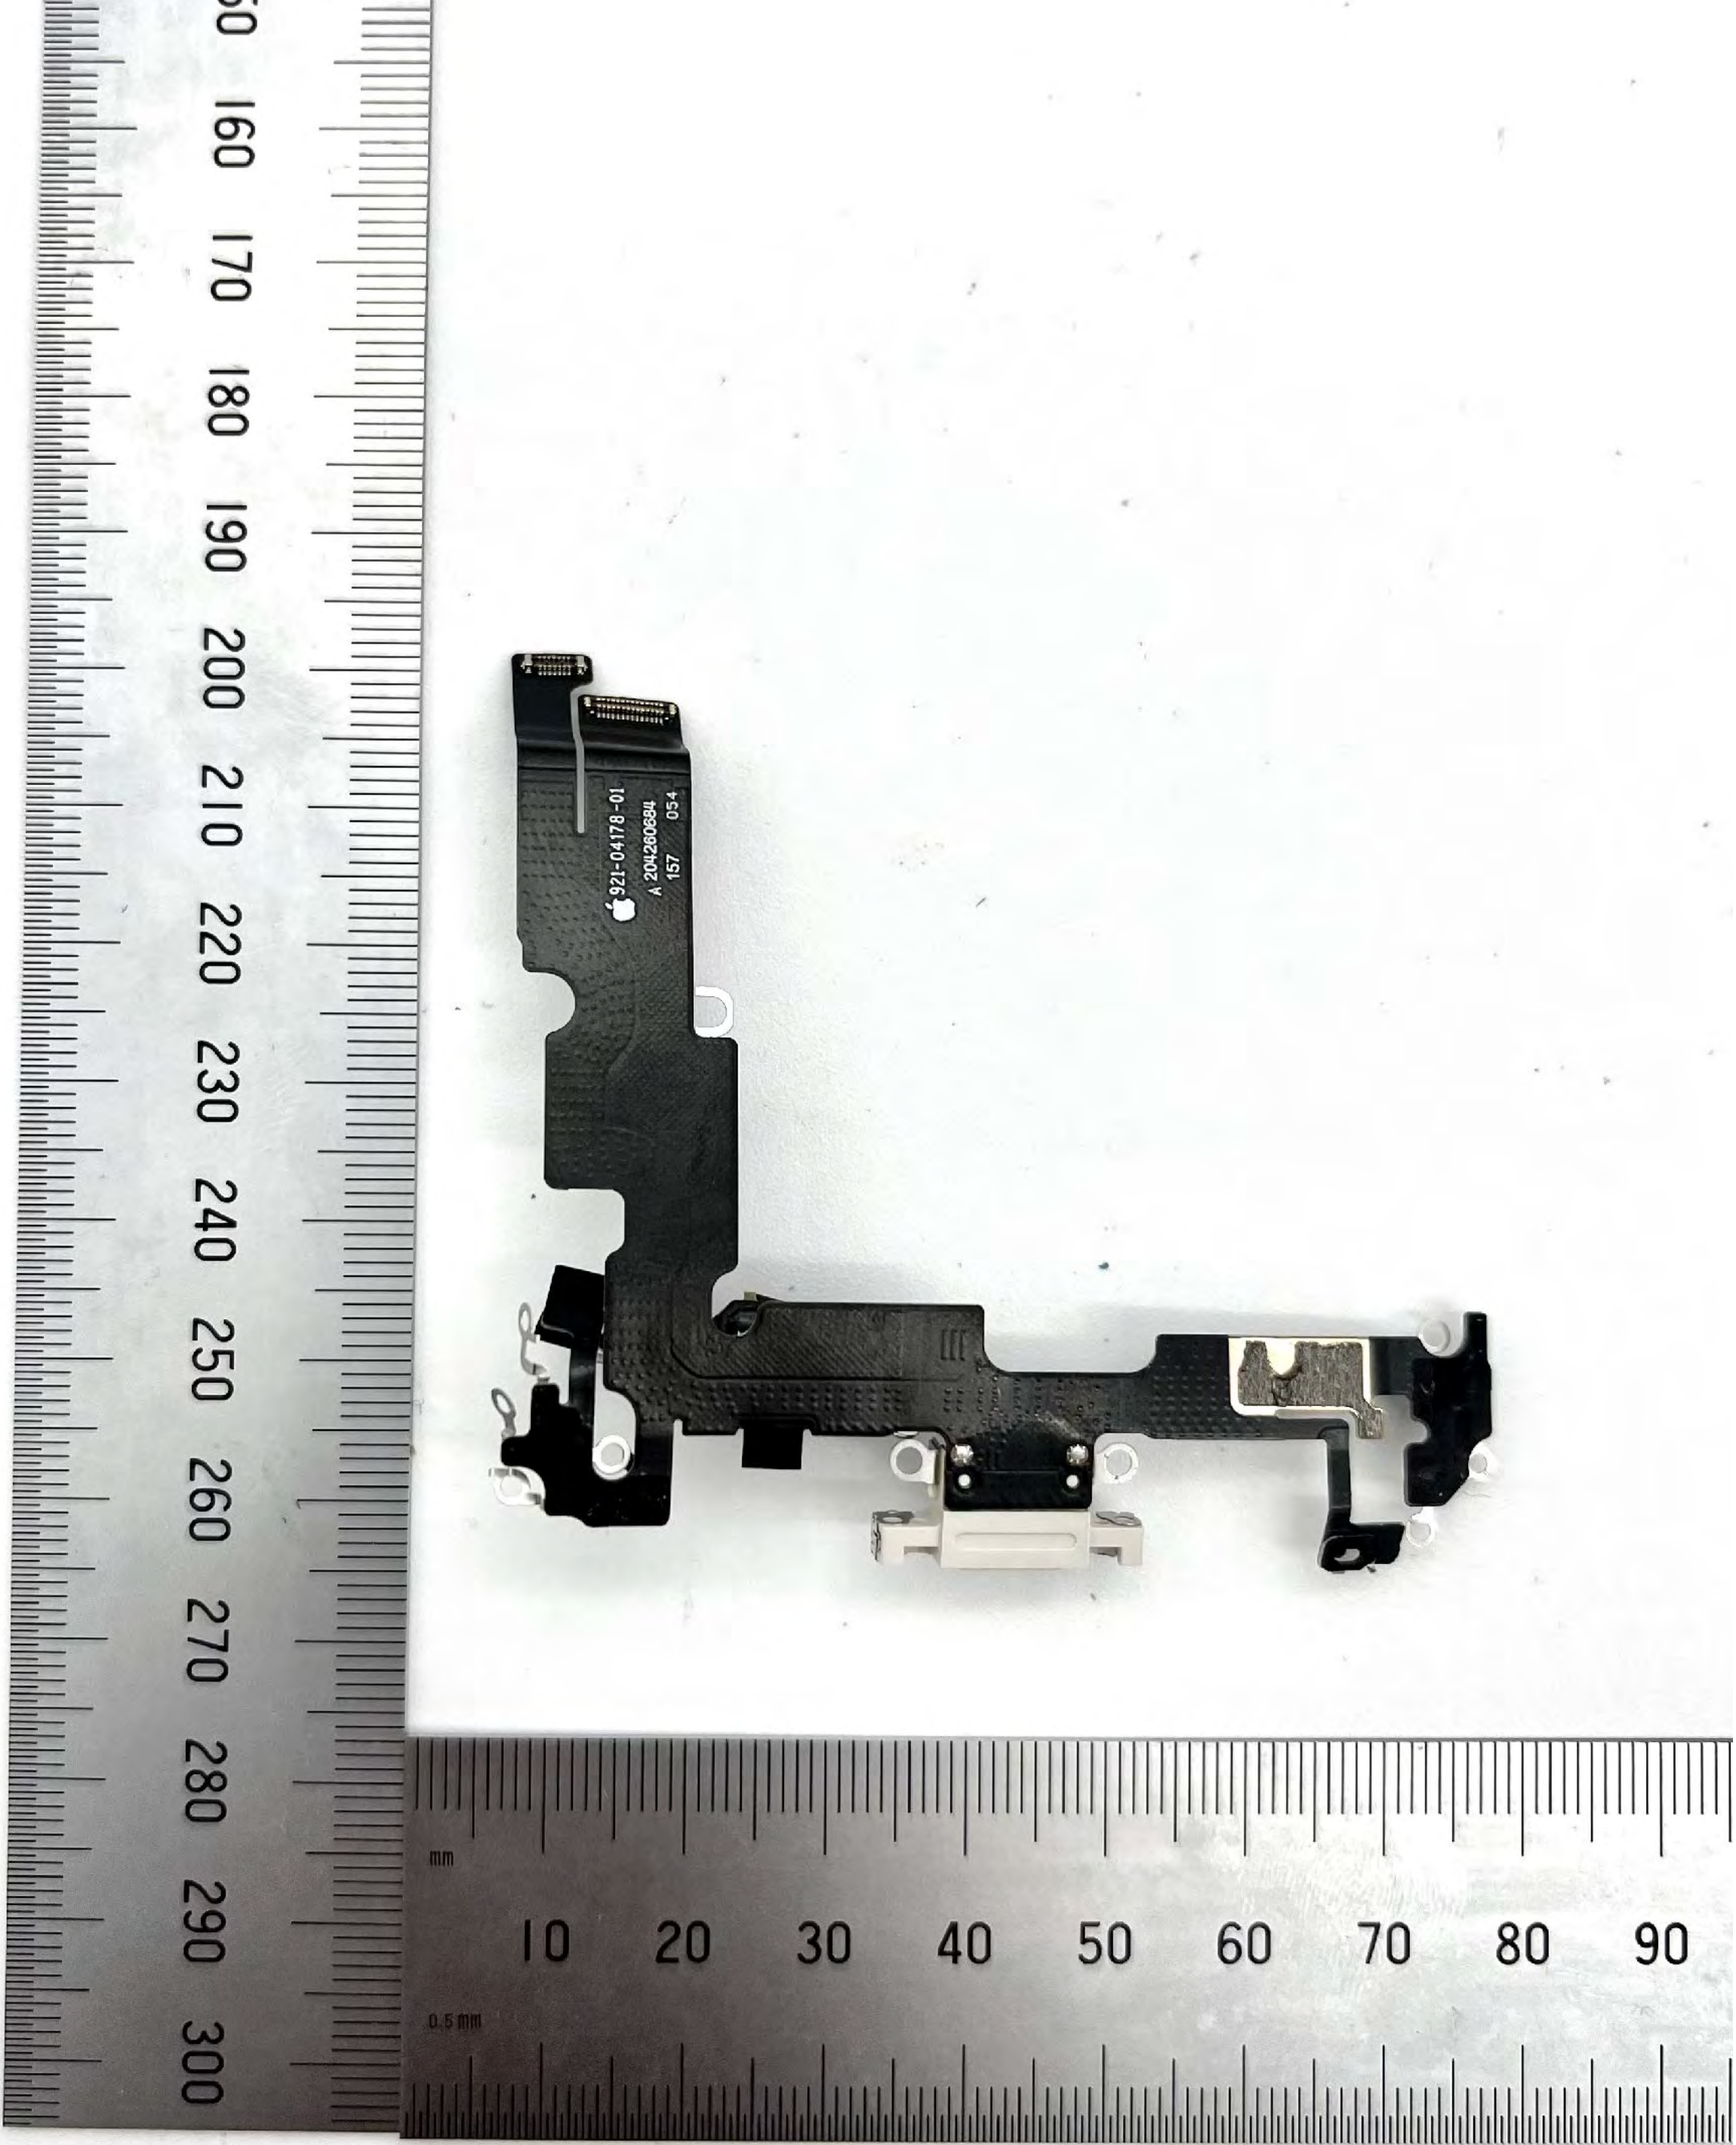


A2885, A2886, A2887, A2888
ANT4, ANT 10 - Front




A2885, A2886, A2887, A2888
ANT4, ANT 10 - Back



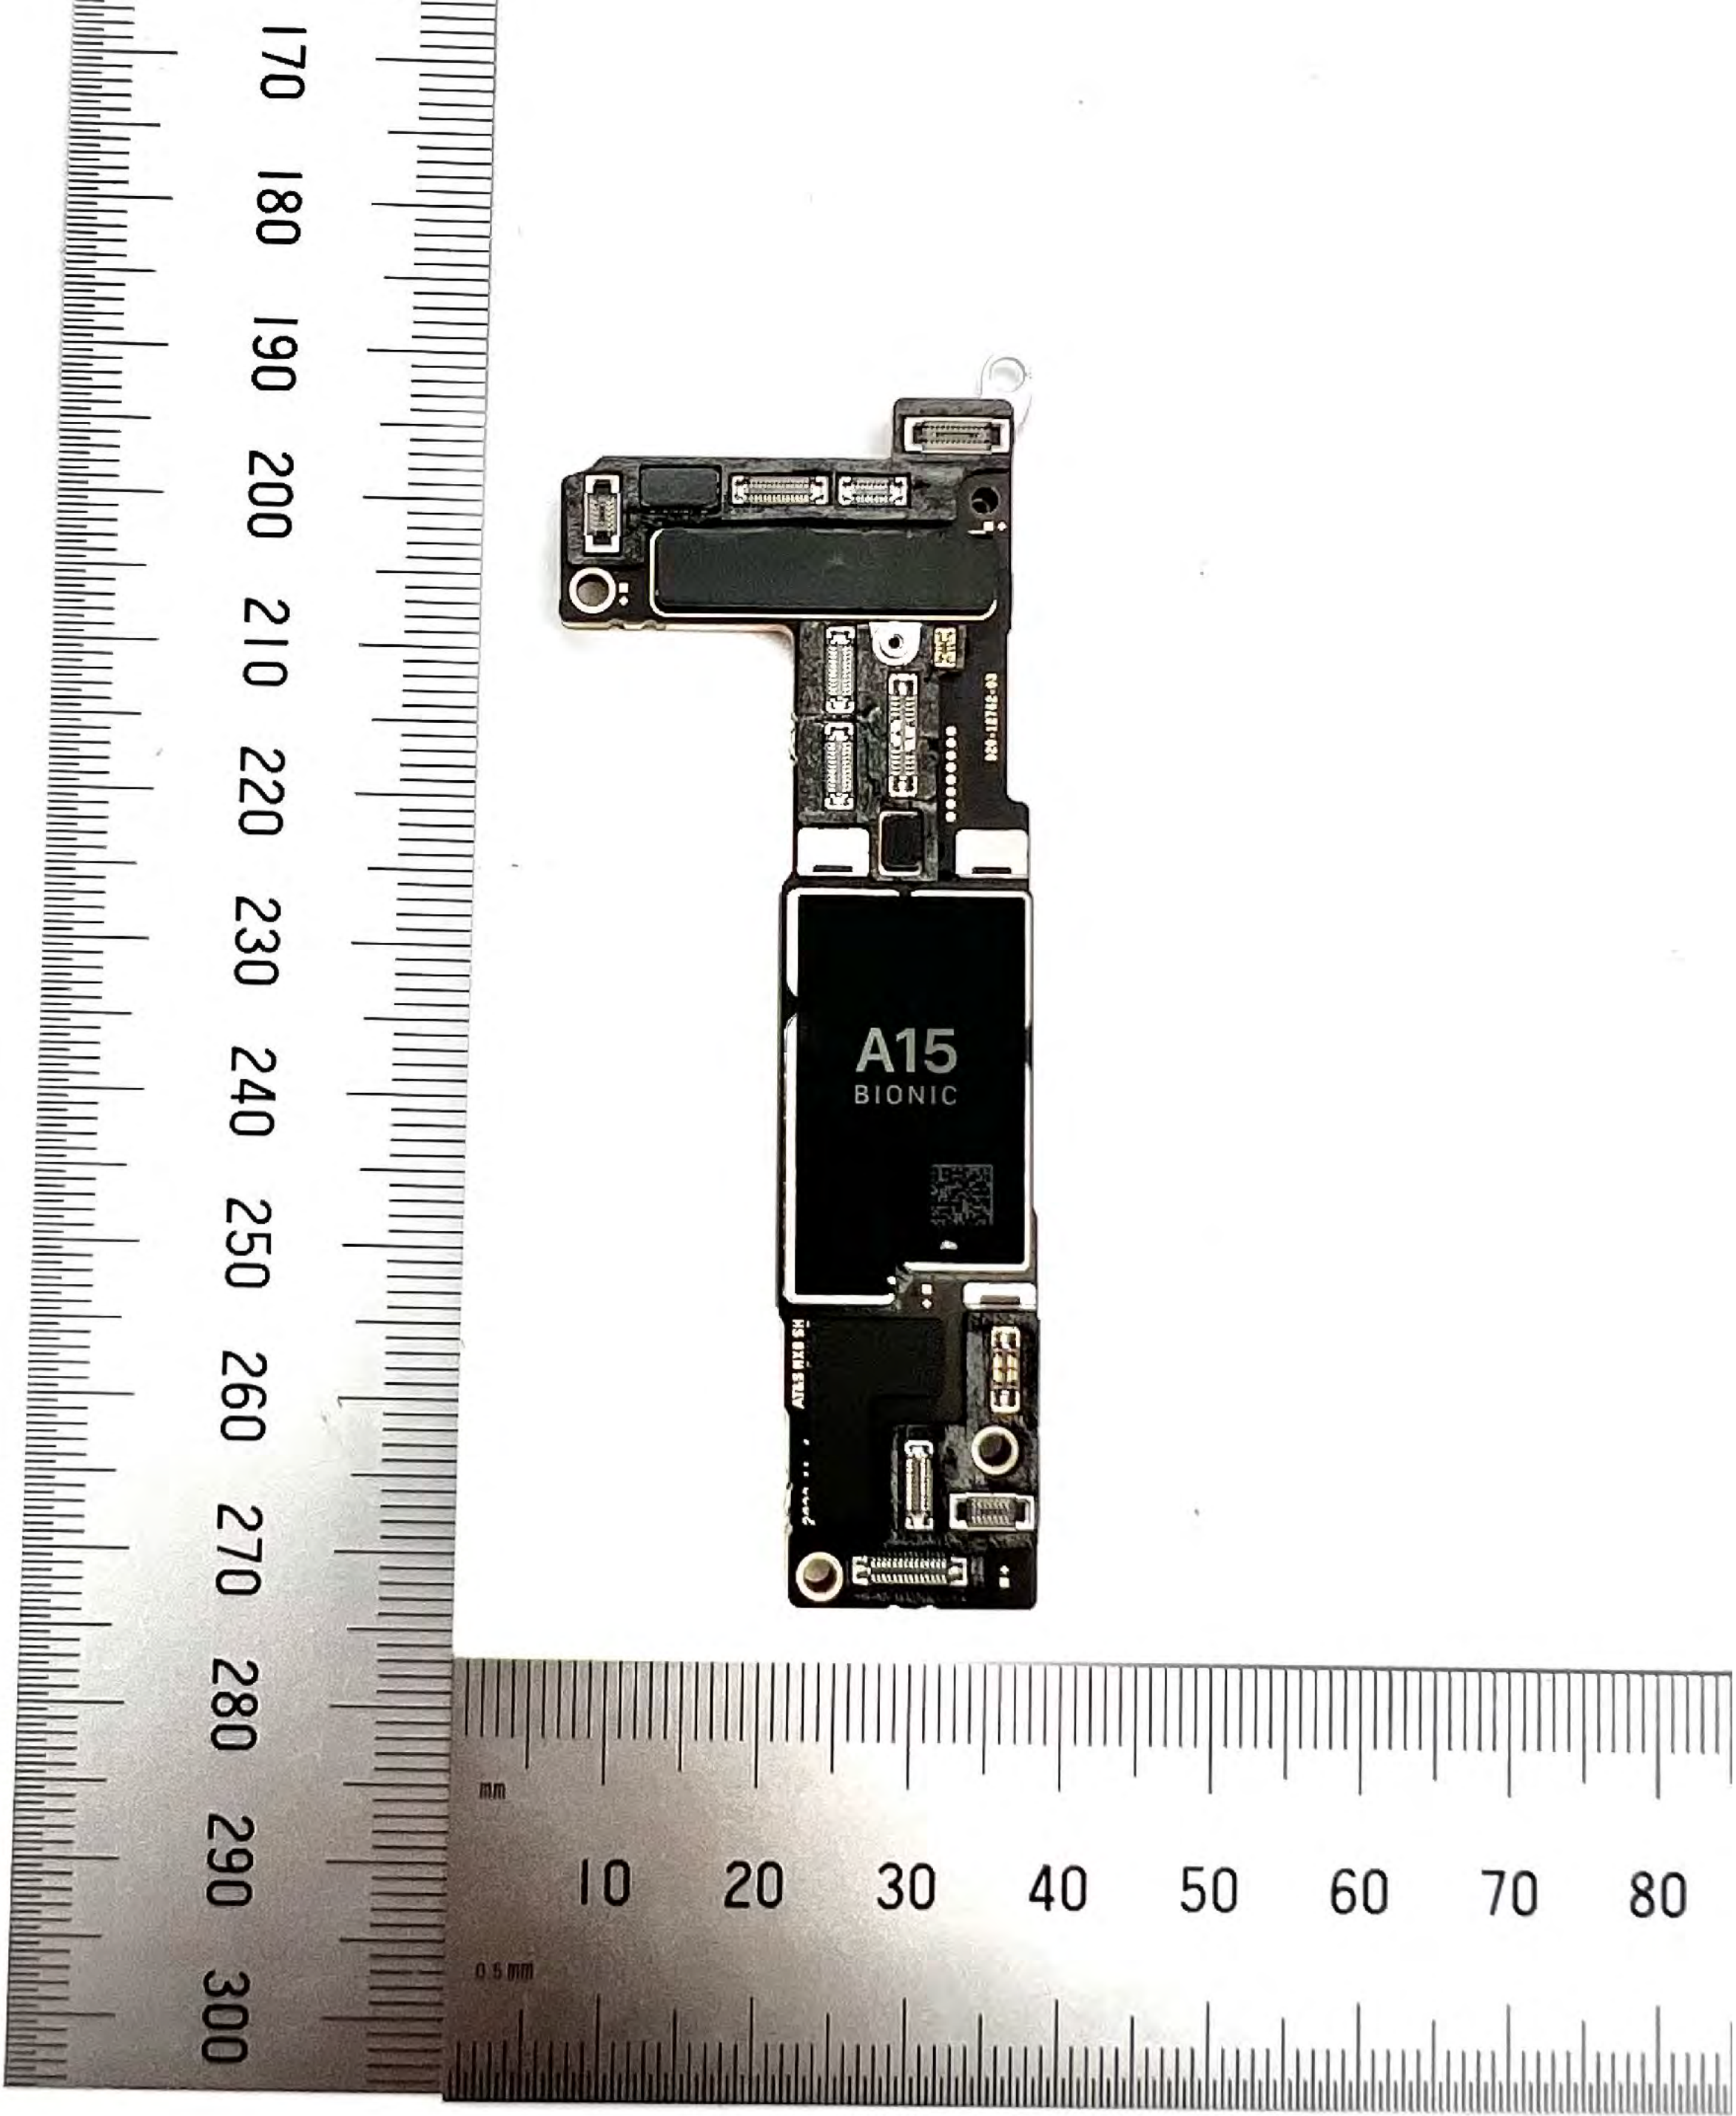

A2885, A2886, A2887, A2888

MLB - Back

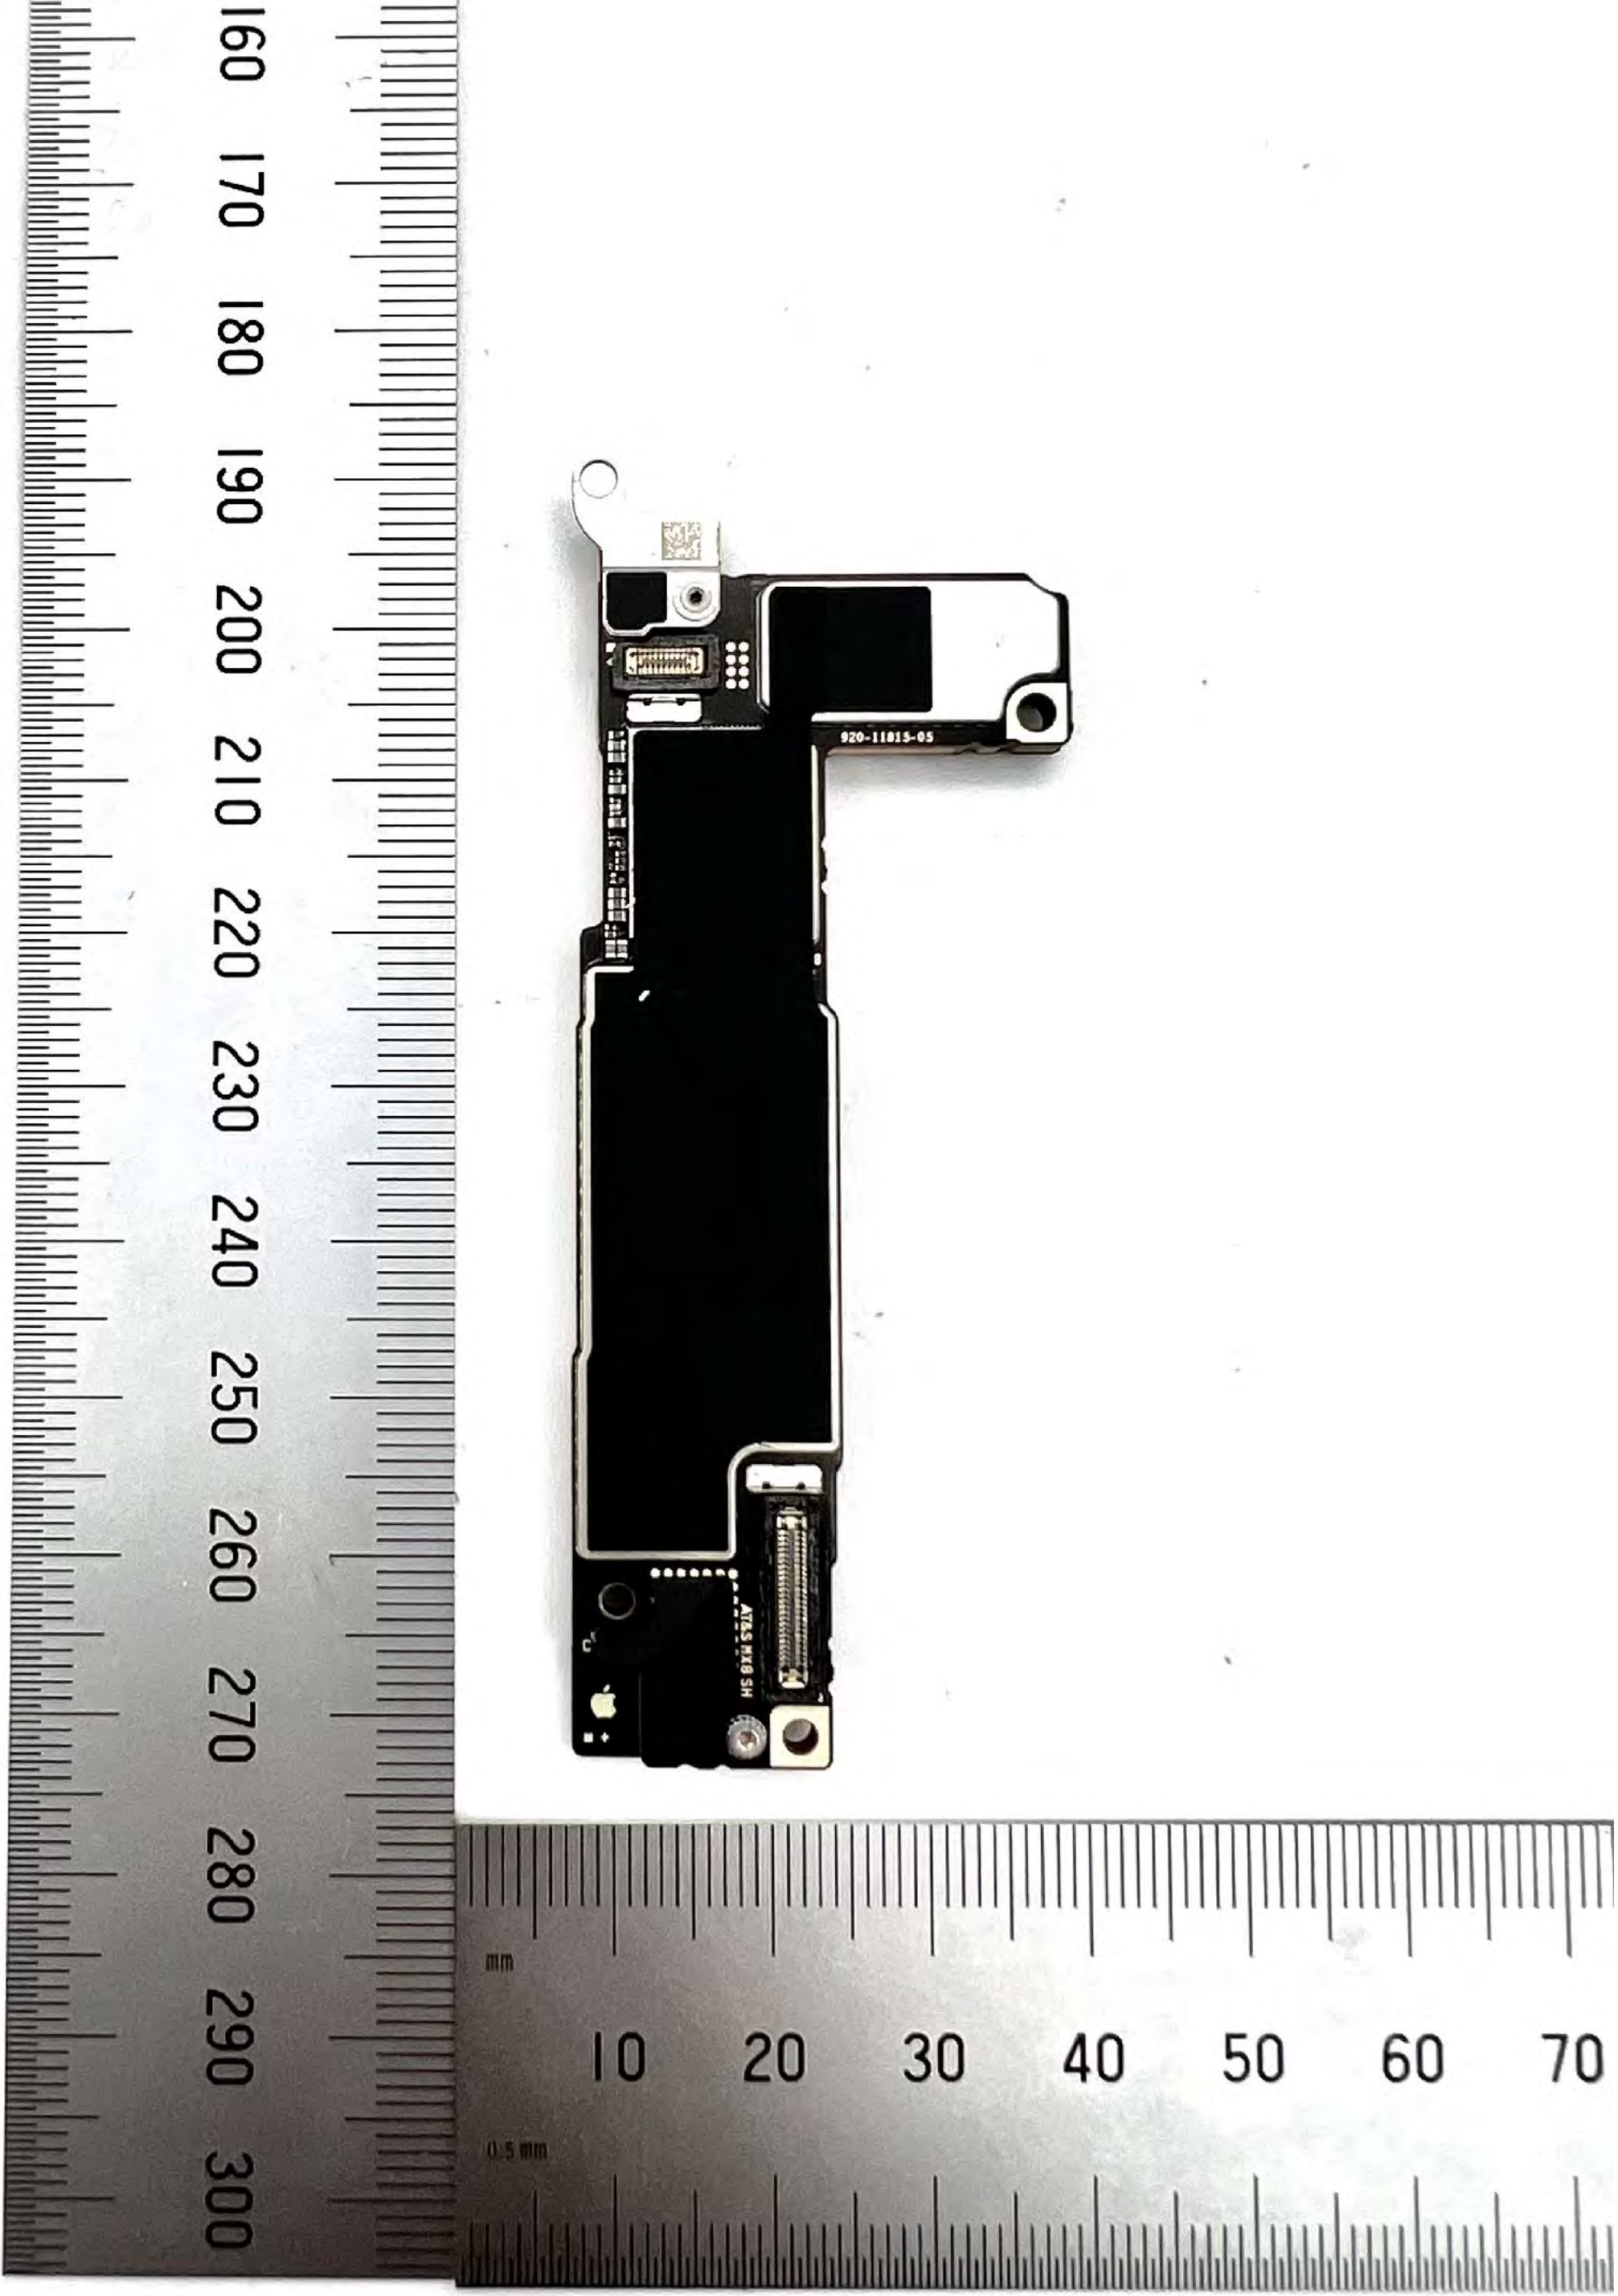

A2885, A2886, A2887, A2888

MLB without shield - Front

