

TWS Earbuds



USER'S MANUAL: Item V40096W

Specifications

Bluetooth Range: Up to 33 feet (10 meters) Charging Input: USB-C Charging time: Approximately 1-2 hours

Touch Button

Earbuds



Charging Case

Charging



Insert the included charging cable's USB-C end into the charging port on the case.



2. Insert the charging cable's standard USB end into the USB port of a suitable wall adapter (not included).



3. The case's Digital Display can be used to track the power. The case is fully charged


when the number 100 is displayed.

The earbuds' indicator light turns red when charging inside the charging case. When the earbuds earbuds help charged, the indicator light turns off.

Bluetooth Pairing



1. Remove the earbuds from the case to automatically turn ON.

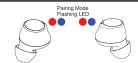

2. When in pairing mode, the earbuds' LED light will flash red and blue. Once two earbuds paired together, the indicator of one earbud will turn off and the indicator of the other earbud will flash blue and red



3. On your phone, go in the Bluetooth page in the Settings app. Make sure Bluetooth is on before connecting to the available device "V40096W".

Controls



Press the right earbud's Multifunction Touch
Button twice to return to a previous song on a track.
Press three times to decrease the volume.

44 **4**-



Press the left earbud's Multifunction Touch Button twice to go to the next song on a track.
 Press three times to increase the volume.



4. Press and hold either earbud's Multifunction Touch Button for two seconds to activate voice assistant mode on a connected Bluetooth device if compatible.

Important Safety Precautions

- READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS AND CHARGING CASE.
 Do not use your earbuds near water. Do not place your earbuds and charging cases on any water surfaces.
- case on any wet surfaces.

 3. Do not allow children to use the earbuds and charging case without proper adult
- supervision.

 4. Do not expose your earbuds and charging case to excessive heat or fire.

 5. Do not use in extremely dry environments, as this can lead to static discharge

- Do not use in extremely dry environments, as this can lead to static discharge during usage.
 Do not expose your earbuds and charging case to temperatures above 100°F. Keep out of direct sunlight.
 Do not attempt to repair these products yourself. Contact a qualified service center if your earbuds or charging case are in need of service.
 Do not drop, puncture or expose your earbuds and charging case to excessive physical force.
 Your earbuds and charging case are not intended for commercial use.
 On ont place the earbuds near objects that generate a strong magnetic field.
 Use only the supplied charging cable. Unplug this device when not in use for long periods of time and during lightning storms.
 Use a soft cloth to clean your earbuds and charging case. Never use any abrasive chemicals.
- Telesian ecycle or dispose of your earbuds and charging case properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your earbuds for further information. 13. Plea

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.
This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

Using Your Earbuds: Additional Controls



 Press either earbud's Multifunction button to answer and end a call.



2. Press and hold either earbud's Multifunction button for 2 seconds to reject an incoming call.



3. Press and hold either earbud's Multifunction button for approximatel three to five seconds to manually turn ON/OFF the earbuds.

FCC Statement

r modifications not expressly approved by the party responsible for compliance could void the user's authorit

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) this device nay not cause harmful interference, and (2) this device must accept any interference nay cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.