Shenzhen Yunding information Technology Co.,Ltd

Oclean Smart Sonic Electrictoothbrush

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital.

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or

•Connect the equipment into an outlet on a circuit different from that to which the receiver is

Warning: Changes or modifications made to this device not expressly approved by Oclean

Note: The manufacturer is not responsible for any radio or TV interference caused by

unauthorized modifications to this equipment. Such modifications could void the user's

oclean

Electric Toothbrush

User Manual

Smart Sonic Electrictoothbrush may void the ECC authorization to operate this device

more of the following measures:

authority to operate the equipment.

·Reorient or relocate the receiving antenna.

. Increase the separation between the equipment and receive

. Consult the dealer or an experienced radio/TV technician for help.

## Important Safety Tips

 Due to the high-speed vibrations, it is normal to experience a tingling sensation while using the toothbrush for the first time. This feeling will gradually go away by regularly using the

Thank you for using Oclean One


- If the toothbrush is not used for a long period of time, the battery will run out due to the power consumption from standby mode. This can be solved by charging, the charging indicator on the brush will not light up instantly. Please wait for 6 - 10 minutes for the toothbrush to go back to its normal state. It is normal for the toothbrush to heat up
- when it is charging. If the toothbrush becomes extremely hot, immediately stop harging and/or turn it off and take it to Oclean's authorized customer service for conditions: (1) This device may not cause harmful interference, and (2) this device must
  - The toothbrush can only be used with the Oclean special head. • The toothbrush is for oral use only. Do not use
  - The toothbrush is a personal item. The production is not intended for use in a dental clinic and
  - should not be used for multiple patients. • The toothbrush should not be placed under direct sunlight for a long period of time. It should be stored in a cool and dry environment.

People with Sensitive Oral Cavity with great caution.

- People who have undergone oral periodontal surgery or are being treated.
- 2 People who have mouth diseases, loose false teeth or gums with haemorrhage. 3 People with sensitive and susceptible oral
- cavity, they should consult a professional dentist before using this product. The toothbrush is not suitable for people with reduced mental and physical capabilities. Not

strictly supervised by an adult. Please regularly clean the power plug to prevent the accumulation of dust and dirt

suitable for infant and children under the age

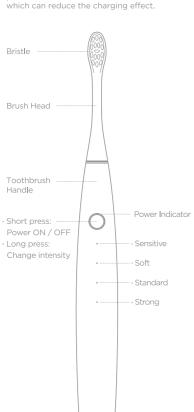


Indicator

Interface

### Instructions

Awake Mode (Default)

- \* Shortly press the Power button to turn on the toothbrush and it will play the welcome sound. It will automatically enter into dormant state if not operated for more than 15 seconds.
- \* Shortly pressing the toothbrush after turning on the power will make the toothbrush carry out a specified cleaning plan. \* Following the cleaning plan, the toothbrush
- will automatically stop working after a specified time. If you want to stop brushing before reaching the recommended time, short \* Press the Power button for 2 seconds to
- change the cleaning intensity while brushing. Direct Brushing Mode (App Enabled)
- \* Direct brushing mode can be enabled through the app. Short press on the Power button will skip the Awake mode and it will directly start \* Press the Power button for 2 seconds to go to
- the next level of cleaning while brushing. Anti-splash (App Enabled)
- \* Turn on the anti-splash function through the Oclean App, which effectively prevents liquid from splashing when the toothbrush is not operating in direct contact with the the tooth.

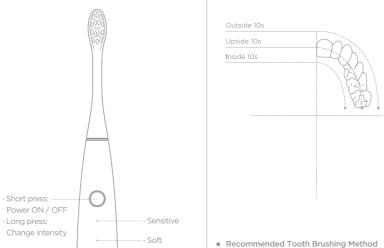

- Standard

## 4-S Level Cleaning L1 (· ) ----- 1 Light On ----- Sensitive

- **L2** (· · ) ----- 2 Lights On ----- Soft L3 (· · · ) ----- 3 Lights On ----- Standard
- L4 (· · · ·) ...... 4 Lights On ...... Strong
- Suitable for first time electric toothbrush user with sensitive teeth.
- Suitable for first time electric toothbrush user
- Suitable for experienced electric toothbrush user.
- Suitable for user with high requirement cleaning process.

### Smart Tooth Brushing Solution

**Recommended Tooth Brushing Method** 

brushing should be 2 to 3 minutes long.

Oral experts (Dentists) recommended that each

Tooth Brushing Time

By learning from many experiments and thanks to suggestions from dentists, the Oclean One is an innovative product in the industry. Our new brand of smart and sonic different individual. Download and log into our App for more information.

Steps

charging cradle, the bottom of the toothbrus Insert the brush head will light up, which shows the toothbrush is carefully into the body being charged. In case of incorrect charging of the toothbrush. A (such as short circuit and overcurrent), the small gap should be left warning LED will light up. between the head and the main body for work space so the brush head can work normally.

Power Indicator -

**Magnetic Charging** 



from splashing, smear a small amount of oothpaste on the head before using it. (A sonic electric toothbrush saves more toothnaste than a manual toothbrush.)



Soak the toothbrush head and put it into your oothbrush to start



Slowly move the bristles at 45° to the gum line to brush teeth properly



andle and slowly move t in circular motion. Do ot press too hard.



Please rinse with clean water after brushing.

Product Name | Oclean Smart Sonic Flectric Toothbrush

Type | Oclean One

Charger Oclean USB Cradle

Bluetooth Bluetooth 4.0 above

Input 5V / 1A

attery Capacity 2,600 mAh (\*\* )

Charging Time 3.5 Hours (\*\*\*)

Service Time 60 Days (\*)

Magnetic Power 280gf.cm

ower of Subject | 1.8W





3





## • Charging Process

constantly on. Use Process

Indicator

If the toothbrush battery is at less than 5%, the to charge the toothbrush.

 
0% - 95%, the Power Indicator light flashes.

## The battery cannot be replaced by users

emselves and can only be replaced by the staff in Oclean Authorized Client Center disassemble this product.

unauthorized body. In case of damage, please contact the Oclean After-sale Center for

## **Cleaning and Maintenance**



Cleaning Brush Head Clean the brush head after us and air dry it. Do not pull the brush head for this act as it ma result in deformation of the toothbrush.





Cleaning Charger Scrub the dirty parts of the charger with a soft cloth. Pull out the battery to cleaning the charger. charger with wet cloth.

users can face while using the toothbrush.

→ Pull the brush head from the body and gently insert the brush head leaving enough space between the brush head and body.

the charging ring of the body, and may have resulted in improper charging which can also be detected by the LED light.

\* Insufficient battery charge.

95% - 100%, the Power Indicator light is Center for a replacement charger.

Power Indicator will flicker in red as a reminde

The USB cable cannot be replaced by





scrub it with soft cloth and sharp item or metal object,



 Common Problems and Solutions Following are some common problems the

These problems can be easily solved by the users with the solutions given below. Please conduct the following sample checks prior to contacting professional after-sale services.

1 The vibration strength becomes weak

\* The toothbrush is pressed too hard against

\* The gap between the brush head and body is too loose or too tight.

✓ Lightly place the brush head on tooth.

2 The toothbrush functioning for short time ossible problems

## \* The charging cradle is not in contacted with

## Solutions Clean the charger cradle.

Charge for longer period.

Battery has completed its service life. If the red light of the foundation is on, please contact the Oclean Official Authorized

3 The toothbrush fails to work Possible problems \* The toothbrush is not vertically set on the

charging cradle.

## Charge the toothbrush.

✓ Please replace the battery in the Customer Centre authorized by the Oclean. 4 The sound becomes lower

### Possible problems \* There is water logged in the speaker which caused the sound to become lower

✓ Place the toothbrush in its upright position for the water to flow out naturally

## ✓ Shake the toothbrush slightly to get the

For detailed consultations, email: service@oclean.com

# 41

9  $\mathbf{\Psi}$ S

工 0 

 $| \times | \times | \times | \rangle$ 





www.oclean.com/download









Follow the Oclean Official Facebook Page

Download App



Scan QR code



