
 


1.1 Keys and connectors





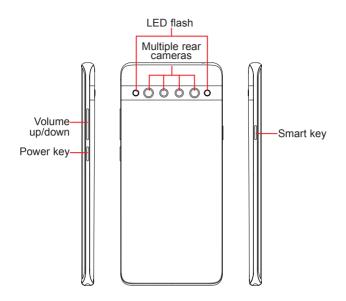



 Smart key settings are available at: Settings > Advanced features > Smart Key. Or touch Smart Key in the app list.



Back key

- Touch to go back to the previous screen, or close a dialog box, options menu, the notification panel, etc.
- ⁽¹⁾ Customized convenient shortcut.

Ο

Home key

- Touch to return to the Home screen from any other application or screen.
- Ξ

Recent apps

• Touch to switch between recently opened individual app activities and documents.

Power key (right of the device)

- · Press: Lock the screen/Light up the screen.
- Press and hold: Show the popup menu to select from Power off/Restart/Airplane mode.
- Press and hold the **Power** key and **Volume up** key to enter Recovery mode.
- Press and hold the **Power** key and **Volume down** key to take a screenshot.
- Press and hold the **Power** key for at least 10 seconds to force reboot.

Volume keys

- · In call mode, adjusts the earpiece or headset volume.
- In Music/Video/Streaming mode, adjusts the media volume.
- · In general mode, adjusts the ringtone volume.
- Mutes the ringtone of an incoming call.
- In camera preview mode, press the Volume up or down key to take a photo or press and hold to take burst shots.
- Press the Volume up and down keys at the same time for 3 seconds to start an accessibility feature when Volume key shortcut is on. To set, touch Settings > Accessibility > Volume key shortcut.