



成品尺寸: 120x70mm | 成品材质: 128g 铜版纸 | 出血: 3mm | 成品折法: 风琴折 | 注意: 线框不要印出

How to take care of your reader

 \bullet Keep it in environments with temperatures between -10°C and -45°C.

• Clean it using a dry cloth. Do not use water or other cleaning products.

Use only the battery charger included with the reader. Do not connect it to a power source of more than 5 volts.
Avoid contact with microwaves or extreme heat sources such as hair dryers and stoves.

• Do not submerge it in water or place it near sinks, bathrooms or any other damp place.

 Avoid exposing the battery in contact with metallic objects or in places that can generate short circuits or fires.

Do not use sharp tools to touch or attempt to separate internal components or connectors.
Do not drop, disarm, tear out, open, crush, bend, warp, drill,

shred, paint, incinerate, or insert foreign objects into the reader.Do not open it or try to fix it on your own We can help you in

case of malfunction.
The reader contains small detachable parts and therefore should be kent away from children. If any of the small object

should be kept away from children. If any of the small objects are accidentally swallowed, see a doctor immediately.

Operation of this equipment is subject to the following two conditions:
The equipment or device may not cause harmful interference. This equipment or device must accept any interference
received, including interference that may cause undesired operation.