




## **WIRELESS MOUSE**

model 2607138 / 2607139 / 2607140 / 2607150

### **USER MANUAL**



**I. The function of the buttons is shown in the following figure :**

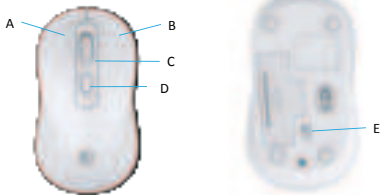

Images are for reference only

A: Left Key    B: Right key    C: Middle key    D: DPI key    E: Power switch

**The functions of the buttons are as follows:**

- A. Left button: Executes a left-click operation with the mouse cursor.
- B. Right button: Executes a right-click operation with the mouse cursor.
- C. Middle button: Executes a middle-click operation with the mouse cursor and allows for scrolling up and down on web pages or documents.
- D. DPI button: Allows for switching between different DPI settings (e.g., 800-1200-1600) in a cycle.
- E. Power switch: Turns the power on/off.

**2. Simple operation instructions**

Single 2.4G mode: take the mouse out of the package, install one AA battery, turn the mouse power switch to the "ON" position, insert the receiver into the USB port of the computer, and then use it after the connection is successful.

Note: If the mouse cursor cannot move normally during use, please ensure that the battery is normal, if the battery is insufficient, please replace the battery in time!

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.