

BT-IFS & BT-IFC OEM Design-in Guide

Intelligent Fixture Sensor (BT-IFS-A) Intelligent Fixture Controller (BT-IFC-A)

OEM Design-in Guide



SYSTEM MUST BE INSTALLED IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES



Table of Contents

1.	INSTALLATION INSTRUCTIONS	Page 4
2.	DESIGN FEATURES	Page 5
3.	SPECIFICATIONS	Page 5
4.	FUNCTIONALITY	Page 6
5.	DIMENSIONS	Page 7
6.	INSTALLATION FEATURES	Page 8
7.	INSTALLATION DIMENSIONS	Page 8
8.	INSTALLATION INSTRUCTIONS	Page 9
9.	WIRING	Page 10
10.	APPROVALS	Page 11

1. INSTALLATION INSTRUCTIONS

1.1. General Description

The Douglas Lighting Controls Intelligent Fixture Controller and Intelligent Fixture Sensor are luminaire level lighting controls featuring Bluetooth Wireless Mesh and Bluetooth Beacon technology. The controller and sensor are installed directly into luminaires to enable control, communication and functional coordination with companion fixtures and other components of the Douglas Bluetooth wireless lighting control system.

The **Intelligent Fixture Sensor** includes an occupancy sensor and a photo sensor. The **Intelligent Fixture Controller** has the same form factor but excludes both sensing functions.


Both devices feature dimming and on/off functionality when used with 0-10V LED drivers equipped with DIM-to-OFF capability. Each can control one or two 0-10V channels. These sensors must be powered by an LED driver with an auxiliary power output function or by a local power pack.

The Intelligent Fixture Sensor provides both occupancy and photo control functions. Occupancy modes include: Occupancy, Vacancy, Partial OFF, and Partial ON modes.

The devices work within the existing Douglas Lighting Controls Bluetooth wireless ecosystem, which includes: switches, sensors and load controllers.


The device configuration and system set-up are both accomplished using the free Douglas Lighting Controls App (BTCC) on the iTunes App Store.

PART NUMBER	DESCRIPTION	ORDER NUMBER	QTY/CARTON
BT-IFS-A	Bluetooth® Intelligent Fixture Sensor	BT-IFS-A010C	10
BT-IFC-A	Bluetooth® Intelligent Fixture Controller	BT-IFC-A010C	10

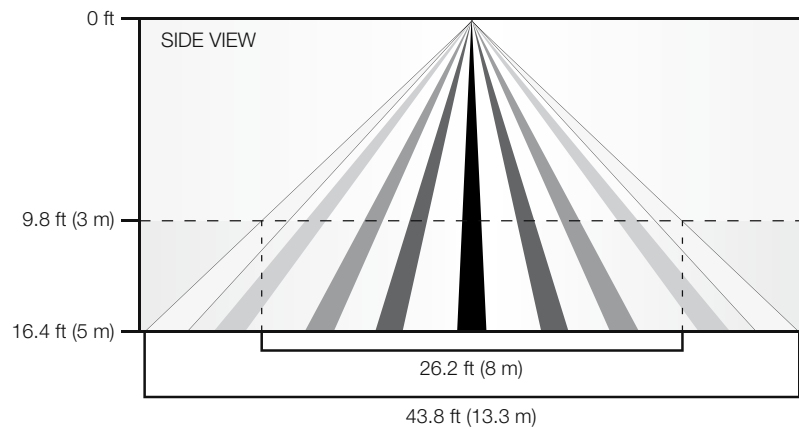

2. DESIGN FEATURES

Figure 2.1 shows the **Intelligent Fixture Sensor** on the left and the **Intelligent Fixture Controller** on the right. Salient features are highlighted for each device.

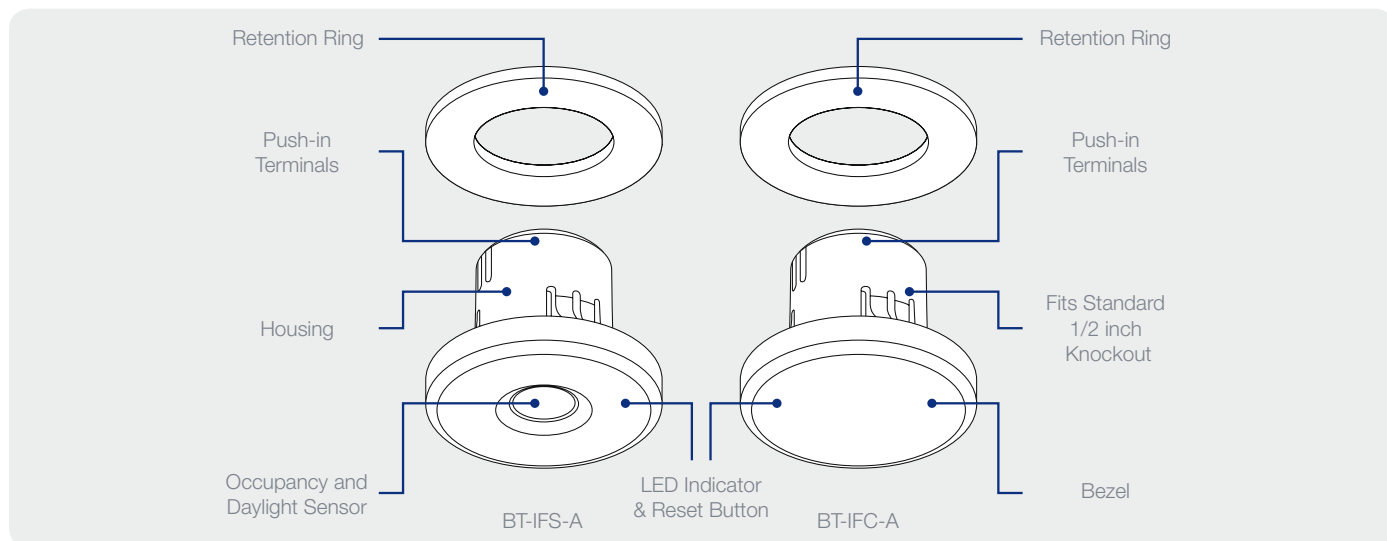

3. SPECIFICATIONS

PART NUMBER	• BT-IFS-A	• BT-IFC-A
NAME	• Intelligent Fixture Sensor	• Intelligent Fixture Controller
FUNCTIONALITY	<ul style="list-style-type: none">• 0-10V Dimming with DIM-to-OFF (LED Driver dependent)• Occupancy, Vacancy, Partial ON, & Partial OFF• Adjustable Occupancy Timeout: 5 to 90 minutes• Primary & Secondary Daylight Harvesting (CLC)• Bluetooth beacon for digital ceiling, IoT, and location services strategies• Download Douglas Lighting Controls BTCC APP from the Apple App store for commissioning	<ul style="list-style-type: none">• 0-10V Dimming with DIM-to-OFF (LED Driver dependent)• Listed for emergency lighting control when used on a dedicated emergency power bus• Occupancy and daylighting control features as shown at left when networked with one or more BT-IFS-A sensors• Bluetooth beacon for digital ceiling, IoT, and location services strategies• Download Douglas Lighting Controls BTCC APP from the Apple App store for commissioning
OCC. SENSOR MOUNTING HEIGHT	• Up to 16.4ft (5m)	• Not applicable
WIRING	• Use #20 to #26 AWG solid copper conductors stripped to 4mm	
INPUT VOLTAGE	• 12VDC – 26.5VDC; Power draw: 0.6W maximum, 0.25W typical	
WIRELESS RANGE	<ul style="list-style-type: none">• 150ft Clear line of sight, 50ft through standard walls• Distances may vary based on location and environment• Additional devices may be required at time of commissioning to ensure Bluetooth network integrity	
NOTIFICATIONS	• LED indicator for commissioning and occupancy (IFS)	
ENVIRONMENT	<ul style="list-style-type: none">• Indoor, stationary, non-vibrating, non-corrosive atmosphere, and non-condensing humidity• Suitable for Use in Other Environmental Air Space (Plenums) in Accordance with Section 300.22, (C) of the National Electrical Code.• Operating temperature: 32°F to 131°F (0°C to 55°C)• Storage temperature: -40°F to 140°F (-40°C to 60°C)	
DIMMING	<ul style="list-style-type: none">• Two 0-10V dimming channels, each capable of sinking up to 25mA• Typical use is with single channel 0-10V LED drivers providing auxiliary output power and DIM-to-OFF capability• May also be used with dual-channel, tunable white LED drivers providing auxiliary output power and DIM-to-OFF capability	
CERTIFICATIONS	<ul style="list-style-type: none">• UL916, UL2043 (Plenum)• May be installed through a knockout in the luminaire wiring enclosure or installed external to the enclosure and powered with a Class 2 circuit using Class 2 wiring methods	
WARRANTY	• Standard 5-year warranty	

4. FUNCTIONALITY

Functional Capabilities

Each device, when installed in a luminaire with a suitable LED driver having 0-10V dimming, Dim-to-OFF capability and an auxiliary power output, performs the following functions:

- LED status indicator for network status and commissioning. For the Intelligent Fixture Sensor, the LED also indicates occupancy detection events.
- ON/OFF control, using the DIM-to-OFF feature of a suitably equipped LED driver
- UP/DOWN dimming control
- On-board Reset (press bezel and hold for 10 seconds)

Intelligent Fixture Sensor provides:

- Occupancy Control modes (see table below)
- Primary and Secondary Daylight Harvesting (CLC)

	When occupancy is detected	When time-out occurs
Occupancy	Auto ON	Auto OFF
Vacancy	Manual ON required	Auto OFF
Partial ON	Auto ON to 50% Manual ON to 100% required	Auto OFF
Partial OFF	Auto ON to Zone MAX	Transition to Zone MAX

Out-of-Box Functionality

Intelligent Fixture Sensor:

- Occupancy mode (Auto ON/Auto OFF)
- Timeout: 20 minutes
- Local occupancy (independent of other sensors)
- 100% Max output level on both output channels

Intelligent Fixture Controller:

- Once it is fully powered, the BT-IFC-A will go to 100%.

Power-up Sequences for Non-Networked Devices

Intelligent Fixture Sensor & Intelligent Fixture Controller:

When initially powered up or if power is cycled, the unassociated sensor will initiate the following start sequence:


1. 3 seconds OFF
2. 6 seconds at 100%
3. 3 seconds OFF
4. 3 seconds at 30%
5. Transition to 100%

*LED will rapidly blink GREEN to indicate unassociated devices


5. DIMENSIONS

Dimensions and markings for the Intelligent Fixture Sensor and Intelligent Fixture Controller are provided below.

Intelligent Fixture Sensor
BT-IFS-A

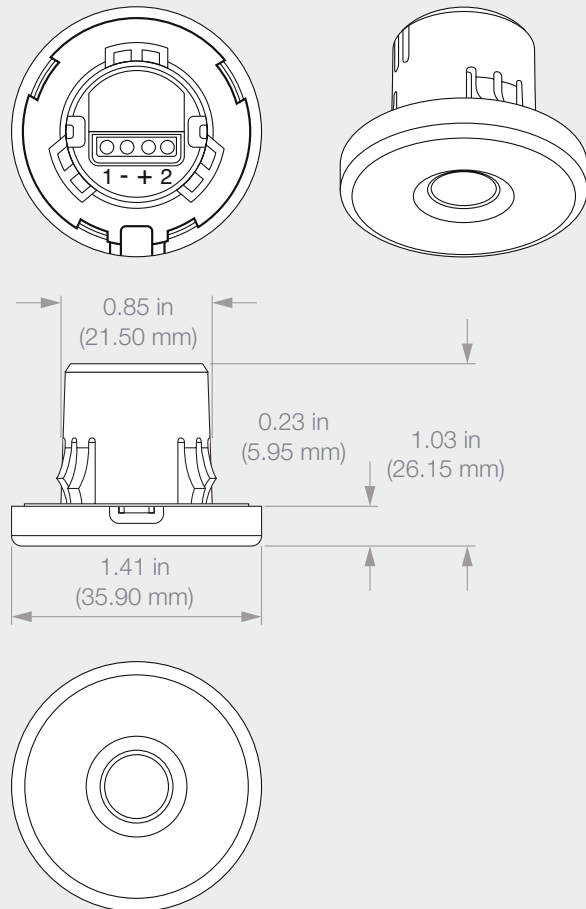

Intelligent Fixture Controller
BT-IFC-A

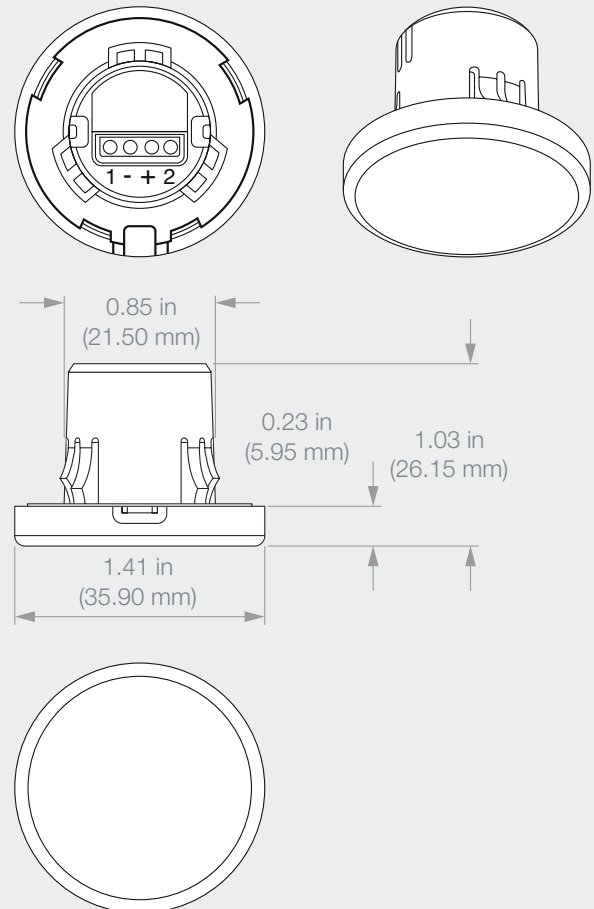


6. INSTALLATION FEATURES

- Mounts into a standard 1/2" electrical knockout
- Push-in connection terminals for #20-#26 AWG solid Copper (twist to remove)
- Silicon retention ring
- Out-of-Box functionality (see section #4)
- Push bezel and hold for 10 seconds to implement factory reset

7. INSTALLATION DIMENSIONS

7.1 Knock-out Dimensions

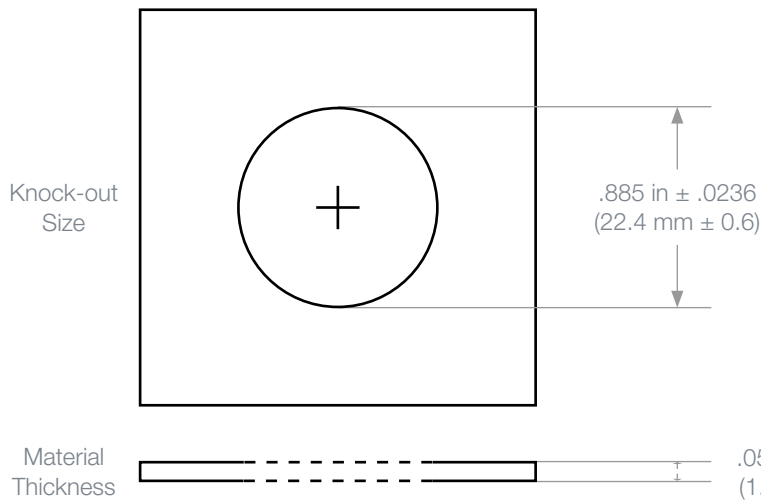


CAUTION

DO NOT enclose the lower housing in metal, the antenna is embedded in the face of the product.

Mounting location on the fixture must take into consideration line of sight installation in the ceiling grid. Anything that prevents line of sight is likely to reduce Bluetooth range.

7.1 Spacing

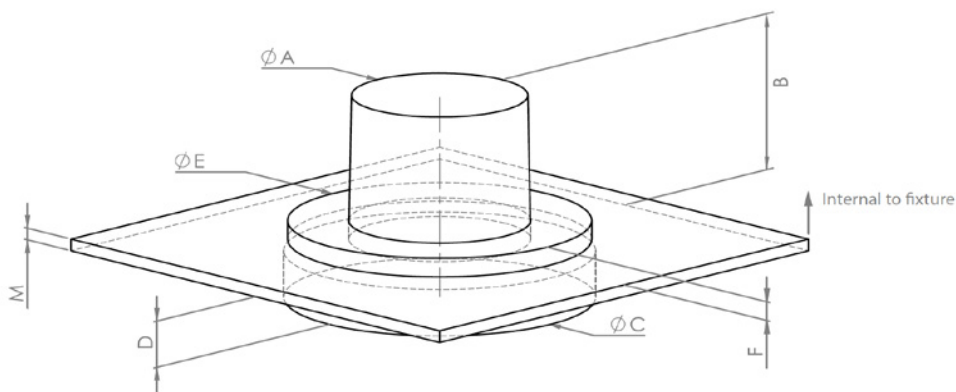

Minimum Spacing Requirements:

- A = 0.85 in (21.5 mm)
- B = 1.18 in (30.0 mm)
- C = 1.41 in (35.9 mm)
- D = 0.24 in (6.0 mm)
- E = 1.38 in (35.0 mm)
- F = 0.09 in (2.4 mm)
- M = 0.055 in (1.4mm)

8. INSTALLATION

CAUTION



Risk of Electric Shock. All servicing should be performed by qualified service personnel. To reduce the risks of electric shock disconnect power supplies before servicing.


Installation Advice

- Install the BT-IFS-A in a location where direct light from the fixture does not enter the sensor
- Install the BT-IFS-A vertically with sensor facing directly to the floor or work surface below
- BT-IFC-A may be installed in non-horizontal location. Mounting location on the fixture must take into consideration line of sight installation in the ceiling grid. Anything that prevents line of sight is likely to reduce Bluetooth range.
- Neither device may be installed in a location surrounded by metal; installation in a metallic enclosure will interfere with Bluetooth communications
- Product must be installed in accordance with local electrical codes

Installation Steps

- Refer to Fig. 8.1
- Remove retention ring
- Push sensor through standard ½ inch electrical knockout
- Affix retention ring over device to secure in place
- Connect wires by pushing stripped conductor firmly into terminal and according the appropriate wiring diagram below
- Use #20 - #26 AWG solid copper conductors, stripped to 4 mm

Fig. 8.1: Mounting details for sensor/controller

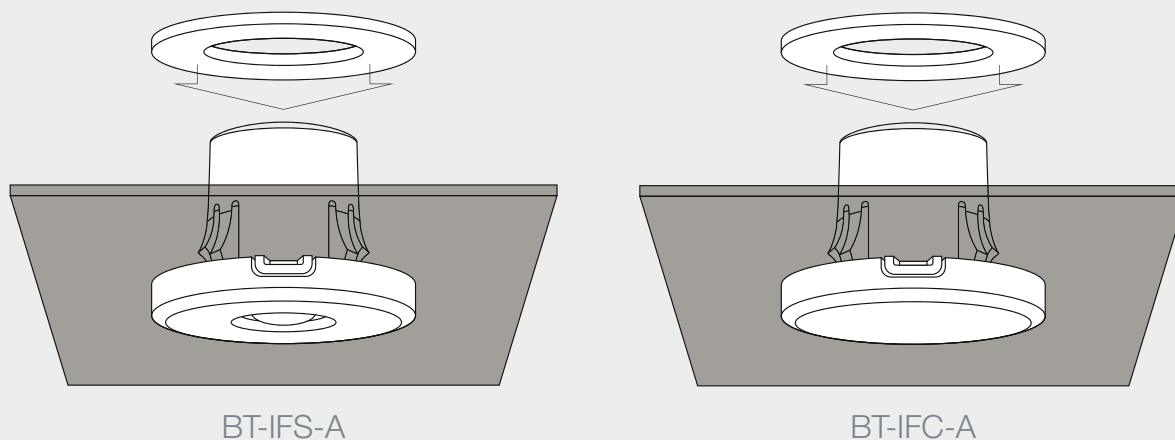

9. WIRING

Wire Specifications

- #20-#26 AWG solid wire, stripped to 4mm
- Wire ratings must comply with luminaire listing requirements
- Recommended minimums: 600V / 90°C

Wiring Diagrams

Fig. 9.1: Connections for a single-channel / single-driver system



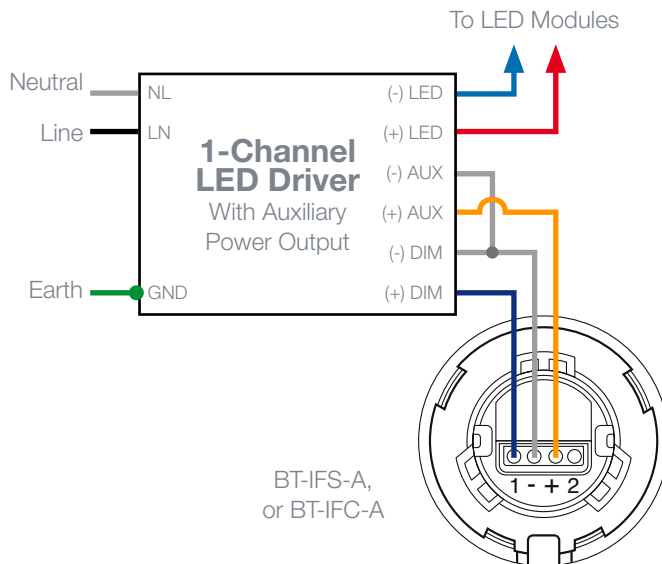


Fig. 9.2: Connections for a single-channel / multi-driver system

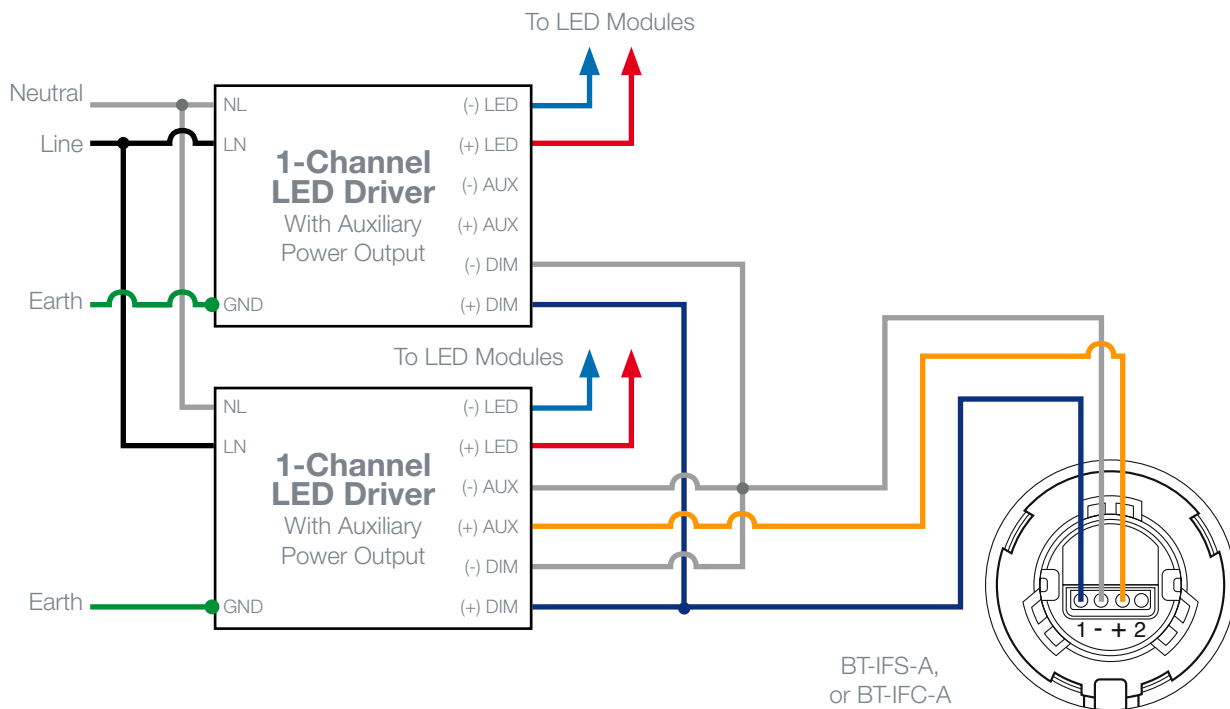

9. WIRING

Fig. 9.3: Connections for a dual-channel tunable-white, single driver

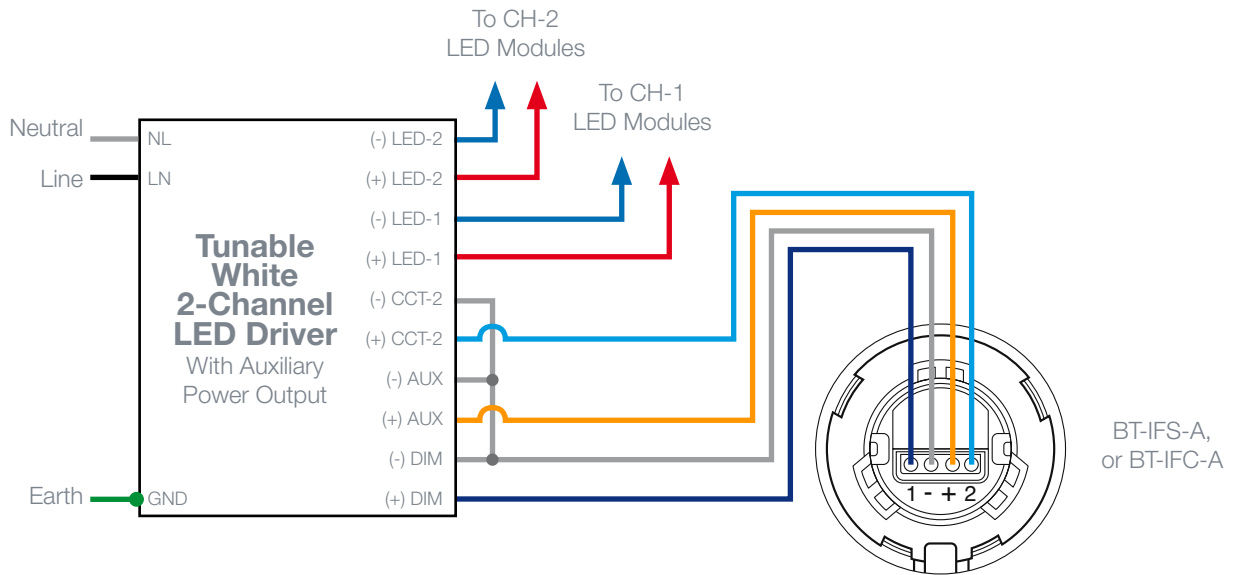

10. APPROVALS

- UL Listed: UL916
- Plenum Rated: UL2043
- Meets ASHRAE Standard 90.1 requirements
- Meets CEC Title 24 requirements
- Meets WSEC requirements

- **FCC Part 15**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Guidelines for Human Exposure

Douglas Lighting Control products comply with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with a minimum distance of 20cm between the radiator and all persons.

- **Industry Canada Notifications**

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IMPORTANT NOTE: Radiation Exposure Statement

Douglas Lighting Controls products comply with IC radiation exposure limits set forth for an uncontrolled environment. Douglas Lighting Controls products should be installed and operated with a minimum distance of 20cm between the antenna of the radiator and all persons.

NOTE IMPORTANTE: Déclaration d'exposition aux radiations

Produits Douglas Lighting Controls sont conformes aux limites IC d'exposition aux rayonnements définies pour un environnement non contrôlé. Produits Douglas Lighting Controls doivent être installés et utilisés avec distance minimum de 20cm entre le radiateur et votre corps.

PMN: BT-IFC-A and BT-IFS-A

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by Panasonic is under license.
Other trademarks and trade names are those of their respective owners.

Toll Free: 877-873-2797 or Direct 604-873-2797 | lighting@douglaslightingcontrols.com | www.douglaslightingcontrols.com