

### Limited Ninety-Day Warranty

RadioShack warrants this product against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/02

2002 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4306

### Street Tiger

Your RadioShack Street Tiger is built to handle the road in style, whether the road is the hallway in your house or the sidewalk outside.

Built to 1/20 scale, it can reach speeds of up to 180 feet per minute.

The Street Tiger comes in two frequencies (27MHz & 49MHz) So you can race with a friend. Provided you & your friend use cars that operate an different frequencies.

Check your Street Tiger's box to see which frequency you use.

The Street Tiger is perfect for beginning racers, ages four & up.

### INSTALLING BATTERIES

You need four AA batteries to power the Street Tiger, and one 9-volt battery for its transmitter.

#### Cautions:

- Use only fresh batteries of the required size and recommended type.

- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

- Never leave dead or weak batteries in the Shadow Runner or the transmitter.

Where they can corrode and damage the units.

#### WARNING

Dispose of old batteries and the battery pack promptly and properly; do not burn or bury them.

### Installing the Street Tiger's Batteries

You need four AA batteries (not supplied) to power your Street Tiger. We recommend the use of RadioShack alkaline batteries.

1. Slide ON/OFF on the bottom of the Street Tiger to OFF.
2. Push the battery compartment cover's latch from close to open until it stops, then lift the cover up to remove it.
3. Install the batteries in the compartment as indicated by the polarity symbols (+and-) marked inside.
4. Replace the cover, and then move the latch from open to close to secure the cover.

If the Street Tiger moves slowly or not at all, replace the Street Tiger's batteries.

Note: If you do not plan to use the Street Tiger for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

### Installing the Transmitter's Battery

The transmitter requires one 9-volt battery (not supplied).

#### NOTE

All batteries and chargers required for the Street Tiger are available at your local RadioShack store.

1. Press and slide the battery compartment cover off the transmitter.
2. Place a battery in the compartment according to the polarity symbols (+and-) marked inside.
3. Slide the cover back into place. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

#### OPERATION

##### Driving the Street Tiger

1. Slide ON/OFF on the bottom of the Street Tiger to ON. (See the illustration on page 1)

#### CAUTION

Don't play with your Street Tiger in the street

2. The Street Tiger's transmitter has one control button. Hold down the button to move forward with working headlight. The Street Tiger stops when you release the button. Then hold down the button again to circle backward.
3. When you finish driving the Street Tiger, slide ON/OFF to OFF.

## HELPFUL HINTS

These hints can help you get the most enjoyment from your Street Tiger.

Running your truck continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your truck's battery power dies, let the truck cool at least 10 minutes before installing new batteries.

If the Street Tiger's motor runs but the Street Tiger does not respond to the transmitter, move the transmitter closer to the Street Tiger and try again.

If someone uses a CB nearby, it might interfere with control of the Street Tiger. If this happens, move the Street Tiger away from the CB.

You cannot operate your Street Tiger near devices with transmitters that use the same frequency (27 MHz or 49MHz).

## CARE AND MAINTENANCE

The following suggestions will help you care for your RadioShack Street Tiger so you can enjoy it for years.

Do not expose the Street Tiger or its transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Wipe the Street Tiger and transmitter with a damp cloth occasionally to keep them looking new. Do not use harsh chemicals to clean them.

Do not drive the Street Tiger through puddles or mud, on a wet floor, or in sand, rain, or snow. These can damage it.

Do not leave the Street Tiger or its transmitter outside overnight. Night dampness can damage their electronic circuits.

To protect the Street Tiger's mechanisms from lint and hair, do not drive the Street Tiger on carpet.

Modifying or tampering with the Street Tiger's or the transmitter's components can cause a malfunction and might invalidate the car's warranty and void your FCC authorization to operate them. If the Street Tiger does not work properly, as it should, take it to your local RadioShack store for assistance.

## THE FCC WANTS YOU TO KNOW

Your Street Tiger or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Street Tiger or transmitter is causing the interference, release the transmitter's control button and turn off your Street Tiger. If the interference goes away, your Street Tiger or transmitter is causing it. Try to eliminate the interference by:

- Moving your Street Tiger away from the TV or radio

- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Street Tiger and transmitter.

## USER-REPLACEABLE PARTS

You can order these parts through your local RadioShack store.

Description

RSU #

NP Part #